PHYSIO CONTROL

LIFEPAK® 1000 DEFIBRILLATOR

OPERATING INSTRUCTIONS

LIFEPAK® 1000 DEFIBRILLATOR

OPERATING INSTRUCTIONS

Important

This instrument is to be used by authorized personnel only.

!USA Rx Only

!USA Device Tracking

The U.S. Food and Drug Administration requires defibrillator manufacturers and distributors to track the location of their defibrillators. If the device is located somewhere other than the shipping address or the device has been sold, donated, lost, stolen, exported, destroyed, permanently retired from use, or if the device was not obtained directly from Physio-Control, please do one of the following: register the device at http://www.physio-control.com, call the device registration phone line at 1.800.426.4448, or use one of the postage-paid address change cards located in the back of this manual to update this vital tracking information.

Responsibility for Information

It is the responsibility of our customers to ensure that the appropriate person(s) within their organization have access to this information, including cautions and warnings provided throughout this manual.

Version History

These operating instructions describe LIFEPAK 1000 defibrillator devices with software version 3205202-018 Rev. 2.50, or later.

LIFEPAK, LIFENET, and QUIK-COMBO are registered trademarks of Physio-Control, Inc. ADAPTIV, CODE-STAT, cprMAX, REDI-PAK, and Shock Advisory System are trademarks of Physio-Control, Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. Ambu is a registered trademark of the Ambu Corporation. Specifications are subject to change without notice.

©2018 Physio-Control, Inc.

Publication Date: 06/2018

PN 3205213-013

TABLE OF CONTENTS

Preface
About Defibrillation vi
Indications for Use vi
Defibrillation vi
ECG Monitoring vi
Operator Considerations vii
About the LIFEPAK 1000 Defibrillator vii
Defibrillator Features vii
Text Conventions viii

1 Safety
Terms 1-2
General Warnings and Cautions 1-2
Symbols 1-3

2 Controls and Indicators
Controls and Indicators 2-2
Battery Indicators 2-5
Battery Charger Indicators 2-6

3 How to Use the LIFEPAK 1000 Defibrillator
Modes of Operation 3-2
Defibrillation Warnings and Cautions 3-2
Defibrillation in AED Mode 3-3
Basic Steps for Using the LIFEPAK 1000 Defibrillator 3-3
Voice Prompts and Messages in AED Mode 3-4
Special Situations for Electrode Placement 3-5

©2018 Physio-Control, Inc.

Defibrillation in Manual Mode 3-6
Analysis 3-6
Troubleshooting Tips for Defibrillation 3-7
ECG Monitoring (ECG Mode) 3-9
Troubleshooting Tips for ECG Monitoring Mode 3-10

4 Data Management
Managing Defibrillator Data 4-2
Overview of Data Storage 4-2
Data Stored by the LIFEPAK 1000 Defibrillator 4-2
Overview of Connections for Transmitting Reports 4-3

5 Caring for the LIFEPAK 1000 Defibrillator
Maintenance and Testing Schedule 5-2
Self-Test Performance 5-2
Self-Tests 5-2
Auto Tests 5-3
Inspection 5-3
Cleaning 5-4
Battery Maintenance 5-4
LIFEPAK 1000 Defibrillator Nonrechargeable Battery 5-5
LIFEPAK 1000 Defibrillator Lithium-ion Rechargeable Battery 5-5
Electrode Care and Storage 5-7
Service 5-7
Product Recycling Information 5-8
Supplies, Accessories, and Training Tools 5-8
Warranty Information 5-9

A Specifications

B Shock Advisory System

C cprMAX™ Technology

D Changing Setup Options

E User's Checklist

F Defibrillation Clinical Summaries
Defibrillation of Ventricular Fibrillation and Ventricular Tachycardia F-1
Monophasic Vs. Biphasic Waveforms: Out-of-Hospital Trial F-3

G Electromagnetic Compatibility Guidance

Index

PREFACE

This section provides information about defibrillation and an overview of the LIFEPAK® 1000 defibrillator.

About Defibrillation	page vi
Indications for Use	vi
Operator Considerations	vii
About the LIFEPAK 1000 Defibrillator	vii
Text Conventions	viii

©2018 Physio-Control, Inc.

ABOUT DEFIBRILLATION

Defibrillation is a recognized means of terminating certain potentially fatal arrhythmias. A direct current defibrillator applies a brief, high-energy pulse of electricity to the heart muscle. The LIFEPAK® 1000 defibrillator is an automated external defibrillator (AED) that delivers this energy through disposable defibrillation electrodes applied to the patient's chest.

Defibrillation is only one aspect of the medical care required to resuscitate a patient with a shockable ECG rhythm. Depending on the situation, other measures may include:

- Cardiopulmonary resuscitation (CPR)
- Supplemental oxygen
- Drug therapy

It is recognized that successful resuscitation is related to the length of time between the onset of a heart rhythm that does not circulate blood (ventricular fibrillation, pulseless ventricular tachycardia) and defibrillation. The American Heart Association has identified the following as critical links in the chain of survival from sudden cardiac arrest (SCA).

- Early access
- Early CPR by first responders or bystanders
- Early defibrillation
- Early advanced life support

The physiological state of the patient may affect the likelihood of successful defibrillation. Thus, failure to resuscitate a patient is not a reliable indicator of defibrillator performance. Often, patients will exhibit a muscular response (such as jumping or twitching) during energy transfer. The absence of such a response is not a reliable indicator of actual energy delivered or defibrillator performance.

INDICATIONS FOR USE

Defibrillation

Defibrillation is a recognized means of terminating certain potentially fatal arrhythmias, such as ventricular fibrillation and symptomatic ventricular tachycardia.

The defibrillator is to be used in AED mode only on patients who are in cardiopulmonary arrest. The patient must be unresponsive, not breathing normally, and showing no signs of circulation.

The defibrillator may be used with standard defibrillation pads only on adults and children who are 8 years old or more or who weigh more than 25 kg (55 lbs). The defibrillator may be used on children who are less than 8 years old or weigh less than 25 kg (55 lbs) with Infant/Child Reduced Energy Defibrillation Electrodes.

ECG Monitoring

ECG monitoring is for use on conscious and unconscious patients of all ages for the purpose of ECG rhythm recognition and heart rate monitoring.

OPERATOR CONSIDERATIONS

The LIFEPAK 1000 defibrillator requires operator interaction to defibrillate the patient.

The defibrillator is intended for use by personnel who are authorized by a physician or medical director and have, at a minimum, the following skills and training.

- CPR training
- Defibrillator training equivalent to that recommended by the American Heart Association
- Training in the use of the LIFEPAK 1000 defibrillator

The LIFEPAK 1000 defibrillator is intended for use in hospital and out-of-hospital environments.

Manual mode is intended for use by personnel trained in ECG recognition who want to use the defibrillator to deliver a shock independent of AED mode. The operator has control over the charging and delivery of shocks.

ECG mode provides a nondiagnostic ECG display and is intended for use by personnel trained in ECG recognition to allow for rhythm and heart rate monitoring using standard ECG electrodes. When in ECG mode, the defibrillator's shock capability is disabled; however, the LIFEPAK 1000 defibrillator continues to analyze the patient's ECG for a potentially shockable rhythm.

ABOUT THE LIFEPAK 1000 DEFIBRILLATOR

The LIFEPAK 1000 defibrillator is a semiautomatic model that can be operated in either of three modes: AED mode, Manual mode, and ECG mode. The defibrillator uses the Physio-Control patented Shock Advisory System™ to analyze the patient's electrocardiographic (ECG) rhythm and prompts you when it detects a shockable rhythm and when it does not detect a shockable rhythm. Responder interaction is required to provide therapy (defibrillation) to the patient.

Defibrillator Features

The following paragraphs introduce the LIFEPAK 1000 defibrillator features.

Heart Rhythm Analysis

The Physio-Control patented Shock Advisory System evaluates the patient's heart rhythm.

ECG Display (optional)

This feature allows display of the ECG using the 3-wire (Lead II) cable and when using the defibrillator in AED mode. This feature is also necessary to use the defibrillator in Manual mode.

Defibrillation Waveform

The defibrillation shock, using ADAPTIV™ Biphasic technology, is delivered in the form of a biphasic truncated exponential (BTE) defibrillation waveform. LIFEPAK biphasic defibrillators measure the patient's transthoracic impedance and automatically adjust the defibrillation waveform current, duration, and voltage to meet the needs of the individual patient. Patient impedance is measured whenever defibrillation electrodes are in contact with the patient.

©2018 Physio-Control, Inc.

cprMAX™ Technology

The cprMAX technology is designed to allow resuscitation protocols to maximize the amount of CPR administered during treatment using the LIFEPAK 1000 defibrillator.

When used with the factory default settings enabled, the defibrillator allows AED protocols to be consistent with the 2015 American Heart Association Guidelines for Cardiopulmonary Resuscitation and Emergency Cardiovascular Care and European Resuscitation Council Guidelines for Resuscitation.

Data Management

The LIFEPAK 1000 defibrillator digitally records patient data, including ECG rhythm and delivered shocks. Recorded data may be transferred from the defibrillator to a PC using an infrared connection. The PC must have one of our LIFENET® products installed to collect and review the recorded patient data.

Battery Options

A nonrechargeable lithium manganese dioxide (Li/MnO_2) battery or a rechargeable Lithium-ion (Li-ion) battery provides power to the defibrillator. Both batteries have indicators that show the approximate state of charge. The nonrechargeable battery is best suited for low-use applications. The rechargeable battery is best suited for high-use defibrillator applications, such as fire departments and ambulance services. It requires periodic recharging by an external battery charger. To save battery life if the defibrillator is accidentally turned on or left on, the defibrillator automatically turns off if it is not connected to a patient and no buttons are pressed for 5 minutes.

Daily Self-Test

The defibrillator performs a daily self-test every 24 hours and every time you turn on the defibrillator. This feature tests the most important circuitry in the defibrillator to give the responder a high degree of confidence that it is ready for use.

Readiness Display

The LIFEPAK 1000 defibrillator includes a readiness display. The **OK** symbol appears in the display if the daily self-test is completed successfully. A battery symbol that approximates the remaining state of charge is also visible. If the self-test detects that service is required, the **OK** symbol disappears and the service symbol appears.

TEXT CONVENTIONS

Throughout this manual, special text characters are used to indicate labels, screen messages, and voice prompts.

Operating control labels:	**CAPITAL LETTERS** such as **ON/OFF** and **SHOCK**.
Screen messages, and voice prompts:	***CAPITAL ITALICIZED LETTERS*** such as ***PUSH ANALYZE*** and ***CONNECT ELECTRODES***.

SAFETY

This section provides important information to help you operate the LIFEPAK 1000 defibrillator. Familiarize yourself with all of these terms, warnings, and symbols.

Terms	page 1-2
General Warnings and Cautions	1-2
Symbols	1-3

©2018 Physio-Control, Inc.

TERMS

The following terms are used either in this manual or on the LIFEPAK 1000 defibrillator.

Danger: Immediate hazards that will result in serious personal injury or death.

Warning: Hazards or unsafe practices that could result in serious personal injury or death.

Caution: Hazards or unsafe practices that could result in minor personal injury, product damage, or property damage.

GENERAL WARNINGS AND CAUTIONS

The following section provides general warning and caution statements. Other specific warnings and cautions are provided as needed in other sections of this manual.

WARNINGS!

Shock hazard.
The defibrillator delivers up to 360 joules of electrical energy. Unless properly used as described in these operating instructions, this electrical energy may cause serious injury or death. Do not attempt to operate this device unless thoroughly familiar with these operating instructions, and the function of all controls, indicators, connections, and accessories.

Shock hazard.
Do not disassemble the defibrillator. It contains no responder-serviceable components and dangerous high voltages may be present. Contact authorized service personnel.

Shock or fire hazard.
Do not immerse any portion of this device in water or other fluids. Avoid spilling any fluids on device or accessories. Do not clean with ketones or other flammable agents. Do not autoclave or sterilize this device or accessories unless otherwise specified.

Possible fire or explosion.
Do not use this device in the presence of flammable gases or anesthetics. Use care when operating this device close to oxygen sources (such as bag-valve-mask devices or ventilator tubing). Turn off gas source or move source away from patient during defibrillation.

Possible device failure.
Do not modify this device.

Possible electrical interference with device performance.
Equipment operating in close proximity may emit strong electromagnetic or radio frequency interference (RFI) which could affect the performance of this device. RFI may result in improper device operation, distorted ECG, or failure to detect a shockable rhythm. Avoid operating the device near cauterizers, diathermy equipment, cellular phones, portable and mobile RF communications equipment, metal detectors, or electronic articles surveillance gates. Do not rapidly key EMS radios on and off. Refer to "*LIFEPAK 1000 Defibrillator Electromagnetic Compliance Guidance*" for recommended distances of equipment. Contact authorized service personnel if assistance is required.

Possible electrical interference.
Using cables, electrodes, or accessories not specified for use with this device may result in increased emissions or decreased resistance to electromagnetic interference which could affect the performance of this device or of equipment in close proximity. Use only parts and accessories specified in these operating instructions.

WARNINGS! (CONTINUED)

Possible electrical interference.

This defibrillator may cause electromagnetic interference (EMI) especially during charge and energy transfers. EMI may affect the performance of equipment operating in close proximity. Verify the effects of defibrillator discharge on other equipment prior to using defibrillator in an emergency situation, if possible.

Possible device shutdown.

Always have access to a spare, fully-charged, properly maintained battery. Replace the battery when the device displays a low battery warning.

Possible improper device performance.

Using other manufacturers' cables, electrodes, or batteries may cause the device to perform improperly and invalidates the safety agency certification and may invalidate the warranty. Use only the accessories specified in these operating instructions.

Safety risk and possible equipment damage.

MR unsafe: keep the defibrillator away from magnetic resonance imaging (MRI) equipment.

CAUTION!

Possible equipment damage.

This device may be damaged by mechanical or physical abuse such as immersion in water or dropping the device. If the device has been abused, remove it from use and contact authorized service personnel.

SYMBOLS

The following symbols may be found in this manual or on various configurations of the LIFEPAK 1000 defibrillator and its accessories.

Defibrillation-proof type BF applied part

Operating instructions

Warning. High voltage

Type BF applied part

Menu button

Battery status symbol

Service symbol

©2018 Physio-Control, Inc.

OK	Symbol indicating self-test completed successfully
	Use By or Install By date shown: yyyy-mm-dd or yyyy-mm
	This end up
	Fragile. Handle with care.
	Keep dry
	Do not reuse
CE	Mark of conformity to applicable European Directives
C US	Canadian Standards Association certification mark for Canada and the United States
LATEX	The features of the LIFEPAK 1000 defibrillator which could come in either direct or casual contact with the patient or caregiver during normal use are not manufactured with materials that contain latex as an intentionally added component or expected impurity.
	Cable Connector
!USA	For USA audiences only
YYYY	Date of manufacture
	Power On/Off
	Shock button (Symbol has a red background and graphical symbol is white.)
	Shock symbol
	Symbol indicating location of battery compartment

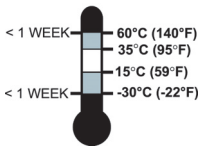

Recommended storage temperature: 15° to 35°C (59° to 95°F). Storage at extreme temperatures of -30° and 60°C (-22° and 140°F) is limited to seven days. If storage at these temperatures exceeds one week, the electrode shelf-life will be reduced.



Recommended shipping temperature limits: -20° to 50°C (-4° to 122°F).



Relative humidity range 5% to 95%

Do not place near an open flame, heat above 100°C (212°F), or incinerate

Do not crush, puncture, or disassemble battery

Non-rechargeable battery. Do not charge.

Lithium manganese dioxide battery

Rechargeable battery



Battery for use with the LIFEPAK 1000 defibrillator

Battery charger for use with Lithium-ion battery

AC to DC power adapter

Do not dispose of this product in the unsorted municipal waste stream. Dispose of this product according to local regulations. See www.physio-control.com/recycling for instructions on disposing of this product.

Symbol for China RoHS indicating Environmentally Friendly Use Period (EFUP) denoting the number of years before any substance is likely to leak out into the environment.

Infant Child Reduced Energy Defibrillation Electrodes are not compatible with QUIK-COMBO® defibrillation and therapy cables. To use Infant/Child Electrodes, connect Infant/Child electrodes directly to the AED.

Lot number (batch code)

©2018 Physio-Control, Inc.

PN	Part number
REF	Catalog number
SN	Serial number
Rx Only	By prescription only
IP55	Protected against dust and jets of water.

CONTROLS AND INDICATORS

This section provides a description of each of the LIFEPAK 1000 defibrillator primary controls and indications.

Controls and Indicators	page 2-2
Battery Indicators	2-5
Battery Charger Indicators	2-6

©2018 Physio-Control, Inc.

CONTROLS AND INDICATORS

This section introduces you to the controls and indicators on the LIFEPAK 1000 defibrillator.

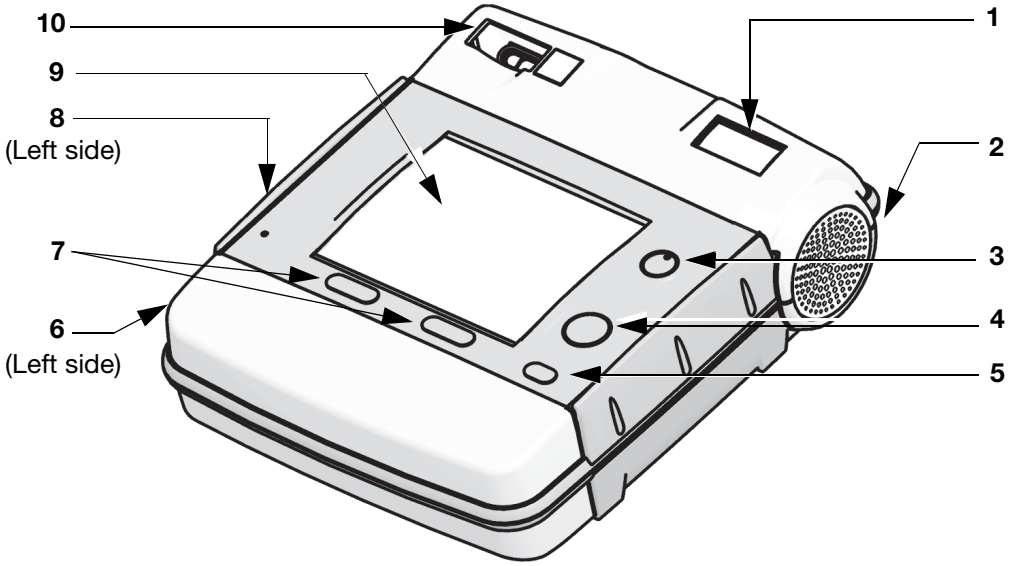

Figure 2-1 Controls and Indicator

Table 2-1 Controls and Indicators

	Feature	Description
1	Readiness display	The readiness display alerts you to the defibrillator's readiness status. Three symbols (, OK,) allow you to determine whether the defibrillator is ready for use or needs attention. The following defines what each symbol represents and when/where each appears.
		The wrench indicator appears on the readiness display when a condition exists that prevents or could prevent normal defibrillator operation.
	OK	The OK symbol indicates that the defibrillator is ready for use. It is visible only when the defibrillator is off. The OK symbol will not appear if the battery is low or the device requires service.
		The battery symbol appears on the readiness display when the defibrillator is off. When one bar is visible in the symbol, the battery is low and should be replaced.
2	Speaker	Provides audio voice prompts and tones.

Table 2-1 Controls and Indicators (Continued)

	Feature	Description
3	**ON/OFF** button	Green **ON/OFF** button turns the power on or off. The button is lit whenever the defibrillator is on.
4	SHOCK button	Pressing the **SHOCK** button (when flashing) delivers a shock to the patient.
5	**MENU** button	Used to select operating modes (Manual or AED) and enter information in Setup mode.
6	Battery compartment	Accommodates a single battery.
7	Softkeys	Two softkeys work in conjunction with the screen, providing a way for you to make selections while using the defibrillator. The softkey functions vary, depending on the task you are performing at the time. Their function is identified by the label above them on the screen.
8	IrDA port	Infrared Data Association. This port provides wireless communications for transferring data from the defibrillator to a PC.
9	Screen	Displays pertinent information for use during all modes of operation. Figure 2-2 defines the information displayed on the screen.
10	Cable receptacle	Allows direct connection to therapy electrodes (black), ECG cable (green), Infant/Child electrodes (pink), and QUIK-COMBO therapy electrodes (gray).

©2018 Physio-Control, Inc.

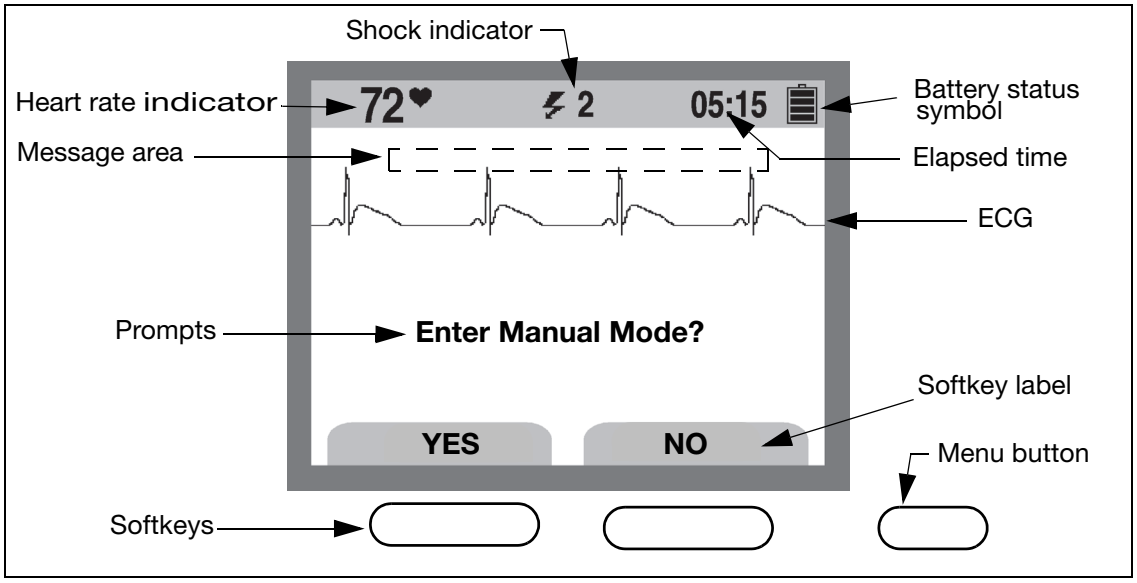

Figure 2-2 Defibrillator Screen

Heart rate indicator. The heart rate indicator displays heart rates between 20 – 300 bpm. Indicator is present in Manual mode or when the 3-wire ECG cable is used.

Battery status symbol. When the defibrillator is turned on, this symbol appears on the screen indicating the relative level of charge. One bar indicates the battery is low and should be replaced. When the battery is very low, the symbol is blank and a ***REPLACE BATTERY*** message appears on the screen.

ECG. The ECG appearing on the screen is a nondiagnostic ECG, obtained by means of the therapy electrodes or the Lead II ECG cable. The presence of an ECG does not ensure that the patient has a pulse.

Softkey labels. These labels define the function that can be activated by pressing the softkey. **ANALYZE** and **DISARM** are function examples.

BATTERY INDICATORS

The LIFEPAK 1000 defibrillator can be powered by two types of batteries:

- A nonrechargeable Lithium manganese dioxide battery
- A rechargeable Lithium-ion battery

Battery Charge Level Indicators

Both battery types have a fuel gauge that indicates the approximate charge level of the battery when it is not installed in a defibrillator. Push the gray button below the battery symbol to check the battery's charge level before installing it in the defibrillator.

Note: Always carry a spare, fully-charged battery.

For **both battery types**, the four battery indicators shown here represent approximate charge.

> 75% charge | > 50% charge | > 25% charge | 25% charge or less. Replace battery.

Figure 2-3 Battery Charge Indicators

Note: The fuel gauge on a new rechargeable battery will not function until the battery has been charged for the first time.

Battery Warning Indicators

For **both battery types**, a single flashing LED indicates the battery charge level is very low. Replace battery immediately.



For **rechargeable** batteries only, two flashing LEDs indicate the battery is faulty and should be returned to your local Physio-Control representative.

Figure 2-4 Battery Warning Indicators

The **nonrechargeable** battery is shipped to customers fully charged. All four LEDs should illuminate when the fuel gauge is activated. Check the charge level of a new nonrechargeable battery before putting it into service. When optimally maintained, a new nonrechargeable battery can provide approximately 17 hours of "ON time" **or** 440 discharges at 200 joules.

The **rechargeable** battery is shipped to customers at approximately 25% charge and must be fully charged before use. Charge the battery fully within six months of when you receive it and at

©2018 Physio-Control, Inc.

least once every six months thereafter. When optimally maintained, a **new** fully-charged battery provides approximately ten hours on “ON time” **or** 261 discharges at 200 joules. Since all rechargeable batteries permanently lose battery capacity over time, and because battery capacity together with the level of battery charge determines how long a rechargeable battery will provide defibrillator power, you can expect that a fully-charged battery’s “ON time” will decrease with age.

BATTERY CHARGER INDICATORS

The LIFEPAK 1000 Defibrillator Battery Charger is intended for use with LIFEPAK 1000 defibrillator Lithium-ion (Li-ion) rechargeable batteries. No other batteries are compatible with this charger. For complete battery charger information, refer to the *LIFEPAK 1000 Defibrillator Battery Charger Instructions for Use* provided with the charger.

When power is applied to the battery charger, both LEDs on the charger flash briefly and then turn off. Before inserting a battery, inspect the battery contacts for obvious damage or foreign substances. Figure 2-5 describes the LEDs on the battery charger when a rechargeable battery is inserted.

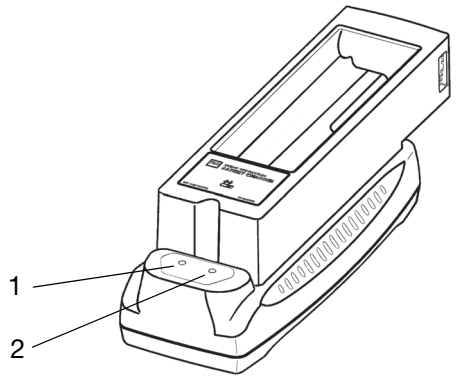

LED	Behavior	Definition	Explanation
1	Flashing green	Battery is charging.	A fully depleted battery takes approximately 4 hours to charge.
1	Steady green	Battery charging is complete.	If the battery is kept in the charger, the battery will remain in an optimally charged condition. The charger enters “maintenance” mode after charging completes, automatically providing periodic top-off charging.
2	Red	Battery or charger is faulty.	To test the battery: Remove battery and check fuel gauge; two flashing LEDs indicate a faulty battery. To test the charger: Reinstall a functional battery; a persistent red charger LED indicates a faulty charger. Contact your authorized service personnel for assistance with a faulty battery or charger.

Figure 2-5 Battery Charger Indicators

For details on batteries and instructions for disposal, see "Battery Maintenance" on page 5-4 and "Product Recycling Information" on page 5-8.

HOW TO USE THE LIFEPAK 1000 DEFIBRILLATOR

This section provides an overview of information and instructions for using the LIFEPAK 1000 defibrillator.

Modes of Operation	page 3-2
Defibrillation in AED Mode	3-3
Defibrillation in Manual Mode	3-6
Troubleshooting Tips for Defibrillation	3-7
ECG Monitoring (ECG Mode)	3-9

©2018 Physio-Control, Inc.

MODES OF OPERATION

You can use the LIFEPAK 1000 defibrillator for:

- Automated external defibrillation (AED mode)
- Manual defibrillation therapy (Manual mode) (Requires ECG display option)
- ECG monitoring (ECG mode) (Requires ECG display option)

Defibrillation Warnings and Cautions

WARNINGS!

Shock hazard.

The defibrillator delivers up to 360 J of electrical energy. When discharging the defibrillator, do not touch the disposable therapy electrodes.

Shock hazard.

If a person is touching the patient, bed, or any conductive material in contact with the patient during defibrillation, the delivered energy may be partially discharged through that person. Clear everyone away from contact with the patient, bed, and other conductive material before discharging the defibrillator.

Possible skin burns.

During defibrillation, air pockets between the skin and therapy electrodes may cause patient skin burns. Apply therapy electrodes so that entire electrode adheres to skin. Do not reposition the electrodes once applied. If the position must be changed, remove and replace with new electrodes.

Possible skin burns and ineffective energy delivery.

Therapy electrodes that are dried out or damaged may cause electrical arcing and patient skin burns during defibrillation. Do not use therapy electrodes that have been removed from foil package for more than 24 hours. Do not use electrodes beyond expiration date. Check that electrode adhesive is intact and undamaged. Replace therapy electrodes after 50 shocks.

Possible interference with implanted electrical device.

Defibrillation may cause implanted devices to malfunction. Place therapy electrodes away from implanted devices if possible. Check implanted device function after defibrillation, if possible.

Possible misinterpretation of data.

Do not analyze in a moving vehicle. Motion artifact may affect the ECG signal resulting in an inappropriate shock or no shock advised message. Motion detection may delay analysis. Stop vehicle and stand clear of patient during analysis.

Possible misinterpretation of data.

Do not move the AED during analysis. Moving the AED during analysis may affect the ECG signal resulting in an inappropriate shock or no shock advised decision. Do not touch the patient or the AED during analysis.

CAUTION!

Possible equipment damage.

Before using this defibrillator, disconnect all equipment that is not defibrillator-protected from the patient.

DEFIBRILLATION IN AED MODE

The LIFEPAK 1000 defibrillator uses the Physio-Control patented Shock Advisory System to evaluate the patient's heart rhythm. The LIFEPAK 1000 defibrillator has an optional feature that displays the ECG waveform and Heart Rate Indicator in AED mode. The operation in AED mode remains the same whether or not the defibrillator displays the ECG waveform. When **ECG DISPLAY** is set to **ON**, the ECG appears with all of the AED messages and prompts. When **ECG DISPLAY** is set to **OFF**, the messages and prompts fill the screen.

Basic Steps for Using the LIFEPAK 1000 Defibrillator

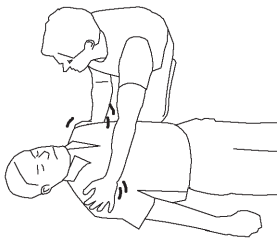

1 Establish that the patient is in cardiopulmonary arrest (the patient must be unresponsive, not breathing normally and showing no signs of circulation).

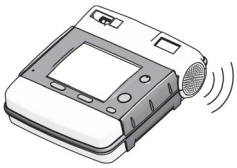

2 Press **ON/OFF** to turn on the defibrillator (the green LED illuminates). Voice prompts will sound, guiding you through the rescue process.

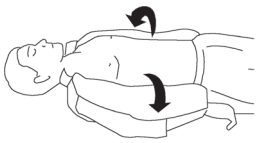

3 Prepare the patient for therapy electrode placement.
- If possible, place the patient on a hard surface away from standing water.
- Remove clothing from the patient's upper torso.
- Remove excessive hair from the electrode sites. If shaving is necessary, avoid cutting the skin.
- Clean the skin and dry it briskly with a towel or gauze.
- Do not apply alcohol, tincture of benzoin, or antiperspirant to the skin.

4 Open the therapy electrode packet and remove the electrodes. Slowly peel back the protective liner on the electrodes, beginning with the cable connection end. Safely discard the liner to prevent slipping.

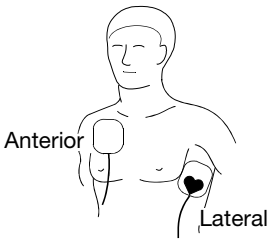

5 Apply the therapy electrodes to the patient's chest. Starting from one end, press the electrodes firmly onto the patient's skin, as shown.

WARNING!
Excessive Energy Delivery.
For children less than 8 years of age or 55 lbs (25 kg), use Infant/Child Reduced Energy Defibrillation electrodes. Do not use Pediatric QUIK-COMBO electrodes; these electrodes do not attenuate the energy delivery by this defibrillator.

©2018 Physio-Control, Inc.

6 Connect the electrodes to the defibrillator (if they are not already connected).

7 Follow the screen messages and voice prompts provided by the defibrillator.

Voice Prompts and Messages in AED Mode

The following descriptions of voice prompts and messages are based on the default settings for AED mode. Changing the setup options may result in different AED behavior.

CONNECT ELECTRODES	Voice prompt and message when a patient has not been connected to the defibrillator.
STAND CLEAR, ANALYZING NOW, STAND CLEAR	Voice prompt and message when a patient is connected to the defibrillator. Do not touch or move the patient, or therapy cables, during analysis. ECG analysis requires 6–9 seconds.
PREPARING TO SHOCK	Message displayed if the defibrillator detects a shockable rhythm. The defibrillator charges to the joule setting for that shock number. A rising tone and a charging bar on the screen indicate that the defibrillator is charging.
STAND CLEAR, PUSH SHOCK BUTTON	Voice prompt and message when charging is complete. The shock button flashes. *Clear everyone away from the patient, bed, or any equipment connected to the patient.* Press the shock button to discharge the defibrillator. The energy level for shocks depends on the energy protocol setup option and the analysis decision after shocks. If the shock button is not pressed within 15 seconds, the defibrillator disarms the shock button, and the ***DISARMING...*** message appears on the screen.
ENERGY DELIVERED	Message displayed after each shock.
START CPR	A message and countdown timer (min:sec format) appears for the CPR time.
NO SHOCK ADVISED	Voice prompt and message when the defibrillator detects a nonshockable rhythm. The defibrillator will not charge, and a shock cannot be delivered. When a ***NO SHOCK ADVISED*** prompt follows a shock and CPR, the energy level will not increase for the next shock.

Special Situations for Electrode Placement

When placing electrodes on the patient, be aware of special situations:

Obese Patients or Patients with Large Breasts

Apply the electrodes to a flat area on the chest, if possible. If skin folds or breast tissue prevent good adhesion, spread skin folds apart to create a flat surface.

Thin Patients

Follow the contour of the ribs and spaces when pressing the electrodes onto the torso. This limits air space or gaps under the electrodes and promotes good skin contact.

Patients with Implanted Pacemakers

If possible, place defibrillation electrodes away from the internal pacemaker generator. Treat this patient like any other patient requiring emergency care.

Patients with Implanted Defibrillators

Apply the electrodes in the anterior-lateral position. Treat this patient like any other patient requiring emergency care.

Alternate Anterior-Posterior Electrode Position

The electrodes may be placed in an anterior-posterior position as follows:

1 Place either the ♥ or + therapy electrode over the left precordium as shown in Figure 3-1. The upper edge of the electrode should be below the nipple. Avoid placement over the nipple, the diaphragm, or the bony prominence of the sternum if possible.

2 Place the other electrode behind the heart in the infrascapular area as shown in Figure 3-1. For patient comfort, place the cable connection away from the spine. Do not place the electrode over the bony prominences of the spine or scapula.

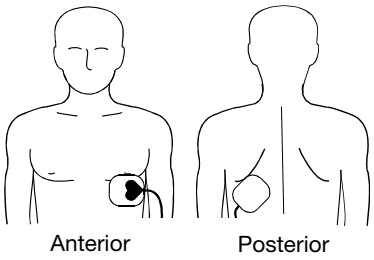

Figure 3-1 Anterior-Posterior Placement

©2018 Physio-Control, Inc.

DEFIBRILLATION IN MANUAL MODE

The LIFEPAK 1000 defibrillator provides a Manual mode to override the AED features of the defibrillator. Manual mode provides operator-initiated analysis, charge, shock, and disarm functions. This mode is useful in a tiered response system when a provider trained in manual defibrillation and authorized to place the defibrillator in Manual mode takes over the scene from a BLS-AED trained provider.

To use Manual mode:

1 Press the Menu button.

2 Select **YES** to enter Manual mode. The ECG trace and Heart Rate Indicator appear on the screen.

3 If the displayed ECG rhythm appears shockable, press **CHARGE** to initiate charging of the defibrillator. The screen will indicate that the defibrillator is charging and a charge tone will sound.

4 Clear everyone away from the patient, bed, or any equipment connected to the patient.

5 When the charge is complete, press the flashing shock button to deliver energy to the patient.

6 After delivering a shock, the energy for each subsequent shock is automatically selected based on the energy level configured in Setup.

Note: To remove an unwanted charge at any time, press **DISARM**.

Analysis

The LIFEPAK 1000 defibrillator can be set up to display an **ANALYZE** softkey when in Manual mode.

To initiate an analysis:

1 Confirm that the patient is unresponsive, not breathing, and without a pulse.

2 Press **ANALYZE**.

3 If the rhythm analysis results in a No Shock Advised decision, the defibrillator remains in Manual mode without further prompts.

4 If the rhythm analysis results in a Shock Advised decision, the defibrillator automatically begins charging accompanied by a charge tone. If you determine that a shock is not warranted, press **DISARM**.

5 When the charge is complete, clear everyone away from the patient, bed, or any equipment connected to the patient.

6 Press the flashing shock button to deliver energy to the patient.

7 After delivering a shock, the defibrillator remains in Manual mode.

TROUBLESHOOTING TIPS FOR DEFIBRILLATION

This section explains problem conditions that you may encounter while using the defibrillator.

Table 3-1 Troubleshooting Tips for Defibrillation

Observation	Possible Cause	What To Do
Screen blank and **ON** LED lit.	Screen not functioning properly.	• AED and therapy functions may still operate. If needed for therapy, follow voice prompts and continue to use device to treat patient. If unable to use voice prompts for any reason, administer CPR if the patient is not responding, not breathing normally, and showing no signs of circulation. • Contact authorized service personnel.
CONNECT ELECTRODES voice prompt is heard.	Poor electrode-to-skin contact.	• Firmly press electrodes on patient's skin. • Clean, shave, and dry the patient's skin prior to placing pads on skin.
	Electrode pads are dry, damaged, or have passed the expiration date.	• Replace the electrode pads.
	Electrode pads are not removed from the liner.	• Remove the electrode pads from the liner and apply them to the patient's chest
CHECK CONNECTOR AND ELECTRODES voice prompt is heard.	Connection to the defibrillator is inadequate.	• Check to be sure that the electrode connector is completely inserted.
Defibrillator cannot deliver the required shock.	Defibrillator battery power is low.	• Administer CPR if the patient is not responding, not breathing normally, and showing no signs of circulation. • Check battery indicator. Replace battery if one bar or less is visible.
Voice prompts sound faint or distorted.	Defibrillator battery power is low.	• Administer CPR if the patient is not responding, not breathing normally, and showing no signs of circulation. • Check battery indicator. Replace battery if one bar or less is visible.

©2018 Physio-Control, Inc.

Table 3-1 Troubleshooting Tips for Defibrillation (Continued)

Observation	Possible Cause	What To Do
MOTION DETECTED and ***STOP MOTION*** voice prompts are heard.	Patient movement because of location.	• Move patient to stable location, if possible.
	Patient movement because of breathing.	• Check patient for normal breathing.
	CPR being performed during analysis.	• Stop CPR during analysis.
	Vehicle motion.	• Stop vehicle during analysis, if possible.
	Electrical/radio frequency interference.	• Move communication or other suspected devices away from the defibrillator when possible.
Defibrillator does not deliver voice prompts or beeping tones after you turn it on.	Speaker not functioning.	• AED and therapy functions may still operate. If needed for therapy, follow screen prompts and continue to use device to treat patient. If unable to use screen prompts for any reason, administer CPR if the patient is not responding, not breathing normally, and showing no signs of circulation. • Contact authorized service personnel.
	Depleted battery.	• Administer CPR if the patient is not responding, not breathing normally, and showing no signs of circulation. • Check battery indicator. Replace battery if one bar or less is visible. • Contact authorized service personnel.
The readiness display is blank.	The defibrillator has been turned on.	• Normal condition when the defibrillator is in use.
	Operating temperature is too low.	• Operate the defibrillator within the specified temperature range.
	LCD not operating properly.	• Contact authorized service personnel.
Rechargeable battery requires frequent charging.	Battery is near end of service life and has lost capacity.	• Consider replacing the battery. See "To determine when to replace rechargeable batteries:" on page 5-6 for more information.

ECG MONITORING (ECG MODE)

WARNING!

Possible misinterpretation of ECG data.

The frequency response of the screen is intended only for basic ECG rhythm identification; it does not provide the resolution required for pacemaker pulse visibility, accurate measurements, such as QRS duration, and ST segment interpretation. For such purposes, use ECG monitors with an appropriate frequency response.

Possible delay in therapy.

Do not attempt to connect a 3-wire ECG cable to a QUIK-COMBO therapy cable or any other AED. The ECG cable is functional only with the LIFEPAK 1000 defibrillator.

The LIFEPAK 1000 defibrillator provides nondiagnostic ECG display of the patient's heart rhythm when the ECG cable is connected and the electrodes are applied.

Note: You do not have to turn the defibrillator off before changing from therapy electrodes to the ECG cable or vice versa.

To use ECG monitoring mode:

1 Connect the ECG cable.

Note: The ECG cable uses the same receptacle used by the therapy electrodes.

2 Apply ECG electrodes to the patient's chest as shown in Figure 3-2

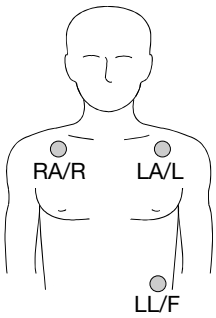

AHA Labels		IEC Labels	
RA	Right Arm	**R**	Right
LA	Left Arm	**L**	Left
LL	Left Leg	**F**	Foot

Figure 3-2 Connecting the ECG Electrodes for use with ECG cable

After the ECG electrodes are connected, the defibrillator displays the patient's heart rhythm and heart rate in a lead II configuration. Lead II is the only lead available with this cable.

While in ECG mode, the defibrillator's shock capability is disabled; however, the defibrillator continues to evaluate the patient's ECG for a potentially shockable rhythm. Remember that the presence of an ECG rhythm does not ensure that the patient has a pulse.

If a shockable rhythm is detected, the defibrillator prompts ***CONNECT THERAPY ELECTRODES***.

1 Confirm the patient's condition: Not responsive? Not breathing? No signs of circulation?

2 Remove the ECG cable and connect the therapy electrodes to the defibrillator.

3 Apply the therapy electrodes to the patient's chest, keeping them at least 2.5 cm (one inch) away from the ECG electrodes. If necessary, remove the ECG electrodes.

4 Follow the defibrillator's voice and screen prompts.

©2018 Physio-Control, Inc.

Troubleshooting Tips for ECG Monitoring Mode

If problems occur while monitoring the ECG, check this list of observations for troubleshooting assistance.

Table 3-2 Troubleshooting Tips for ECG Monitoring Mode

Observation	Possible Cause	What to Do
Screen blank and **ON** LED lit.	Screen not functioning properly.	• Contact authorized service personnel. • AED and therapy functions may still operate. If needed for therapy, continue to use device to treat patient.
CONNECT ECG LEADS message appears	One or more ECG electrodes are disconnected.	• Confirm ECG electrode connections.
	Poor electrode-to-skin contact.	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. • Clean, shave, and dry the patient's skin as recommended on page 3-3. • Replace electrodes. • Change cable.
	Broken ECG cable lead wire.	• Check ECG cable continuity. If lead wire is broken, replace ECG cable.

Table 3-2 Troubleshooting Tips for ECG Monitoring Mode

Observation	Possible Cause	What to Do
Poor ECG signal quality.	Poor electrode-to-skin contact.	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. Secure cable clasp to patient's clothing. • Clean, shave, and dry the patient's skin as recommended on page 3-3. • Replace electrode(s).
	Outdated, corroded, or dried-out electrodes.	• Check date codes on electrode packages. • Use only silver/silver chloride electrodes with Use By dates that have not passed. • Leave electrodes in sealed packet until time of use.
	Loose connection.	• Check/reconnect cable connections.
	Damaged cable or connector/lead wire.	• Inspect ECG and therapy cables. • Replace if damaged. • Check cable with simulator and replace if malfunction observed.
	Noise because of radio frequency interference (RFI).	• Check for equipment causing RFI (such as a radio transmitter) and relocate or turn off equipment power.
Baseline wander (low frequency/high amplitude artifact).	Inadequate skin preparation. Poor electrode-to-skin contact.	• Clean, shave, and dry the patient's skin as recommended on page 3-3. • Replace electrodes.
Fine baseline artifact (high frequency/low amplitude).	Inadequate skin preparation. Isometric muscle tension in arms or legs.	• Clean, shave, and dry the patient's skin as recommended on page 3-3. • Replace electrodes. • Confirm that limbs are resting on a supportive surface. • Check electrodes for proper adhesion.

©2018 Physio-Control, Inc.

DATA MANAGEMENT

This section introduces data management for the LIFEPAK 1000 defibrillator.

Managing Defibrillator Data page 4-2

©2018 Physio-Control, Inc.

MANAGING DEFIBRILLATOR DATA

The LIFEPAK 1000 defibrillator provides an infrared method to transfer defibrillator data.

Overview of Data Storage

Every time you use the defibrillator, it digitally saves patient data that can be transferred to a PC. You can provide patient data to aid in case review for quality control, training, and research purposes. You should become familiar with local requirements for reporting a use of the LIFEPAK 1000 defibrillator and for providing use data. For assistance in retrieving data from the defibrillator, contact your local Physio-Control sales representative or authorized service personnel.

Data Stored by the LIFEPAK 1000 Defibrillator

Whenever you turn on the defibrillator and connect it to a patient, it automatically stores data about the patient. When this data is transferred to a data management system for review (for example, CODE-STAT™ software), three patient reports are available: Event Log, Continuous ECG, and CODE SUMMARY. Table 4-1 describes these reports.

Table 4-1 Patient Reports

Report Type	Description
Event Log	A chronological log of all events. An event is a condition noted by the defibrillator. Events are listed on page 4-3.
Continuous ECG	Forty minutes of the patient's ECG rhythm beginning when the patient is connected to the defibrillator and ending when the defibrillator is turned off.
CODE SUMMARY	Combines the Event Log and a sampling of continuous ECG rhythms associated with certain events, such as defibrillation.

The LIFEPAK 1000 defibrillator can store up to two patient records: one for the current patient and one for the previous patient. When you use the defibrillator, it is important to transfer the patient data as soon as possible after use. The Complete Record for the current patient includes the Continuous ECG and Event Log. If you treat a second patient, the first patient's Continuous ECG is reformatted into a CODE SUMMARY™ report. If you treat a third patient, all of the first patient's data is deleted and the second patient's Continuous ECG is reformatted into a CODE SUMMARY report.

Table 4-2 Patient Records

	Complete Record	Summary	Continuous ECG
Current Patient	X	X	X
Previous Patient	Ø	X	Ø

If you turn the defibrillator on and off without attaching electrodes to a patient, the defibrillator does not create a new patient record and the patient records in the defibrillator are not altered.

The LIFEPAK 1000 defibrillator does not delete patient data after you transfer the data to a PC. The defibrillator deletes previous patient data only when it is connected to a new patient or a simulator.

Test and Service Data

The LIFEPAK 1000 defibrillator stores a test log consisting of the most recent auto-tests, power cycles, and battery replacements. The test log lists the test results and any errors detected. The test log data is available only to authorized service personnel or to responders who are using the appropriate LIFENET system product.

Event and Test Log

Table 4-3 and Table 4-4 list the types of events that may be annotated on event and test log reports.

Table 4-3 Events

Events	Events	Events
Power On	Shock X Abnormal	Motion
Connect Electrodes	No Shock Advised	Analysis Stopped*
Patient Connected	CPR Prompt	Low Battery
AED Mode	Stop CPR Prompt	ECG Mode
Initial Rhythm*	Check Patient*	Out of Event Memory
Analysis X*	Charge Removed	Out of Waveform Memory
Shock Advised	Manual Mode	Power Off
Charge Complete	Replace Battery	Recovery Time*
SHOCK X-XXXJ*	Charge Button Pressed	

*** These events include ECG samples in the Summary Report.**

Table 4-4 Test Log Report

Test Log
Self Test Power On
Self Test Pass/Fail
User Power On/Off
Battery Changed

Overview of Connections for Transmitting Reports

Patient, test, and service data can be transmitted from the LIFEPAK 1000 defibrillator to a PC-compatible computer equipped with CODE-STAT software, version 6.0 or later, a LIFENET system product.

The LIFEPAK 1000 defibrillator (see Figure 2-1) supports wireless, infrared communications for transmitting data from the defibrillator to your computer. To receive the transmission, your computer must have an operational IrDA port.

If your computer does not have an IrDA port, you can install an IrDA adapter to provide the needed interface. Physio-Control recommends installing an IrDA adapter on all computers to ensure successful communication connections and data transmissions.

IrDA adapters are available for serial or USB computer ports. Follow the installation and usage instructions provided with the adapter, ensuring that the adapter mount (receiving end) is positioned on a stable surface. Figure 4-1 provides guidelines to follow for positioning the defibrillator and the IrDA adapter before initiating a transmission.

©2018 Physio-Control, Inc.

Note: The shaded cone in Figure 4-1 represents the approximate parameters for positioning the defibrillator's IrDA port opposite the IrDA adapter. As the distance between the two increases, so does the possible range for aligning them.

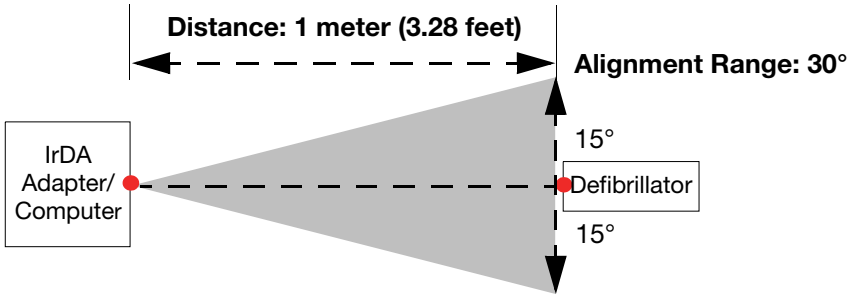

Figure 4-1 IrDA Connections

You initiate and control transmission of device data at your computer using a LIFENET system product. This includes initiating data download, selecting reports to be transmitted, and monitoring transmission progress. More information about configuring your LIFENET system product and instructions for transmitting device data are provided in the users guide and reference cards that accompany the LIFENET system product.

CARING FOR THE LIFEPAK 1000 DEFIBRILLATOR

This section explains how to help keep your LIFEPAK 1000 defibrillator in good working condition. Cared for properly, the defibrillator is built to give you many years of service.

Maintenance and Testing Schedule	page 5-2
Self-Test Performance	5-2
Inspection	5-3
Cleaning	5-4
Battery Maintenance	5-4
Electrode Care and Storage	5-7
Service	5-7
Product Recycling Information	5-8
Supplies, Accessories, and Training Tools	5-8
Warranty Information	5-9

©2018 Physio-Control, Inc.

MAINTENANCE AND TESTING SCHEDULE

Use the following schedule in conjunction with the internal quality assurance program of the hospital, clinic, or emergency medical service where the defibrillator is used.

On a regular basis, you should do the following:

- Check the readiness display to determine the level of battery charge and that the OK symbol is visible.
- Check the Use By date on the therapy electrode packet.
- Check other emergency supplies that may be stored with the defibrillator.

The defibrillator needs attention if any of the following conditions occur:

- The OK symbol is not visible.
- The level of battery charge is one bar or less.
- The electrode Use By date has passed.

Replace the battery or electrode packet as indicated. If the OK symbol does not appear, call your authorized service personnel.

When establishing your local inspection schedule, consider how often the defibrillator will be used and how familiar the operators are with using a defibrillator. For example, if the defibrillator is used rarely, weekly inspections are appropriate. An inspection checklist is provided in Appendix E.

Table 5-1 Recommended Maintenance Schedule

Operation	After Use	As Required	Weekly
Complete Operator's Checklist (see Appendix E).		X	
Inspect defibrillator.	X	X	
Clean defibrillator.	X	X	
Check that all necessary supplies and accessories, such as electrodes, are present.	X	X	

SELF-TEST PERFORMANCE

Whenever the LIFEPAK 1000 defibrillator is turned on after it has been off for at least 60 seconds, it takes approximately 5 seconds to complete a self-test and to indicate a low or replace battery condition.

Self-Tests

Each time you turn it on, the defibrillator performs internal self-tests to check that internal electrical components and circuits work properly. The defibrillator stores the results of all user power on self-tests in a test log. When the defibrillator is on and a problem requires immediate service, such as a malfunctioning charging circuit, the defibrillator prompts ***CALL SERVICE***. Attempt to use the defibrillator if needed for an emergency; otherwise, remove the defibrillator from active use and contact authorized service personnel to correct the problem as soon as possible. The service symbol will remain visible until the problem is corrected.

Auto Tests

The defibrillator performs automatic self-tests daily and monthly at 0300 (3:00 a.m.) if not in use. During the automatic self-test, the defibrillator turns itself on (ON/OFF LED illuminates) briefly and completes the following tasks:

- Performs a self-test
- Stores the self-test results in the Test Log
- Turns itself off

If the defibrillator detects a problem during an auto test that requires service, it displays the service symbol. If the service symbol is visible, you should attempt to use the defibrillator, if needed, for a cardiac emergency. However, you should contact authorized service personnel to correct the problem as soon as possible. The service symbol will remain visible until the problem is corrected.

The automatic self-test is not performed if the defibrillator is already turned on at 0300 or if the battery is not installed. If the defibrillator is turned on while a self-test is in progress, the test is halted; the defibrillator will turn on normally.

INSPECTION

Routinely inspect all devices, accessories, and cables by following the instructions in Table 5-2.

Table 5-2 LIFEPAK 1000 Defibrillator Inspection

Instruction	Inspect For	Recommended Corrective Action
Examine the defibrillator case, connector, battery well, battery pins, and accessories.	Foreign substances.	Clean the device as described in Table 5-3.
	Damage or cracks.	Contact authorized service personnel to troubleshoot.
	Battery pins bent or discolored.	Contact authorized service personnel.
	Expired batteries or defibrillation electrodes.	Replace.
Observe readiness display	**OK** symbol.	None needed.
	Battery status indicator shows one bar or less.	Replace battery immediately.
	Service symbol displayed.	Contact authorized service personnel.
Examine accessory cables.	Foreign substances.	Clean the cables as described in Table 5-3.
	Inspect for cracks, damage, extreme wear, broken or bent connectors and pins.	Replace damaged or broken parts.
	Confirm that connectors engage securely.	Replace damaged or broken parts.

©2018 Physio-Control, Inc.

CLEANING

Clean the LIFEPAK 1000 defibrillator accessories as described in Table 5-3. Use only the cleaning agents listed in the table.

CAUTION!

Possible equipment damage.

Do not clean any part of the defibrillator or accessories with bleach, bleach dilution, or phenolic compounds. Do not use abrasive or flammable cleaning agents. Do not steam, autoclave, or gas-sterilize the defibrillator or accessories.

Table 5-3 Recommended Cleaning Methods

Items	Cleaning Practice	Recommended Cleaning Agent
Defibrillator case, display, crevices, and accessories	Clean with damp sponge or cloth.	• Quaternary ammonium compounds • Rubbing (isopropyl) alcohol • Peroxide (peracetic acid) solutions

BATTERY MAINTENANCE

The LIFEPAK 1000 defibrillator can be powered by either of two types of batteries:

- A nonrechargeable Lithium manganese dioxide battery
- A rechargeable Lithium-ion battery

Follow the guidelines described in this section to help maximize battery life and performance. Use only Physio-Control batteries designed for use with the LIFEPAK 1000 defibrillator. Do not use any other batteries.

Note: Always carry a spare, fully charged battery.

WARNINGS!

Safety risk and possible equipment damage.

- Damaged batteries may leak and cause personal injury or equipment damage. Handle damaged or leaking batteries with extreme care.
- Do not carry a battery where metal objects (such as car keys or paper clips) could short-circuit the battery terminals. The resulting excessive current flow can cause extremely high temperatures and may result in damage to the battery, or cause fire or burns.
- Keep batteries away from children.

Possible defibrillator shutdown.

When the LIFEPAK 1000 defibrillator displays the **REPLACE BATTERY** message, replace the battery immediately.

Possible loss of power during patient care.

Using an improperly maintained battery to power the defibrillator may cause power failure without warning. Maintain batteries as described in these operating instructions.

Note: When a battery is removed from the defibrillator, battery and service symbols appear on the readiness display. After replacing the battery, the device resets the readiness display.

LIFEPAK 1000 Defibrillator Nonrechargeable Battery

The nonrechargeable battery never requires recharging. The approximate level of charge in the battery is indicated by the fuel gauge on the battery, on the readiness display when the defibrillator is off, or on the screen when the defibrillator is in use.

The fuel gauge on the nonrechargeable battery provides an easy way to determine the available battery capacity, which is equivalent to the level of battery charge for this type of battery. The nonrechargeable battery is shipped to customers fully charged. Push the gray button below the battery symbol to check the charge level of a new nonrechargeable battery before installing it in a defibrillator. All four LEDs should illuminate.

When optimally maintained, a new nonrechargeable battery pak can provide approximately 17 hours of "ON" time **or** 440 discharges at 200 joules. Turning the defibrillator on ("ON" time) uses battery capacity. Battery charge decreases while the battery is in the defibrillator because of the battery's normal self-discharge rate and the energy used by the defibrillator auto tests. If installed in a defibrillator that is not used, the battery has a standby life of five years. Any patient or training use of the defibrillator, including "ON" time and shocks, reduces the battery's standby and useful life.

A new nonrechargeable battery has a shelf life of five years if stored at the proper temperature. The battery (stored outside the defibrillator) self-discharges over time; therefore, when the battery is eventually placed in the defibrillator, its useful life will be reduced depending on how long it was stored.

To properly maintain nonrechargeable batteries:

- Do not attempt to recharge.
- Do not allow electrical connection between the battery contacts.
- Use and store batteries at temperatures specified in Appendix A. Higher temperatures accelerate the loss of charge and decrease battery life. Lower temperatures reduce battery capacity.

WARNING!

Possible explosion, fire, or noxious gas.

Attempting to recharge a nonrechargeable battery can cause an explosion or fire or release noxious gas. Dispose of expired or depleted nonrechargeable batteries as described in these operating instructions.

CAUTION!

Possible battery damage.

Electrical connection between battery contacts can permanently disable the battery.

LIFEPAK 1000 Defibrillator Lithium-ion Rechargeable Battery

The Lithium-ion (Li-ion) rechargeable battery is the appropriate battery option when the LIFEPAK 1000 defibrillator is used on a frequent basis, or is used with a simulator for training. When optimally maintained, a new fully-charged battery can provide approximately ten hours of "ON" time **or** 261 discharges at 200 joules. The rechargeable battery is shipped to customers at approximately 25% charge and must be fully charged before use. Charge the battery fully within 6 months of when you receive it and at least once every 6 months thereafter. Use only the LIFEPAK 1000 Defibrillator Battery Charger to charge the battery.

©2018 Physio-Control, Inc.

Any patient or training use of the defibrillator, including “ON” time and shocks, reduces the battery’s charge level. Battery charge also decreases while the battery is in the defibrillator because of the battery’s normal self-discharge rate and the energy used by the defibrillator auto tests.

The approximate level of charge in the battery is indicated by the battery fuel gauge, on the readiness display when the defibrillator is off, or on the screen when the defibrillator is in use. The rechargeable battery should be recharged when the battery indicators show the charge level is low, or at least every six months.

Battery capacity **and** the level of battery charge are two important factors that determine the useful life of a rechargeable battery. Battery capacity is the amount of energy a battery is capable of holding, while charge is the proportion of capacity that is filled with energy at a particular point in time. During battery charging, the charger adds energy to the battery up to its capacity limit. Since all rechargeable batteries permanently lose battery capacity over time, you can expect that a fully-charged battery’s “ON” time will decrease with age. You should consider replacing the battery when it requires frequent charging.

Always have access to a spare, fully charged battery, and install the charged battery when the ***LOW BATTERY*** message appears on the defibrillator screen.

To properly maintain rechargeable batteries:

- Recharge when the battery fuel gauge shows that the battery charge level is low.
- Use only the Physio-Control battery charger designed for use with the LIFEPAK 1000 defibrillator. Do not use any other charger. Refer to the *LIFEPAK 1000 Defibrillator Battery Charger Instructions for Use*.
- Use, recharge, and store batteries at temperatures specified in Appendix A. Higher temperatures accelerate the loss of charge and wear out the battery sooner. Lower temperatures reduce battery capacity.
- Do not allow electrical connection between the battery contacts.

To determine when to replace rechargeable batteries:

Physio-Control recommends that rechargeable batteries be replaced every two years. Properly cared for batteries may last longer. A battery has reached the end of its useful life if *one or more* of the following circumstances occur:

- The battery case is damaged (for example, cracks or a broken clip).
- The battery is leaking.
- The battery fuel gauge displays two flashing LEDs.
- The battery requires frequent charging.
- The battery fuel gauge illuminates fewer than two LEDs after the battery completes a charge cycle.

WARNINGS!

Possible fire, explosion, and burns.

- The Li-ion rechargeable battery for the LIFEPAK 1000 defibrillator cannot be charged using battery chargers that are designed for other LIFEPAK devices. Use only the LIFEPAK 1000 Defibrillator Battery Charger to charge the Li-ion battery.
- Do not disassemble, puncture, crush, heat above 100°C (212°F), or incinerate the battery.

WARNINGS!

Possible loss of power and delay of therapy during patient care.

- Using an improperly maintained battery to power a defibrillator may cause power failure without warning. Follow these instructions for proper care of the battery.
- Stored batteries lose charge. Failure to charge a stored rechargeable battery before use may cause device power failure without warning. Always charge a stored rechargeable battery before placing it in active use.

CAUTIONS!

Possible battery damage.

- Electrical connection between battery contacts can permanently disable the battery.
- Charging batteries outside the specified temperature range may cause improper charging and shorten battery life.

ELECTRODE CARE AND STORAGE

To help prevent therapy electrode damage:

- Only open the electrode package immediately prior to use.
- Slowly peel back the protective liner on the electrodes, beginning with the cable connection end.
- Do not trim therapy electrodes.
- Do not crush, fold, or store the electrodes under heavy objects.
- Store therapy electrodes in a location where temperatures are between 15° and 35°C (59° and 95°F). Continuous exposure to the higher temperatures within this range will shorten the life of the electrodes.

SERVICE

WARNING!

Shock hazard.

Do not disassemble the defibrillator. It contains no responder-serviceable components and dangerous high voltages may be present. Contact authorized service personnel.

If the LIFEPAK 1000 defibrillator requires service as indicated by testing, troubleshooting, or the service symbol, contact authorized service personnel. In the USA, call 1.800.442.1142. Outside the USA, contact your local Physio-Control representative. When you call Physio-Control to request service, provide the following information:

- Model number and part number
- Serial number
- Observation of the problem that led to the call

If the defibrillator must be shipped to a service center or to the factory, pack it in the original shipping container. If this is not possible, ship the defibrillator in protective packing to prevent shipping damage.

©2018 Physio-Control, Inc.

PRODUCT RECYCLING INFORMATION

All materials should be recycled according to national and local regulations. Contact your local Physio-Control representative for assistance or refer to www.physio-control.com/recycling for instructions on disposing of this product.

Preparing for Disposal of Nonrechargeable Batteries

Nonrechargeable batteries should be fully discharged before disposal.

Before disposing of nonrechargeable battery paks, cover the battery terminals with the plastic discharger cap provided with the new battery. Refer to the battery discharge instructions included with your new battery.

Disposing of Batteries

Follow your national, regional, and local regulations for battery disposal. Contact a local Physio-Control representative for more information.

Recycling the Defibrillator

Recycle the defibrillator at the end of its useful life. It should be clean and contaminant-free prior to being recycled.

Recycling Disposable Electrodes

After disposable electrodes are used, follow your local clinical procedures for recycling.

Recycling Packaging

Packaging should be recycled according to national and local regulations.

SUPPLIES, ACCESSORIES, AND TRAINING TOOLS

Table 5-4 lists supplies, accessories, and training tools for the LIFEPAK 1000 defibrillator. To order in the USA, call 1.800.442.1142. Outside the USA, contact your local Physio-Control representative.

Table 5-4 Supplies, Accessories, and Training Tools

Item Description
QUIK-COMBO Electrodes with REDI-PAK™ Preconnect System
Infant/Child Reduced Energy Defibrillation Electrodes (not compatible with QUIK-COMBO defibrillation cable)
Infant/Child Electrodes Starter Kit (English, Dutch, French, German, Spanish, Italian, Danish, Norwegian, Finnish, Swedish)
Infant/Child Electrodes Starter Kit (English, Hungarian, Polish, Brazilian Portuguese, Iberian Portuguese, Spanish, Korean, Japanese, Mandarin Chinese)
LIFEPAK 1000 Nonrechargeable Lithium Manganese Dioxide Battery
LIFEPAK 1000 Rechargeable Lithium-ion Battery
LIFEPAK 1000 Defibrillator Battery Charger
Carrying Case
3-Wire Monitoring Cable

Table 5-4 Supplies, Accessories, and Training Tools (Continued)

Item Description
3-Wire Monitoring Cable (IEC)
Quick Reference Card
IrDA Adapter (attachment for a PC)
CODE-STAT Data Review Software
DT EXPRESS™ Data Transfer Software

WARRANTY INFORMATION

To obtain a detailed warranty statement, contact your local Physio-Control representative or go to www.physio-control.com.

©2018 Physio-Control, Inc.

APPENDIX A
SPECIFICATIONS

©2018 Physio-Control, Inc.

SPECIFICATIONS

All specifications are at 20°C (68°F) unless otherwise stated.

Defibrillator

Waveform

Biphasic Truncated Exponential with voltage and duration compensation for patient impedance.

With Adult Pads:

Patient Impedance Range: 10 – 300 ohms

The following specifications apply from 25 to 200 ohms.

Energy Accuracy:

10% of the energy setting into 50 ohms

15% of the rated energy output into 25 – 200 ohms

Rated energy output is the nominal delivered energy based on the energy setting and patient impedance, as defined in the following chart.

Rated Energy Output

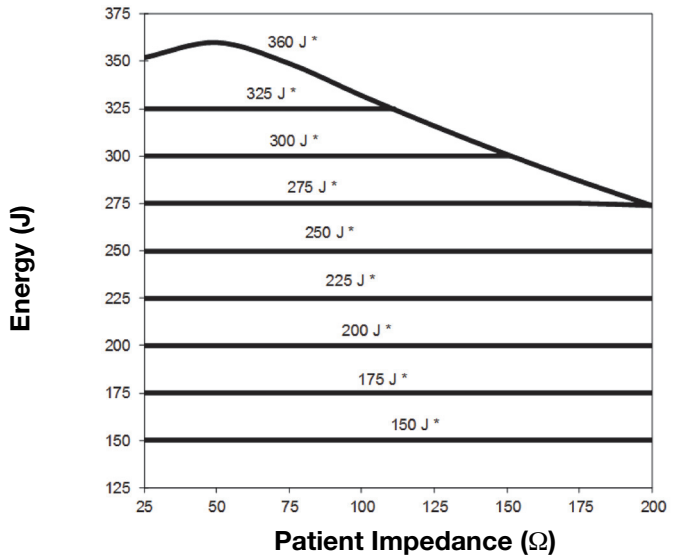

* Energy setting selected

©2018 Physio-Control, Inc.

Waveshape and Measured Parameters:

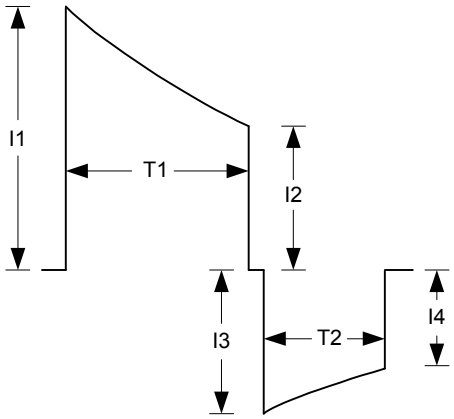

Patient Impedance (Ω)	I1 (A)	I2 (A)	I3 (A)	I4 (A)	T1 (ms)	T2 (ms)	Delivered Energy (Joules)
25	50.3	20.1	19.7	10.7	5.9	3.9	199
50	28.2	14.6	14.5	9.3	7.5	5.0	204
75	19.8	11.7	11.7	8.2	8.7	5.8	201
100	15.5	10.0	9.9	7.3	9.7	6.5	200
125	12.9	8.7	8.7	6.6	10.4	7.0	201
150	11.1	7.8	7.7	6.2	11.1	7.4	200
175	9.8	7.1	7.1	5.7	11.7	7.8	199
200	8.7	6.5	6.5	5.3	12.2	8.1	199

Note: Table values are nominal for a 200-joule shock.

Waveform (continued)

With Infant/Child pads:

The following specifications apply from 25 to 175 ohms.

Energy Accuracy (into 50 ohms):

Selected energy ÷ 4 +/- 15%; 86 joules +/- 15% maximum

Rated energy output is the nominal delivered energy based on the energy setting and patient impedance, as defined in the following chart.

Rated Energy Output

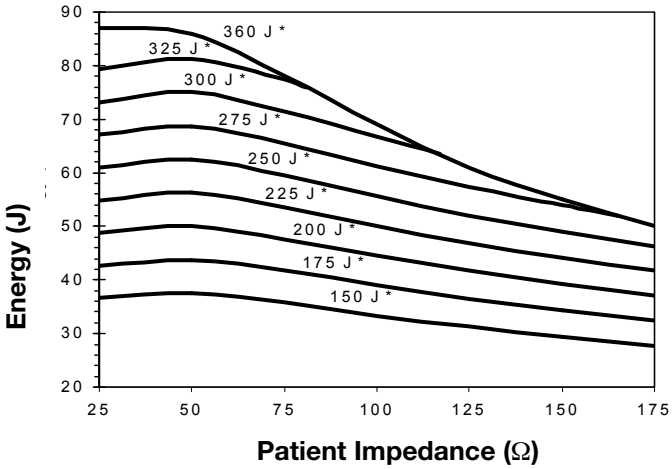

* Energy setting selected

©2018 Physio-Control, Inc.

Waveshape and Measured Parameters:

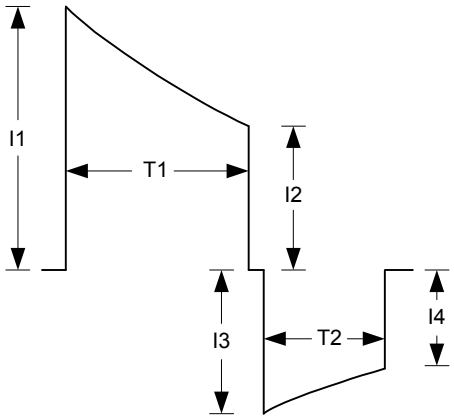

Patient Impedance (Ω)	I1 (A)	I2 (A)	I3 (A)	I4 (A)	T1 (ms)	T2 (ms)
25	19.4	10.2	10.1	6.6	7.6	5.1
50	13.2	7.4	7.3	5.0	8.1	5.4
75	10.1	5.8	5.7	4.0	8.3	5.6
100	8.3	4.8	4.8	3.3	8.6	5.7
125	7.0	4.2	4.1	2.9	8.8	5.9
150	6.2	3.7	3.7	2.6	8.8	5.9
175	5.5	3.3	3.3	2.3	8.9	6.0

Note: Table values are nominal for a 50-joule shock (200 ÷ 4).

Electrical Protection:	Input protected against high voltage defibrillator pulses per IEC 60601-1. See Figure A-1.

Figure A-1 Defibrillation–proof type BF applied part

Safety Classification:	Internally powered equipment. IEC 60601-1

AED Mode

Shock Advisory System:	ECG Analysis system that advises whether a shock is appropriate, meets rhythm recognition criteria specified in DF80 and IEC 60601-2-4. In AED mode, the device allows a shock only if Shock Advisory System advises defibrillation.
Energy Sequence:	Multiple levels, configurable from 150 to 360 joules
Shock-to-Shock cycle time (200J to 300J):	Less than 25 seconds
Time for a 3-shock sequence (200J/300J/360J):	Less than 70 seconds

Manual Mode

Energy Sequence	Delivers energy at levels selected in Setup mode.

Shock Ready Times

Timing Parameter	200 Joules	360 Joules	Comments
Analysis time	Less than 10 seconds	Less than 10 seconds	Analysis time applies if no motion is detected. If the device detects motion, analysis may be delayed by up to 10 seconds.*
Defibrillator charge time	Less than 9 seconds	Less than 15 seconds	Applies for a new fully charged battery or after 15 full energy discharges.
Power on to shock ready time (Manual mode)	Less than 20 seconds	Less than 25 seconds	Applies for a new fully charged battery or after 15 full energy discharges.
Analysis initiation to shock ready time (AED mode)	Less than 25 seconds	Less than 30 seconds	Applies for a new fully charged battery or after 15 full energy discharges.
Power on to shock ready time (AED mode)	Less than 25 seconds	Less than 30 seconds	Applies for a new fully charged battery or after 15 full energy discharges.
*Device behavior may vary for Arabic, Finnish, Icelandic, and Slovenian.			

©2018 Physio-Control, Inc.

ECG Mode

ECG Display	Provides nondiagnostic ECG display of the patient's heart rhythm.

Display

Size (Active viewing area)	120 mm (4.7 in.) x 89 mm (3.5 in.)
Display Type	320 dot x 240 dot LCD with backlight
Frequency Response	0.55 Hz to 21 Hz (-3 dB), nominal
Waveform Sweep Speed	25 mm/sec for ECG, nominal
Waveform viewing time	Minimum 4 seconds
Waveform Amplitude	1 cm/mV, nominal Display Range Differential: ±1.4 mV full scale, nominal
Heart Rate	20 to 300 bpm digital display. Display "---" if heart rate is less than 20 bpm. Heart symbol flashes for each QRS detection Accuracy: ±4% or ±3 bpm, whichever is greater
Displayed ECG	ECG information is received from therapy pads in anterior-lateral or anterior-posterior positions, or from the 3-wire ECG cable in Lead II.

Controls

On/Off	Controls device power
Shock	Controls the delivery of defibrillation energy
Soft Keys	Used during device setup and during patient use: Analyze, Charge, Disarm
Menu button	Used to access additional device features

Readiness Display

The readiness display shows device status

OK Indicator	Indicates OK when the last self-test was completed successfully.
Battery Capacity Indicator	Segmented display showing battery capacity
Service Indicator	Service required when displayed

Environmental

Note: All performance specifications defined assume that the device has been stored (two hours minimum) at the operating temperature prior to operation.

Operating Temperature	0° to 50°C (32° to 122°F)

One-Hour Operating Temperature	From room temperature to temperature extreme, one-hour duration: -20° to 60°C (-4° to 140°F)
Storage Temperature	With nonrechargeable (Li/MnO_2) battery and electrodes, maximum exposure time limited to seven days: -30° to 60°C (-22° to 140°F)
Atmospheric Pressure	575 hPa to 1060 hPa, 4572 to -382 meters (15,000 feet to -1250 feet)
Relative Humidity	5% to 95% (noncondensing)
Dust/Water	IEC 60529 IP55 with battery and REDI-PAK electrodes installed
Shock	MIL-STD-810F, Method 516.5, Procedure 1, (40g peak, 15–23 msec pulse, 45 Hz crossover frequency)
Bump	EN 1789 and IEC 60068-2-29, Test Eb: (1000 bumps, 15g, 6 ms, vertical direction)
Drop	• 18-inch drop onto each surface, repeated 5 times each, 30 drops total • EN 1789 0.75 meter drop onto each surface, 6 drops total • MIL-STD-810F, 516.5 Procedure IV, 1 meter drop on each corner, edge, and surface
Vibration	MIL-STD-810F, Method 514.5, Category 20 Ground Vehicle: Random vibration test, 1 hour per axis, 3.15g rms
EMC	For EMC information, refer to the *Electromagnetic Compliance Guidance* provided with the device.

Physical Characteristics

Weight	3.2 kg (7.1 lb) with nonrechargeable battery and REDI-PAK electrodes
Height	8.7 cm (3.4 in.)
Width	23.4 cm (9.2 in.)
Depth	27.7 cm (10.9 in.)

Data Storage

Memory Capacity	• Dual patient storage • Minimum of 40 minutes of ECG for the current patient • Summarized data stored for the previous patient
Report Types	• Continuous ECG—Continuous patient ECG report • Summary—Summary of critical resuscitation events and associated ECG waveforms • Event Log report—Report of time-stamped markers reflecting operator and device activity • Test Log report—Device self-test activity report
Capacity	Minimum 100 time-stamped event log entries
Data Review	CODE-STAT 6.0 (minimum) or DT EXPRESS 2.0 (minimum) software

©2018 Physio-Control, Inc.

Communications	Infrared wireless transfer to a personal computer

Batteries

Nonrechargeable Batteries:

Type	Lithium Manganese Dioxide (Li/MnO_2), 12.0 V, 4.5 amp-hours (nonrechargeable)
Capacity	Typically will provide 440 200-joule discharges or 1030 minutes of operating time with a new battery (370 200-joule shocks or 900 minutes of operating time at 0°C (32°F)).
Weight	0.45 kg (1.0 lb)
Shelf Life (prior to installation)	After the battery is stored for 5 years at 20° to 30°C, the device will provide 48 months of standby life.
Standby Life	A new battery provides device power for 5 years.
Low Battery Indicator	At least 30 200-joule shocks or 75 minutes of operating time remain when low battery is first indicated.

Rechargeable Batteries:

Type	Lithium-ion, 11.1 V, 4.8 amp hours
Capacity	Typically will provide 261 200-joule discharges or 608 minutes of operating time with a new fully-charged battery (247 200-joule shocks or 576 minutes of operating time at 0°C (32°F)).
Battery Charging Time	Within 4.5 hours
Weight	0.45 kg (1.0 lb), maximum
Standby Life	A new fully-charged battery provides device power for 6 months.
Low Battery Indicator	At least 30 200-joule shocks or 75 minutes of operating time remain when low battery is first indicated.

APPENDIX B
SHOCK ADVISORY SYSTEM

©2018 Physio-Control, Inc.

OVERVIEW OF THE SHOCK ADVISORY SYSTEM

The Physio-Control patented Shock Advisory System (SAS™) is an ECG analysis system built into the LIFEPAK 1000 defibrillators that advises the operator whether it detects a shockable or nonshockable rhythm. This system makes it possible for individuals not trained to interpret ECG rhythms to provide potentially-lifesaving therapy to victims of ventricular fibrillation or pulseless ventricular tachycardia.The Shock Advisory System contains the following features:

- Electrode contact determination
- Automated interpretation of the ECG
- Operator control of shock therapy
- Motion detection

Electrode Contact Determination

The victim's transthoracic impedance is measured through the defibrillation electrodes. If the baseline impedance is higher than a maximum limit, it is determined that the electrodes are not in sufficient contact with the victim or not properly connected to the defibrillator. ECG analysis and shock delivery are inhibited. The operator is advised to connect electrodes any time electrode contact is inadequate.

Automated Interpretation of the ECG

The defibrillator recommends a shock if either of the following rhythms is detected:

- Ventricular fibrillation
- Rapid ventricular tachycardia (see below for definition)

The defibrillator recommends no shock for nonshockable ECG rhythms as indicated in the Shock Advisory System Performance Report in this document.

The defibrillator is designed to detect and remove pacemaker pulses from the ECG so that an accurate decision can be reached while a pacemaker is functioning. Some pacemaker pulses may prevent advisement of an appropriate shock, regardless of the patient's underlying rhythm. If this occurs, the rescuer is advised to continue chest compressions.

PERFORMANCE VERIFICATION

The Shock Advisory System (SAS) in the LIFEPAK 1000 defibrillator was verified by inputting specific ECG waveform segments from Physio-Control databases through the electrode connector and recording the SAS decision of 'shock' or 'no shock.' The 'shock' or 'no shock' decision made by the SAS for each ECG waveform segment was compared to the treatment recommendation by clinical experts when they classified these individual ECG segments into rhythm groups and made a treatment recommendation of 'shock' or 'no shock.'

The main ECG database used to verify the performance of the LIFEPAK 1000 defibrillator for SAS is named the Physio-Control Test Set. In addition, the ECG database named SAS Test Set was used to provide samples of shockable rapid ventricular tachycardia from pulseless patients for verification purposes. The following information about the test sets and the Summary Performance Report is provided in accordance with AHA recommendations[1] and IEC requirements[2] for reporting performance data for a rhythm recognition detector.

©2018 Physio-Control, Inc.

A. Acquisition and Annotation Methodology

This section includes recording methods, rhythm source, rhythm selection criteria, annotation methods, and annotation criteria for the Shock Advisory System test sets.

Physio-Control Test Set

The Physio-Control Test Set includes ECG segments gathered from a variety of sources. The test set includes both adult and pediatric ECG segments, ECGs from the standard anterior-lateral (AL, AA) defibrillation electrode placement, ECGs from anterior-posterior (AP) defibrillation electrode placement, and ECGs from patients who have a pacemaker. Each ECG segment is 10 seconds in duration. Sources for the ECGs include:

- AHA Ventricular Arrhythmia Database (Holter recordings)
- MIT-BIH Arrhythmia Database (Holter)
- MIT-BIH Malignant Ventricular Arrhythmia Database (Holter)
- Creighton University Ventricular Tachyarrhythmia Database (hospital monitor)
- A series of consecutive LIFEPAK 500 automated external defibrillator recordings collected by Physio-Control
- DiMarco AA-AP ECG Database (simultaneous AA and AP defibrillation leads, recorded in the electrophysiology laboratory)
- Vanderbilt Pediatric ECG Database (AA and/or AP defibrillation leads, recorded in the pediatric intensive care unit, the pediatric electrophysiology laboratory, and the pediatric operating room during open heart surgery)
- A series of 12-lead recordings from consecutive chest pain patients, recorded in the pre-hospital setting with the LIFEPAK 11 monitor/defibrillator.

SAS Test Set

The SAS Test Set includes 65 ECG samples of shockable rapid ventricular tachycardia from pulseless patients recorded during pre-hospital use of LIFEPAK 5 defibrillators by paramedics. Selected ECG segments were sampled and the ECG rhythm was classified by clinical experts. Each ECG segment is 5 seconds in duration.

B. ECG Rhythm Types

The ECG rhythms were placed into the following categories by the clinical experts.

Shockable

- Coarse ventricular fibrillation (VF) ($\geq$0.20 mV peak-to-peak amplitude)
- Rapid ventricular tachycardia, pulseless (VT) (HR $\geq$120 bpm, QRS duration $\geq$160 ms, no apparent P waves, patient reported to be pulseless by paramedics)

Nonshockable

- Normal sinus rhythm (NSR) (sinus rhythm, heart rate 60-100 bpm)
- Asystole (<0.08 mV peak-to-peak amplitude)
- Other organized rhythms including 30 or more of each of the following rhythms: atrial fibrillation, atrial flutter, 2nd degree atrioventricular block, 3rd degree atrioventricular block, idioventricular rhythms, sinus bradycardia, supraventricular tachycardia, and rhythms with premature ventricular complexes

Intermediate

- Fine ventricular fibrillation (VF) (<0.20 and ≥0.08 mV peak-to-peak amplitude)
- Other VT (ventricular tachycardia that does not meet criteria for VT in the shockable rhythms category)

Also included are coarse VF with pacemaker pulses and nonshockable rhythms with pacemaker pulses.

C. Summary Shock Advisory System Performance Report

The results of tests with the SAS and Physio-Control test sets in the LIFEPAK 1000 defibrillator are shown below in the context of requirements from IEC 60601-2-4 and the recommendations from the American Heart Association.

Table 2 IEC 60601-2-4 Requirements and SAS Performance for Adult and Pediatric Patients

Rhythm Category	Requirement	Test Result
Shockable (Sensitivity)		
Coarse VF	>90%	Met
Rapid VT, pulseless	>75%	Met
Nonshockable (Specificity)	>95%	Met
Positive Predictive Value	Report Only	>90%
False Positive Rate	Report Only	<5%

Table 3 AHA Recommendations and SAS Performance for Adult and Pediatric Patients

Rhythm Category	Performance Goal	Minimum Sample Size	Sample Size Tested	Test Result (Goal and Sample Size)
Shockable (Sensitivity)				
Coarse VF	>90%	200	261	Met
Rapid VT, pulseless	>75%	50	65	Met
Nonshockable (Specificity)	None	300		Met
Normal Sinus Rhythm	>99%	100	578	Met
Other QRS	>95%	30	1251	Met
Asystole	>95%	100	184	Met
Intermediate				
Fine VF	Report Only	25	33	>20% shocked
Other VT	Report Only	25	27	>10% shocked

The Shock Advisory System was also tested using ECGs acquired from hospitalized pediatric patients ranging in age from <1 day old to 17 years old. The results are summarized in the following tables.

©2018 Physio-Control, Inc.

Table 4 IEC 60601-2-4 Requirements and SAS Performance for Pediatric Patients

Rhythm Category	Requirement	Test Result
Shockable (Sensitivity)		
Coarse VF	>90%	Met
Nonshockable (Specificity)	>95%	Met
Positive Predictive Value	Report Only	>90%
False Positive Rate	Report Only	<5%

Table 5 SAS Performance for Pediatric Patients

Rhythm Category	Performance Goal	Sample Size Tested	Test Result (Goal)
Shockable (Sensitivity)			
Coarse VF	>90%	63	Met
Nonshockable (Specificity)	None		Met
Normal Sinus Rhythm	>99%	69	Met
Other QRS	>95%	507	Met
Asystole	>95%	60	Met

The Shock Advisory System was also tested using paced rhythms recorded at high-fidelity from patients with implanted pacemakers. The high-fidelity pacemaker spikes were also added to samples of ventricular fibrillation to test the defibrillator's ability to reach a shock decision in the case of ventricular fibrillation with an implanted, active pacemaker. The results are summarized in the following table.

Table 6 SAS Performance with Active Pacemakers

Rhythm Category	Performance Goal	Sample Size Tested	Test Result
Shockable (Sensitivity)			
Coarse VF	>90%	35	Met
Nonshockable (Specificity)	>95%	35	Met

CONTROL OF SHOCK THERAPY

The Shock Advisory System causes the defibrillator to charge automatically when it detects the presence of a shockable rhythm. When a shockable rhythm is detected, the defibrillator instructs the user to deliver the shock by pressing the shock button.

Note: If the shock button is not pressed within 15 seconds, the system disarms and repeats the analysis. The system also disarms if the patient impedance decreases suddenly or the patient impedance goes outside the acceptable range for analysis. If none of these occur, the shockable rhythm decision is not revised during charging or prior to shock.

MOTION DETECTION

The Shock Advisory System detects patient motion independent of ECG analysis. MOTION DETECTION can be set up to be ON or OFF. For more information, see “Changing Setup Options” in the *LIFEPAK 1000 Defibrillator Operating Instructions.*

A number of activities can create motion, including CPR, rescuer movement, patient movement, and vehicle movement. If variations in the transthoracic impedance signal exceed a maximum limit, the Shock Advisory System determines that patient motion of some kind is present. If motion is detected, the ECG analysis is inhibited. The operator is advised by a voice prompt. After 10 seconds, if motion is still present, the motion alert stops and the analysis always proceeds to completion. This limits the delay in therapy in situations where it may not be possible to stop the motion. However, the rescuer should remove the source of motion whenever possible to minimize the chance of artifact in the ECG.

There are two reasons why ECG analysis is inhibited when the motion alert occurs, and why the rescuer should remove the source of the motion whenever possible:

- Such motion may cause artifact in the ECG signal. This artifact may occasionally cause the Shock Advisory System to reach an incorrect decision.
- The motion may be caused by a rescuer’s interventions. To reduce the risk of inadvertently shocking a rescuer, the motion alert prompts the rescuer to move away from the patient. This will stop the motion and ECG analysis will proceed.

DEFINITIONS AND REFERENCES

A true positive (A) is a correct classification of a shockable rhythm. A true negative (D) is a correct classifications of all rhythms for which a shock is not indicated. A false positive (B) is an organized or perfusing rhythm or asystole that has been incorrectly classified as a shockable rhythm. A false negative (C) is a VF or VT associated with cardiac arrest that has been incorrectly classified as non-shockable.

The sensitivity of the device for shockable rhythms is A/(A+C). The true predictive value is expressed as A/(A+B). The specificity of the device for non-shockable rhythms is D/(B+D). The false positive rate is expressed as B/(B+D).[3]

1 Kerber RE, et al, "Automatic External Defibrillators for Public Access Defibrillation: Recommendations for Specifying and Reporting Arrhythmia Analysis Algorithm Performance, Incorporating New Waveforms, and Enhancing Safety: A Statement for Health Professionals from the American Heart Association Task Force on Automatic External Defibrillation", Subcommittee on AED Safety and Efficacy. Circulation, 1997: Vol. 95: 1677-1682.

2 Clause 201.7.9.3.103, "Essential Performance data of the Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment – Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators*: 2010

3 Quoted from clause 201.107, "Requirements for Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment – Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators*: 2010.

©2018 Physio-Control, Inc.

APPENDIX C
cprMAX™ TECHNOLOGY

©2018 Physio-Control, Inc.

ABOUT cprMAX TECHNOLOGY

The cprMAX technology from Physio-Control is designed to allow resuscitation protocols to maximize the quantity of CPR administered during treatment with an AED, consistent with the 2015 American Heart Association Guidelines for Cardiopulmonary Resuscitation and Emergency Cardiovascular Care (AHA Guidelines) and the European Resuscitation Council Guidelines for Resuscitation 2015 (ERC Guidelines).

Setup options should be changed only under the direction of a physician knowledgeable in cardiopulmonary resuscitation who is familiar with the literature in this area.

The cprMAX technology includes the following setup options:

- **INITIAL CPR**. Prompts the user to perform an initial period of CPR. Applies only to immediately after turning on the AED or after the first analysis.
- **PRESHOCK CPR** Time. Prompts for CPR after a shockable ECG rhythm is detected, before the shock is delivered. If **INITIAL CPR** is set to **OFF**, then **PRESHOCK CPR** applies to all shock advised decisions (including the first analysis).
- **CPR TIME 1** and **2**. CPR time periods after shocks or no shock advised decisions respectively.
- **STACKED SHOCKS**. Eliminates the analysis after each shock and inserts prompting for CPR after each shock; when set to **OFF**, eliminates the three-stack shock.
- **PULSE CHECK**. Indicates when, if ever, the device is to prompt for pulse checks.

AED protocols are aligned with the AHA and ERC Guidelines when the setup options are set as follows:

- Initial CPR: **OFF**
- PreShock CPR Time: **OFF**
- CPR Times 1 and 2: **120 SECONDS**
- Stacked Shocks: **OFF**
- Pulse Check: **NEVER**

The above options are the factory default settings for cprMAX technology. Your medical director protocols should determine whether or not to change the options and should ensure that you receive training.

AED OPERATION WITH cprMAX TECHNOLOGY

The following paragraphs describe AED operation with cprMAX technology setup options.

Initial CPR

The **INITIAL CPR** option prompts the user to perform an initial period of CPR. The choices are: **OFF, ANALYZE FIRST** and **CPR FIRST**. The factory default is **OFF**.

- The **OFF** setting has no prompting for an initial CPR period.
- The **ANALYZE FIRST** setting prompts for analysis and then CPR. If the analysis determines that a shock is needed, the AED will prompt, ***IF YOU WITNESSED THE ARREST, PUSH CANCEL***, which provides the opportunity to end CPR early and proceed directly to delivering a shock.

©2018 Physio-Control, Inc.

- The **CPR FIRST** setting prompts the user to perform CPR immediately after the defibrillator is powered on. The AED will also prompt, ***IF YOU WITNESSED THE ARREST, PUSH CANCEL***, which provides the opportunity to end CPR early and proceed directly to analysis.

Organizations that choose to implement this option should develop a protocol and provide training to responders instructing them when to end the initial CPR interval early. Potential situations for instructing responders to end CPR early include:

- The patient's collapse was witnessed by the responder.
- The responder ascertains that fewer than four or five minutes have elapsed since the patient's collapse.
- The patient exhibits agonal breathing, an indicator of a short downtime.
- The responder ascertains that CPR of adequate quality and duration has already been provided before attaching the AED electrodes.

Initial CPR Time

The **INITIAL CPR TIME** option applies when **INITIAL CPR** is set to **ANALYZE FIRST** or **CPR FIRST**. It sets the CPR time for that CPR period. The time choices for **INITIAL CPR TIME** are: **15**, **30**, **45**, **60**, **90**, **120**, and **180 SECONDS**. The default setting is **120 SECONDS**.

PreShock CPR Time

The **PRESHOCK CPR** time option inserts prompting for CPR when a shockable ECG rhythm is detected and during the time the AED is charging. It applies only when analysis results in ***SHOCK ADVISED*** decisions. When **INITIAL CPR** is set to **OFF** or **CPR FIRST**, **PRESHOCK CPR** time applies to the first and all subsequent shocks. When **INITIAL CPR** is set to **ANALYZE FIRST**, **PRESHOCK CPR** time applies to the second and all subsequent shocks. The choices for **PRESHOCK CPR** time are: **OFF, 15,** and **30 SECONDS**. To prompt for CPR only for the time the capacitor is charging, select the 15-seconds CPR interval. The **SHOCK** button is not enabled until charging and CPR time are completed. The default setting for **PRESHOCK CPR** time is **OFF**.

Note: Although the **SHOCK** button is disabled during the **PRESHOCK CPR** interval, it becomes active as soon as the **PRESHOCK CPR** interval ends. To minimize the interval between the final chest compression and shock delivery (while maintaining responder safety), protocols that select this option should provide specific training and protocols to address the rapid transition from **PRESHOCK CPR** to shock delivery.

Stacked Shocks

When set to **OFF**, the **STACKED SHOCKS** option inserts prompting for CPR after each (a single) shock. This eliminates the three-shock stack. CPR is prompted after the shock regardless of the ECG rhythm. The CPR time following the shock is determined by the **CPR TIME 1** setting selected. Choices for the **STACKED SHOCKS** option are **ON** or **OFF**. The default setting is **OFF**.

When this option is set to **ON**, the defibrillator follows the previously traditional stacked shock protocol and delivers up to three consecutive shocks, as necessary, without interposed CPR.

Pulse Check

The **PULSE CHECK** option inserts prompting to check for a pulse or check the patient, depending on the **PULSE PROMPT** setting. The choices for **PULSE CHECK** are: **ALWAYS, AFTER EVERY NSA, AFTER SECOND NSA**, and **NEVER**. The default setting is **NEVER**.

- The **ALWAYS** option prompts for a pulse check after **CPR TIME 1** and **2**, after a ***NO SHOCK***

ADVISED decision, after a single ***SHOCK ADVISED*** decision with **STACKED SHOCKS OFF**, or after three consecutive ***SHOCK ADVISED*** decisions if **STACKED SHOCKS** is **ON**.

- The **AFTER EVERY NSA** option prompts for a pulse check after every ***NO SHOCK ADVISED*** decision.
- The **AFTER SECOND NSA** option prompts for a pulse check after the second analysis if the second analysis results in a ***NO SHOCK ADVISED*** decision, regardless of the first analysis decision (***SHOCK ADVISED*** or ***NO SHOCK ADVISED***).
- The **NEVER** option eliminates all **PULSE CHECK** prompts.

©2018 Physio-Control, Inc.

APPENDIX D
CHANGING SETUP OPTIONS

©2018 Physio-Control, Inc.

CHANGING SETUP OPTIONS

Setup options allow you to define operating features for your defibrillator, such as CPR intervals. Setup options are listed in tables beginning with Table D-1.

To enter Setup mode:

1 Ensure that no electrodes or cables are connected to the defibrillator.

2 Press and hold both softkeys and press the ON/OFF button. The Enter Setup Mode screen appears.

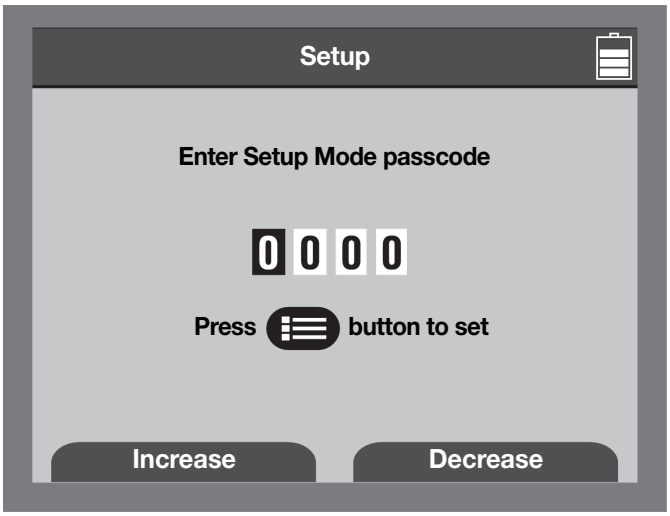

Figure D-1 Enter Setup Mode

3 Enter the Setup mode passcode. The factory default passcode is 0000—press the MENU button four times to accept the default passcode. For information on how to change the passcode, see page A-6.

Note: To exit Setup mode, turn the defibrillator off. If you changed the setup options, the changes are saved and will appear the next time you turn the defibrillator on. (Refer to Setup menu options that follow.)

©2018 Physio-Control, Inc.

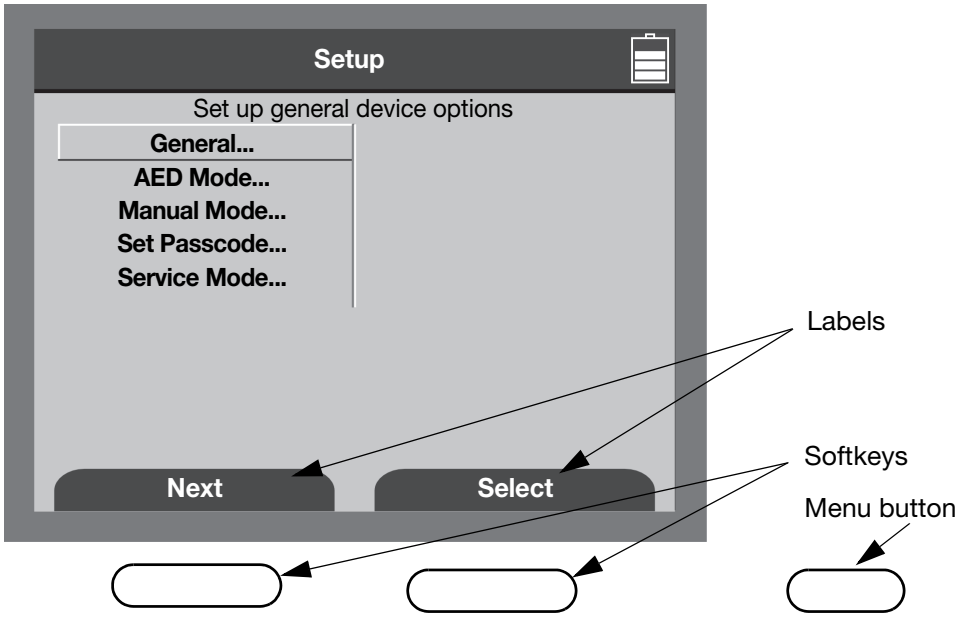

Figure D-2 Setup Mode Screen

Setup Menu Options

All setup options for your defibrillator are grouped under these top-level headings.

- General
- AED Mode
- Manual Mode
- Set Passcode
- Service Mode

Use the softkeys to navigate and make selections on the Setup screen. The label on the screen and above each softkey identifies the current softkey function.

Press NEXT to advance through the menu options.

When an option is highlighted, a Help message about the option appears at the top of the screen, as shown in Table D-1.

Table D-1 Top-Level Setup Menu

Menu Item	Help Message	Options
GENERAL	Set up general device options.	See How to Enter and Delete Device Information, page A-7.
AED MODE	Set up AED mode defaults.	
MANUAL MODE	Set up Manual mode defaults.	
SET PASSCODE	Set passcode to enter Setup mode.	
SERVICE MODE	View service options.	

To choose an option, highlight your choice on the screen and press SELECT.

Access the General Setup menu from Setup to view general purpose settings. The underlined bold options in Table D-2 are the factory default settings.

Table D-2 General Setup Menu

Menu Item	Help Message	Options
DEVICE ID	Set the device ID.	User selectable, 0-9, A-Z, up to 20 characters. Default is **SERIAL NUMBER**.
DATE/TIME	Set current date and time.	Default is **PACIFIC TIME**.
AUDIO	Set audio parameters.	See Table D-3.
DEVICE DATA	Display device data.	
DELETE AFTER SEND	Delete patient data after sending.	ON, **OFF**.
PREVIOUS PAGE	Go back to previous page.	

Access the audio options from Audio on the General Setup menu. The underlined bold options in Table D-3 are the factory default settings.

Table D-3 General Setup Menu—Audio Setup Submenu

Menu Item	Help Message	Options
PROMPT VOLUME	Set volume for alerts, tones, and voice prompts.	MEDIUM, **HIGH**.
SHOCK TONE	Enable shock tone.	ON, **OFF**.
SERVICE ALERT	Enable the service alert tone.	**ON**, OFF.
PREVIOUS PAGE	Go back to previous page.	

Access the AED menu from the AED Mode option in Setup. The underlined bold options in Table D-4 are the factory default settings.

Table D-4 AED Setup Menu

Menu Item	Help Message	Options
ENERGY PROTOCOL	Set the defibrillation energy sequence.	See Table D-5.
CPR	Set CPR options for AED mode.	See Table D-6.
PULSE	Set pulse prompt options for AED mode.	See Table D-7.
ECG DISPLAY	Display ECG waveform in AED mode.	**ON**, OFF.
AUTO ANALYZE	Select analyze option.	**ON**, AFTER FIRST SHOCK, OFF.
MOTION DETECTION	Alert when motion is detected.	**ON**, OFF.
PREVIOUS PAGE	Go back to previous page.	

©2018 Physio-Control, Inc.

Access Energy Protocols from the AED menu. The underlined bold options in Table D-5 are the factory default settings.

Table D-5 AED Setup Menu—Energy Protocols Submenu

Menu Item	Help Message	Options
ENERGY 1	Select energy level for shock 1.	150, 175, **200**, 225, 250, 275, 300, 325, 360* joules.
ENERGY 2	Select energy equal to or greater than Energy 1.	150, 175, 200, 225, 250, 275, **300**, 325, 360 Joules.
ENERGY 3	Select energy equal to or greater than Energy 2.	150, 175, 200, 225, 250, 275, 300, 325, **360** joules.
FLEXIBLE PROTOCOL	Repeat previous energy after ***NO SHOCK ADVISED*** (only when ***NO SHOCK ADVISED*** follows a shock).	**ON**, OFF.
STACKED SHOCKS	Enable consecutive shocks without CPR.	ON, **OFF**.
PREVIOUS PAGE	Go back to previous page.	

* When selecting 360 joules for energy 1, consider AED use in children.

Access CPR Setup from the AED menu. The underlined bold options in Table D-6 are the factory default settings.

Table D-6 AED Setup Menu—CPR Submenu

Menu Item	Help Message	Options
CPR TIME 1	Set CPR interval after shocks.	15, 30, 45, 60, 90, **120**, 180 seconds.
CPR TIME 2	Set CPR interval after ***NO SHOCK ADVISED***.	15, 30, 45, 60, 90, **120**, 180 seconds.
INITIAL CPR	Enable Initial CPR.	**OFF**, ANALYZE FIRST, CPR FIRST.
INITIAL CPR TIME	Set CPR interval after first analysis.	15, 30, 45, 60, 90, **120**, 180 seconds.
PRESHOCK CPR	Set CPR interval before ***SHOCK ADVISED*** decisions.	**OFF**, 15, 30 seconds.
CPR PROMPT	Enable extended CPR prompt: ***PROVIDE RESCUE BREATHS AND CHEST COMPRESSIONS***	ON, **OFF**.
PREVIOUS PAGE	Go back to previous page.	

Access Pulse Setup from the AED menu. The underlined bold options in Table D-7 are the factory default settings.

Table D-7 AED Setup Menu—Pulse Setup Submenu

Menu Item	Help Message	Options
PULSE CHECK	Enable pulse check prompt.	**NEVER**: Never prompt for ***PULSE CHECK***. AFTER SECOND NSA: After every NSA except for first analysis NSA result. AFTER EVERY NSA: Only after ***NO SHOCK ADVISED***. ALWAYS: After every stack of shocks and every NSA finding.
PULSE PROMPT	Select prompt for patient vital signs.	**CHECK PULSE**, CHECK BREATHING, CHECK CIRCULATION, OPEN AIRWAY.
AED MONITORING	Enable monitoring while in AED mode.	ON, **OFF**.
MONITORING REPEAT	Select AED monitoring prompt repeat time.	OFF, **1**, 2, 3, or 5 minutes.
PREVIOUS PAGE	Go back to previous page.	

Access the Manual menu from the Manual Mode option in Setup. The underlined bold options in Table D-8 are the factory default settings.

Table D-8 Manual Setup Menu

Menu Item	Help Message	Options
MANUAL ACCESS	Enable Manual mode access.	ON, **OFF**.
ANALYZE	Enable Shock Advisory System analysis in Manual mode. (An ANALYZE softkey is provided in Manual mode.)	ON, **OFF**.
PREVIOUS PAGE	Go back to previous page.	

©2018 Physio-Control, Inc.

Access the Set Passcode screen, shown in Figure D-3, from the top-level Setup menu.

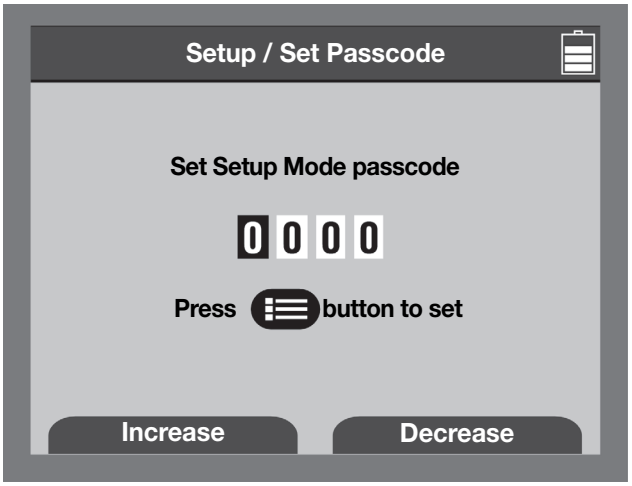

Figure D-3 Set Passcode Screen

Use the INCREASE and DECREASE softkeys and the MENU button to set the passcode. Be sure to record the new passcode—the passcode is required each time you enter Setup mode.

Access Service mode, shown in Table D-9, from the top-level Setup menu.

Table D-9 Service Setup Menu

Menu Item	Help Message	Options
DEFIB CAL	Start defibrillator calibration.	
PIXEL TEST	Test display pixels.	
SERVICE LOG	Show service log.	
SERVICE DATA	Show device data.	
DEVICE LOG	Display device log.	
SET PASSCODE	Set Service mode access passcode.	
SETUP MODE	Go back to Setup mode.	

How to Enter and Delete Device Information

Figure D-4 shows the Device ID screen used to enter device information into the defibrillator.

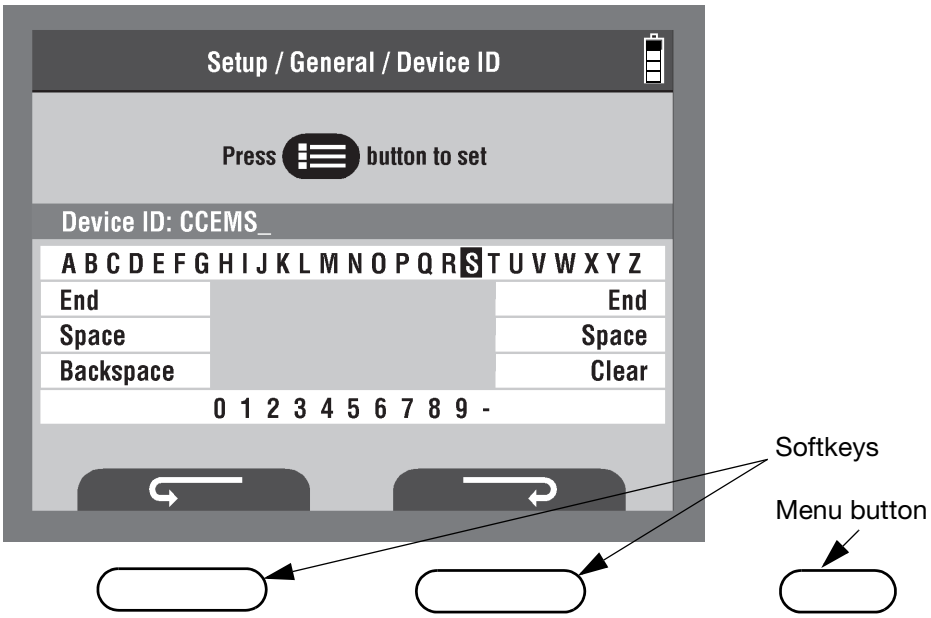

Figure D-4 Device ID Screen

To enter device information:

1 Use the softkeys under the clockwise and counterclockwise arrows to navigate to the character or number you want to enter.

Note: Pressing the clockwise arrow moves the cursor forward one space at a time; the counterclockwise arrow moves it back one space at a time.

2 Press the MENU button to choose the character. The character appears on the screen above the alphabet area.

3 Continue adding characters to complete your entry.

4 When your completed entry is composed on the screen, select END.

To delete device information:

1 Use the clockwise or counterclockwise arrows to navigate to the BACKSPACE option.

2 Navigate to the CLEAR option and press the MENU button again. The character no longer appears on the screen.

©2018 Physio-Control, Inc.

APPENDIX E
USER'S CHECKLIST

©2018 Physio-Control, Inc.

LIFEPAK® 1000 DEFIBRILLATOR
USER'S CHECKLIST

PHYSIO CONTROL

Unit Serial Number_____

Department/Location_____

	Instruction	Recommended Corrective Action	Date / Initials							
1	Check readiness display for:									
	WRENCH symbol	Contact authorized service personnel.								
	OK symbol	None.								
	Battery level	Replace if one bar or less on battery status indicator.								
2	Check Use By date on electrode packet.	Replace electrode packet if date has passed.								
3	Check spare battery.	Ensure spare, fully charged battery is available.								
4	Check additional supplies.	Replenish as needed.								
5	Check defibrillator for:									
	Damage or cracks	Contact authorized service personnel.								
	Foreign substances	Clean the device.								
6	Comments:									

APPENDIX F
DEFIBRILLATION CLINICAL SUMMARIES

©2018 Physio-Control, Inc.

DEFIBRILLATION OF VENTRICULAR FIBRILLATION AND VENTRICULAR TACHYCARDIA

Background

Physio-Control conducted a multi-centered, prospective, randomized and blinded clinical trial of biphasic truncated exponential (BTE) shocks and conventional monophasic damped sine wave (MDS) shocks. Specifically, the equivalence of 200 J and 130 J BTE shocks to 200 J MDS shocks[1] was tested.

Methods

Ventricular fibrillation (VF) was induced in 115 patients during evaluation of implantable cardioverter defibrillator function and 39 patients during electrophysiologic evaluation of ventricular arrhythmias. After 19±10 seconds of VF, a customized defibrillator delivered an automatically randomized shock. Efficacy was based on success of this shock. To demonstrate equivalence of test shocks to control shocks, the 95% upper confidence limit of the difference in efficacy (95UCLD), control minus test, was required to be less than 10%.

Results

Ventricular Fibrillation

The efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks (95UCLD=2%). The difference in success rates of 200 J MDS minus 200 J BTE shocks was -10% (exact 95% confidence interval from -27% to 4%). The 130 J BTE shocks were not demonstrated equivalent to 200 J MDS shocks (95UCLD=22%). However, neither was their efficacy significantly lower than that of the 200 J MDS shocks (statistical power limited by small sample sizes). For all shock types, hemodynamic parameters (oxygen saturation and systolic and diastolic blood pressure) were at or near their pre-induction levels by 30 seconds after successful shocks.

Shock	Ventricular Fibrillation 1st Shock Success	Exact 95% Confidence Interval
200 J MDS	61/68 (90%)	80-96%
200 J BTE	39/39 (100%)	91-100%
130 J BTE	39/47 (83%)	69-92%

[1] S.L. Higgins et al., “A comparison of biphasic and monophasic shocks for external defibrillation,” *Prehospital Emergency Care*, 2000, 4(4):305-13.

©2018 Physio-Control, Inc.

Ventricular Tachycardia

Seventy-two episodes of ventricular tachycardia (VT), induced in 62 patients, were treated with randomized shocks. High rates of conversion were observed with biphasic and monophasic shocks. Sample sizes were too small to statistically determine the relationship between success rates of the waveforms tested.

Shock	Ventricular Tachycardia 1st Shock Success	Exact 95% Confidence Interval
200 J MDS	26/28 (93%)	77-99%
200 J BTE	22/23 (96%)	78-100%
130 J BTE	20/21 (95%)	76-100%

Conclusions

In this double-blinded study, the efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks for defibrillation of short duration, electrically-induced VF. However, the comparison of efficacy of 130 J biphasic and 200 J monophasic shocks for VF was inconclusive. All waveforms tested provided a high rate of termination of VT. The VT sample sizes were too small to statistically determine the relationship between VT success rates of the waveforms tested.

Compared to conventional shocks for VF, we found no positive or negative effect of biphasic shocks for VF on hemodynamic parameters following the defibrillating shock. It is possible that, compared to 200 J monophasic shocks, 200 J biphasic shocks will in some cases enable earlier termination of VF. Therefore, we conclude that biphasic shocks for VF delivered at conventional energy levels have the potential to improve outcome in resuscitation of patients with cardiac arrest.

MONOPHASIC VS. BIPHASIC WAVEFORMS: OUT-OF-HOSPITAL TRIAL

Background

In a publication by Van Alem et al., the authors noted "Evidence suggests that biphasic waveforms are more effective than monophasic waveforms for defibrillation in out-of-hospital cardiac arrest (OHCA), yet their performance has only been compared in un-blinded studies."[1]The authors subsequently conducted and reported on a randomized clinical trial comparing the effectiveness of the LIFEPAK 500 defibrillation waveform (monophasic versus biphasic). Specifically, the success of biphasic truncated exponential (BTE) and monophasic damped sine wave (MDS) shocks for defibrillation were compared in a prospective, randomized, double-blinded clinical trial of out-of-hospital (OOH) cardiac arrest patients.

Note: The identical ECG analysis Shock Advisory System and BTE (ADAPTIV biphasic waveform) used in the LIFEPAK 500 AED is also used in the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

Methods

First responders were equipped with either a Physio-Control LIFEPAK 500 MDS or BTE (ADAPTIV biphasic waveform) AED in a random fashion. Patients in VF received BTE or MDS first shocks of 200 J. The ECG was recorded for subsequent analysis continuously. The success of the first shock as a primary endpoint was removal of VF and required a return of an organized rhythm for at least two (2) QRS complexes, with an interval of <5 seconds, within 1 minute after the first shock. The secondary endpoint was termination of VF at 5 seconds.

Results

VF was the initial recorded rhythm in 120 patients in OHCA, 51 patients received BTE and 69 received MDS shocks. The median time from collapse to first shock was 9 minutes for the monophasic shock and 11 minutes for the BTE. The success rate of 200 J first shocks was significantly higher for BTE than for MDS shocks, 35/51 (69%) and 31/69 (45%), p=0.01. Termination of VF at 5 seconds after the first shock was 91% for the monophasic shock and 98% for BTE waveform. Return of spontaneous circulation was 61% for the Physio-Control defibrillation shock. In a logistic regression model, the odds ratio of success for a BTE shock was 4.01 (95% CI 1.01-10.0), adjusted for baseline cardiopulmonary resuscitation, VF-amplitude and time between collapse and first shock. No difference was found with respect to the secondary endpoint, termination of VF at 5 seconds (RR 1.07 95% CI: 0.99-1.11) and with respect to survival to hospital discharge (RR 0.73 95% CI:0.31-1.70).

Conclusion

The authors concluded that BTE-waveform AEDs provide significantly higher rates of successful defibrillation with return of an organized rhythm in OHCA than MDS waveform AEDs. This supports the safety and effectiveness of the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

[1]Van Alem AP, Chapman FW, Lank P, Hart AAM, Koster RW. A prospective, randomised and blinded comparison of first shock success of monophasic and biphasic waveforms in out-of-hospital cardiac arrest. *Resuscitation* 2003;58(1):17-24

©2018 Physio-Control, Inc.

APPENDIX G
ELECTROMAGNETIC COMPATIBILITY GUIDANCE

©2018 Physio-Control, Inc.

Table 1

Guidance and Manufacturer's Declaration - Electromagnetic Emissions		
The LIFEPAK® 1000 defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 1000 defibrillator should ensure that the device is used in such an environment.		
Emissions Test	**Compliance**	**Electromagnetic Environment - Guidance**
RF emissions CISPR 11	Group 1	The LIFEPAK 1000 defibrillator uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The LIFEPAK 1000 defibrillator is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not Applicable	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Not Applicable	

Essential Performance

The LIFEPAK 1000 defibrillator maintains safe and effective performance of the defibrillation therapy and patient monitoring functions when operated in the electromagnetic environment specified in Tables 2 through 4.

Limitations Affecting Immunity to Electromagnetic Disturbances

The level of protection from electromagnetic disturbances is limited by several factors, including requirements for protection from third-party defibrillators, patient safety isolation, and maintenance of adequate signal-to-noise ratios for processing patient signals.

©2018 Physio-Control, Inc.

Table 2

Guidance and Manufacturer's Declaration - Electromagnetic Immunity			
The LIFEPAK 1000 defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 1000 defibrillator should ensure that the device is used in such an environment.			
Immunity Test	**IEC 60601 Test Level**	**Compliance Level**	**Electromagnetic Environment - Guidance**
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±8 kV contact* ±15 kV air*	The LIFEPAK 1000 defibrillator is suitable for use in a dry environment.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/ output lines	Not Applicable	Not Applicable
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	Not Applicable	Not Applicable
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% U_T (>95% dip in U_T) for 0.5 cycle 40% U_T (60% dip in U_T) for 5 cycles 70% U_T (30% dip in U_T) for 25 cycles <5% U_T (>95% dip in U_T) for 5 s	Not Applicable	Not Applicable
Power frequency (50/ 60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
Note: U_T is the a.c. mains voltage prior to application of the test level.			

* Uninstalled battery pack is ±6 kV contact, ±8 kV air.

Table 3

Guidance and Manufacturer's Declaration - Electromagnetic Immunity			
The LIFEPAK 1000 defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 1000 defibrillator should ensure that the device is used in such an electromagnetic environment.			
Immunity Test	**IEC 60601 Test Level**	**Compliance Level**	**Electromagnetic Environment - Guidance**
			Portable and mobile RF communications equipment should be used no closer to any part of the LIFEPAK 1000 defibrillator, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.
			Recommended separation distance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz outside ISM bands[1]	3 Vrms	$d = 1.2\sqrt{P}$
	10 Vrms 150 kHz to 80 MHz in ISM bands[a]	10 Vrms	$d = 1.2\sqrt{P}$
Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.5 GHz	10 V/m	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz Where *P* is the maximum output power rating of the transmitter in watts (w) according to the transmitter manufacturer and *d* is the recommended separation distance in meters (m).[2] Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,[3] should be less than the compliance level in each frequency range.[4] Interference may occur in the vicinity of equipment marked with the following symbol:
Note 1: At 80 MHz and 800 MHz, the higher frequency range applies. **Note 2:** These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			

1. The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz.
2. The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in these frequency ranges.

©2018 Physio-Control, Inc.

3. Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitter, an electromagnetic site survey should be considered. If the measured field strength in the location in which the LIFEPAK 1000 defibrillator is used exceeds the applicable RF compliance level above, the LIFEPAK 1000 defibrillator should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the LIFEPAK 1000 defibrillator.
4. Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3V/m.

Table 4

Recommended Separation Distances between Portable and Mobile RF Communications Equipment and the LIFEPAK 1000 Defibrillator

The LIFEPAK 1000 defibrillator is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the LIFEPAK 1000 defibrillator can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LIFEPAK 1000 defibrillator as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m			
	150 kHz to 80 MHz outside ISM bands $d = 1.2\sqrt{P}$	150 kHz to 80 MHz in ISM bands $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.12	0.23
0.1	0.38	0.38	0.38	0.73
1	1.2	1.2	1.2	2.3
10	3.8	3.8	3.8	7.3
100	12	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance *d* in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where *P* is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

Note 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

Note 2: The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz.

Note 3: An additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas.

Note 4: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

INDEX

A
About
  Defibrillation vi, 3-3, 3-6
  LIFEPAK 1000 defibrillator vii
Accessories 5-8
AED mode vi, 3-2, 3-3, A-5
AED Mode setup menu D-3
AED operation C-1
Alternate anterior-posterior electrode position 3-5
Audio setup submenu D-3
Auto Tests 5-3

B
Batteries viii
Battery charger 2-6
Battery disposal 5-8
Battery indicators 2-5
Battery maintenance 5-4, 5-5
Battery status symbol 2-4
Battery, nonrechargeable 5-5
Battery, rechargeable 5-5

C
Caring for LIFEPAK 1000 defibrillator 5-1
Caution 1-2
Cautions
  Cleaning 5-4
  General caution 1-3
  General therapy 3-2
  Nonrechargeable battery 5-5, 5-7
Checklist, User's E-3
Cleaning 5-4
CODE-STAT software 4-3
Controls and indicators 2-2, A-6
CPR setup submenu D-4
cprMAX Technology viii

D
Danger 1-2
Data management viii, 4-2
  Event and Test Log 4-3
  Test and service data 4-3
Data storage 4-2, A-7
Data transfer 4-3, 4-4
Defibrillation waveform vii, A-1
Defibrillator
  Cleaning 5-4
  Inspection 5-3
  Recycling 5-8
Defibrillator data 4-2
Deleting of patient data 4-2
Device ID screen D-7
Device information D-7
Disposing, batteries 5-8

E
ECG display (optional) vii, 2-4, A-6
ECG electrodes, connecting 3-9
ECG monitoring/mode 3-2, 3-9, A-6
Electrode care and storage 5-7
Electrode placement, defibrillation 3-5
Energy Protocols submenu D-4
Entering
  Device information D-7
  Setup mode D-1
Event and Test Log 4-3

F
Features
  Batteries viii
  cprMAX Technology viii
  Daily self-test viii
  Data management viii
  ECG display (optional) vii
  Heart rhythm analysis vii
  LIFEPAK 1000 defibrillator vii

©2018 Physio-Control, Inc.

Readiness display viii

G
General setup menu D-3

H
Heart Rate Indicator 2-4
Heart rhythm analysis vii, B-1

I
Implanted pacemakers/ defibrillators 3-5
Indications for use vi
Inspection 5-3
IrDA adapter 4-3
IrDA connections 4-3, 4-4
IrDA port 2-3

M
Maintenance and testing schedule 5-2
Maintenance, battery 5-4
Manual mode 3-2, 3-6, A-5
Manual mode therapy 3-6
Manual setup menu D-5
Modes of operation 3-2
Monitoring in ECG mode 3-9
Motion Detected 3-8

N
No shock advised operating scenario C-1
Nonrechargeable battery 5-5

O
Obese patients 3-5

P
Pacemakers, patients with implanted 3-5
Packaging recycling 5-8
Pediatric patients 3-3
Physical Characteristics A-7
Placing electrode pads 3-3, 3-5, 3-7
Product recycling 5-8
Pulse setup submenu D-5

R
Readiness Display viii, 2-2, A-6
Rechargeable battery 5-5
Recycling 5-8

S
Self-test viii, 5-2
Service 5-7
Setup options and menus D-2
Shock Advisory System vii, B-1
Special situations for electrode placement 3-5
Specifications A-1
Supplies 5-8
Symbols 1-3

T
Terms
- Caution 1-2
- Danger 1-2
- Warning 1-2

Test and service data 4-3
Text conventions viii
Therapy in AED mode 3-3
Thin patients 3-5
Training tools 5-8
Transmitting reports 4-3
Troubleshooting
- Defibrillation 3-7
- ECG monitoring mode 3-10

V
Voice prompts 3-4

W
Warnings
- Battery maintenance 5-4, 5-5
- ECG monitoring mode 3-9
- General warnings 1-2
- Nonrechargeable battery 5-5
- Pediatric patients defibrillation 3-3
- Rechargeable battery 5-6
- Service and repair 5-7

Warranty information 5-9

Physio-Control is now part of Stryker.

For further information, please call Physio-Control at 1.800.442.1142 or visit www.physio-control.com

Physio-Control, Inc.
11811 Willows Road NE
Redmond, WA 98052 USA
Telephone: 425.867.4000
Toll Free (USA only): 800.442.1142
Fax: 425.867.4121
www.physio-control.com

Physio-Control, Inc., 11811 Willows Road NE, Redmond, WA 98052 USA

EC REP Stryker European Operations B.V. Herikerbergweg 110, 1101 CM Amsterdam, The Netherlands

CE 0123

PN 3205213-013

Publication date: 06/2018

PHYSIO CONTROL

LIFEPAK® 20e DEFIBRILLATOR/MONITOR

Operating Instructions

LIFEPAK® 20e DEFIBRILLATOR/MONITOR

OPERATING INSTRUCTIONS

Important Information

!USA Rx Only

!USA Device Tracking

The U.S. Food and Drug Administration requires defibrillator manufacturers and distributors to track the location of their defibrillators. If the device is located somewhere other than the shipping address or the device has been sold, donated, lost, stolen, exported, destroyed, permanently retired from use, or if the device was not obtained directly from Physio-Control, please do one of the following: register the device at http://www.physio-control.com, call the device tracking coordinator at 1.800.426.4448, or use one of the postage-paid address change cards located in the back of this manual to update this vital tracking information.

Text Conventions

Throughout these operating instructions, special text characters are used to indicate labels, screen messages, and voice prompts:

- Operating control labels: **CAPITAL LETTERS** such as **ON/OFF** and **SHOCK**.
- Screen messages and voice prompts: ***CAPITAL ITALICIZED LETTERS*** such as ***CONNECT ELECTRODES***.

Version History

These operating instructions describe LIFEPAK 20e defibrillator/monitor devices with software version 3202609-084 or later.

Physio-Control or its affiliates own, use, or have applied for the following trademarks or service marks: LIFEPAK, FAST-PATCH, DERMA-JEL, QUIK-LOOK, QUIK-COMBO, CodeManagement Module, ADAPTIV, CODE-STAT, CODE SUMMARY, REDI-PAK, and Shock Advisory System. All other trademarks are trademarks of their respective owners or holders. Specifications are subject to change without notice.

Masimo SET.

©2018 Physio-Control, Inc.

Publication Date: 12/2018

PN 3313187-013

CONTENTS

Preface

About Automated External Defibrillation x
About Defibrillation Therapy xi
About Noninvasive Pacing xii
About SpO_2 Monitoring xii
About ECG Monitoring xii
About $EtCO_2$ Monitoring xiii

1 Safety Information

Terms 1-2
General Warnings and Cautions 1-2
Symbols 1-4

2 Basic Orientation

Introduction 2-2
Unpacking and Inspecting 2-3
Controls, Indicators, and Connectors 2-4
- Area 3 2-7
- Area 4 2-9
- Area 7 2-12
- Changing Printer Paper 2-14
- Back View 2-15
- Side View of CodeManagement Module 2-16

Entering Patient Data 2-17
Setting Alarms 2-19
Managing Alarms 2-21
Connecting to Power 2-22
- AC Operation 2-22

©2018 Physio-Control, Inc.

Battery Operation 2-22
LIFEPAK 20e Defibrillator/Monitor Battery 2-22
CodeManagement Module Battery 2-25

3 Monitoring

Monitoring the ECG 3-2
ECG Monitoring Warning 3-2
Selecting ECG Lead and Size 3-2
Adjusting the Systole Tone Volume 3-3
Monitoring with the Patient ECG Cable 3-5
Troubleshooting Tips for ECG Monitoring 3-7
Monitoring SpO_2 3-9
SpO_2 Warnings and Cautions 3-9
When to Use a Pulse Oximeter 3-10
How a Pulse Oximeter Works 3-10
SpO_2 Monitoring Considerations 3-11
SpO_2 Monitoring Procedure 3-12
SpO_2 Waveform 3-12
SpO_2 Volume 3-12
Sensitivity 3-13
Averaging Time 3-13
Pulse Oximeter Sensors 3-13
Cleaning 3-13
Troubleshooting Tips for SpO_2 3-14
Monitoring $EtCO_2$ 3-16
$EtCO_2$ Warnings and Cautions 3-16
How Capnography Works 3-17
$EtCO_2$ Monitoring Waveform Analysis 3-17
$EtCO_2$ Monitoring Procedure 3-18
CO_2 Display 3-20
CO_2 Alarms 3-20
CO_2 Detection 3-21
Cleaning 3-21
Troubleshooting Tips for $EtCO_2$ 3-22

4 Therapy

General Therapy Warnings and Cautions 4-2
Therapy Electrode and Standard Paddle Placement 4-3
Anterior-lateral Placement 4-3
Anterior-posterior Placement 4-3
Special Placement Situations 4-4
Automated External Defibrillation 4-5
AED Warnings 4-5
AED Setup 4-5
AED Procedure 4-6
Special AED Setup Options 4-10
Troubleshooting Tips for AED Mode 4-13
Switching from AED to Manual Mode 4-14
Manual Defibrillation 4-14
Manual Defibrillation Warnings 4-15
Impedance 4-15
Defibrillation Procedure 4-16
CPR Metronome 4-17

Synchronized Cardioversion Procedure 4-18
Remote Synchronization Procedure 4-20
Pediatric Defibrillation 4-21
Pediatric Paddle Placement 4-21
Defibrillation Procedure 4-22
Troubleshooting Tips for Defibrillation and Synchronized Cardioversion 4-22
Noninvasive Pacing 4-25
Noninvasive Pacing Warnings 4-25
Demand and Nondemand Pacing 4-25
Noninvasive Pacing Procedure 4-26
Troubleshooting Tips for Noninvasive Pacing 4-27

5 Paddle Accessory Options

Therapy Electrodes 5-2
About Therapy Electrodes 5-2
Electrode Placement 5-3
Cable Connection 5-4
ECG Monitoring and Therapy Procedures 5-4
Replacing and Removing Electrodes 5-4
Testing 5-5
Cleaning and Sterilizing 5-5
Standard Paddle Set (Optional) 5-6
About the Standard Paddle Set 5-6
Accessing the Pediatric Paddles 5-6
Replacing the Adult Paddle Attachment 5-7
Cleaning the Standard Paddle Set 5-7
Sterilizable Internal Defibrillation Paddles 5-8

6 Data Management

Overview of Data Storage and Retrieval 6-2
Data Storage 6-2
Report Types 6-2
Memory Capacity 6-2
CODE SUMMARY Report 6-2
Preamble 6-3
Event/Vital Signs Log 6-3
Waveform Events 6-4
CODE SUMMARY Format 6-5
Managing Archived Patient Records 6-7
Entering Archives Mode 6-7
Printing Archived Patient Reports 6-7
Transmitting Archived Patient Records 6-9
Editing Archived Patient Records 6-10
Deleting Archived Patient Records 6-11
Overview of Connections for Transmitting Reports 6-12
Data Transfer from TrueCPR Device 6-13
Troubleshooting Tips for Data Transmission 6-14

7 Maintaining the Equipment

General Maintenance and Testing 7-2
Maintenance and Testing Schedule 7-2
Daily Auto Test 7-3
User Test 7-4

©2018 Physio-Control, Inc.

Cleaning 7-5
Function Checks 7-5
General Troubleshooting Tips 7-10
Service and Repair 7-12
Product Recycling Information 7-12
Recycling Assistance 7-12
Preparation 7-12
Recycling of Disposable Electrodes 7-12
Packaging 7-12
Warranty 7-13
Accessories, Supplies, and Training Tools 7-13

8 Setup Options

Setup Options 8-2
Print Configurations Before Service or Repair 8-2
Passcode Security 8-2
Entering Setup Options 8-3
General Setup Menu 8-4
Manual Mode Setup Menu 8-5
AED Mode Setup Menu 8-7
CPR Metronome Setup Menu 8-8
Pacing Setup Menu 8-9
Monitoring Menu 8-9
Channels Setup Menu 8-9
Waveform Sets Setup Menu 8-10
CO_2 Setup Menu 8-10
Events Setup Menu 8-10
Alarms Setup Menu 8-11
Printer Setup Menu 8-11
Auto Print Setup Menu 8-12
Clock Setup Menu 8-12
Reset Defaults Setup Menu 8-13
Print Defaults 8-13
Send Configuration Setup Menu 8-13
Set Passcodes Setup Menu 8-14
Service Mode 8-14

A Specifications and Performance Characteristics

B Defibrillation Clinical Summaries

Defibrillation of Ventricular Fibrillation and Ventricular Tachycardia B-1
External Cardioversion of Atrial Fibrillation B-3
Intra-Operative Ventricular Defibrillation B-7
Monophasic vs. Biphasic Waveforms: Out-of-Hospital Trial B-10

C Screen Messages

D Operator's Checklist

E Shock Advisory System

F SpO_2 Specifications and Validation

G About cprMAX Technology

H Docking Station

I Electromagnetic Compatibility Guidance

Index

©2018 Physio-Control, Inc.

PREFACE

About Automated External Defibrillation	page x
About Defibrillation Therapy	xi
About Noninvasive Pacing	xii
About SpO2 Monitoring	xii
About ECG Monitoring	xii
About EtCO2 Monitoring	xiii

©2018 Physio-Control, Inc.

ABOUT AUTOMATED EXTERNAL DEFIBRILLATION

The following considerations and guidelines apply when using the LIFEPAK® 20e defibrillator/monitor as an automated external defibrillator (AED).

Operator Considerations

The LIFEPAK 20e defibrillator/monitor, when in AED mode, is a semiautomatic defibrillator that uses a patented Shock Advisory System™. This software algorithm analyzes the patient's electrocardiographic (ECG) rhythm and indicates whether or not it detects a shockable rhythm. The LIFEPAK 20e defibrillator/monitor in AED mode requires operator interaction to defibrillate the patient.

The LIFEPAK 20e defibrillator/monitor in AED mode is intended for use by personnel who are authorized by a physician/medical director and have, at a minimum, the following skills and training:

- CPR training.
- AED training equivalent to that recommended by the American Heart Association.
- Training in the use of the LIFEPAK 20e defibrillator/monitor in AED mode.

For information about training options, contact your local Physio-Control representative.

Indications

The AED mode is to be used only on patients in cardiopulmonary arrest. The patient must be unconscious, pulseless, and not breathing normally before using the defibrillator to analyze the patient's ECG rhythm.

In AED mode, the LIFEPAK 20e defibrillator/monitor is not intended for use on pediatric patients less than 8 years old.

Contraindications

None known.

ABOUT DEFIBRILLATION THERAPY

Operator Considerations

A direct current defibrillator applies a brief, intense pulse of electricity to the heart muscle. The LIFEPAK 20e defibrillator/monitor delivers this energy through disposable electrodes, standard paddles or internal paddles applied to the patient's chest.

Defibrillation is only one aspect of the medical care required to resuscitate a patient with a shockable ECG rhythm. Depending on the situation, other supportive measures may include:

- Cardiopulmonary resuscitation (CPR)
- Administration of supplemental oxygen
- Drug therapy

Successful resuscitation is related to the length of time between the onset of a heart rhythm that does not circulate blood (ventricular fibrillation, pulseless ventricular tachycardia) and defibrillation. The American Heart Association has identified the following as critical links in the chain of survival from cardiac arrest:

- Early access
- Early CPR by first responders or bystanders
- Early defibrillation
- Early advanced life support

The physiological state of the patient may affect the likelihood of successful defibrillation. Thus, failure to resuscitate a patient is not a reliable indicator of defibrillator performance. Patients will often exhibit a muscular response (such as jumping or twitching) during an energy transfer. The absence of such a response is not a reliable indicator of actual energy delivery or device performance.

Indications

Defibrillation is a recognized means of terminating certain potentially fatal arrhythmias, such as ventricular fibrillation and symptomatic ventricular tachycardia. Delivery of this energy in the synchronized mode is a method for treating atrial fibrillation, atrial flutter, paroxysmal supraventricular tachycardia and, in relatively stable patients, ventricular tachycardia.

Contraindications

Defibrillation is contraindicated in the treatment of Pulseless Electrical Activity (PEA) such as idioventricular or ventricular escape rhythms, and in the treatment of asystole.

©2018 Physio-Control, Inc.

ABOUT NONINVASIVE PACING

A noninvasive pacemaker is a device that delivers an electrical stimulus to the heart, causing cardiac depolarization and myocardial contraction. The energy is delivered through large adhesive electrodes placed on the chest. In addition to noninvasive pacing, other supportive measures may be necessary.

Among other factors, it is recognized that successful pacing of a patient is related to the length of time between the onset of a dysrhythmia and the initiation of pacing. Rapid pacing and prompt follow-up care are essential. The physiologic state of the patient may affect the likelihood of successful pacing or of skeletal muscle activity. The failure to successfully pace a patient is not a reliable indicator of pacemaker performance. Similarly, the patient's muscular response to pacing is not a reliable indicator of energy delivered. Refer to the booklet, *Noninvasive Pacing: What You Should Know* for further information.

Indications

Noninvasive pacing is indicated for symptomatic bradycardia in patients with a pulse.

Contraindications

Noninvasive pacing is contraindicated for the treatment of ventricular fibrillation and asystole.

ABOUT SPO_2 MONITORING

A pulse oximeter is a noninvasive device that checks the saturation of oxygen in arterial blood (SpO_2). It uses an optical sensor that directs light through the patient's finger and then measures the received light with a detector. This received light is translated into a saturation percentage and is displayed as an SpO_2 reading.

Indications

A pulse oximeter is indicated for use in any patient who is at risk of developing hypoxemia.

Contraindications

None known.

ABOUT ECG MONITORING

The ECG (electrocardiogram) is a recording of the electrical activity of the heart. ECG monitoring allows for identification and interpretation of cardiac rhythms or dysrhythmias and calculation of heart rate. The ECG is obtained by placing either electrodes or paddles on the patient and allows the heart's electrical activity to be monitored and recorded.

ABOUT $ETCO_2$ MONITORING

The end-tidal carbon dioxide ($EtCO_2$) monitor is a capnograph device that uses non-dispersive infrared spectroscopy to continuously measure the amount of CO_2 during each breath and report the amount present at the end of exhalation ($EtCO_2$). The sample is obtained by the side stream method and can be used with intubated or nonintubated patients. Respiration rate is also measured and displayed in breaths per minute.

The $EtCO_2$ monitor is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the $EtCO_2$ monitor.

Indications

$EtCO_2$ monitoring is used to detect the level of expired CO_2. It is used for monitoring breathing efficacy and treatment effectiveness in acute cardiopulmonary care, for example, to determine if adequate compressions are being performed during CPR or to rapidly detect whether an endotracheal tube has been placed successfully.

Contraindications

None known.

©2018 Physio-Control, Inc.

SAFETY INFORMATION

This section provides important information to help you operate the LIFEPAK 20e defibrillator/monitor. Familiarize yourself with all of these terms, warnings, and symbols.

Terms	page 1-2
General Warnings and Cautions	1-2
Symbols	1-4

©2018 Physio-Control, Inc.

TERMS

The following terms are used either in these operating instructions or on the LIFEPAK 20e defibrillator/monitor:

Danger: Immediate hazards that will result in serious personal injury or death.

Warning: Hazards or unsafe practices that may result in serious personal injury or death.

Caution: Hazards or unsafe practices that may result in minor personal injury, product damage, or property damage.

GENERAL WARNINGS AND CAUTIONS

The following are general warning and caution statements. Other specific warnings and cautions are provided as needed in other sections of these operating instructions.

WARNINGS!

Shock hazard.

The defibrillator delivers up to 360 J of electrical energy. Unless properly used as described in these operating instructions, this electrical energy may cause serious injury or death. Do not attempt to operate this device unless thoroughly familiar with these operating instructions and the function of all controls, indicators, connectors, and accessories.

Shock hazard.

Do not disassemble the defibrillator. It contains no operator serviceable components and dangerous high voltages may be present. Contact authorized service personnel for repair.

Shock hazard.

To avoid the risk of electrical shock, this equipment must only be connected to a supply mains with protective earth.

Shock or fire hazard.

Do not immerse any portion of this defibrillator in water or other fluids. Avoid spilling any fluids on defibrillator or accessories. Spilled liquids may cause the defibrillator and accessories to perform inaccurately or fail. Do not clean with ketones or other flammable agents. Do not autoclave or sterilize this defibrillator or accessories unless otherwise specified.

Possible fire or explosion.

Do not use this device in the presence of flammable gases or anesthetics. Use care when operating this device close to oxygen sources (such as bag-valve-mask devices or ventilator tubing). Turn off gas source or move source away from patient during defibrillation.

Possible electrical interference with device performance.

Equipment operating in close proximity could emit strong electromagnetic or radio frequency disturbances that could cause electromagnetic interference (EMI) and affect the performance of this defibrillator. EMI may result in improper defibrillator operation, distorted ECG, failure to detect a shockable rhythm, or cessation of pacing. Avoid operating the defibrillator near cauterizers, diathermy equipment, cellular phones, portable and mobile RF communications equipment, metal detectors, or electronic articles surveillance gates. Maintain equipment separation of at least 1.2 m (4 ft) and do not rapidly key EMS radios on and off. Contact a technical support representative if assistance is required.

WARNINGS! (CONTINUED)

Possible electrical interference.

Using cables, electrodes, or accessories not specified for use with this device may result in increased emissions or decreased resistance to electromagnetic interference which could affect the performance of this device or of equipment in close proximity. Use only parts and accessories specified in these operating instructions.

Possible electrical interference.

This defibrillator may cause electromagnetic interference (EMI) especially during charge and energy transfers. EMI may affect the performance of equipment operating in close proximity. Verify the effects of defibrillator discharge on other equipment prior to using defibrillator in an emergency situation, if possible.

Possible electrical interference.

This defibrillator should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the defibrillator should be observed to verify normal operation in the configuration in which it will be used.

Possible defibrillator shutdown.

When operating on battery power, adhere to battery maintenance and replacement intervals discussed in the Battery Performance and Life section to prevent possible defibrillator shutdown. If the defibrillator shuts down without warning, or if a ***LOW BATTERY: CONNECT TO AC POWER*** message appears on the monitor screen, immediately connect the AC power cord to an outlet.

Possible device failure.

Do not modify the defibrillator or CodeManagement Module.

Possible equipment damage.

Use only ECG cables that are specified for use with this device. Protection of the device against defibrillator discharge is dependent on the use of ECG cables that are specified by Physio-Control.

Possible improper defibrillator performance.

Changing factory default settings will change the behavior of the device. Changes to the default settings must only be made by authorized personnel.

Possible improper defibrillator performance.

Using other manufacturers' cables, electrodes, or batteries may cause the device to perform improperly and invalidates the safety agency certification. Use only the accessories specified in these operating instructions.

Possible failure to detect an out of range condition.

Reselecting QUICK SET will reset the alarm limits around the patient's current vital sign values. This may be outside the safe range for the patient.

Safety risk and possible equipment damage.

MR unsafe: keep the defibrillator away from magnetic resonance imaging (MRI) equipment.

Possible Patient Burns

A defect in the neutral electrode connection on HF surgical equipment could cause burns at the lead or sensor site and damage to the monitor/defibrillator. Do not apply patient leads or sensors when using high frequency (HF) electrosurgical equipment.

©2018 Physio-Control, Inc.

SYMBOLS

The symbols below may be found in these operating instructions or on various configurations of LIFEPAK 20e defibrillator/monitor and accessories.

	Defibrillation-proof type CF applied part
	Defibrillation-proof type BF applied part
	Operating instructions (on front label)
	Follow instructions for use. (Symbol has blue background and graphical symbol is white.)
	General warning. (Symbol has yellow background and graphical symbol is black.)
	Warning, high voltage
	Type BF applied part
	Static sensitive device (SSD)
MR	MR unsafe: keep away from magnetic resonance imaging (MRI) equipment
	Protective earth (ground)
	Fuse
	Equipotentiality connector
+	Positive terminal
—	Negative terminal
	Device includes RF transmitter
LOT	Lot number (batch code): yyww or yymmdd
	Use by date shown: yyyy-mm-dd
REF	Catalog number (on serial number label*)

YYYY	Date of manufacture (on serial number label*)
	Do not reuse
	Indoor use only
	Alarm on
	Alarm off
	VF/VT alarm on
	VF/VT alarm silenced
>	Greater than
<	Less than
J	Joules
	Adult defibrillation paddle
	Infant defibrillation paddle
	Home screen button
	Battery status indicator (refer to page 2-23)
	Heart rate/pulse rate indicator
(x)	Shock count (x) on screen
⎓	Direct current voltage
~	Alternating current voltage (on serial number label*)
|	On (power: connection to the AC Mains)

©2018 Physio-Control, Inc.

	Off (power: disconnection from the AC Mains)
	Power on/off
	AC power indicator (CodeManagement Module only)
	[signal] Input
	[signal] Output
	CO_2 Input
	CO_2 Exhaust
	This end up
	Fragile Handle with care
	Keep dry
< 1 WEEK 60°C (140°) 45°C (113°) 5°C (41°) -20°C (-4°) < 1 WEEK	Recommended storage temperature 5° to 45°C (41° to 113°F). Storage at extreme temperatures of -20° or 60°C (-4° or 140°F) is limited to seven days. If storage at these temperatures exceeds one week, the electrode shelf-life is reduced.
	Recycle this item
	Do not dispose of this product in the unsorted municipal waste stream. Dispose of this product according to local regulations. See www.physio-control.com/recycling for instructions on disposing of this product. (Symbol appears on serial number label.*)
50	Symbol for China RoHS indicating the Environmentally Friendly Use Period (EFUP) denoting the number of years before any substance is likely to leak out into the environment. (Symbol appears on serial number label.*)
	System connector/Data in
	Sync in/ECG out
	LIFEPAK 20e defibrillator/monitor to LIFEPAK 20e defibrillator/monitor cable (refer to Send Configuration Setup Menu, page 8-13)

	Turn counterclockwise to unlock
	Switch on
	Switch off
	Pace arrow, noninvasive pacing
	Pace arrow, internal pacing
	R-wave sense marker
	Event marker
	Biphasic defibrillation shock
	Shock button
!USA	For USA audiences only
IPX1	Protected from vertically dripping water per IEC 60529 (on serial number label*)
SN	Serial number (on serial number label*)
PN	Part number (on serial number label*)
Rx Only	Federal law restricts this device to sale by or on the order of a physician
	Manufacturer
EC REP	Authorized EC representative
	Mark of conformity to applicable European Directives (on serial number label*)
c US	Underwriters Laboratories recognized component mark for Canada and the United States
C US	Canadian Standards Association certification for Canada and the United States

©2018 Physio-Control, Inc.

Intertek	Intertek certification for Canada and the United States
N13571	Mark of conformity to ACA standards

*The serial number label is located on the bottom of the device. If a CodeManagement Module is installed, the serial number label that is visible is for the CodeManagement Module only. To view the serial number label for the LIFEPAK 20e defibrillator, the CodeManagement Module must be removed. Refer to the *Installation Instructions* provided with the CodeManagement Module for more information.

BASIC ORIENTATION

This section provides a basic orientation to the LIFEPAK 20e defibrillator/monitor.

Introduction	page 2-2
Unpacking and Inspecting	2-3
Controls, Indicators, and Connectors	2-4
Entering Patient Data	2-17
Setting Alarms	2-19
Managing Alarms	2-21
Connecting to Power	2-22

©2018 Physio-Control, Inc.

INTRODUCTION

The LIFEPAK 20e defibrillator/monitor with enhanced battery technology is an acute cardiac care response system intended for use by authorized healthcare providers in hospital and clinic settings. The defibrillator/monitor is to be used on one patient at a time.

The LIFEPAK 20e defibrillator/monitor is intended for use by personnel who have been trained in its operation.

The LIFEPAK 20e defibrillator/monitor offers the following optional features:

- Semiautomatic defibrillator
- Noninvasive pacemaker
- Pulse oximeter
- Paddle accessories
- End-tidal CO_2 monitor
- Data transmission

Note: These operating instructions include information and procedures related to all features of the LIFEPAK 20e defibrillator/monitor and the CodeManagement Module for use with the LIFEPAK 20e defibrillator/monitor. Your LIFEPAK 20e defibrillator/monitor may not have all of these features. For more information, contact your Physio-Control representative or call the number listed on the back cover of these operating instructions.

The LIFEPAK 20e defibrillator/monitor is available only with the biphasic defibrillation waveform. For a description of the defibrillation waveform, refer to Appendix A.

The LIFEPAK 20e defibrillator/monitor uses QUIK-COMBO® pacing/defibrillation/ECG electrodes for ECG monitoring and patient therapy. The therapy cable connects the QUIK-COMBO to the defibrillator. For more information about QUIK-COMBO electrodes, refer to Section 3 of these operating instructions.

The standard paddle set is an accessory for the LIFEPAK 20e defibrillator/monitor and includes adult and pediatric defibrillator (hard) paddles. The standard paddles can be used for QUIK-LOOK® ECG monitoring, defibrillation, and synchronized cardioversion therapies. When using standard paddles, a conductive interface designed for defibrillation, such as defibrillation gel or gel pads, must be used between the paddle electrode surface and the skin.

The adult standard paddles can be used for any pediatric patient weighing approximately 10 kg (22 lb) or more as long as the paddles fit completely on the chest and there is at least 2.5 cm (1 in.) of space between the paddle electrodes. Pediatric paddles should be used for patients weighing 10 kg (22 lb) or less or those whose chests are too small to accommodate the adult paddles.

Optional internal paddles are also available.

For more information about using paddle accessories, refer to Section 5 of these operating instructions.

UNPACKING AND INSPECTING

After you have removed the LIFEPAK 20e defibrillator/monitor from the shipping container, make sure you have all the required supplies and accessories including cables and ECG paper. Examine the defibrillator and all accessories for any sign of damage that may have occurred during shipping. If possible, save the shipping container and foam inserts in case you have to ship the defibrillator at a later date.

Note the label located to the right of the screen (Figure 2-1). Before the defibrillator/monitor's first use, plug the power cord into an AC outlet for 3 hours to charge the internal battery.

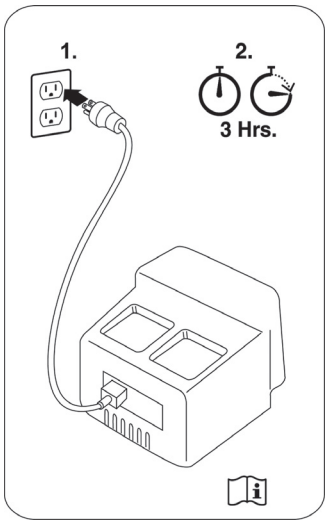

Figure 2-1 Initial Battery Charge

If you purchased the CodeManagement Module, you will need to connect it to the LIFEPAK 20e defibrillator/monitor. Refer to the *Installation Instructions* provided with the CodeManagement Module for more information.

©2018 Physio-Control, Inc.

CONTROLS, INDICATORS, AND CONNECTORS

The following figures provide a brief description of the controls, indicators, and connectors for the LIFEPAK 20e defibrillator/monitor and CodeManagement Module. Figure 2-2 shows the front view of the LIFEPAK 20e defibrillator/monitor and Figure 2-3 shows the front view divided into seven areas. Figure 2-4 through Figure 2-15 show details of each area. Figure 2-16 and Figure 2-17 show back views of the defibrillator with and without the CodeManagement Module. Additional information about areas 3, 4, and 7 follow the applicable figures. The light emitting diode (LED) illuminates (turns on) indicating when the corresponding function is active. For example, the **ANALYZE** button LED is on when the advisory function is active.

Figure 2-2 Front View with Door and CodeManagement Module

The door on the LIFEPAK 20e defibrillator/monitor hides the manual defibrillation and noninvasive pacing buttons. When the door is closed, the appearance and operation of the device is simplified for the automated external defibrillator (AED) user.

To enter manual mode, press the **MANUAL** button located on the lower left corner of the door. This opens the door and automatically takes the device out of AED mode and allows access to manual mode defibrillation and pacing. After entering manual mode, closing the door does not affect operation.

Figure 2-3 Front View without Door and with CodeManagement Module

©2018 Physio-Control, Inc.

Area 1

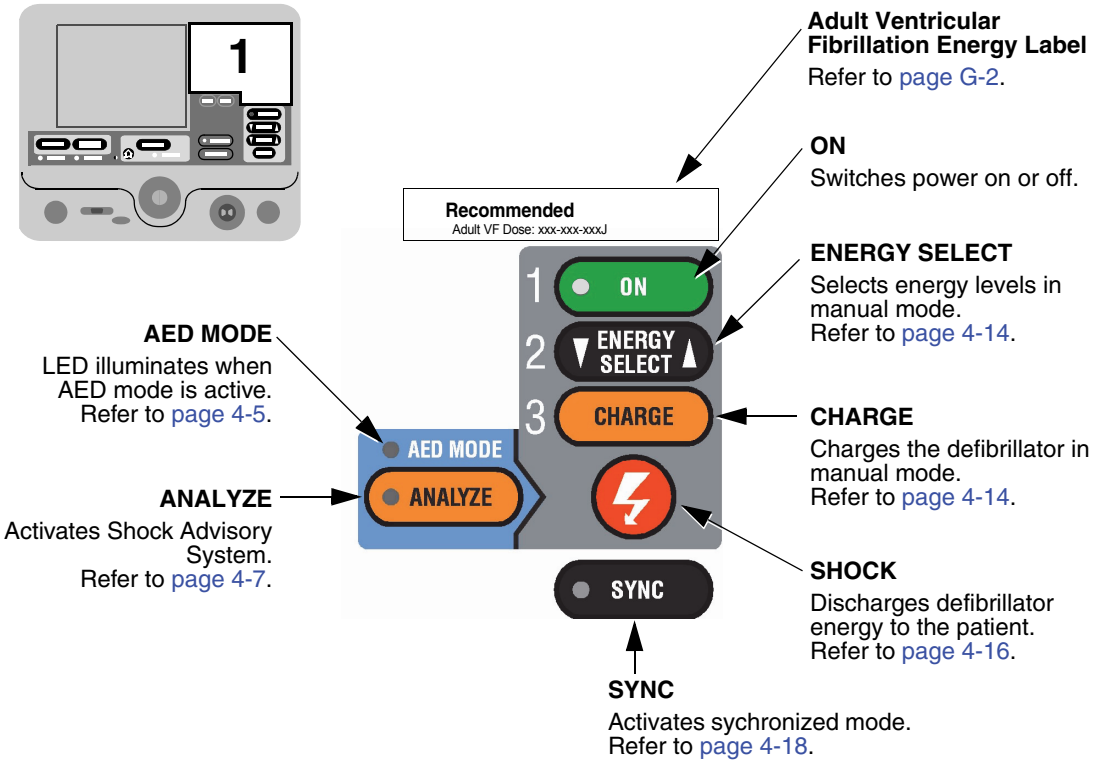

Figure 2-4 Area 1

Area 2

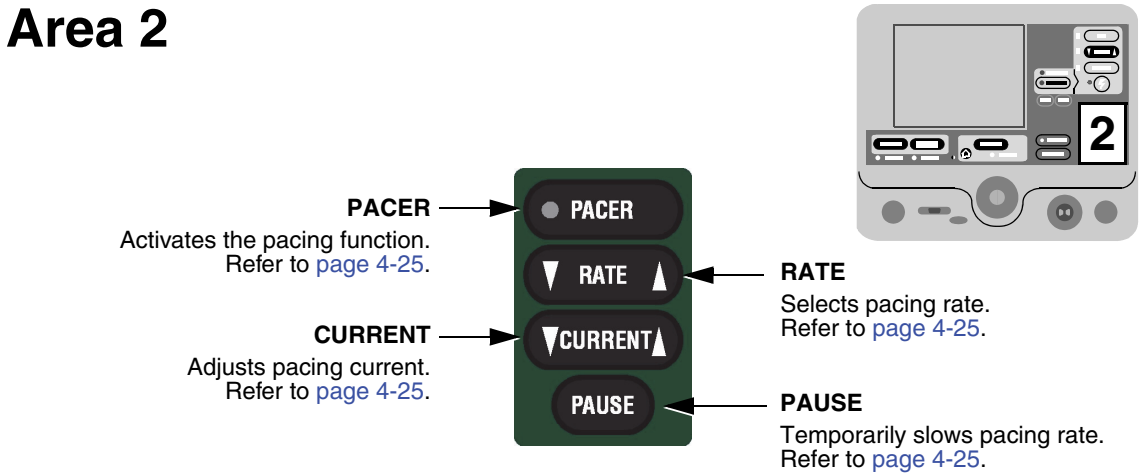

Figure 2-5 Area 2

Area 3

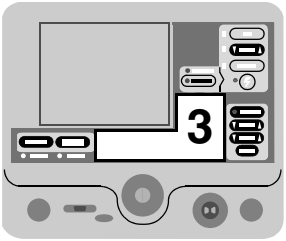

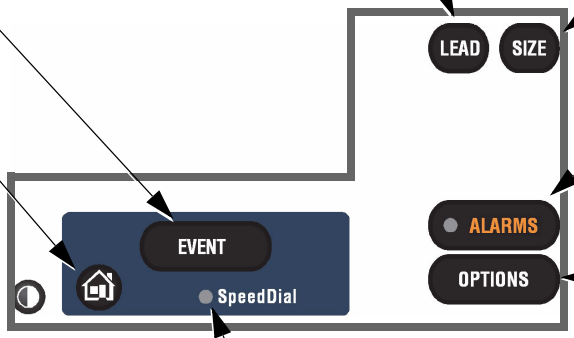

LEAD
Changes ECG lead.
Refer to page 3-2.

SIZE
Changes ECG size.
Refer to page 3-2.

EVENT
Activates user-defined events.
Refer to page 2-7.

HOME SCREEN
Returns immediately to Home Screen.
Refer to page 2-7.

ALARMS
Activates and silences alarms.
Refer to page 2-19.

OPTIONS
Accesses optional functions.
Refer to page 2-8.

LED
Illuminates when the Speed Dial is active.
Refer to page 2-9.

Figure 2-6 Area 3

Area 3

The following paragraphs provide additional information about the controls shown in "Area 3," page 2-7.

Home Screen

The home screen is the background screen that displays during ECG monitoring. Pressing **HOME SCREEN** returns you to the home screen from any menu screen or overlay, except during AED analysis or during manual defibrillation charging and shocking.

Event

After pressing **EVENT**, the screen displays the following overlay.

Events	
Generic	Atropine
CPR	Lidocaine
Intubation	Adenosine
IV Access	Epinepherine
Nitroglycerine	More...

Use the Speed Dial to scroll through and select menu choices.

Generic is automatically selected when **EVENT** is pressed and no other selection is made. The selected event and time stamp appear in the message/status area on the screen. Events are printed in the CODE SUMMARY™ Event Log. Refer to page 8-10 for information about configuring events.

©2018 Physio-Control, Inc.

Options

After pressing **OPTIONS**, the screen displays the overlay shown in Figure 2-7. Use the Speed Dial to scroll through and select menu choices.

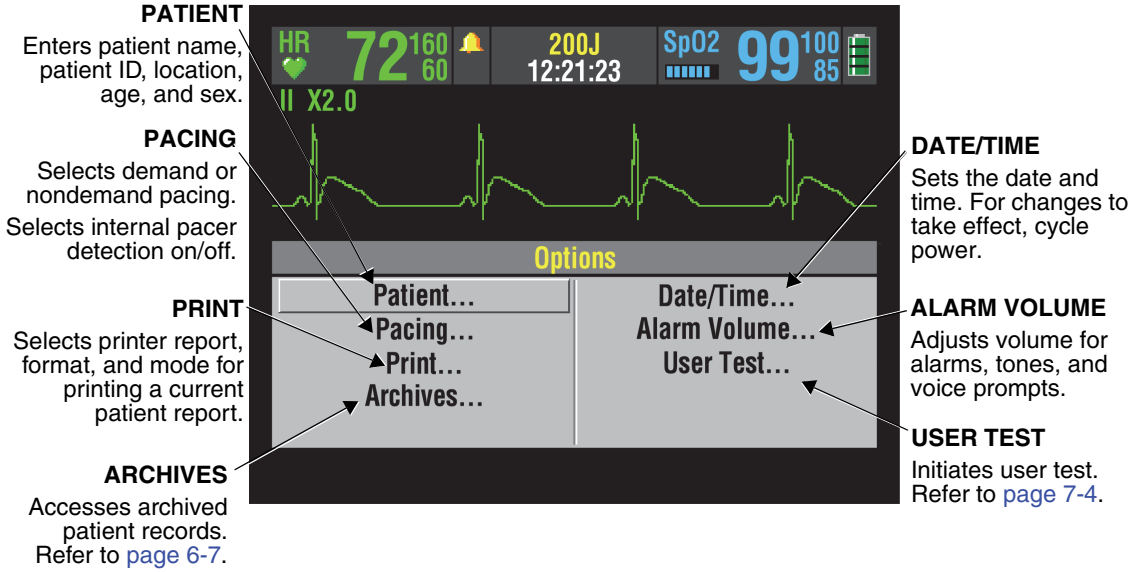

Figure 2-7 Options

Alarms

Refer to page 2-19 for information about setting alarms.

Speed Dial LED

The indicator LED for the Speed Dial illuminates when the Speed Dial is active.

Area 4

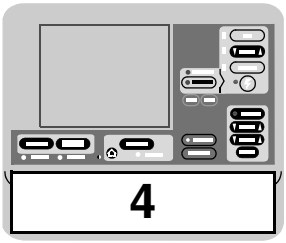

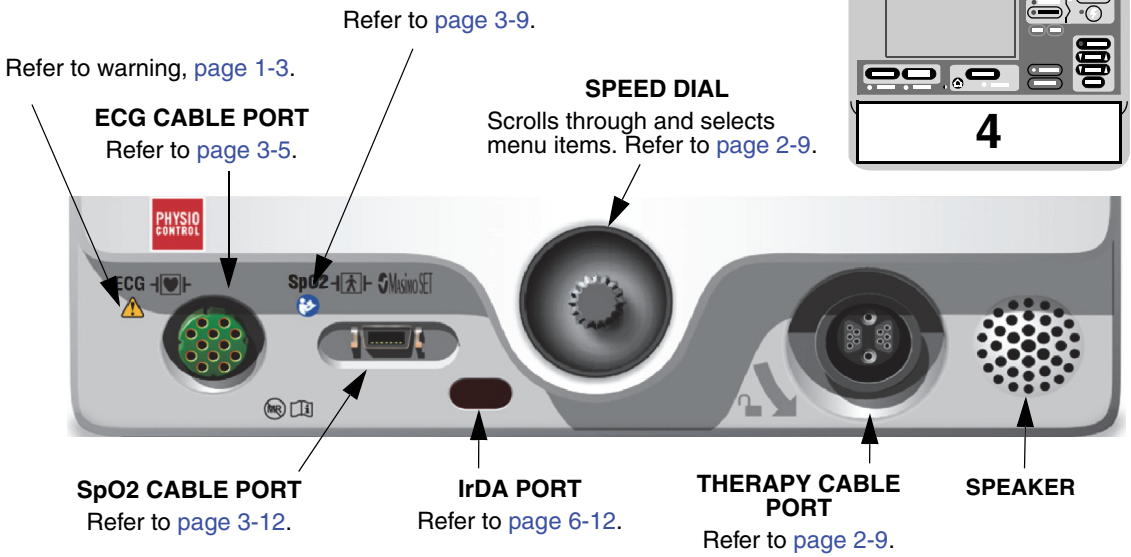

Figure 2-8 Area 4

Area 4

The following paragraphs provide additional information about the Speed Dial and the therapy cable connector shown in Area 4.

Speed Dial

Use the Speed Dial to scroll through and select the desired menu item either while viewing the monitor screen or while in Options mode. Press the Speed Dial to activate the highlighted menu item. Default menu items are highlighted with a gray background; after a menu item is selected, the background is black.

Therapy Cable Connector

WARNING!

Possible equipment damage and inability to deliver therapy.

To protect the therapy cable connector from damage or contamination, keep the therapy cable connected to the defibrillator at all times.

Connecting the Therapy Cable

To connect a therapy cable connector to the therapy cable port:

1 Orient the therapy cable so that the arrow is on top with the cable angled to the right (refer to Figure 2-9).
2 Insert the therapy cable into the therapy cable connector on the defibrillator until a “click” is sensed.
3 Pull gently on the locking ring to check that the cable is locked in place.

Disconnecting the Therapy Cable

To disconnect a therapy cable connector from the therapy cable port:

1 Rotate the locking ring on the therapy cable in the direction of the arrow (counterclockwise) until it stops (refer to Figure 2-10).
2 Gently pull out the cable connector.

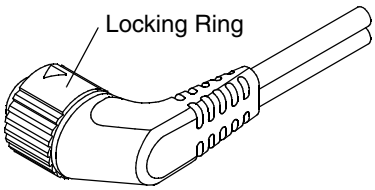

Figure 2-9 Therapy Cable Orientation

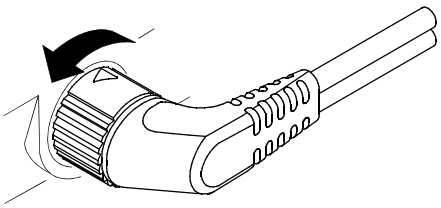

Figure 2-10 Disconnecting the Therapy Cable

©2018 Physio-Control, Inc.

Area 5

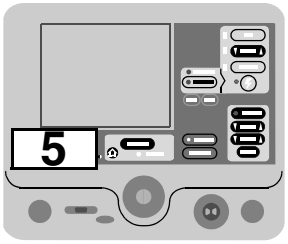

PRINT
Starts or stops the printer.

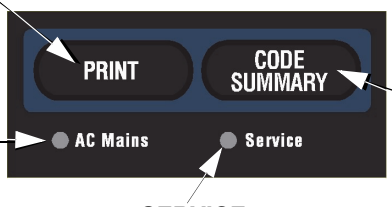

AC MAINS
LED illuminates when AC power (line power) is connected and providing power.

SERVICE
Indicates that service is required.

CODE SUMMARY
Prints a CODE SUMMARY critical event record. Refer to page 6-2.

Figure 2-11 Area 5

Area 6

Power Indicator
LED illuminates when AC power (line power) is connected and providing power.

CO_2 Port
Refer to page 3-16.

Figure 2-12 Area 6 (Optional CodeManagement Module)

Area 7

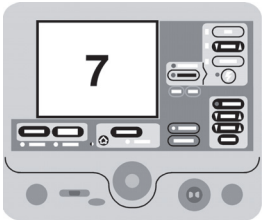

Note: Your device may have either of two screen formats, depending on the software version. Refer to Figure 2-13 and Figure 2-14 to find the format that matches your device.

MONITORING AREA

Displays heart rate, time, SpO_2, battery status indicator, indicators for VF/VT alarm and selected energy. Refer to page 2-13.

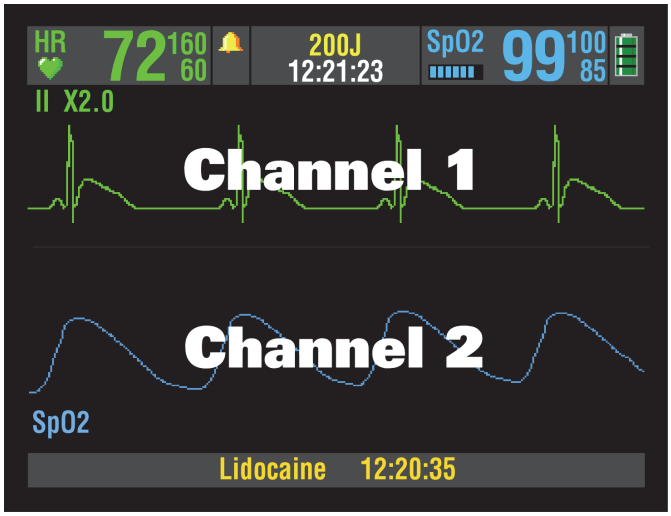

WAVEFORM CHANNEL AREA

Displays up to two waveform channels. Refer to page 2-13.

STATUS MESSAGE AREA

Displays status and alarm messages.

Figure 2-13

©2018 Physio-Control, Inc.

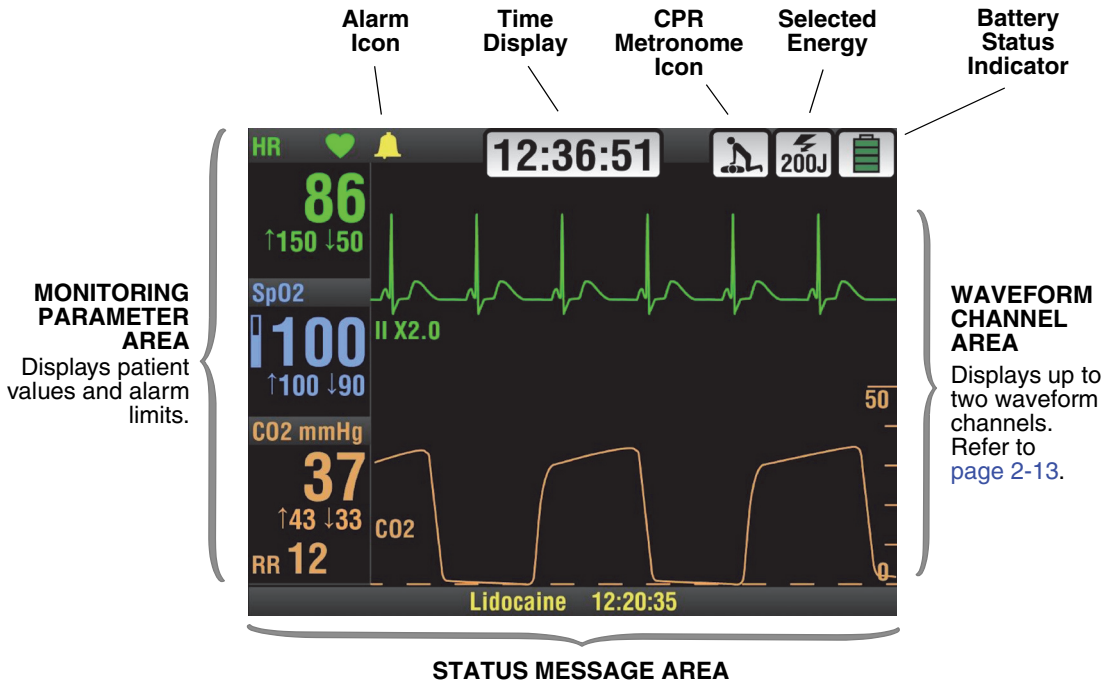

Figure 2-14

Area 7

The following paragraphs provide additional information about Area 7.

Monitoring Area—Heart Rate

The LIFEPAK 20e defibrillator/monitor displays a heart rate between 20 and 300 beats per minute (bpm). A heart rate symbol flashes with each beat. If the heart rate is below 20 bpm or pacing is enabled, the screen displays dashes (– – –). Heart rates above 300 bpm do not yield valid systole tones and the displayed heart rate will not be valid. The heart rate indicator is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times and to not rely solely on the displayed heart rate.

WARNING!

Failure to detect a change in ECG rhythm.

Heart rate meters may continue to count the internal pacing pulses during occurrences of cardiac arrest or some arrhythmias. Do not rely entirely on heart rate meter alarms. Keep pacemaker patients under close surveillance.

QRS detection is essential for using the digital heart rate display, systole tone, synchronized cardioversion, and noninvasive demand pacing. The QRS detector in the LIFEPAK 20e defibrillator/monitor selectively detects QRS complexes. It discriminates against most noise, muscle artifact, T-waves, and other spurious signals.

The QRS detect algorithm automatically adjusts itself to the amplitude of the QRS complexes. Changing the gain of the ECG has no effect on QRS detection. For optimum QRS detection performance, use the lead with the greatest QRS amplitude.

Monitoring Area—Pulse Rate. If the ECG is not active, the SpO_2 monitor can display pulse rate. The pulse rate source is indicated by **PR (SPO2)**.

Monitoring Area—SpO_2 (pulse oximeter). The oxygen saturation level is shown as a percentage from 50 to 100. Saturation below 50% is shown as <50%. A fluctuating bar graph represents the pulse signal strength.

Monitoring Area—$EtCO_2$. The end-tidal CO_2 value is shown as a number representing pressure in mmHg, kPa, or Vol%. Respiratory rate is also shown below the CO_2 value.

Time Display. The time of day is displayed as hours, minutes, and seconds (HH:MM:SS). To display elapsed time beginning from power on, highlight and select the clock with the Speed Dial. Each time you select the time display, it switches between time of day and elapsed time.

CPR Metronome Icon. When the device is in AED mode **and** the metronome is set up to turn on during CPR, the CPR Metronome icon appears. When the device is in manual mode, you can select the CPR Metronome icon with the Speed Dial to turn the metronome on or off, or change the Age-Airway settings.

Battery Status Indicator. The battery status indicator shows the approximate amount of battery charge remaining in the internal Lithium-ion rechargeable battery. (Refer to page 2-22 for further information.)

Waveform Channel Area

Channel 1. This is the top channel. It displays the primary ECG waveform and is always visible when ECG is displayed.

Channel 2. This is the bottom channel. It can display an additional waveform or a continuation of the Channel 1 ECG.

Selecting Waveform Channels

The monitor power must be turned on.

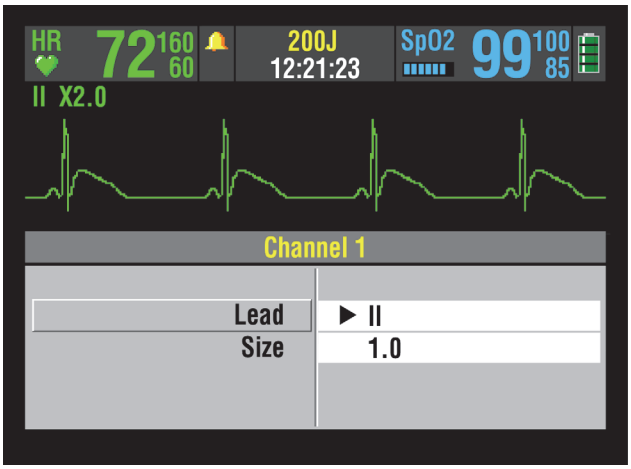

1 At the home screen, rotate the Speed Dial to highlight Channel 1 or 2.
2 Press the Speed Dial. An overlay appears with the monitoring choices for the selected channel.
3 Rotate and press the Speed Dial to select monitoring choices for that channel.

©2018 Physio-Control, Inc.

Changing Printer Paper

CAUTION!

Possible printer malfunction.

Using other manufacturers' printer paper may cause the printer to function improperly and/or damage the print head. Use only the printer paper specified in these operating instructions.

Loading 50 mm Paper

The printer is equipped with an out-of-paper sensor to protect the printhead. The sensor automatically turns off the printer if paper runs out or if the printer door is open.

To load the paper:

1 Press the black button to open the printer door.
2 Remove the empty paper roll.
3 Insert the new paper roll, grid facing upward.
4 Pull out a short length of paper.
5 Push the printer door in to close.

Figure 2-15 illustrates the steps for loading 50 mm paper.

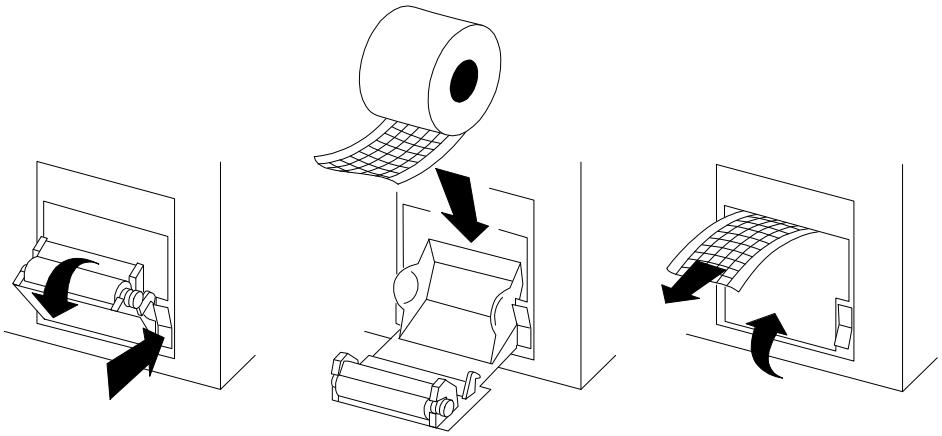

Figure 2-15 Printer

Back View

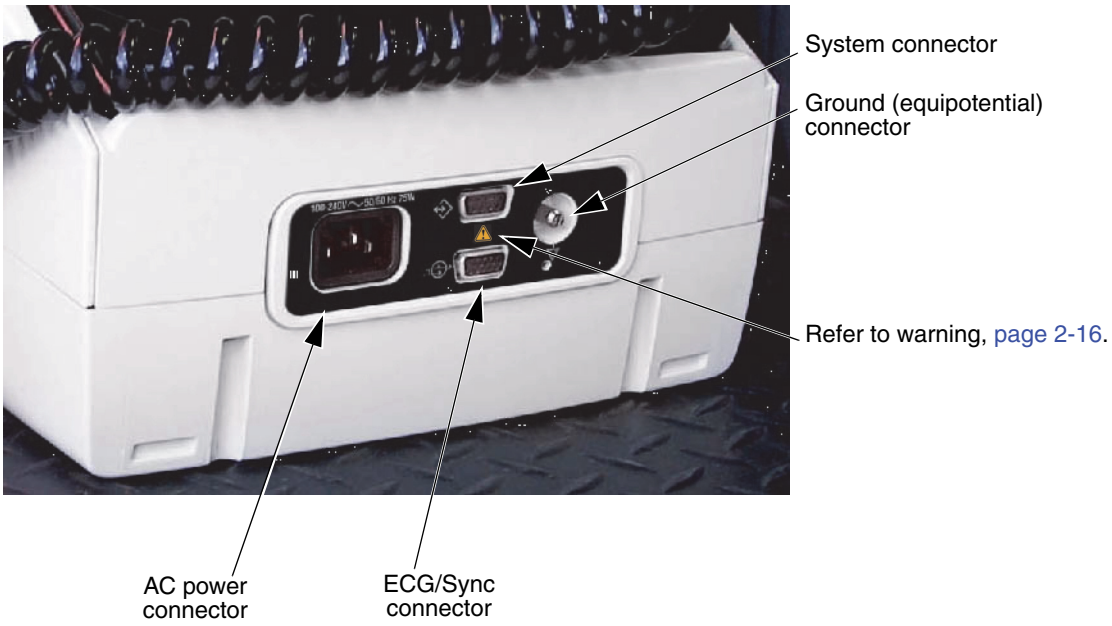

Figure 2-16 Back View without CodeManagement Module

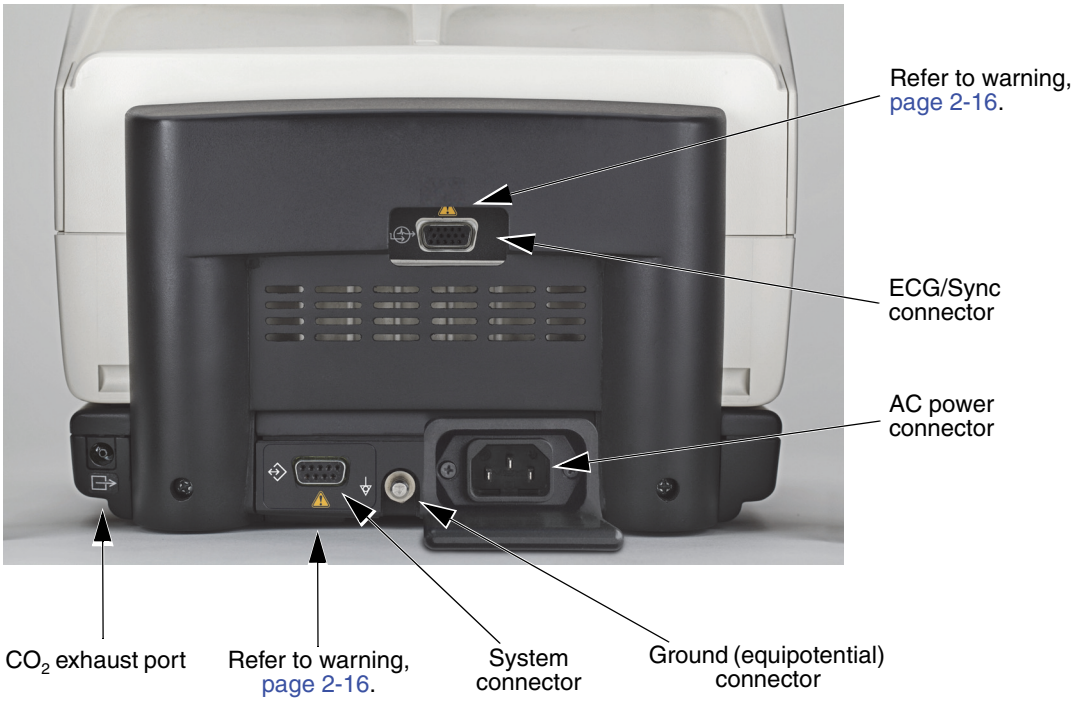

Figure 2-17 Back View with CodeManagement Module

The following paragraphs provide additional information about the back view.

©2018 Physio-Control, Inc.

WARNING!

Shock hazard.

All equipment connected to the system or ECG/sync connector must be battery powered or electrically isolated from AC power according to IEC 60601-1. For more information, contact Physio-Control Technical Support.

System Connector

For LIFEPAK 20e devices that do not have a CodeManagement Module attached, the system connector is used to transfer setup information to another LIFEPAK 20e device or connect to LIFENET® Device Agent. For LIFEPAK 20e devices that have a CodeManagement Module attached, the system connector is used to connect to LIFENET Device Agent.

ECG/Sync Connector

The ECG/Sync connector provides remote synchronization and real-time ECG output to a third party monitor.

Ground (equipotential) Connector

The equipotential connector allows authorized service personnel to connect to a common potential equalization system, along with other medical devices, in those locations where potential equalization conductors are used. This provides additional protection against leakage current per IEC 60601-1. The connector is compliant with DIN 42801-1 (6/25). Connection can be made with a 6 mm POAG-type socket connector.

CO_2 Exhaust Port

The CO_2 exhaust port connects to a scavenger system when monitoring $EtCO_2$ during use of anesthetics.

Side View of CodeManagement Module

The CodeManagement Module has the following indicators and connectors on the right side.

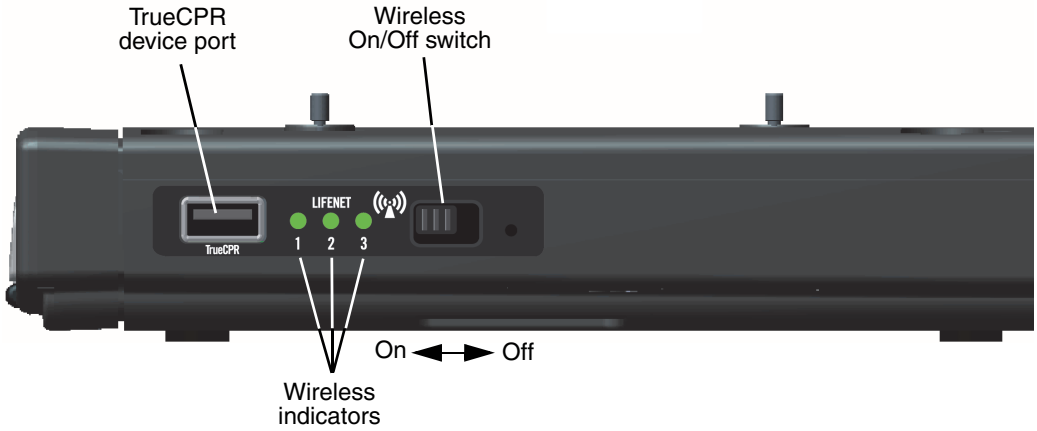

Figure 2-18 Side View of CodeManagement Module

The following paragraphs provide additional information about the side view.

TrueCPR Device Port

The TrueCPR device port is used to transfer data from the TrueCPR™ Coaching Device to the LIFENET System. Only the TrueCPR device should be connected to this port. Refer to "Data Transfer from TrueCPR Device," page 6-13.

Note: The TrueCPR device may not be available in all countries. Contact your local Physio-Control representative for more information.

Wireless On/Off Switch

The wireless On/Off switch enables wireless transmission to the LIFENET System. Refer to "Troubleshooting Tips for Data Transmission," page 6-14.

Wireless Indicators

Indicator 1. LED illuminates when wireless is active.

Indicator 2. LED illuminates when the CodeManagement Module is connected to the local network.

Indicator 3. LED illuminates when the CodeManagement Module is connected to the LIFENET server.

ENTERING PATIENT DATA

The following paragraphs describe how to enter or edit a patient's name, identification (ID), age, or sex.

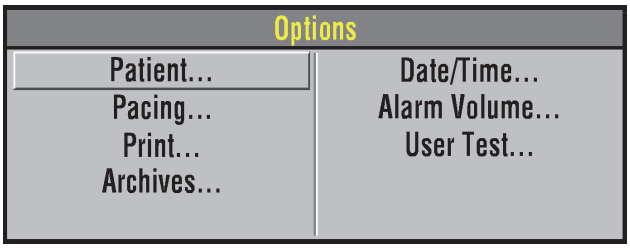

1 Press **OPTIONS**.
2 Select **PATIENT**.

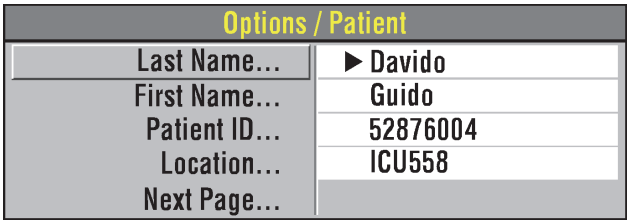

To enter or edit a patient's name or ID:

1 Select **LAST NAME**, **FIRST NAME**, or **ID**. **LAST NAME** is used as an example (for this procedure).

©2018 Physio-Control, Inc.

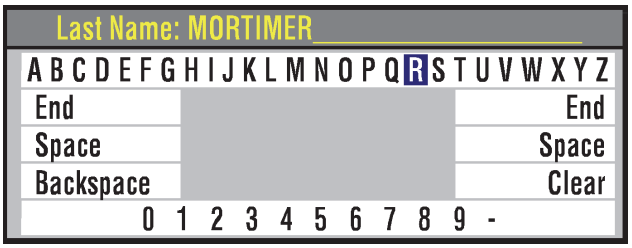

2 Rotate the Speed Dial to scroll through the alphabet.
3 Press the Speed Dial to select the desired character. The character appears in the highlighted area.
4 Repeat Step 2 and Step 3 until the name is complete.
5 Scroll and select **END** to return to the Options/Patient screen as shown previously.

There are three additional commands:

- **BACKSPACE** – moves highlight bar left one space
- **CLEAR** – clears all characters in the name field
- **SPACE** – inserts a blank space

6 To exit, press the **OPTIONS** or **HOME SCREEN** button.

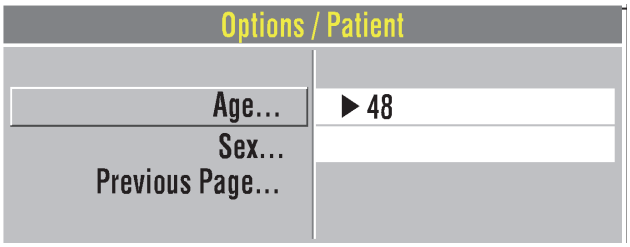

To enter or edit a patient's age:

1 Select **AGE**.
2 Rotate the Speed Dial to scroll to the desired age.
3 Press the Speed Dial.

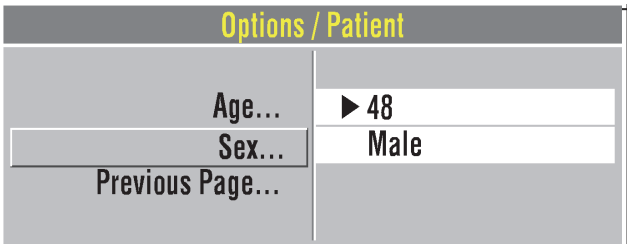

To enter or edit a patient's sex:

1 Select **SEX**.
2 Rotate the Speed Dial to highlight **MALE** or **FEMALE**.
3 Press the Speed Dial.

SETTING ALARMS

Alarms for the LIFEPAK 20e defibrillator/monitor can be set to **ON** or **OFF,** and are enabled when the monitor is turned on. When the alarms are set to **ON**, predetermined limits are set. To view these limits, press the **ALARMS** button. The limits will appear to the right of the parameter value. To change the limits, select **QUICK SET**.

Notes: Alarm limits are not displayed for Respiration Rate or Inspired CO_2. Alarm limits are provided in Table 2-1, page 2-20.
Although alarm limits for Respiration Rate are not displayed, you can determine whether wide or narrow limits are selected by pressing the **ALARMS** button.

When the alarms are set to **OFF**, you must press the **ALARMS** button and select **QUICK SET** to enable the alarms.

Whether alarms are set up to be **ON** or are enabled by pressing **ALARMS**, they can only be turned off by pressing the **ON** button to turn off the device. If power is lost for less than 30 seconds, for example due to a system reset, alarm settings are restored automatically.

When you press the **ALARMS** button, the following Alarms overlay appears:

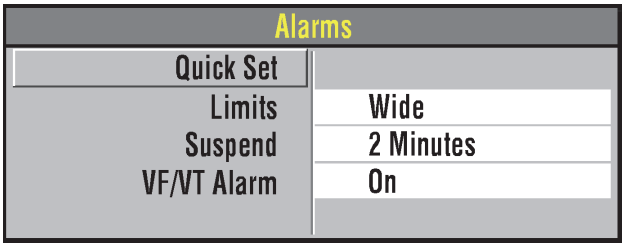

1 Select **QUICK SET** to activate the alarms for all active parameters. The quick set limits are set automatically based on the patient's current vital sign values (refer to Table 2-1). The alarm limits default to the setting (**WIDE** or **NARROW**) displayed on the overlay.

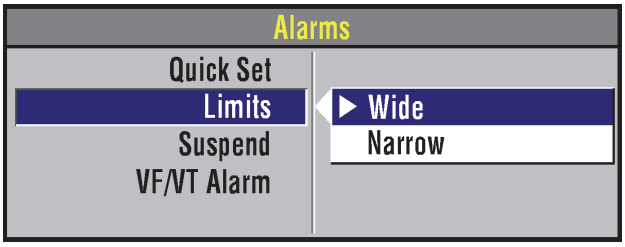

2 Select **LIMITS** to change the alarm limits to **WIDE** or **NARROW** (refer to Table 2-1).

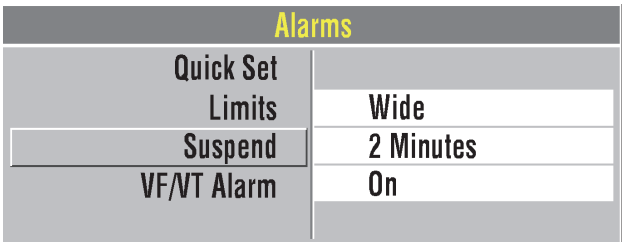

3 Select **SUSPEND** to turn off the audible alarm for up to 15 minutes. If an alarm limit is exceeded while the alarm is silenced, the violated parameter flashes, an alarm message appears, but the alarm tone remains silent.
If alarms are silenced for more than two minutes, an alert tone of two quick beeps sounds every 2.5 minutes. If alarms are silenced for two minutes, the alert tone sounds after 60 seconds.

©2018 Physio-Control, Inc.

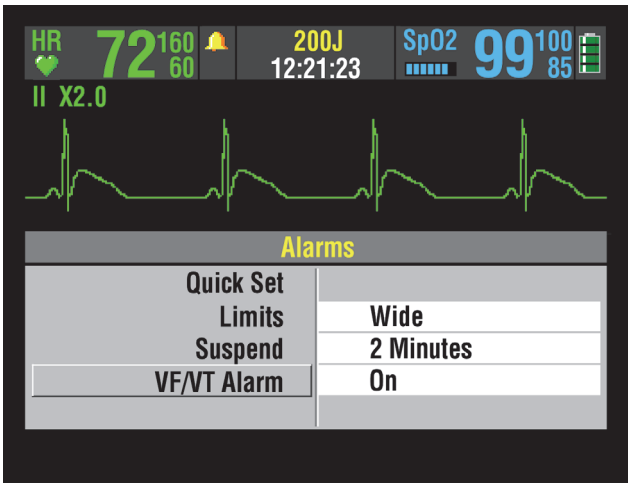

Select **VF/VT ALARM** to turn on continuous monitoring for ventricular fibrillation and ventricular tachycardia in manual mode.

A symbol appears above the primary ECG when the alarm is on .

Reselect **VF/VT ALARM** to turn off this alarm.

Note: When the VF/VT alarm is on, you are limited to **PADDLES** lead or lead II. Refer to "Selecting ECG Lead and Size," page 3-2.

Note: The VF/VT alarm will be suspended when the noninvasive pacemaker is on and when standard paddles are attached and **PADDLES** lead is selected. The alarm is also suspended when the defibrillator is charging or is fully charged.

Table 2-1 Wide and Narrow Alarm Limits

Parameter	Range	Wide Limits		Narrow Limits*		Limits Range†		Default Limits	
		Low	High	Low	High	Low	High	Low	High
Heart Rate (HR) Pulse Rate (PR) (bpm)	<60	-20	+35	-10	+25	30–150	100–250	50	150
	60–79	-25	+40	-20	+30				
	80–104	-30	+40	-30	+30				
	≥105	-35	+45	-25	+25				
SpO_2 (%)	≥90	-5	+3	-5	+3	50	90–100	85	100
	<90	-5	+3	-5	+3				
$EtCO_2$ (mmHg/%)[1]	≤40/5.3	-10/-1.3	+15/+2.0	-10/-1.3	+15/+2.0	5/0.7	70/9.2	15	50
	>40/5.3	-10/-1.3	+15/+2.0	-10/-1.3	+15/+2.0				
Inspired CO_2 (mmHg/%)[1,2]	–	N/A	N/A	N/A	N/A	N/A	N/A	N/A	8
Respiration Rate (RPM)[2]	<15	-8	+8	-4	+4	5-15	10-60	5	30
	≥15	-15	+15	-8	+8				

*.Numbers are ± from patient's initial value

†.Numbers are absolute range values

1.Limits for kPa are same as %

2.Inspired CO_2 and respiration rate alarm limit values are not displayed

MANAGING ALARMS

The alarm bell symbol indicates when alarms are on or off. All alarms that are controlled by **QUICK SET** have equal priority. When alarms are on and an alarm limit is exceeded, a tone sounds, the violated parameter flashes, and an alarm message appears on the screen.

To manage an alarm:

1 Press **ALARMS**. This silences the alarm for 2 minutes.

Note: After alarms are silenced by pressing the **ALARMS** button, an alert tone of two quick beeps sounds after 60 seconds.

2 Assess the cause of the alarm.
3 Assess the appropriateness of the limits setting (**WIDE** or **NARROW**).
4 If the patient is unstable, consider silencing the alarm for up to 15 minutes while attending to the patient. Do **not** reselect **QUICK SET.**
5 Once the patient is stable, reselect **QUICK SET** if necessary.

WARNING!

Possible failure to detect an out of range condition.

Reselecting QUICK SET will reset the alarm limits around the patient's current vital sign values. This may be outside the safe range for the patient.

When alarms are on, you can silence them preemptively for up to 15 minutes.

To silence alarms preemptively:

1 Press **ALARMS**.
2 Select **SUSPEND**.
3 Select a silence duration of 2, 5, 10, or 15 minutes.
4 The message ***ALARMS SUSPENDED*** appears at the bottom of the screen.

If alarms are silenced for more than two minutes, an alert tone of two quick beeps sounds every 2.5 minutes. If alarms are silenced for two minutes, the alert tone sounds after 60 seconds.

Note: When you select **SUSPEND**, the VF/VT alarm is not silenced.

©2018 Physio-Control, Inc.

CONNECTING TO POWER

The LIFEPAK 20e defibrillator/monitor and the optional CodeManagement Module operate on AC (line) power or their internal Lithium-ion batteries. You can switch from battery to AC power or AC power to battery while the device is on and in use by plugging in or unplugging the AC power cord.

When the CodeManagement Module is connected to the LIFEPAK 20e defibrillator, one power cord is used to power both the defibrillator and the CodeManagement Module.

IMPORTANT: The AC power cord is the safety disconnect mechanism. Maintain clear access to all connections at all times.

WARNING!

Possible defibrillator shutdown.

When operating on battery power, adhere to battery maintenance and replacement intervals discussed in the Battery Performance and Life section to prevent possible defibrillator shutdown. If the defibrillator shuts down without warning, or if a ***LOW BATTERY: CONNECT TO AC POWER*** message appears on the monitor screen, immediately connect the AC power cord to an outlet.

AC Operation

When the LIFEPAK 20e defibrillator/monitor operates on AC power, the AC Mains LED illuminates. When the defibrillator is not in use, the battery charge is best maintained if the power cord is connected to an AC outlet and the defibrillator is turned off.

Note: When the CodeManagement Module is attached to the defibrillator, the green LED on the CodeManagement Module and the AC Mains LED on the defibrillator are both illuminated while the device is connected to AC power.

BATTERY OPERATION

The LIFEPAK 20e defibrillator/monitor and the CodeManagement Module each have an internal battery. Battery operation for the defibrillator is explained below. Battery operation for the CodeManagement Module is explained on page 2-25.

LIFEPAK 20e Defibrillator/Monitor Battery

The internal Lithium-ion battery is rechargeable and is intended for use when AC power is unavailable or when the device is being used in a portable manner, such as in transport. The defibrillator automatically switches to battery power when the power cord is disconnected from an AC outlet or from the defibrillator.

A new, fully charged battery provides approximately 140 360-joule discharges, 110 minutes of pacing, or approximately 210 minutes of continuous monitoring before the defibrillator turns off. When one flashing red bar appears in the battery status indicator and the ***LOW BATTERY: CONNECT TO AC POWER*** message appears on the screen, immediately plug the power cord into an AC outlet to continue use and begin recharging the battery. If low battery messages frequently appear, the battery may need to be replaced. Contact Physio-Control Technical Support or qualified service personnel for assistance.

Connect the defibrillator to AC power after each use to recharge the battery. Typically, new fully depleted batteries recharge for 4 hours to regain full capacity. Partially depleted batteries

recharge for a time period equivalent to the time the defibrillator was in use. For example, if the defibrillator was used one hour, the required recharge time will be approximately one hour.

New batteries or batteries that have been stored for an extended time should be recharged before they are used. Connect the defibrillator to an AC power outlet to bring the battery to full charge.

Note: The LIFEPAK 20e defibrillator/monitor is intended to operate with the internal battery installed. In the event of a missing or faulty battery, when plugged into AC power, the device will still operate and the service light will illuminate at power on. Contact Physio-Control Technical Support or qualified service personnel for assistance.

Battery Performance and Life

Several factors can contribute to the Lithium-ion battery's performance and life cycle, including:

1 The defibrillator's use for assisting patients ("on time" and shocks).
2 The defibrillator's use when the battery is at minimum capacity (low battery condition).
3 The battery's normal self-discharge rate and the energy used by defibrillator self-tests.

To maximize battery performance and life, plug the defibrillator/monitor into an AC outlet to recharge the battery whenever the defibrillator/monitor is not in use. As a reminder, you can set up the LIFEPAK 20e defibrillator/monitor to sound a series of warning beeps, identified as ***AC LOSS ALERT***, whenever the defibrillator is turned off and not plugged into an AC outlet (refer to the "General Setup Menu," page 8-4). Once an AC loss alert is initiated, the defibrillator continues to beep once every two minutes until it is connected to AC power.

Note: While the defibrillator is plugged into AC power, the battery condition is periodically checked. If the battery is missing or is unable to charge, a service LED illuminates the next time the defibrillator is turned on. To check the battery capacity, perform the defibrillation function test (refer to "Maintenance and Testing Schedule," page 7-2).

Note: Even when properly maintained, the internal rechargeable Lithium-ion battery should be replaced every two years.

Battery Status Indicator

The battery status indicator approximates the amount of operating time available under battery power for the LIFEPAK 20e defibrillator/monitor. It does not indicate battery status for the CodeManagement Module. The battery status indicator appears on the screen after the defibrillator is turned on. (See Figure 2-13, page 2-11.) The number of illuminated bars indicates the battery capacity and how long the battery will provide power to the defibrillator.

A new, fully charged battery will show four green bars, indicating the battery is charged to 100% capacity. As battery charge and battery capacity decreases, the indicator bars decrease incrementally. One flashing red bar indicates a very low or empty battery. Refer to Table 2-2.

©2018 Physio-Control, Inc.

Table 2-2 Battery Status Indicator

Battery Indicator	Battery Status	Messages and Tones	Battery Capacity (percentage)
	Four **green** bars	None	76–100
	Three **green** bars	None	51–75
	Two **green** bars	None	26–50
	One **green** bar	None	16–25
	One **yellow** bar	***LOW BATTERY*** Three beeps (one time). Message remains in message area, cycling with others if necessary.	11–15
	One flashing **red** bar	***LOW BATTERY: CONNECT TO AC POWER*** Three beeps (every 20 seconds). Message remains in message area, cycling with others if necessary.	0–10

It is important to note that both charge (voltage) and capacity are factors contributing to the battery status indicator's display. For example, the battery status indicator displays two green bars when a new battery has 100% capacity and has been charged to 50%. However, an older battery that is 100% charged and only has 50% capacity also displays two green bars. The following demonstrates this example.

This battery may either be low in capacity or low in charge as follows:

- For a new battery with 100% capacity, this symbol indicates 50% charged (low in charge).
- For an older battery with 50% capacity, this symbol indicates 100% charged (low in capacity).

CodeManagement Module Battery

The CodeManagement Module has an internal, rechargeable Lithium-ion battery. When the CodeManagement Module is properly connected to the LIFEPAK 20e defibrillator and AC power, the batteries in the defibrillator and CodeManagement Module both recharge. When the device is disconnected from AC power, both the defibrillator and CodeManagement Module automatically switch to battery power.

To ensure the CodeManagement Module is always ready for use, keep it plugged into an AC outlet whenever possible.

WARNING!

Possible CO_2 monitoring shutdown.

When operating on battery power, adhere to recommended battery charging and replacement intervals to prevent possible CO_2 monitoring shutdown. If a ***CONNECT TO AC POWER*** message appears on the monitor screen, immediately connect the AC power cord to an outlet.

Notes:

- One power cord is used to power both the defibrillator and the CodeManagement Module.
- If the battery in the CodeManagement Module is low and the LIFEPAK 20e defibrillator is on, the **CONNECT TO AC POWER** message appears, and three beeps sound every 20 seconds.

A new, fully-charged battery for the CodeManagement Module provides 270 minutes of continuous CO_2 monitoring. Typically, a new, fully depleted battery recharges for 4 hours to regain full capacity. The battery should be replaced every two years. Battery replacement must be performed by qualified service personnel.

©2018 Physio-Control, Inc.

MONITORING

This section describes the monitoring features of the LIFEPAK 20e defibrillator/monitor.

Monitoring the ECG	page 3-2
Monitoring SpO2	3-9
Monitoring EtCO2	3-16

©2018 Physio-Control, Inc.

MONITORING THE ECG

The following subsections describe:

- ECG Monitoring Warning
- Selecting ECG Lead and Size
- Adjusting the Systole Tone Volume
- Monitoring ECG with Paddles Accessories
- Monitoring with the Patient ECG Cable
- Troubleshooting Tips for ECG Monitoring

ECG Monitoring Warning

WARNING!

Possible misinterpretation of ECG data.

The frequency response of the monitor screen is intended only for basic ECG rhythm identification; it does not provide the resolution required for diagnostic and ST segment interpretation. For diagnostic or ST segment interpretation, or to enhance internal pacemaker pulse visibility, attach the ECG cable. Then print the ECG rhythm in diagnostic frequency response (DIAG).

Selecting ECG Lead and Size

There are two methods for selecting or changing the ECG lead. Both methods are available on your LIFEPAK 20e defibrillator/monitor. The leads available depend on the ECG cable (3-wire or 5-wire) connected to the device.

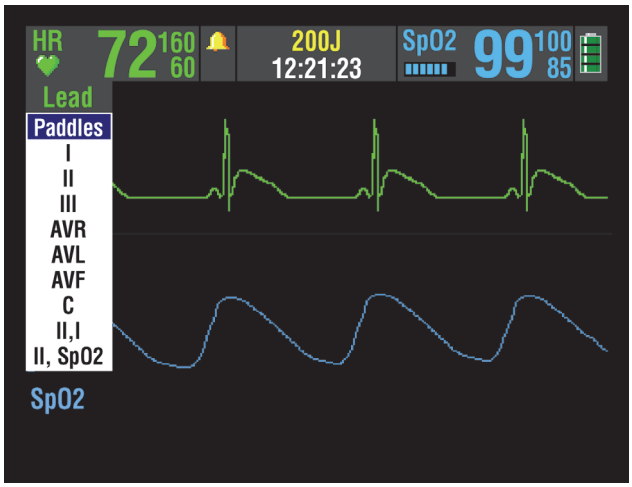

To change the ECG lead using the **LEAD** button:

1 Press the **LEAD** button. If ECG lead appears, the lead automatically changes to paddles. If **PADDLES** lead appears, the lead automatically changes to lead II.

2 When the Lead menu appears, press the **LEAD** button again or rotate the Speed Dial to select another lead. The highlighted selection shows the ECG lead.

Note: When the VF/VT alarm is on, you are limited to **PADDLES** lead or lead II in Channel 1. Refer to "Setting Alarms," page 2-19.

Note: If one or more lead sets are preconfigured, the menu displays the lead sets. Refer to page 8-9 for information about configuring lead sets.

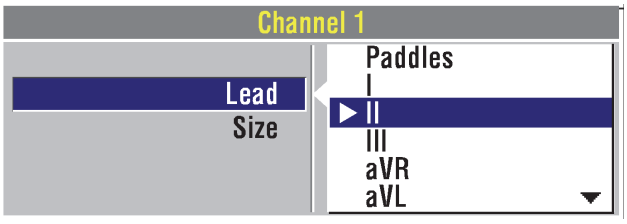

To select or change the ECG lead using the Speed Dial:

1 Highlight and select **CHANNEL 1**, and then select **LEAD** to obtain the primary ECG lead choices.
2 Change the ECG lead by rotating the Speed Dial. The highlighted selection shows the ECG lead.
3 Repeat Step 1 and Step 2 to select or change displayed waveforms for Channel 2.

You can select or change the ECG size by using the **SIZE** button or the Speed Dial. If an ECG is in Channel 2, the size is automatically changed to match the Channel 1 size.

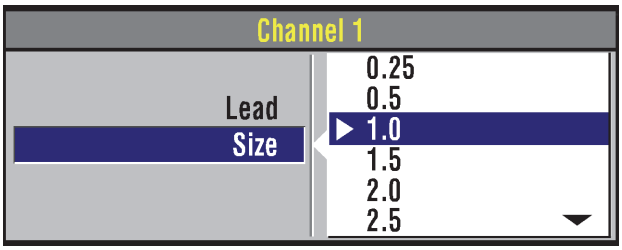

To select or change the ECG size using the **SIZE** button:

1 Press the **SIZE** button.
2 When the Size menu appears, press the **SIZE** button again. The highlighted selection shows the current ECG size.

To select or change the ECG size using the Speed Dial:

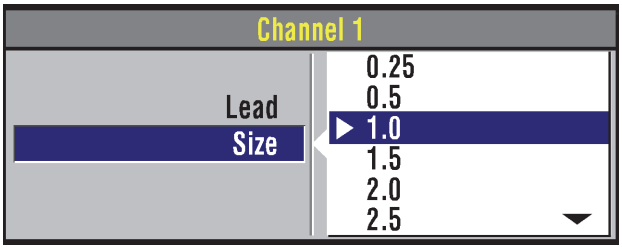

1 To obtain the primary ECG, highlight and select **CHANNEL 1**, and then select **SIZE**.
2 Change ECG size by rotating the Speed Dial. The highlighted selection shows the current ECG size.

Adjusting the Systole Tone Volume

To adjust the systole tone volume, highlight and select heart rate (HR) in the monitoring area of the screen.

The following overlay appears:

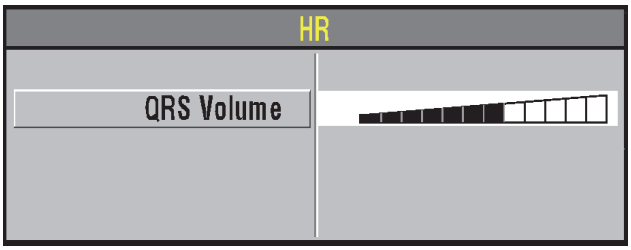

1 Rotate the Speed Dial to the desired volume.
2 Press the home screen to exit.

©2018 Physio-Control, Inc.

Monitoring ECG with Paddles Accessories

Anterior-lateral Placement

Anterior-lateral placement is the only placement that should be used for ECG monitoring with paddles accessories.

1 Place either the ♥ or + therapy electrode or the apex paddle lateral to the patient's left nipple in the midaxillary line, with the center of the electrode in the midaxillary line, if possible. Refer to Figure 3-1.

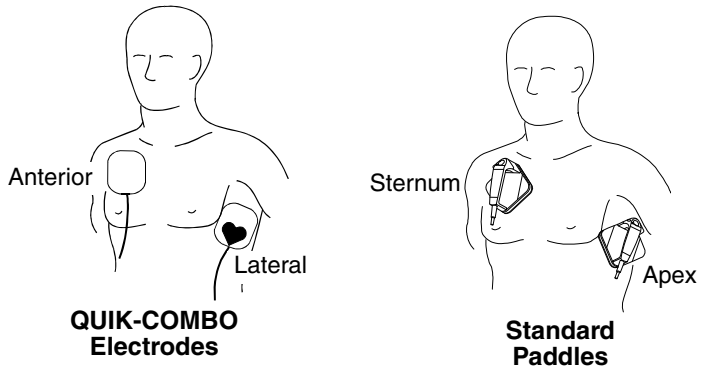

Figure 3-1 Anterior-lateral Placement

2 Place the other therapy electrode or sternum paddle on the patient's upper right torso, lateral to the sternum and below the clavicle as shown in Figure 3-1.

Special Placement Situations

When placing therapy electrodes or standard paddles, be aware of the special requirements in the following possible situations.

- **Obese Patients or Patients with Large Breasts** — Apply therapy electrodes or standard paddles to a flat area on the chest, if possible. If skin folds or breast tissue prevent good adhesion, it may be necessary to spread skin folds apart to create a flat surface.
- **Thin Patients** — Follow the contour of the ribs and spaces when pressing the therapy electrodes or standard paddles onto the torso. This limits air spaces or gaps under the electrodes and promotes good skin contact.
- **Patients with Implanted Pacemakers** — If possible, place therapy electrodes or standard paddles away from internal pacemaker generator.
- **Patients with Implanted Defibrillators** — Apply therapy electrodes or standard paddles in the anterior-lateral position and treat this patient as any other patient requiring emergency care.

Paddles Monitoring Procedure

To monitor using therapy electrodes or standard paddles:

1 Press **ON**.
2 Prepare the patient's skin:
   - Remove excessive chest hair as much as possible. Avoid nicking or cutting the skin. If possible, avoid placing therapy electrodes or standard paddles over broken skin.
   - Clean and dry the skin.
   - Do not use alcohol, tincture of benzoin, or antiperspirant to prep the skin.

3 Apply the therapy electrodes or standard paddles in the anterior-lateral position.
For therapy electrodes, confirm that the package is sealed and the Use By date has not passed. For standard paddles, apply conductive gel over the entire electrode surface.
4 Connect the disposable therapy electrodes to the therapy cable.
5 Select **PADDLES** lead.

Monitoring with the Patient ECG Cable

There are two ECG cables available for ECG monitoring as shown in Figure 3-2: the 3-wire and 5-wire cables.

Connecting the Patient ECG Cable

Connect the cable by inserting the main cable connector into the green electrically isolated ECG connector on the monitor.

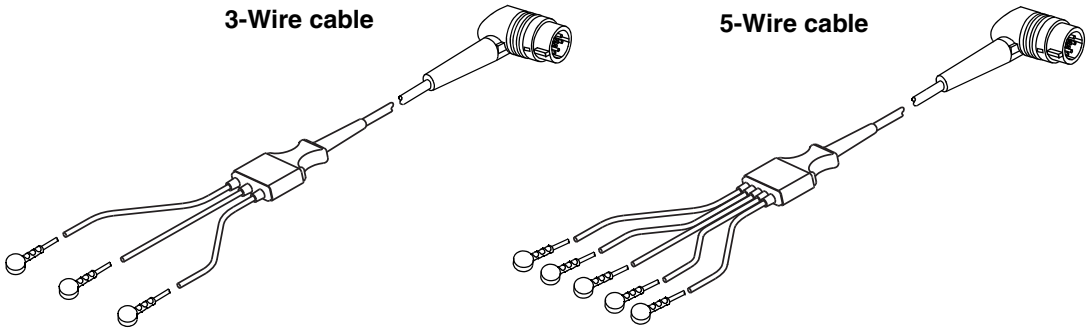

Figure 3-2 3-wire and 5-wire ECG Cables

ECG Monitoring Procedure

1 Press **ON**.
2 Attach the ECG cable to the monitor.
3 Identify the appropriate electrode sites on the patient as shown in Figure 3-3.

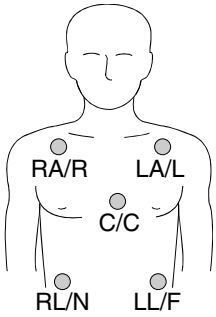

AHA Labels		IEC Labels	
RA	Right Arm	**R**	Right
LA	Left Arm	**L**	Left
RL*	Right Leg	**N**	Negative
LL	Left Leg	**F**	Foot
C*	Chest	**C**	Chest

***Note**: Not used for 3-wire cable.

Figure 3-3 Electrode Placement for ECG monitoring

4 Prepare the patient's skin for electrode application:
- Shave excessive hair at electrode site. Avoid locating electrodes over tendons and major muscle masses.
- For oily skin, clean skin with an alcohol pad.
- Dry the site with a brisk rub.

©2018 Physio-Control, Inc.

5 Apply ECG electrodes:
   - Confirm package is sealed and Use By date has not passed.
   - Attach an electrode to each of the lead wires.
   - Grasp electrode tab and peel electrode from carrier.
   - Inspect electrode gel and ensure the gel is intact (discard electrode if gel is not intact).
   - Hold electrode taut with both hands. Apply the electrode flat to the skin. Smooth tape outwardly. Avoid pressing the center of the electrode.
   - Secure the trunk cable clasp to the patient's clothing.

   Note: Ensure the electrodes do not contact any other conductive parts, including earth (ground).

6 Select the lead on the monitor screen.

7 If necessary, adjust ECG size.

8 Press **PRINT** to obtain an ECG printout.

ECG Electrode Requirements

Electrode quality is critical for obtaining an undistorted ECG signal. Always check the date code on electrode packages for the Use By date before applying the electrodes to a patient. Do not use electrodes with expired Use By date codes. Disposable electrodes are intended for a single use.

For best ECG monitoring results, use silver/silver chloride (Ag/AgCl) electrodes. These electrodes provide a rapid display of post-defibrillation ECG.

Leads Off Messages

If an electrode or lead wire disconnects during ECG monitoring, the monitor emits an audible alarm and displays a leads off message. The ECG trace becomes a dashed line**.** The alarm and messages continue until one of the following actions is performed:

- The lead wire is reconnected
- The lead selection is changed to a lead using connected lead wires
- Power is cycled.

Color Coding for ECG Leads

The lead wires and the electrode snaps for the patient ECG cable are color coded according to AHA or IEC standards as listed in Table 3-1.

Table 3-1 ECG Leads Color Codes

Leads	AHA Label	AHA Color	IEC Label	IEC Color
Limb Leads	RA	White	R	Red
	LA	Black	L	Yellow
	RL	Green	N	Black
	LL	Red	F	Green
	C	Brown	C	Brown

Monitoring Patients with Internal Pacemakers

The LIFEPAK 20e defibrillator/monitor typically does not use internal pacemaker pulses to calculate the heart rate. However, the monitor may detect internal pacemaker pulses as QRS complexes. This may result in an inaccurate heart rate display.

Smaller amplitude internal pacemaker pulses may not be distinguished clearly. For improved detection and display of internal pacemaker pulses, turn on the internal pacemaker detector, and/or connect the ECG cable, select an ECG lead, and print the ECG in diagnostic frequency response.

Large amplitude pacemaker pulses may overload the QRS complex detector circuitry so that no paced QRS complexes are counted. To help minimize ECG pickup of large unipolar pacemaker pulses when monitoring patients with internal pacemakers, place ECG electrodes so the line between the positive and negative electrodes is perpendicular to the line between the pacemaker generator and the heart.

The LIFEPAK 20e defibrillator/monitor annotates internal pacemaker pulses with a hollow arrow ⇧ on the display and the printed ECG if this feature is configured or selected **ON**. False annotations of this arrow may occur if ECG artifacts mimic internal pacer pulses. If false annotations occur, you may deactivate the detection feature using the Options/Pacing/Internal Pacer menu (refer to Figure 2-7). Also refer to the "Pacing Setup Menu" in Table 8-9. Patient history and other ECG waveform data, such as wide QRS complexes, should be used to verify the presence of an internal pacemaker.

Troubleshooting Tips for ECG Monitoring

If problems occur while monitoring the ECG, check the list of observations in Table 3-2 for aid in troubleshooting. For basic troubleshooting problems such as no power, refer to "General Troubleshooting Tips" in Section 7.

Table 3-2 Troubleshooting Tips for ECG Monitoring

Observation	Possible Cause	Corrective Action
1 Screen blank and **ON** LED lighted.	Screen not functioning properly.	• Print ECG on recorder as backup. • Contact service personnel for repair.
2 Any of these messages displayed: ***CONNECT ELECTRODES*** ***CONNECT ECG LEADS*** ***ECG LEADS OFF*** ***XX LEADS OFF***	Therapy electrodes are not connected.	• Confirm therapy electrode connections.
	One or more ECG electrodes are disconnected.	• Confirm ECG electrode connections.
	ECG cable is not connected to monitor.	• Confirm ECG cable connections.
	Poor electrode-to-patient adhesion.	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. • Prepare skin and replace electrode(s). • Select another lead.
	Broken ECG cable lead wire.	• Select **PADDLES** lead and use standard paddles or therapy electrodes for ECG monitoring. • Check ECG cable continuity.
3 Poor ECG signal quality.	Poor electrode-skin contact.	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. Secure trunk cable clasp to patient's clothing. • Prepare skin and replace electrode(s).

©2018 Physio-Control, Inc.

Table 3-2 Troubleshooting Tips for ECG Monitoring (Continued)

Observation	Possible Cause	Corrective Action
	Outdated, corroded, or dried-out electrodes.	• Check date codes on electrode packages. • Use only silver/silver chloride electrodes with Use By dates that have not passed. • Leave electrodes in sealed pouch until time of use.
	Loose connection. Damaged cable or connector/ lead wire.	• Check/reconnect cable connections. • Inspect ECG and therapy cables. • Replace if damaged. • Check cable with simulator and replace if malfunction observed.
	Misplaced electrodes/lead wire.	• Confirm correct placement. • Select lead view with optimal QRS detection.
	Noise because of radio frequency interference (RFI).	• Check for equipment causing RFI (such as a radio transmitter) and relocate or turn off equipment power.
4 Baseline wander (low frequency/high amplitude artifact).	Inadequate skin preparation. Poor electrode-skin contact. Diagnostic frequency response.	• Prepare skin and apply new electrodes. • Check electrodes for proper adhesion. • Print ECG in monitor frequency response.
5 Fine baseline artifact (high frequency/low amplitude).	Inadequate skin preparation. Isometric muscle tension in arms/legs.	• Prepare skin and apply new electrodes. • Confirm that limbs are resting on a supportive surface. • Check electrodes for proper adhesion.
6 Systole beeps not heard or do not occur with each QRS complex.	Volume too low. QRS amplitude too small to detect.	• Adjust volume. • Change ECG lead.
7 Monitor displays dashed lines with no ECG leads off messages.	**PADDLES** lead selected but patient connected to ECG cable.	• Select one of the limb leads.
8 Heart rate (HR) display different than pulse rate.	Monitor is detecting the patient's internal pacemaker pulses.	• Prepare skin and apply new electrodes in different location. • Select lead view with optimal QRS detection.
9 Internal pacemaker pulses difficult to see.	Pulses from pacemaker are very small. Monitor the visibility of frequency response limits.	• Turn on internal pacemaker detector (refer to page 3-6). • Connect ECG cable and select ECG lead instead of paddles. • Print ECG in diagnostic mode (refer to page 3-5).

MONITORING SpO_2

The following paragraphs describe:

- SpO2 Warnings and Cautions
- When to Use a Pulse Oximeter
- How a Pulse Oximeter Works
- SpO2 Monitoring Considerations
- SpO2 Monitoring Procedure
- SpO2 Waveform
- SpO2 Volume
- Sensitivity
- Averaging Time
- Pulse Oximeter Sensors
- No Implied License
- Cleaning
- Troubleshooting Tips for SpO2

SpO_2 Warnings and Cautions

WARNINGS!

Shock or burn hazard.

Before use, carefully read these operating instructions, the sensor and extension cable directions for use, and precautionary information.

Shock or burn hazard.

Other manufacturers' oxygen transducers may cause improper oximeter performance and invalidate safety agency certification. Use only oxygen transducers approved for this product.

Inaccurate pulse oximeter readings.

Do not use a damaged extension cable or one with exposed electrical contacts. Never use more than one extension cable between the pulse oximeter and the sensor.

Inaccurate pulse oximeter readings.

Do not use a damaged sensor. Do not alter the sensor in any way. Alterations or modifications may affect performance and/or accuracy.

Inaccurate pulse oximeter readings.

Sensors exposed to ambient light (such as sunlight, surgical lights, or bilirubin lamp) when incorrectly applied to a patient may exhibit inaccurate saturation readings. Securely place the sensor on the patient and check the sensor's application frequently to help ensure accurate readings.

©2018 Physio-Control, Inc.

WARNINGS! (CONTINUED)

Inaccurate pulse oximeter readings.

Severe anemia, significant blood levels of carboxyhemoglobin or methemoglobin, elevated levels of total bilirubin, intravascular dyes that change usual blood pigmentation, excessive patient movement, venous pulsations, electrosurgical interference, exposure to irradiation and placement of the sensor on an extremity that has a blood pressure cuff, intravascular line or externally applied coloring (such as nail polish) may interfere with oximeter performance. The operator should be thoroughly familiar with the operation of the oximeter prior to use.

Inaccurate pulse oximeter readings.

The pulsations from intra-aortic balloon support can be additive to the pulse rate. Verify patient's pulse rate against the ECG heart rate.

Skin injury.

Prolonged, continuous use of a sensor may cause irritation, blistering, or pressure necrosis of the skin. Check the sensor site regularly based on patient condition and type of sensor. Change the sensor site if skin changes occur. Do not use tape to hold the sensor in place, as this may cause inaccurate readings or damage to the sensor or skin.

Possible strangulation.

Carefully route patient cabling to reduce the possibility of patient entanglement or strangulation.

CAUTION!

Possible equipment damage.

To avoid damaging the extension cable or the sensor, hold the connectors, rather than the cables, when disconnecting.

When to Use a Pulse Oximeter

A pulse oximeter is a noninvasive tool that checks the saturation of oxygen in arterial blood (SpO_2) and is not to be used as an apnea monitor or as a replacement or substitute for ECG based arrhythmia analysis. It is used for monitoring patients who are at risk of developing hypoxemia. If a pulse oximeter is not used, the only indications of hypoxemia are a patient's dusky skin, nail beds, and mucous membranes, accompanied by restlessness and confusion. These indications are not conclusive, however, and do not appear until after the patient has developed hypoxemia. Pulse oximetry is to be used in addition to patient assessment. Care should be taken to assess the patient at all times and to not solely rely on the SpO_2 reading. If a trend toward patient deoxygenation is indicated, blood samples should be analyzed using laboratory instruments to completely understand the patient's condition.

How a Pulse Oximeter Works

A pulse oximeter sensor directs light through a fleshy body site (usually the finger or earlobe). The sensor sends light from the emitting diodes to the receiving detector as shown in Figure 3-4. Oxygen saturated blood absorbs light differently as compared to unsaturated blood. The pulse oximeter translates the amount of light received into a saturation percentage and displays an SpO_2 reading. Normal values typically range from 95% to 100% at sea level.

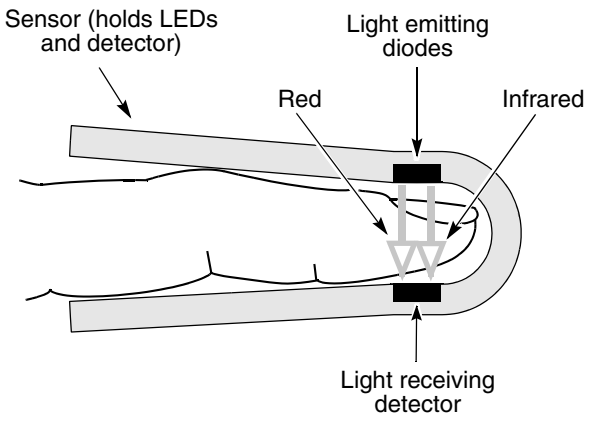

Figure 3-4 How a Pulse Oximeter Works

The quality of the SpO_2 reading depends on correct sensor size and placement, adequate blood flow through the sensor site, patient motion, and exposure to ambient light. For example, with very low perfusion at the monitored site, readings may read lower than core arterial oxygen saturation. Test methods for accuracy are available by contacting your local Physio-Control representative.

SpO_2 Monitoring Considerations

Each oximeter sensor is applied to a specific site on the patient. Use the following criteria to select the appropriate sensor:

- Patient weight
- Patient perfusion to extremities
- Patient activity level
- Available application sites on the patient's body
- Sterility requirements
- Anticipated duration of monitoring

To help ensure optimal and accurate performance:

- Use a dry and appropriately sized sensor.
- Keep the sensor site at the same level as the patient's heart.
- Apply the sensor according to the Directions for Use provided with the sensor.
- Observe all warnings and cautions noted in the sensor's Directions for Use.

The sensors are sensitive to light. If excessive ambient light is present (such as sunlight, surgical lights, or bilirubin lamp), cover the sensor site with an opaque material to block the light. Failure to do so could result in inaccurate measurements.

If patient movements present a problem, consider the following possible solutions:

- Be sure the sensor is secure and properly aligned.
- Use a new sensor with fresh adhesive backing.
- If possible, move the sensor to a less active site.

Note: Wrapping the sensor too tightly or using supplemental tape to hold the sensor in place may cause inaccurate measurements.

©2018 Physio-Control, Inc.

SpO_2 Monitoring Procedure

The defibrillator controls power to the pulse oximeter. When the defibrillator is turned on, the oximeter turns on and performs a self-test that requires up to 10 seconds. When the defibrillator is turned off, the oximeter also turns off.

To conserve battery power, the pulse oximeter goes into “sleep mode” when not in use. Sleep mode is activated within 10 seconds of disconnecting the sensor. During sleep mode, the screen does not display SpO_2 information. The oximeter returns to normal mode after detecting a sensor or a patient signal. The oximeter performs the self-test when it returns from sleep mode to active mode.

The pulse oximeter measures SpO_2 levels between 1% and 100%. When SpO_2 levels are between 70% and 100%, oximeter measurements are accurate within ±3 digits. When the pulse oximeter measures SpO_2 levels less than 50%, the display shows < 50%.

To measure the patient’s SpO_2 levels:

1 Connect the SpO_2 cable to the monitor.
2 Attach the sensor to the SpO_2 cable and the patient.
3 Press **ON.**
4 Observe the pulse bar for fluctuation. Amplitude of the pulse bar indicates relative signal quality.
5 Adjust sensitivity, averaging time, and SpO_2 volume as necessary.

SpO_2 Waveform

The SpO_2 waveform can be displayed on waveform Channel 2 by selecting waveform Channel 2 and then selecting SpO_2 from the Waveform menu. The SpO_2 waveform automatically sizes itself to provide optimum waveform viewing.

SpO_2 Volume

To adjust the pulse tone volume, highlight and select **SPO2** on the home screen.
The following overlay appears:

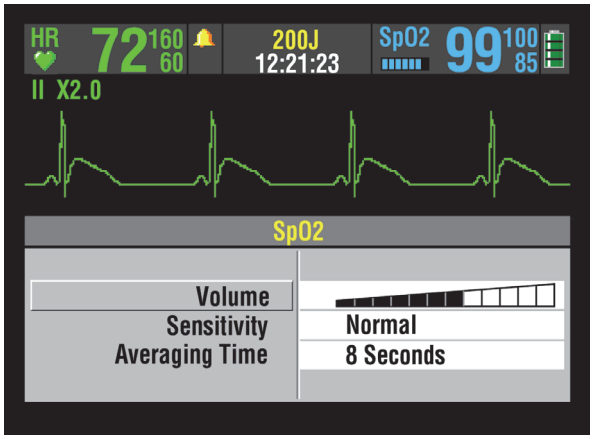

1 Highlight and select **SPO2 VOLUME**.
2 Rotate the Speed Dial to the desired volume.
3 Press the Speed Dial to set the volume.

Sensitivity

The sensitivity setting allows you to adjust the oximeter for differing perfusion states. To adjust the sensitivity to either normal or high, highlight and select **SPO2** on the home screen and then select **SENSITIVITY**.

The normal sensitivity setting is the recommended setting for most patients. The high sensitivity setting allows for SpO_2 monitoring under low perfusion states such as the severe hypotension of shock. However, when the SpO_2 sensitivity is set to high, the signal is more susceptible to artifact. It is recommended that the patient be monitored closely when the high sensitivity setting is in use.

Averaging Time

The averaging time setting allows you to adjust the time period used to average the SpO_2 value. Four time periods are provided for averaging: 4, 8, 12, and 16 seconds. To adjust the averaging time, highlight and select **SPO2** on the home screen and select **AVERAGING TIME**.

The averaging time of 8 seconds is recommended for most patients. For patients with rapidly changing SpO_2 values, the 4-second time is recommended. The 12- and 16-second periods are used when artifact is affecting the performance of the pulse oximeter.

Pulse Oximeter Sensors

The Accessory Catalog describes the sensors that can be used with the LIFEPAK 20e defibrillator/monitor. To order compatible sensors and extension cables, refer to the accessories catalog or contact your local Physio-Control sales representative.

Masimo $Sp0_2$ Sensors

Carefully read the directions for use provided with sensors and cables for complete descriptions, instructions, warnings, cautions, and specifications.

Compatibility with Nellcor Sensors

The LIFEPAK 20e defibrillator/monitor can be ordered to have compatibility with Nellcor sensors. To use the Nellcor sensor with the LIFEPAK 20e defibrillator/monitor, the Masimo MNC-1 adapter cable must be used. Carefully read the directions for use provided with the Nellcor sensors and the Masimo MNC-1 adapter cable for complete description, instructions, warnings, cautions, and specifications.

No Implied License

Possession or purchase of this oximeter does not convey any express or implied license to use the oximeter with replacement parts which would, alone or in combination with the oximeter, fall within the scope of one or more of the patents relating to this device.

Cleaning

To clean the sensors, first remove them from the patient and disconnect them from the connector cable. Clean LNC and LNOP DCI sensors by wiping them with a 70% isopropyl alcohol pad. Allow the sensors to dry before placing them on a patient. Do not attempt to sterilize.

To clean the connector and adapter cables, first remove them from the defibrillator and then wipe them with a 70% isopropyl alcohol pad. Allow them to dry before reconnecting them to the defibrillator. Do not attempt to sterilize.

Note: Do not soak or immerse the cables in any liquid solution.

©2018 Physio-Control, Inc.

Troubleshooting Tips for SpO_2

Table 3-3 Troubleshooting Tips for SpO_2

Observation	Possible Cause	Corrective Action
1 The oximeter measures a pulse, but there is no oxygen saturation or pulse rate.	Excessive patient motion.	• Keep patient still. • Check that sensor is secure. • Relocate sensor. • Replace sensor.
	Patient perfusion may be too low.	• Check patient. • Increase sensitivity.
2 SpO_2 or pulse rate changes rapidly; pulse amplitude is erratic.	Excessive patient motion.	• Keep patient still. • Check that sensor is secure. • Relocate sensor. • Replace sensor. • Increase sensitivity.
	An electrosurgical unit (ESU) may be interfering with performance.	• Move the monitor as far as possible from the ESU. • Plug the ESU and monitor into different circuits. • Move the ESU ground pad as close to the surgical site as possible. • Sensor may be damp, replace it. • Remove sensor extension cable and connect the sensor directly.
3 No SpO_2 value is displayed.	Oximeter may be performing a self-test (requires 10 seconds).	• Wait for completion.
4 ***SPO2: NO SENSOR DETECTED*** message appears.	Sensor is not connected to patient or cable disconnects from device.	• Check that sensor and cable are connected properly.
5 ***SPO2: CHECK SENSOR*** message appears.	Sensor is disconnected from patient or cable.	• Attach the sensor. • Check that sensor is secure.
	Excessive ambient light.	• Remove or block light source if possible. • Cover sensor with opaque material, if necessary.
	Patient has a weak pulse or low blood pressure.	• Test sensor on someone else. • Check if patient perfusion is adequate for sensor location. • Check if sensor is secure and not too tight. • Check that sensor is not on extremity with blood pressure cuff or intravascular line. • Change sensor location.

Table 3-3 Troubleshooting Tips for SpO_2 (Continued)

Observation	Possible Cause	Corrective Action
6 ***SPO2: UNKNOWN SENSOR*** message appears.	A sensor is connected to the device that is not compatible with the Masimo $Sp0_2$ module.	• Refer to "Pulse Oximeter Sensors," page 3-13 for sensor compatibility.
7 ***SPO2: SEARCHING FOR PULSE*** message appears.	A sensor is connected to the patient and is searching for a pulse.	• Wait for completion.
8 ***SPO2: LOW PERFUSION*** message appears.	Patient has a weak pulse.	• Change sensor location.

©2018 Physio-Control, Inc.

MONITORING ETCO$_2$

The following paragraphs describe:

- EtCO2 Warnings and Cautions
- How Capnography Works
- EtCO2 Monitoring Waveform Analysis
- EtCO2 Monitoring Procedure
- CO2 Display
- CO2 Alarms
- CO2 Detection
- Cleaning
- Troubleshooting Tips for EtCO2

EtCO$_2$ Warnings and Cautions

WARNINGS!

Fire hazard.

Before use, carefully read these operating instructions, the FilterLine® tubing directions for use, and precautionary information.

Fire hazard.

The FilterLine tubing may ignite in the presence of O_2 when directly exposed to laser, electrosurgical devices, or high heat. Use with caution to prevent flammability of the FilterLine tubing.

Fire hazard.

Anesthetics become mixed with the patient's air that is sampled by the capnometer. When using the EtCO$_2$ monitor in the presence of flammable anesthetic mixture with oxygen or nitrous oxide, connect the EtCO$_2$ gas port to a scavenger system.

Possible inaccurate patient assessment.

Do not use the EtCO$_2$ monitor for diagnostic purposes. The EtCO$_2$ monitor is intended only as an adjunct in patient assessment and is not to be used as a diagnostic apnea monitor. Do not solely rely on respiratory monitoring for detecting cessation of breathing. Follow hospital guidelines and best clinical practices, including monitoring additional parameters that indicate the patient's oxygenation status.

Possible inaccurate CO$_2$ readings.

Using other manufacturers' CO$_2$ accessories may cause the device to perform improperly and invalidate the safety agency certifications. Use only the accessories that are specified in these operating instructions.

Possible inaccurate CO$_2$ readings.

If calibration is not performed as specified in the Service Manual for the LIFEPAK 20e defibrillator/monitor, the EtCO$_2$ monitor may be out of calibration. A monitor that is out of calibration may provide inaccurate readings.

WARNINGS! (CONTINUED)

Possible strangulation.

Carefully route the patient tubing (FilterLine) to reduce the possibility of patient entanglement or strangulation.

Infection hazard

Do not reuse, sterilize, or clean Microstream® CO_2 accessories as they are designed for single-patient one-time use.

Infection hazard

Do not return air from the CO_2 exhaust port to the breathing system.

How Capnography Works

An $EtCO_2$ sensor continuously monitors carbon dioxide (CO_2) that is inspired and exhaled by the patient. The sensor employs Microstream non-dispersive infrared (IR) spectroscopy to measure the concentration of CO_2 molecules that absorb infrared light.

The CO_2 FilterLine system delivers a sample of the exhaled gases directly from the patient into the CodeManagement Module for CO_2 measurement. The low sampling flow rate (50 ml/min) reduces liquid and secretion accumulation and prevents obstruction, which maintains the shape of the CO_2 waveform.

The CO_2 sensor captures a micro sample (15 microliters). This extremely small volume allows for fast rise time and accurate CO_2 readings, even at high respiration rates.

The Microbeam IR source illuminates the sample cell and the reference cell. This proprietary IR light source generates only the specific wavelengths characteristic of the CO_2 absorption spectrum. Therefore, no compensations are required when concentrations of O_2, anesthetic agent, or water vapor are present in the exhaled breath.

The LIFEPAK 20e defibrillator/monitor is set at the factory to use the capnography Body Temperature Pressure Saturated (BTPS) conversion method. This option corrects for the difference in temperature and moisture between the sampling site and alveoli. The correction formula is 0.97 x the measured $EtCO_2$ value. The BTPS conversion can be turned off in the Setup Options. Refer to "CO2 Setup Menu," page 8-10, for more information.

$EtCO_2$ Monitoring Waveform Analysis

Valuable information concerning the patient's expired CO_2 can be acquired by examination and interpretation of the waveform.

The Phases of the Waveform

Figure 3-5 is a graphic representation of a normal capnograph waveform. Four phases of the waveform require analysis. The flat I–II baseline segment (Respiratory Baseline) represents continued inhalation of CO_2-free gas. This value normally is zero. The II–III segment (Expiratory Upstroke), a sharp rise, represents exhalation of a mixture of dead space gases and alveolar gases from acini with the shortest transit times. Phase III–IV (Expiratory Plateau) represents the alveolar plateau, characterized by exhalation of mostly alveolar gas. Point IV is the end-tidal ($EtCO_2$) value that is recorded and displayed by the monitor. Phase IV–V (Inspiratory Downstroke), a sharp fall, reflects the inhalation of gases that are CO_2-free. Alterations of the normal capnograph or $EtCO_2$ values are the result of changes in metabolism, circulation, ventilation, or equipment function.

©2018 Physio-Control, Inc.

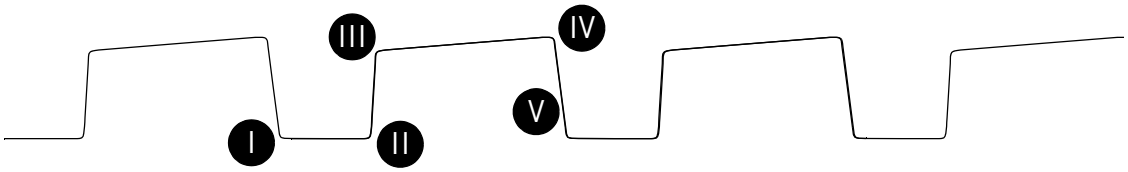

Figure 3-5 Phases of the Respiratory Waveform

Respiratory Baseline. Elevation of the waveform baseline (I–II segment) usually represents rebreathing CO_2. This elevation usually is accompanied by gradual increases in the $EtCO_2$ value. Rebreathing CO_2 is common in circumstances of artificially produced increased dead space and hypoventilation. Precipitous rises in both baseline and $EtCO_2$ values usually indicate contamination of the sensor.

Expiratory Upstroke. In the normal waveform, the rising phase (II–III segment) is usually steep. When this segment becomes less steep, CO_2 delivery is delayed from the lungs to the sampling site. The causes of this delay can be physiologic or mechanical and include bronchospasm, obstruction of the upper airway, or obstruction (or kinking) of an endotracheal tube (ETT).

Expiratory Plateau. The plateau of the waveform, which represents the remainder of expiration (III-IV segment), should be nearly horizontal. The end of the plateau represents the $EtCO_2$ value. Upward slanting of the expiratory plateau occurs when there is uneven emptying of the alveoli. Similar to the diminished slope of the Expiratory Upstroke, this pattern can occur in asthma, chronic obstructive pulmonary disease (COPD), partial upper-airway obstruction, or partial mechanical obstruction such as a partially kinked ETT.

Inspiratory Downstroke. The fall to baseline (IV-V segment) is a nearly vertical drop. This slope can be prolonged and can blend with the expiratory plateau in cases of leakage in the exhale portion of the breathing circuit. The peak $EtCO_2$ value (IV) is often not reached. Relying on the numeric end-tidal value without observing the breathing waveform may obscure the presence of a leak.

$EtCO_2$ Monitoring Procedure

The $EtCO_2$ monitor is activated when the FilterLine set is attached. Initialization, self-test, and warm-up of the $EtCO_2$ monitor is typically less than 30 seconds, but may take up to two and one-half minutes.

Carefully read the Instructions for Use that are provided with the FilterLine for placement instructions, use instructions, warnings, cautions, and specifications.

CAUTION!

Possible equipment damage.

Failure to replace a broken or missing CO_2 port door may allow water or particulate contamination of the internal CO_2 sensor. This may cause the CO_2 module to malfunction.

Possible equipment damage.

Do not use excessive force when connecting the FilterLine to the CO_2 port. This may damage the connector.

To monitor $EtCO_2$:

1 Press **ON**.

2 Select the appropriate $EtCO_2$ accessory for the patient.

Note: To decrease the likelihood of the FilterLine connection coming loose during use, hand-straighten the tubing after removal from the package before connecting to patient or device.

3 Open the CO_2 port door and insert the FilterLine connector. Using the tabs, screw the FilterLine connector into the CO_2 port clockwise until it can no longer be turned. Do not use excessive force.

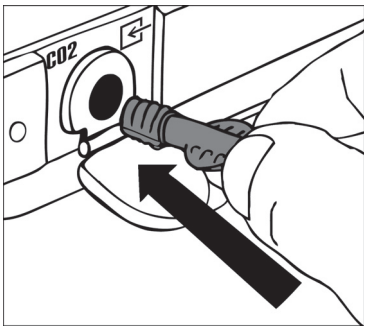

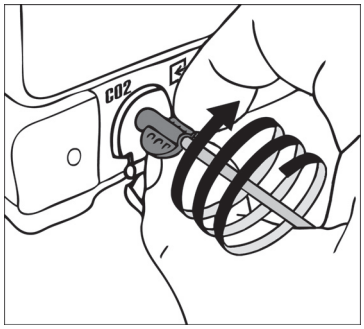

4 Verify that the CO_2 area is displayed. The $EtCO_2$ monitor performs the autozero routine as part of the initialization self-test.

5 Display CO_2 waveform in Channel 2.

6 Connect the CO_2 FilterLine set to the patient.

7 Confirm that the $EtCO_2$ value and waveform are displayed. The monitor automatically selects the scale for the best visualization of the waveform. You can change the scale, if desired, as described in the next section.

Note: It is possible for the FilterLine set to become loose at the device connection and still have an $EtCO_2$ value and CO_2 waveform, but they may be erroneously low. Make sure the FilterLine connection is firmly seated and can no longer be turned.

Note: The capnography module performs self-maintenance within the first hour of monitoring and once an hour during continuous monitoring. The self-maintenance includes “auto-zeroing.” Self-maintenance is also initiated when the surrounding temperature changes 8°C (14.4°F) or more, or the surrounding pressure changes more than 20 mmHg. The CO_2 module detects this change and attempts to purge the tubing. To clear the **CO2 FILTERLINE PURGING** or **CO2 FILTERLINE BLOCKAGE** messages, remove the FilterLine tubing and reconnect it to the monitor.

©2018 Physio-Control, Inc.

CO_2 Display

The following scales are available to display the CO_2 waveform. The LIFEPAK 20e defibrillator/monitor automatically selects the scale based on the measured $EtCO_2$ value. To change the CO_2 scale, outline and select the CO_2 area using the Speed Dial and then select the desired scale from the scale menu.

- Autoscale (default)
- 0–20 mmHg (0–4 Vol% or kPa)
- 0–50 mmHg (0–7 Vol% or kPa)
- 0–100 mmHg (0–14 Vol% or kPa)

The CO_2 waveform is compressed (displayed at 12.5 mm/sec sweep speed) to provide more data in the 3.7-second screen. There is a slight delay between when the breath occurs and when it appears on the screen. Printouts are at 25 mm/sec.

The monitor shows the maximum CO_2 value over the last 20 seconds. If the $EtCO_2$ values are increasing, the change can be seen with every breath. However, if the values are continually decreasing, it will take up to 20 seconds for a lower numerical value to be displayed. Because of this, the $EtCO_2$ value may not always match the level of the CO_2 waveform.

CO_2 Alarms

The $EtCO_2$ monitor provides:

- $EtCO_2$ high and low alarms (controlled by activating Alarms (refer to "Setting Alarms," page 2-19)).
- $FiCO_2$ (fractional inspired CO_2) alarm (controlled by activating Alarms; automatically set to default values and not adjustable)
- No breath alarm (automatic and not adjustable)
- Respiration Rate high and low alarms (controlled by activating Alarms (refer to "Setting Alarms," page 2-19)).

The no breath alarm occurs when the CO_2 values are below 8 mmHg (1.0% or kPa) for 30 seconds. The message ***ALARM NO BREATH*** appears in the message area along with the time since the last detected CO_2 value of at least 8 mmHg (1.0% or kPa).

WARNING!

Possible inaccurate patient assessment.

Do not use the $EtCO_2$ monitor for diagnostic purposes. The $EtCO_2$ monitor is intended only as an adjunct in patient assessment and is not to be used as a diagnostic apnea monitor. Do not solely rely on respiratory monitoring for detecting cessation of breathing. Follow hospital guidelines and best clinical practices, including monitoring additional parameters that indicate the patient's oxygenation status.

Note: Some software versions display ***ALARM APNEA*** instead of ***ALARM NO BREATH***. The Alarm Apnea and Alarm No Breath messages are equivalent.

CO_2 Detection

A CO_2 waveform appears when any CO_2 is detected, but CO_2 must be greater than 3.5 mmHg for a numerical value to be displayed. However, the CO_2 module will not recognize a breath until the CO_2 is at least 8 mmHg (1.0% or 1 kPa). Valid breaths must be detected in order for the no breath alarm to function and to count the respiratory rate (RR).

When CO_2 is not detected in the cardiac arrest situation—for example, the CO_2 waveform is either dashes "---" or a flat solid line at or near zero—several factors must be quickly evaluated. Assess for the following causes:

Equipment Issues

- FilterLine set is disconnected from the endotracheal tube (ETT)
- System is purging due to fluid in the patient/sensor connection from ET administration of medications
- System is auto-zeroing
- FilterLine connection to device is loose

Loss of Airway Function

- Improper placement of ETT
- ETT dislodgment
- ETT obstruction

Physiological Factors

- Apneic condition
- Loss of perfusion
- Exsanguination
- Massive pulmonary embolism
- Inadequate CPR

Cleaning

Accessories for CO_2 monitoring are disposable and are intended for single-patient use. Do not clean and reuse a FilterLine set. Dispose of the contaminated waste according to local protocols.

©2018 Physio-Control, Inc.

Troubleshooting Tips for $EtCO_2$

Table 3-4 Troubleshooting Tips for $EtCO_2$

Observation	Possible Cause	Corrective Action
1 ***ALARM NO BREATH*** message appears and waveform is solid line at or near zero. **Note:** Some software versions display ***ALARM APNEA*** instead of ***ALARM NO BREATH***. The Alarm Apnea and Alarm No Breath messages are equivalent.	No breath has been detected for 30 seconds since last valid breath.	• Check the patient.
	FilterLine connection to device is loose.	• Twist FilterLine connector clockwise until firmly seated and can no longer be turned.
	FilterLine set is disconnected from patient or ETT.	• Check ventilation equipment (if used) for leaks or disconnected tubing.
2 ***CO2 FILTERLINE OFF*** message appears and waveform is “---”.	FilterLine set disconnected from device.	• Connect FilterLine set to device port.
	FilterLine set not securely connected to device.	• Twist FilterLine connector clockwise until firmly seated and can no longer be turned.
3 ***CO2 FILTERLINE PURGING*** message appears and waveform is “---”.	FilterLine set is kinked or clogged with fluid.	• Disconnect and then reconnect the FilterLine set.
4 ***CO2 FILTERLINE BLOCKAGE*** message appears and waveform is “---”.	The message appears after 30 seconds of unsuccessful purging. FilterLine set is kinked or clogged.	• Disconnect and then reconnect the FilterLine set. • Change the FilterLine set.
5 ***CO2 INITIALIZING*** message appears and waveform is “---”.	FilterLine set connected to device while module is initializing.	• None.
6 ***AUTO ZEROING*** message appears and waveform is “---”.	Module is performing self-maintenance.	• None.
7 $EtCO_2$ values are erratic.	FilterLine connection to device is loose.	• Twist FilterLine connector clockwise until firmly seated and can no longer be turned.
	A leak in the FilterLine set.	• Check for connection leaks and line leaks to patient, and correct, if necessary.
	A mechanically ventilated patient breathes spontaneously or patient is talking.	• No action required.

Table 3-4 Troubleshooting Tips for $EtCO_2$ (Continued)

Observation	Possible Cause	Corrective Action
8 $EtCO_2$ values are consistently higher than expected.	Physiological cause such as COPD.	• None.
	Inadequate ventilation.	• Check ventilator; increase ventilatory rate/bagging.
	Patient splinting during breathing.	• Supporting measures such as pain relief.
	Improper calibration.	• Contact qualified service personnel.
9 $EtCO_2$ values are consistently lower than expected.	FilterLine connection to device is loose.	• Twist FilterLine connector clockwise until firmly seated and can no longer be turned.
	Physiological cause.	• See Physiological factors in "CO2 Detection," page 3-21.
	Hyperventilation.	• Check ventilator; decrease ventilatory rate/bagging.
	Improper calibration.	• Contact qualified service personnel.
10 CO_2 waveform stays elevated for several seconds.	Expiration is prolonged due to bagging technique.	• Release bag reservoir completely with expiration. Observe that elevated baseline returns to normal level.
11 Sudden extreme increase in $EtCO_2$.	Fluid has entered CO_2 module.	• Contact qualified service personnel.
12 ***CHECK CO2*** message appears.	FilterLine blockage	• Disconnect and then reconnect the FilterLine set. • Change the FilterLine set.
	Exhaust port blockage	• Ensure exhaust port on the back of the device is not blocked. • Check exhaust tubing (if present) for blockages or kinks.
	RF equipment too close to defibrillator	• Separate RF equipment from defibrillator. See recommended separation distances in Table 4, page I-4.
13 **XXX** appears instead of $EtCO_2$ value.	CO_2 module malfunction.	• Turn device off and then on again. • If problem persists, contact qualified service personnel.
14 There is no $EtCO_2$ value and the CO_2 waveform is flat.	Measured CO_2 is less than 3.5 mmHg.	• See "CO2 Detection," page 3-21.

©2018 Physio-Control, Inc.

Table 3-4 Troubleshooting Tips for $EtCO_2$ (Continued)

Observation	Possible Cause	Corrective Action
15 CO_2 does not appear on screen when FilterLine is connected.	CodeManagement Module not properly connected to defibrillator.	• Contact qualified service personnel.
	Low battery voltage.	• Connect to AC power.
	Defective battery in CodeManagement Module.	• Contact qualified service personnel.
	CodeManagement Module malfunction.	• Contact qualified service personnel.

THERAPY

This section describes patient therapy.

General Therapy Warnings and Cautions	page 4-2
Therapy Electrode and Standard Paddle Placement	4-3
Automated External Defibrillation	4-5
Manual Defibrillation	4-14
Pediatric Defibrillation	4-21
Noninvasive Pacing	4-25

©2018 Physio-Control, Inc.

GENERAL THERAPY WARNINGS AND CAUTIONS

WARNINGS!

Shock hazard.

The defibrillator delivers up to 360 J of electrical energy. When discharging the defibrillator, do not touch the paddle electrode surfaces or disposable therapy electrodes.

Shock hazard.

If a person is touching the patient, bed, or any conductive material in contact with the patient during defibrillation, the delivered energy may be partially discharged through that person. Clear everyone away from contact with the patient, bed, and other conductive material before discharging the defibrillator.

Shock hazard.

Do not discharge the defibrillator into the open air. To remove an unwanted charge, change the energy selection, select disarm, or turn off the defibrillator.

Possible fire, burns, and ineffective energy delivery.

Do not discharge standard paddles on top of therapy electrodes or ECG electrodes. Do not allow standard paddles (or therapy electrodes) to touch each other, ECG electrodes, lead wires, dressings, transdermal patches, etc. Such contact can cause electrical arcing and patient skin burns during defibrillation and may divert defibrillating energy away from the heart muscle.

Possible defibrillator shutdown.

When operating on battery power, adhere to battery maintenance and replacement intervals discussed in the Battery Performance and Life section to prevent possible defibrillator shutdown. If the defibrillator shuts down without warning, or if a ***LOW BATTERY: CONNECT TO AC POWER*** message appears on the monitor screen, immediately connect the AC power cord to an outlet.

Possible skin burns.

During defibrillation or pacing, air pockets between the skin and therapy electrodes may cause patient skin burns. Apply therapy electrodes so that entire electrode adheres to skin. Do not reposition the electrodes once applied. If the position must be changed, remove and replace with new electrodes.

Possible skin burns and ineffective energy delivery.

Therapy electrodes that are dried out or damaged may cause electrical arcing and patient skin burns during defibrillation. Do not use therapy electrodes that have been removed from foil package for more than 24 hours. Do not use electrodes beyond expiration date. Check that electrode adhesive is intact and undamaged. Replace therapy electrodes after 50 shocks.

Possible interference with implanted electrical device.

Defibrillation may cause implanted devices to malfunction. Place standard paddles or therapy electrodes away from implanted devices if possible. Check implanted device function after defibrillation.

CAUTION!

Possible equipment damage.

Prior to using this defibrillator, disconnect all equipment from the patient that is not defibrillator-protected.

THERAPY ELECTRODE AND STANDARD PADDLE PLACEMENT

The following paragraphs describe therapy electrodes and standard paddles placement, including special placement situations.

Anterior-lateral Placement

Anterior-lateral placement allows for ECG monitoring, defibrillation, synchronized cardioversion, and noninvasive pacing.

1 Place either the ♥ or + therapy electrode, or apex paddle lateral to the patient's left nipple in the midaxillary line, with the center of the electrode in the midaxillary line, if possible. Refer to Figure 4-1.

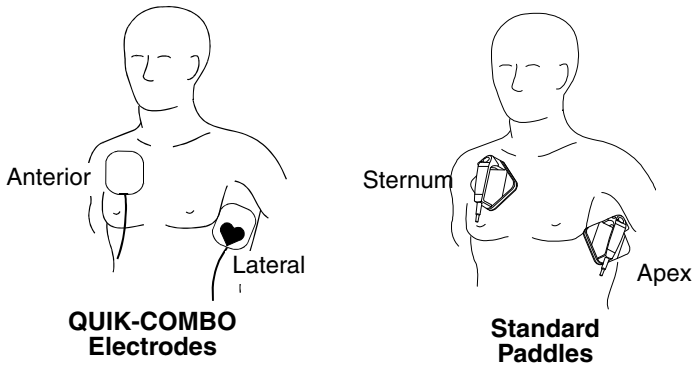

Figure 4-1 Anterior-lateral Placement

2 Place the other therapy electrode or sternum paddle on the patient’s upper right torso, lateral to the sternum, and below the clavicle as shown in Figure 4-1.

Anterior-posterior Placement

Anterior-posterior is an alternative position for noninvasive pacing, manual defibrillation, and synchronized cardioversion, but not for ECG monitoring or automated defibrillation. The ECG signal obtained through electrodes in this position is not a standard lead. (For pediatric applications, see "Pediatric Defibrillation," page 4-21.)

1 Place either the ♥ or + therapy electrode over the left precordium as shown in Figure 4-2. The upper edge of the electrode should be below the nipple. Avoid placement over the nipple, the diaphragm, or the bony prominence of the sternum if possible.

2 Place the other electrode behind the heart in the infrascapular area as shown in Figure 4-2. For patient comfort, place the cable connection away from the spine. Do not place the electrode over the bony prominences of the spine or scapula.

©2018 Physio-Control, Inc.

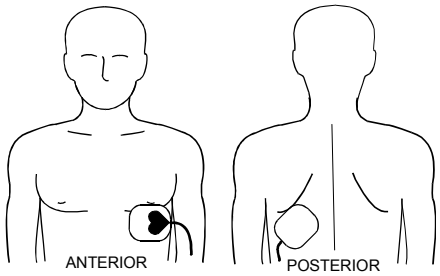

QUIK-COMBO Electrodes

Figure 4-2 Anterior-posterior Placement for Noninvasive Pacing or Defibrillation

Special Placement Situations

When placing therapy electrodes or standard paddles, be aware of the special requirements in the following possible situations.

Synchronized Cardioversion

Alternative anterior-posterior placements for cardioversion of supraventricular arrhythmias include:

- Place the ♥ or **+** therapy electrode over the left precordium and the other electrode on the patient's right posterior infrascapular area

  – or –
- Place the ♥ or **+** therapy electrode to the right of the sternum and the other electrode on the patient's posterior left infrascapular area.

Obese Patients or Patients with Large Breasts

Apply therapy electrodes or standard paddles to a flat area on the chest, if possible. If skin folds or breast tissue prevent good adhesion, it may be necessary to spread skin folds apart to create a flat surface.

Thin Patients

Follow the contour of the ribs and spaces when pressing the therapy electrodes onto the torso. This limits air spaces or gaps under the electrodes and promotes good skin contact.

Patients with Implanted Pacemakers

If possible, place therapy electrodes or standard paddles away from the internal pacemaker generator to help prevent damage to the pacemaker. Treat the patient like any other patient requiring care. When operating the defibrillator in AED mode, pacemaker pulses may prevent advisement of an appropriate shock, regardless of the patient's underlying rhythm.

Patients with Implanted Defibrillators

Apply therapy electrodes or standard paddles in the anterior-lateral position and treat this patient as any other patient requiring emergency care. If defibrillation is unsuccessful, it may be necessary to try alternate electrode placement (anterior-posterior) due to the insulative properties of implanted defibrillator electrodes.

AUTOMATED EXTERNAL DEFIBRILLATION

The following paragraphs include:

- AED Warnings
- AED Setup
- AED Procedure
- Special AED Setup Options
- Troubleshooting Tips for AED Mode
- Switching from AED to Manual Mode

AED Warnings

WARNING!

Possible misinterpretation of data.

Do not analyze while patient is moving or being transported. Motion artifact may affect the ECG signal resulting in an inappropriate ***SHOCK*** or ***NO SHOCK ADVISED*** message. Motion detection may delay analysis. Stop motion and stand clear of patient during analysis.

Pediatric patient safety risk.

In AED mode, the LIFEPAK 20e defibrillator/monitor is not intended for use on pediatric patients less than eight years old.

AED Setup

You can set up the LIFEPAK 20e defibrillator/monitor to turn on in AED mode before placing the defibrillator in use (refer to Section 8).

When illuminated, the AED mode LED indicates that the Continuous Patient Surveillance System (CPSS) is active. CPSS automatically monitors the patient ECG for a potentially shockable rhythm.

When the **ANALYZE** button is pressed, the Shock Advisory System is activated. Shock Advisory System is an ECG analysis system that advises the user if it detects a shockable or nonshockable rhythm.

©2018 Physio-Control, Inc.

The LIFEPAK 20e defibrillator/monitor can be setup to display the ECG waveform in AED mode or to not display a waveform. The operation in AED mode remains the same whether or not the ECG waveform is displayed.

When the ECG waveform is set to **ON** in the setup options (refer to Section 8), the ECG appears with all of the AED messages and prompts, as shown in the screen to the left.

When the ECG waveform is set to **OFF** in the setup options, the messages and prompts fill the screen as shown in the screen to the left.

When the CPR metronome is set to **ON** in the setup options (refer to Section 8), the CPR metronome icon is displayed and the metronome sounds automatically during CPR times. You cannot enable or disable the CPR metronome while in AED mode. Refer to "CPR Metronome," page 4-17, for more information.

AED Procedure

The following descriptions of voice prompts and messages are based on the factory default settings for AED mode. The default settings are consistent with 2015 American Heart Association (AHA) and European Resuscitation Council (ERC) guidelines. Changing the setup options may result in different AED behavior. Refer to Section 8 for setup option choices.

1 Verify that the patient is in cardiopulmonary arrest (unresponsive, not breathing normally, and showing no signs of circulation.)

2 Press **ON**.

3 Prepare the patient for electrode placement (refer to "Paddles Monitoring Procedure" on page 3-4).

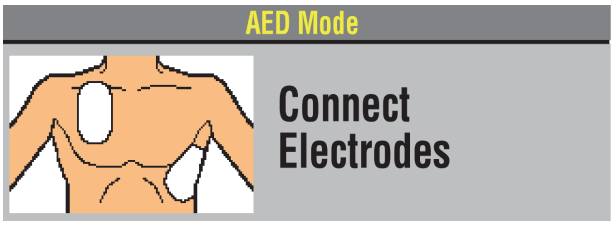

The ***CONNECT ELECTRODES*** message and voice prompt occur until the patient is connected to the AED.

4 Connect the therapy electrodes to the therapy cable, and confirm cable connection to the defibrillator.

5 Apply the electrodes to the patient's chest in the anterior-lateral position (refer to "Anterior-lateral Placement," page 4-3).

6 Press the **ANALYZE** button to initiate analysis. Stop CPR.

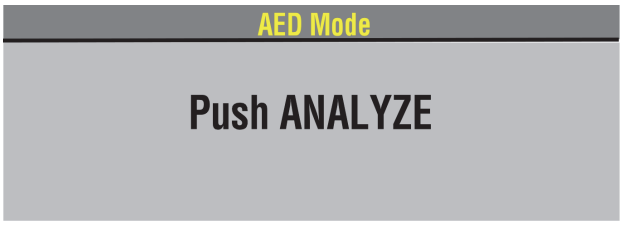

The ***PUSH ANALYZE*** message and voice prompt occur when the patient is properly connected to the AED. The ***PUSH ANALYZE*** message will stay on the screen and the analyze LED flashes until **ANALYZE** is pressed.

7 Follow screen messages and voice prompts provided by the AED.

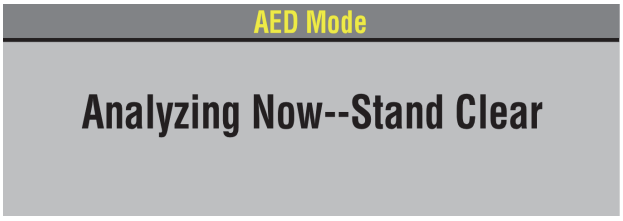

You will see and hear ***ANALYZING NOW, STAND CLEAR***. Do not touch or move the patient or therapy cable during analysis. ECG analysis requires approximately 6 to 9 seconds. The analyze LED illuminates during analysis.

The Shock Advisory System analyzes the patient's ECG and advises either ***SHOCK ADVISED*** or ***NO SHOCK ADVISED***.

Shock Advised

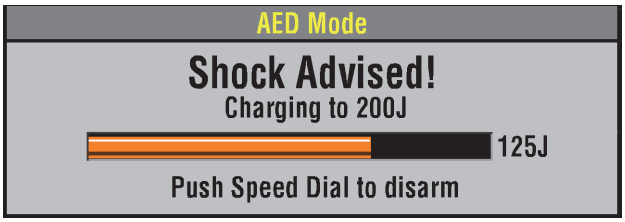

If the AED detects a shockable ECG rhythm, you will see and hear ***SHOCK ADVISED***. The AED begins charging to the setup joule setting for shock #1. A rising tone indicates that the AED is charging.

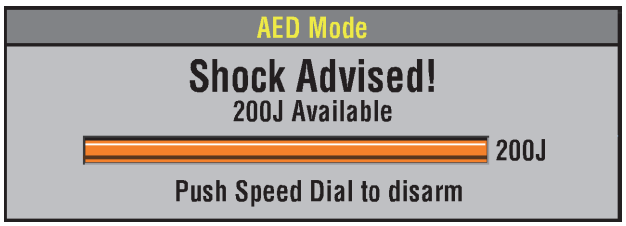

When charging is complete, the AED displays the available energy.

©2018 Physio-Control, Inc.

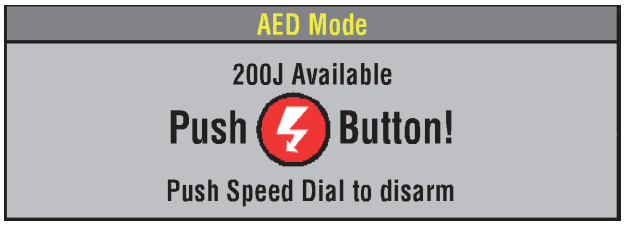

You will see and hear ***STAND CLEAR, PUSH TO SHOCK*** (⚡) followed by a "shock ready" tone. The shock LED flashes.

Clear everyone away from the patient, bed, or any equipment connected to the patient.

Press the ⚡ button to discharge the AED.

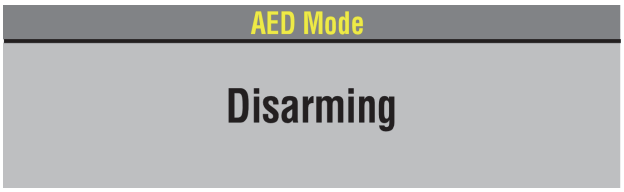

Note: If you do not press the ⚡ button within 60 seconds, the AED disarms the shock button, and the ***DISARMING*** message appears.

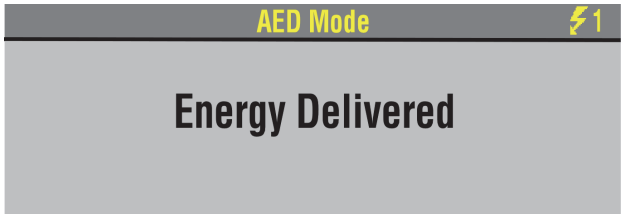

When the ⚡ button is pressed you will see the message ***ENERGY DELIVERED*** indicating energy transfer was completed.

When energy transfer is complete the shock counter increases by 1. This will continue to increase incrementally with every energy transfer.

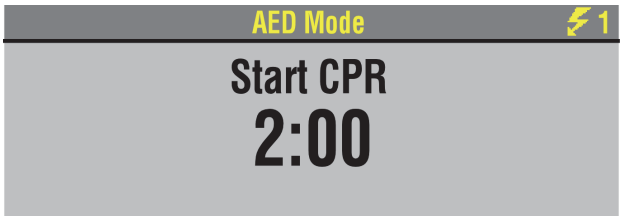

After a shock is delivered you will see and hear ***START CPR***. A countdown timer (min:sec format) continues for the duration specified in the **CPR TIME 1** setup option.

Note: If the CPR metronome is set to be on during CPR times, you will hear audible "tocks" and ventilation prompts or tones.

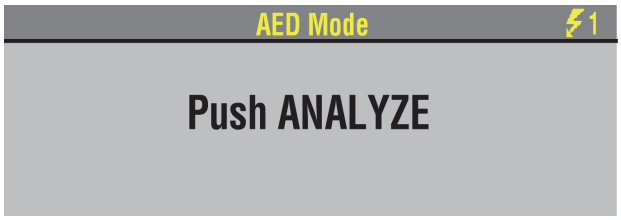

When the CPR countdown time ends, you will see and hear ***PUSH ANALYZE***. This message stays on the screen and the voice prompt will repeat every 20 seconds until you press the **ANALYZE** button.

No Shock Advised

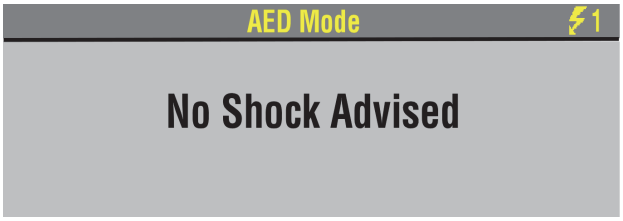

If the AED detects a nonshockable rhythm, you will see and hear ***NO SHOCK ADVISED***. The AED will not charge, and a shock can not be delivered.

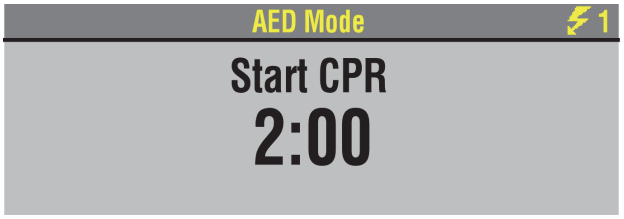

After a ***NO SHOCK ADVISED*** prompt you will see and hear ***START CPR***. A countdown timer (min:sec format) continues for the duration specified in the **CPR TIME 2** setup option. (Refer to Section 8).

Note: If the CPR metronome is set to be on during CPR times, you will hear audible “tocks” and ventilation prompts or tones.

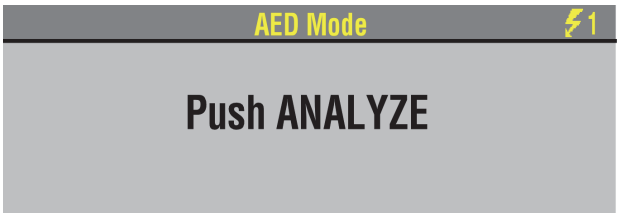

When the CPR countdown time ends, you will see and hear ***PUSH ANALYZE***. This message stays on the screen and the voice prompt will repeat every 20 seconds until you press the **ANALYZE** button.

Proper Connection

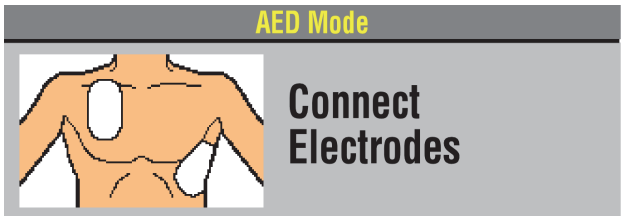

If therapy electrodes are not connected to the therapy cable or not placed on the patient’s chest, the ***CONNECT ELECTRODES*** message and voice prompt occur until the patient is connected to the AED.

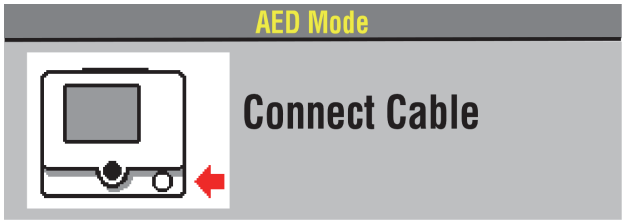

If the therapy cable is not connected to the defibrillator, you will see the ***CONNECT CABLE*** message until the cable is connected.

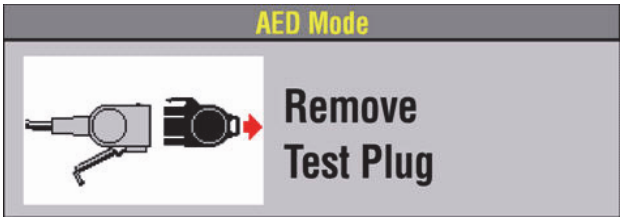

If the test plug is connected to the therapy cable when analysis is initiated, the ***REMOVE TEST PLUG*** message and voice prompt occurs.

©2018 Physio-Control, Inc.

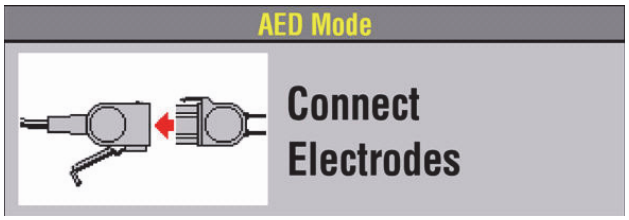

After you remove the test plug from the therapy cable, the message and voice prompt ***CONNECT ELECTRODES*** occurs until the patient is connected to the AED.

Motion Detected

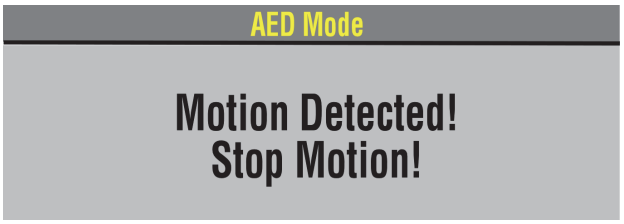

If motion is detected during the ECG analysis, you will see and hear ***MOTION DETECTED, STOP MOTION*** followed by a warning tone. Analysis is inhibited up to 10 seconds. After 10 seconds, even if motion is still present, the analysis proceeds to completion. Refer to Table 4-1 for possible motion causes and suggested solutions.

Continuous Patient Surveillance System

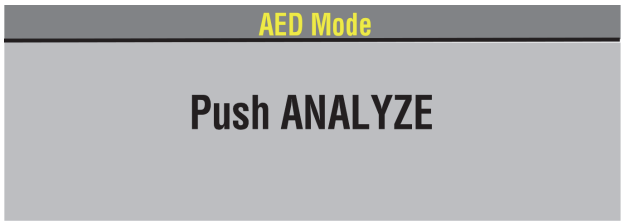

When the device is not analyzing the ECG and is not in CPR Time, the Continuous Patient Surveillance System (CPSS) actively monitors the ECG for a potentially shockable rhythm.

If a shockable rhythm is detected, you will see and hear ***PUSH ANALYZE***.

You should:

1. Confirm the patient is unconscious, pulseless, and not breathing normally.
2. Confirm no motion is present. Stop CPR.
3. Press **ANALYZE**.

The AED begins to analyze the patient's ECG.

For information about changing the defibrillation mode, refer to Section 8.

Special AED Setup Options

The following descriptions of voice prompts and messages explain special cprMAX technology setup options (refer to Appendix G).

Initial CPR - CPR First

When the **INITIAL CPR** option is set to **CPR FIRST**, you will be prompted to ***START CPR*** immediately after the AED is turned on.

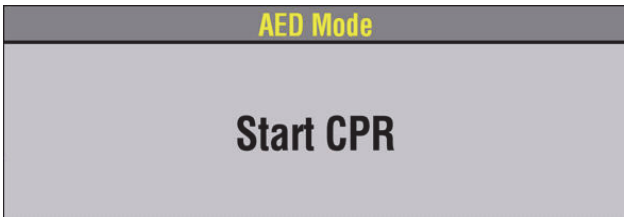

You will see and hear ***START CPR***.

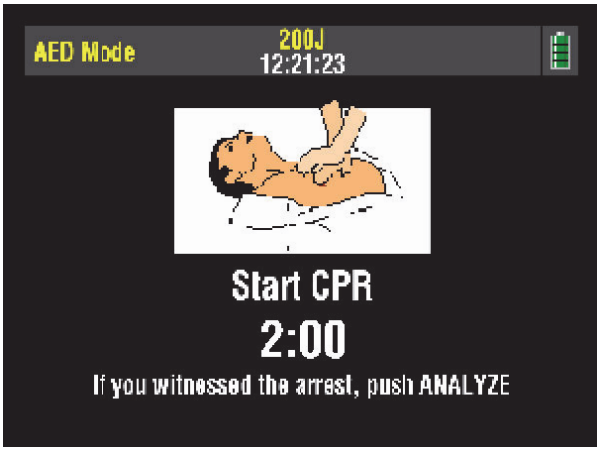

After 3 seconds, a countdown timer continues for the duration specified in the initial CPR period and you will see and hear ***IF YOU WITNESSED THE ARREST, PUSH ANALYZE***. This provides an opportunity to end the initial CPR early and proceed to analysis.

- If you did witness the arrest, you should press **ANALYZE** and proceed directly to analysis. This will end the CPR period and you will see and hear ***ANALYZING NOW, STAND CLEAR***.

  Note: The decision to end CPR early is based on your hospital protocol.
- If you did not witness the arrest, you should perform CPR and not press **ANALYZE**. The **INITIAL CPR** countdown timer continues for the duration specified in the **INITIAL CPR TIME** setup option, for example, 90 seconds. When **INITIAL CPR TIME** ends, you will see and hear ***PUSH ANALYZE***.

Initial CPR - Analyze First

When the **INITIAL CPR** option is set to **ANALYZE FIRST**, you will be prompted to perform analysis after the AED is turned on. CPR is prompted after the AED completes the analysis.

If the electrodes are not attached to the patient, you will see and hear ***CONNECT ELECTRODES*** before you are prompted to perform analysis.

No Shock Advised

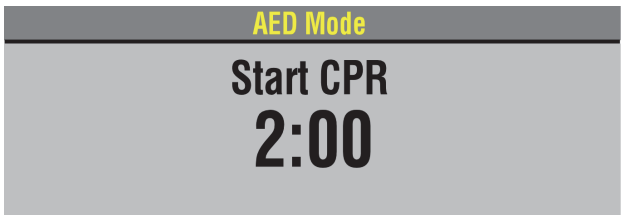

If the AED detects a nonshockable rhythm, you will be prompted to ***START CPR.*** A countdown timer (min:sec format) continues for the duration specified in the **INITIAL CPR TIME** setup option. (Refer to Section 8).

When initial CPR time ends, you will see and hear ***NO SHOCK ADVISED*** followed by ***PUSH ANALYZE***.

©2018 Physio-Control, Inc.

Shock Advised

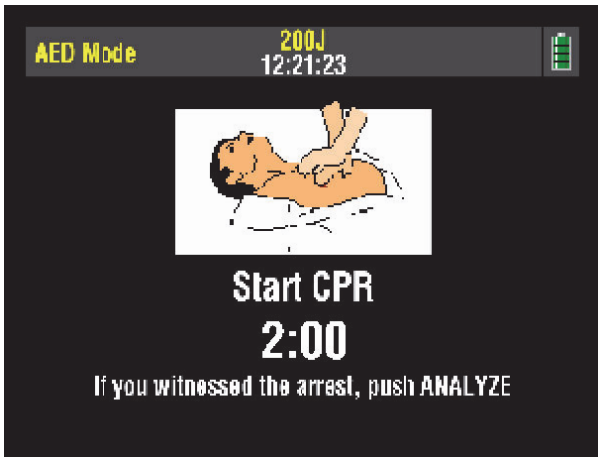

If the AED detects a shockable rhythm, you will see and hear ***START CPR*** followed by ***IF YOU WITNESSED THE ARREST, PUSH ANALYZE***. This provides an opportunity to end the initial CPR early and proceed directly to delivering a shock.

- If you did witness the arrest, you should press **ANALYZE** and proceed directly to shock. This will end the CPR period and you will see and hear ***SHOCK ADVISED*** and ***STAND CLEAR, PUSH TO SHOCK*** (⚡). Proceed according to your training with the AED for delivering the shock.

  Note: The decision to end CPR early is based on your hospital protocol.
- If you did not witness the arrest, you should perform CPR and not press **ANALYZE**. The **INITIAL CPR** countdown timer continues for the duration specified in the **INITIAL CPR TIME** setup option, for example, 90 seconds. When initial CPR time ends, you will see and hear ***SHOCK ADVISED***. Proceed according to your training with the AED for delivering a shock.

PreShock CPR Time

When **PRESHOCK CPR** time is set to 15 seconds or more, you are prompted to start CPR immediately after a shockable rhythm is detected, before the shock is delivered.

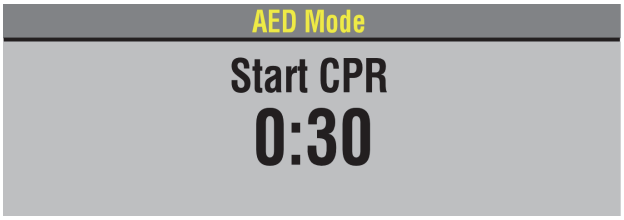

After analysis is complete, you will see and hear ***START CPR***. A countdown timer (min:sec format) continues for the duration specified in the **PRESHOCK CPR** time setup option (for example, 15 seconds).

When CPR time ends you will then see and hear ***SHOCK ADVISED***. Proceed according to your training with the AED for delivering a shock.

The **SHOCK** button is disabled during the preshock CPR interval to avoid accidental shock delivery while the defibrillator is charged and a responder is performing CPR.

Troubleshooting Tips for AED Mode

Table 4-1 Troubleshooting Tips for AED Mode

Observation	Possible Cause	Corrective Action
1 ***CONNECT ELECTRODES*** message appears.	Inadequate connection to defibrillator.	• Check for electrode connection.
	Electrodes do not adhere properly to the patient.	• Press electrodes firmly on patient's skin. • Clean, shave, and dry the patient's skin as recommended.
	Electrodes are dry, damaged, or out of date.	• Replace the electrodes.
2 ***REMOVE TEST PLUG*** message appears.	Test plug connected to therapy cable.	• Disconnect test plug from therapy cable. • Connect electrodes to therapy cable.
3 ***MOTION DETECTED*** and ***STOP MOTION*** messages appear during analysis.	Patient movement.	• Stop CPR during analysis. • When patient is being manually ventilated, press **ANALYZE** after complete exhalation**.** • Move patient to stable location when possible.
	Patient movement because of agonal respirations.	• Press **ANALYZE** immediately after exhalation or wait until agonal respirations are slower or absent.
	Electrical/radio frequency interference.	• Move hand-held communication devices or other suspected devices away from the defibrillator when possible.
4 ***DISARMING*** message appears.	Therapy cable or electrodes disconnected from AED or patient.	• Confirm secure connection and press **ANALYZE**.
	Shock button not pressed within 60 seconds or door is open.	• Press **ANALYZE** again. • Press **SHOCK** immediately when directed.
5 Voice prompts sound faint or distorted.	Low battery power.	• Connect to AC power.
6 ***LOW IMPEDANCE–RECHARGING*** message appears.	Patient impedance <15 ohms detected.	• No action required.
7 Metronome not heard.	Metronome only sounds during CPR time.	• No action required.
	Metronome not set to be **ON** in AED mode.	• Refer to "AED Mode Setup Menu," page 8-7.

©2018 Physio-Control, Inc.

Switching from AED to Manual Mode

If the front console door is closed, you can enter manual mode by pressing the **MANUAL** button located in the lower left corner of the door. This opens the door and automatically takes the defibrillator out of AED mode, allowing you to access manual mode defibrillation and pacing.

Note: Closing the door again will not place the defibrillator in AED mode. Pressing **ANALYZE** while the defibrillator is in manual mode will place the defibrillator in AED mode.

If the door is not installed, or to manually switch to manual mode, press one of the following keys: **ENERGY SELECT, CHARGE, PACER, LEAD.**

Depending on the defibrillator's configuration, continue to manual mode as follows:

- **Direct**. No restrictions to manual mode - access is immediate.
- **Confirm**. A confirmation overlay appears:

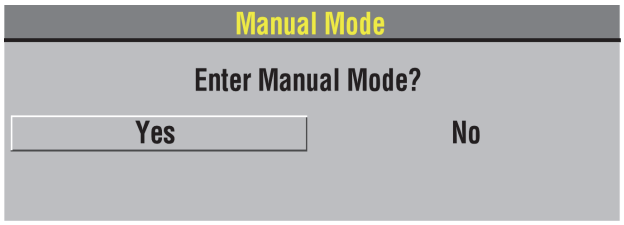

Select **YES** to change to manual mode.

- **Passcode**. A passcode overlay appears:

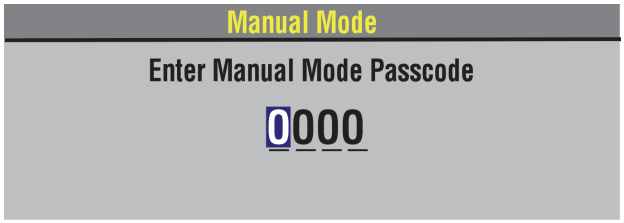

Enter the passcode to change to manual mode.

Refer to Section 8 for information about changing the defibrillation mode.

Note: If the CPR metronome is sounding in AED mode, it continues sounding when the device switches to manual mode. If the CPR metronome is silent in AED mode, it continues to be silent in manual mode. To turn the metronome on or off while in manual mode, use the Speed Dial to select the **CPR METRONOME** icon. Refer to "CPR Metronome," page 4-17, for more information.

MANUAL DEFIBRILLATION

The following paragraphs describe:

- Manual Defibrillation Warnings
- Impedance
- Defibrillation Procedure
- CPR Metronome
- Synchronized Cardioversion Procedure
- Remote Synchronization Procedure

Manual Defibrillation Warnings

WARNINGS!

Possible fire, burns, and ineffective energy delivery.

Precordial lead electrodes and lead wires may interfere with the placement of standard paddles or therapy electrodes. Before defibrillation, remove any interfering precordial lead electrodes and lead wires.

Shock hazard.

Conductive gel (wet or dry) on the paddle handles can allow the electrical energy to discharge through the operator during defibrillation. Completely clean the paddle electrode surfaces, handles, and storage area after defibrillation.

Possible patient skin burns.

During defibrillation, air pockets between the skin and standard paddles can cause patient skin burns. Completely cover paddle electrode surfaces with fresh conductive gel and apply 11.3 kg (25 lb) of pressure per paddle during discharge.

Possible paddle damage and patient skin burns.

Discharging the defibrillator with the standard paddle surfaces shorted together can pit or damage the paddle electrode surface. Pitted or damaged paddle surfaces may cause patient skin burns during defibrillation. Discharge the defibrillator only as described in these operating instructions.

Possible burns and ineffective energy delivery.

A gel pathway on the skin between the standard paddles will cause defibrillating energy to arc between paddles and divert energy away from the heart muscle. Do not allow conductive gel (wet or dry) to become continuous between paddle sites.

Possible damage to defibrillator and defibrillator shutdown.

When two defibrillators are used to deliver energy to the same patient at the same time, one or both defibrillators may be damaged and shutdown may occur.

To use the LIFEPAK 20e defibrillator/monitor primarily as a manual defibrillator, configure the defibrillator before placing the defibrillator in use. To configure the defibrillator, refer to Section 8.

Impedance

LIFEPAK biphasic defibrillators measure the patient's transthoracic impedance and automatically adjust the defibrillation waveform voltage and current duration to meet the needs of the individual patient.

Impedance is measured whenever the defibrillator is charged. To ensure correct patient impedance readings, you should always charge the defibrillator when the standard paddles (hard paddles) or QUIK-COMBO electrodes are in contact with the patient's chest.

If the standard paddles are in the paddle wells or touching face to face (shorted paddles) when the defibrillator is charged, the defibrillator limits the available energy to 79 joules This prevents damage to the internal circuits, in the event the energy is discharged while the hard paddles are still in the paddle wells or shorted together. If the defibrillator is charged to 80 joules or more and energy is discharged when the hard paddles are seated in the paddle wells, the display indicates the selected energy available and the automatic printout annotates time, date and Shock 1 79 J.

If the defibrillator is charged to 80 joules or more with paddles in the paddle wells, and then the paddles are removed and placed on a patient, the defibrillator continues charging to the selected

©2018 Physio-Control, Inc.

energy and defibrillation may be completed as usual. When charging the defibrillator with the paddles on the patient's chest, the defibrillator automatically adjusts the waveform voltage and current duration based on the patient's impedance. It is important to understand that this automatic adjustment does not occur when the defibrillator is charged with the paddles seated in the paddle wells.

When the paddles or QUIK-COMBO electrodes are on the patient's chest when the defibrillator is charged and the defibrillator measures an impedance of 15 ohms or less, the defibrillator disarms the capacitor and automatically recharges to a lower energy setting. When this condition occurs, the ***LOW IMPEDANCE-RECHARGING*** message appears on the display. When charging is complete, defibrillation may be completed as usual.

Defibrillation Procedure

You can configure the LIFEPAK 20e defibrillator/monitor to automatically sequence energy levels. Refer to "Manual Mode Setup Menu," page 8-5.

1 Press **ON**.
2 Identify the electrode or paddle sites on the patient. Use either the anterior-lateral or anterior-posterior position as described on page 4-3.
3 Prepare the patient's skin for electrode application:
   - If possible, place the patient on a firm surface away from standing water.
   - Remove clothing from the patient's upper torso.
   - Remove excessive hair from the electrode sites; if shaving is necessary, avoid cutting the skin.
   - Clean the skin and dry it briskly with a towel or gauze.
   - Do not apply alcohol, tincture of benzoin, or antiperspirant to the skin.
4 Connect the therapy electrodes to the therapy cable, and confirm cable connection to the defibrillator.

   Note: When in **PADDLES** lead, if the ***REMOVE TEST PLUG*** message appears, disconnect test plug and connect therapy electrodes to QUIK-COMBO therapy cable.
5 Apply therapy electrodes to the patient in anterior-lateral or anterior-posterior position. If using standard paddles, apply conductive gel to the paddles and place paddles on the patient's chest.
6 Press **ENERGY SELECT**.
7 Press **CHARGE.** While the defibrillator is charging, a charging bar appears and a ramping tone sounds, indicating the charging energy level. When the defibrillator is fully charged, an overlay appears (refer to "Defibrillation Procedure," page 4-16).
8 Make certain all personnel, including the operator, stand clear of the patient, bed, and any equipment connected to the patient.
9 Confirm ECG rhythms and available energy.
10 Press the **SHOCK** button on the defibrillator or the **SHOCK** buttons on the standard paddles to discharge energy to the patient. For standard paddles, apply firm pressure with both paddles to the patient's chest, and press both paddle buttons simultaneously to discharge energy to the patient. For safety reasons, the **SHOCK** button on the defibrillator front panel is disabled when using standard paddles.

    Note: To disarm (cancel the charge), press the Speed Dial. The defibrillator disarms automatically if shock buttons are not pressed within 60 seconds, or if you change the energy selection after charging begins. Press **CHARGE** to restart charging.

11 Observe the patient and the ECG rhythm. If an additional shock is necessary, repeat the procedure beginning at Step 6.

Note: If the ***ABNORMAL ENERGY DELIVERY*** message appears and the shock is not effective, increase energy, if necessary, and repeat shock. (Also refer to page 4-24.)

CPR Metronome

When CPR is required during cardiac arrest, the CPR metronome provides audible prompts that guide the user to deliver CPR with proper timing in accordance with the 2015 American Heart Association and European Resuscitation Council CPR guidelines.

CPR Metronome Warnings

WARNING!

CPR Delivered When Not Needed.

The metronome sounds do not indicate information regarding the patient's condition. Because patient status can change in a short time, the patient should be assessed at all times. Do not perform CPR on a patient who is responsive or is breathing normally.

Note: The CPR metronome is a tool to be used as a timing aid during CPR. Assess the patient at all times and provide CPR only when indicated. Provide CPR according to your training and protocols.

How the CPR Metronome Works

The metronome provides audible "tocks" at a rate of 100/minute to guide the rescuer in performing chest compressions. The metronome also provides audible ventilation prompts (either a tone or verbal "ventilate") to cue the rescuer when to provide ventilations. The metronome prompts the rescuer to perform CPR at the selected compression to ventilation (C:V) ratio.

Age-Airway Considerations

The default C:V ratio for the metronome (in both AED and Manual modes) is Adult - No Airway (30:2) because most patients in cardiac arrest are adults who have an initially unsecured airway. In Manual mode, the user can choose the most appropriate C:V ratio based on the patient's age and current airway status. The Age-Airway selection determines the C:V ratio of the metronome sounds. The default C:V ratios are shown in Table 4-2.

Table 4-2 Default Age-Airway C:V Ratios in Manual Mode

Age-Airway	C:V Ratio
Adult - No Airway*	30:2
Adult - Airway**	10:1
Youth - No Airway***	15:2
Youth - Airway	10:1

* No Airway = No artificial airway in place
** Airway = Advanced artificial airway in place
*** Youth = Pre-pubescent child

Note: The compression-to-ventilation ratio selections can be set up according to local medical protocols. For more information, refer to "CPR Metronome Setup Menu," page 8-8.

©2018 Physio-Control, Inc.

Activating and Deactivating the Metronome

To activate the CPR metronome in Manual mode:

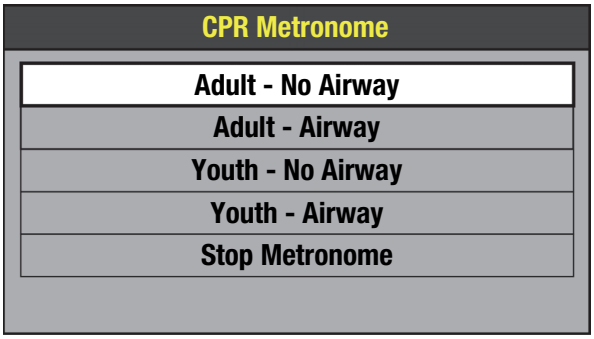

1 Use the Speed Dial to select the **CPR METRONOME** icon. The CPR Metronome menu appears and the metronome is activated using the Adult-No Airway default setting.
2 Use the Speed Dial to highlight and select the desired Age-Airway setting.

When the metronome is on, a message appears in the message area that indicates the current Age-Airway selection.

Note: The CPR metronome cannot be activated during noninvasive pacing.

Note: If the VF/VT alarm is on, it is suspended when the metronome is on to prevent false VF/VT alarms. If other vital sign alarms activate when the metronome is on, the visual indicators occur, but the alarm tone is suppressed until the metronome is deactivated.

The metronome provides “tocks” and ventilation prompts continuously until it is deactivated. To stop the metronome, select **STOP METRONOME** in the CPR Metronome menu. An event is recorded in the CODE SUMMARY Event Log when CPR metronome is turned ON or OFF and when the Age-Airway setting is changed. To adjust the volume of the metronome, press **OPTIONS**, select **ALARM VOLUME**, and change the **VOLUME**.

Note: If all Age-Airway selections are set to the same C:V ratio (for example, Adult - No Airway, Adult - Airway, Youth - No Airway, and Youth - Airway all set to 10:1), the CPR metronome always provides “tocks” and ventilation prompts at the set ratio for both AED mode and Manual mode. In this situation, the CPR Metronome menu does not appear when the **CPR METRONOME** icon is selected during use—selecting the **CPR METRONOME** icon only activates and deactivates the metronome at the fixed C:V ratio.

Synchronized Cardioversion Procedure

Note: The LIFEPAK 20e defibrillator/monitor can be configured to remain in synchronous mode or to return to asynchronous mode after discharge. It is important that you know how your defibrillator is configured. Refer to "Manual Mode Setup Menu," page 8-5.

1 Press **ON**.
2 Attach patient ECG cable and ECG electrodes as described previously on page 3-5.
3 Select lead II or the lead with greatest QRS complex amplitude (positive or negative).

   Note: To monitor the ECG through therapy electrodes, place the electrodes in the anterior-lateral position and select **PADDLES** lead.

WARNING!

Possible lethal arrhythmia.

Ventricular fibrillation may be induced with improper synchronization. DO NOT use the ECG from another monitor (slaving) to synchronize the LIFEPAK 20e defibrillator/monitor discharge. Always monitor the patient's ECG directly through the ECG cable, therapy cable or use the remote synchronization procedure. Confirm proper placement of the sense markers on the ECG.

4 Press **SYNC**. Confirm the sync LED blinks with each detected QRS complex.

Note: Press **SYNC** again to deactivate synchronous mode.

5 Observe the ECG rhythm. Confirm that a triangle sense marker appears near the middle of each QRS complex. If the sense markers do not appear or are displayed in the wrong locations (for example, on the T-wave), select another lead. (It is normal for the sense marker location to vary slightly on each QRS complex.)

6 Prepare the patient's skin for therapy electrode application as described in Step 3 of Defibrillation Procedure, page 4-16.

7 Connect the therapy electrodes to the therapy cable, and confirm cable connection to the defibrillator.

8 Apply therapy electrodes to the patient in the anterior-lateral or anterior-posterior position. If using standard paddles, apply conductive gel to the paddles and place paddles on the patient's chest.

9 Press **ENERGY SELECT**.

10 Press **CHARGE**.

Note: If the ***REMOVE TEST PLUG*** message appears, disconnect test plug and connect therapy electrodes to QUIK-COMBO therapy cable and press **CHARGE**.

11 Make certain all personnel, including operator, stand clear of the patient, bed, and any equipment connected to the patient.

12 Confirm ECG rhythm. Confirm available energy.

13 Press and **hold** the **SHOCK** button on the defibrillator until the ***ENERGY DELIVERED*** message appears on the screen. For standard paddles, press and hold both **SHOCK** buttons on the paddles simultaneously until the ***ENERGY DELIVERED*** message appears on the screen. Release buttons. For safety reasons, the **SHOCK** button on the defibrillator is disabled when using standard paddles.

Note: To disarm (cancel a charge), press the Speed Dial. The defibrillator disarms automatically if shock buttons are not pressed within 60 seconds, or if you change the energy selection after charging begins. Press **CHARGE** to restart charging.

14 Observe patient and ECG rhythm. Repeat procedure from Step 4, if necessary.

©2018 Physio-Control, Inc.

Remote Synchronization Procedure

WARNINGS!

Possible lethal arrhythmia.

Ventricular fibrillation may be induced with improper synchronization. The hospital's biomedical engineering staff should perform synchronization delay measurements on the system, as a whole, to ensure that the 60 ms limit for synchronization delay is not exceeded, per requirements as specified in IEC 60601-2-4. Always confirm proper placement of the sense markers on the ECG.

Possible monitor incompatibility

If the R-wave synchronization markers do not appear to be nearly simultaneous with the R-waves on the remote monitor display or are not present, do not proceed with synchronized cardioversion.

The LIFEPAK 20e defibrillator/monitor can be configured to receive an ECG source from a remote monitor (such as a bedside ECG monitoring system) by means of the ECG/Sync connector on the back of the defibrillator/monitor. Refer to "Manual Mode Setup Menu," page 8-5. The remote monitor must have a sync out connector and a cable must be provided to make this connection. Refer to the *LIFEPAK 20e Defibrillator/Monitor Service Manual* for more details.

Note: The LIFEPAK 20e defibrillator/monitor can be configured to remain in synchronous mode or to return to asynchronous mode after discharge. It is important that you know how your defibrillator is configured. Refer to "Manual Mode Setup Menu," page 8-5.

To perform the synchronized cardioversion using a remote monitoring ECG source:

1 Ensure defibrillator/monitor is connected to AC power.
2 Connect the sync cable to the defibrillator/monitor ECG/Sync connector and the remote monitor.
3 Press **ON**.
4 Attach the ECG cable from the remote monitor to the patient.
5 Press **SYNC** on the defibrillator/monitor.
6 Select **REMOTE SYNC** from the menu.

   Note: The screen on the defibrillator/monitor will display the message ***REMOTE SYNC*** in place of any waveforms.
7 Observe the ECG rhythm on the remote monitor. Confirm that a sense marker appears above each QRS complex.
8 Confirm that the sync LED on the defibrillator/monitor blinks with each detected QRS on the remote monitor.
9 Follow Step 6 through Step 14 from "Synchronized Cardioversion Procedure" provided previously.

PEDIATRIC DEFIBRILLATION

Pediatric paddles are part of the standard paddle set (refer to page 5-6).

Pediatric Paddle Placement

Pediatric paddles should be used for patients weighing less than 10 kg (22 lb) or for patients whose chest size cannot accommodate the adult therapy electrodes.

Adult paddles are recommended if the paddles will fit completely on the patient's chest. Allow at least 2.5 cm (1 in.) of space between the paddles.

For neonates with very small chests, pediatric paddles may be too large to place in the anterior-lateral position. In this situation, place paddles in the anterior-posterior position. Holding the paddles against the chest and back will support the patient on his/her side.

Do not use the pediatric paddles on adults or older children. Delivery of recommended adult energies through this relatively small electrode surface increases the possibility of skin burns.

Anterior-Lateral

The following is the standard pediatric paddle placement (refer to Figure 4-3):

- Sternum paddle to the patient's right upper torso, lateral to the sternum and below the clavicle.
- Apex paddle lateral to the patient's left nipple in the midaxillary line, with the center of the paddle in the midaxillary line if possible.

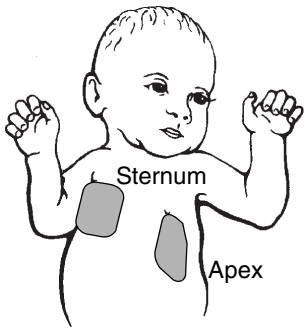

Figure 4-3 Anterior-lateral Paddle Position

Anterior-Posterior

Place the sternum paddle anteriorly over the left precordium and the apex paddle posteriorly behind the heart in the infrascapular area (refer to Figure 4-4)

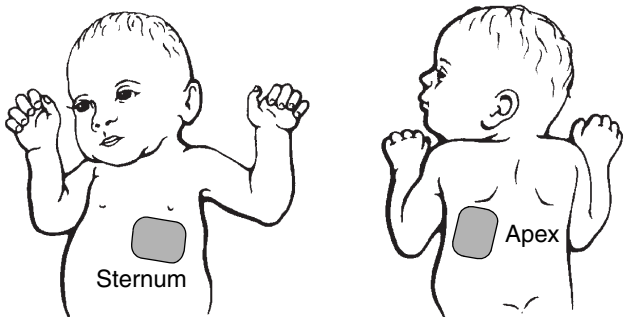

Figure 4-4 Anterior-posterior Paddle Position

©2018 Physio-Control, Inc.

Defibrillation Procedure

To defibrillate the patient:

1 Press **ON** to turn on the defibrillator.
2 To access the pediatric paddles, slide the adult paddle forward until it releases.
3 Apply defibrillation gel to the pediatric paddle electrode surfaces.
4 Select the appropriate energy for the weight of the child according to American Heart Association recommendations (or equivalent guidelines).
5 Place the paddles firmly on the patient's chest.
6 Press **CHARGE**.
7 Make certain all personnel, including the operator, are clear of the patient, the bed, and any equipment connected to the patient.
8 Confirm ECG rhythm and available energy.
9 Press the **SHOCK** button on the defibrillator or the **SHOCK** buttons on the standard paddles to discharge energy to the patient. For standard paddles, apply firm pressure with both paddles to the patient's chest, and press both paddle buttons simultaneously to discharge energy to the patient. For safety reasons, the **SHOCK** button on the defibrillator front panel is disabled when using standard paddles.

   Note: To disarm (cancel the charge), press the Speed Dial. The defibrillator disarms automatically if shock buttons are not pressed within 60 seconds, or if you change the energy selection after charging begins. Press **CHARGE** to restart charging.

Note: If the ***ABNORMAL ENERGY DELIVERY*** message appears and the shock is not effective, increase energy, if necessary, and repeat shock. (Also refer to page 4-24.)

Troubleshooting Tips for Defibrillation and Synchronized Cardioversion

Table 4-3 Troubleshooting Tips for Defibrillation and Synchronized Cardioversion

Observation	Possible Cause	Corrective Action
1 Charge time to 360 J exceeds 10 seconds.	Battery low.	• Connect to AC power. • Defibrillator operating in low temperature environment (<25°C or 77°F).
2 Energy not delivered to patient when **SHOCK** button(s) are pressed.	Defibrillator in sync mode and QRS complexes are not detected.	• Change ECG lead for optimum sensing QRS or deactivate **SYNC**.
	Defibrillator in sync mode; **SHOCK** button(s) not pressed and held until next detected QRS.	• Hold shock buttons until discharge occurs or next detected QRS.
	SHOCK button(s) pressed before full charge reached.	• Wait for tone and message indicating full charge.
	Sixty seconds elapsed before **SHOCK** button(s) pressed after full charge. Energy internally removed.	• Press **SHOCK** button(s) within 60 seconds of full charge.
	ENERGY selection changed.	• Press **CHARGE** again.
	Test plug connected to QUIK-COMBO therapy cable.	• Disconnect test plug and connect electrodes to QUIK-COMBO therapy cable.

Table 4-3 Troubleshooting Tips for Defibrillation and Synchronized Cardioversion (Continued)

Observation	Possible Cause	Corrective Action
3 ***REMOVE TEST PLUG*** message appears.	Test plug connected to QUIK-COMBO therapy cable.	• Disconnect test plug and connect electrodes to QUIK-COMBO therapy cable.
	Radio frequency interference during ablation procedure.	• Monitor patient using ECG cable and therapy cable as follows: 1 Connect ECG electrodes to patient and ECG cable. 2 Confirm device displays patient's ECG waveform in Channel 1 in Lead I, II, or III. 3 Connect Therapy electrodes to patient and Therapy cable. 4 Confirm device displays patient's ECG waveform in Channel 2 in Paddles lead.
4 ***CONNECT CABLE*** or ***ENERGY NOT DELIVERED*** message appears.	Therapy cable became disconnected and energy was removed internally.	• Reconnect cable and press **CHARGE** again.
5 ***ENERGY FAULT*** message appears (selected and available energy).	Defibrillator is out of calibration.	• May still transfer energy. • Contact qualified service personnel.
6 ***DISARMING*** message appears.	Discharge button not pressed within 60 seconds after charge complete.	• Recharge the defibrillator if desired.
	Energy selected after charge complete.	• Recharge the defibrillator.
	Therapy cable disconnects.	• Reconnect electrode/cable.
7 Patient didn't jump (no muscle response) during defibrillator discharge.	Patient muscle response is variable and depends on patient condition. Lack of visible response to defibrillation does not necessarily mean the discharge did not occur.	• No action needed.
	Therapy cable not connected to therapy electrodes.	• Connect electrodes to therapy cable.

©2018 Physio-Control, Inc.

Table 4-3 Troubleshooting Tips for Defibrillation and Synchronized Cardioversion (Continued)

Observation	Possible Cause	Corrective Action
8 ***ABNORMAL ENERGY DELIVERY*** message appears and Shock XJ Abnormal annotated on printout.	Open air discharge with standard paddles.	• Press paddles firmly on patient's chest when discharging. • Perform test discharges with defibrillation checker.
	Discharge occurs with standard paddles shorted together.	• Refer to warning, page 4-15.
	Patient impedance out of range.	• Increase energy and/or repeat discharges as needed. • Consider replacing disposable therapy electrodes with new.
9 ***CONNECT ELECTRODES*** message appears.	Inadequate connection to defibrillator.	• Check for electrode connection.
	Electrodes do not adhere properly to the patient.	• Press electrodes firmly on patient's skin. • Clean, shave, and dry the patient's skin as recommended.
	Electrodes are dry, damaged, or out of date.	• Replace the electrodes.
10 ***CONNECT TO AC POWER*** message appears.	Remote sync is selected and the defibrillator is not connected to AC power.	• Connect to AC power. • Press **SYNC** to turn off remote sync.
11 ***CONNECT SYNC CABLE TO REMOTE MONITOR*** message appears.	Remote sync is selected and the defibrillator is not connected to the remote monitor.	• Connect to remote monitor. • Press **SYNC** to turn off remote synchronization.
12 ***LOW IMPEDANCE–RECHARGING*** message appears.	Patient impedance of <15 ohms detected.	• No action required.
13 ***SEARCHING FOR SIGNAL*** message appears.	Remote sync is selected and the defibrillator is qualifying the input signal.	• No action required.

NONINVASIVE PACING

The LIFEPAK 20e defibrillator/monitor provides noninvasive pacing using QUIK-COMBO electrodes.

The following paragraphs include:

- Noninvasive Pacing Warnings
- Demand and Nondemand Pacing
- Noninvasive Pacing Procedure
- Troubleshooting Tips for Noninvasive Pacing

For information about noninvasive pediatric pacing, refer to the Physio-Control *Therapy Electrodes Operating Instructions*.

Noninvasive Pacing Warnings

WARNINGS!

Possible inducement of ventricular fibrillation.

Sinus bradycardia may be physiologic in severe hypothermia (i.e., appropriate to maintain sufficient oxygen delivery when hypothermia is present), and cardiac pacing is usually not indicated.

Possible interruption of therapy.

Observe the patient continuously while the pacemaker is in use. Patient response to pacing therapy, e.g., capture threshold, may change over time.

Possible inability to pace.

Using other manufacturers' combination therapy electrodes with this device could cause a decrease in pacing efficacy or the inability to pace because of unacceptably high impedance levels.

Possible patient skin burns.

Prolonged noninvasive pacing may cause patient skin irritation and burns, especially with higher pacing current levels. Discontinue noninvasive pacing if skin becomes burned and another method of pacing is available.

Demand and Nondemand Pacing

The noninvasive pacemaker can be used for either demand (synchronous) or nondemand (asynchronous) pacing modes.

The demand mode is used for most patients. In the demand mode, the LIFEPAK 20e defibrillator/monitor/pacemaker inhibits pacing when it senses the patient's own beats (intrinsic QRSs). In demand mode, if the ECG amplitude is too low to detect the patient's beats, or if an ECG lead becomes detached so that the ECG rhythm is not present, the pacemaker generates pacing pulses asynchronously. This means that the pacemaker generates pacing pulses at the selected rate, regardless of the patient's ECG rhythm.

Asynchronous or nondemand mode can be selected if noise or artifact interferes with proper sensing of QRS complexes. Press the **OPTIONS** button to access the nondemand mode. (Refer to page 2-8.)

©2018 Physio-Control, Inc.

The LIFEPAK 20e defibrillator/monitor has an integrated pulse oximeter that can be used in conjunction with a noninvasive pacemaker to help confirm capture. To confirm capture, compare the pulse rate measured by the oximeter to the set pacing rate of the pacemaker.

Noninvasive Pacing Procedure

ECG monitoring during pacing must be performed with the ECG electrodes and patient ECG cable. Pacing therapy electrodes cannot be used to monitor ECG rhythm and deliver pacing current at the same time. Be sure to place the therapy electrodes in the proper locations as described in the pacing procedure. Improper electrode placement may make a difference in the capture threshold.

To pace, perform the following:

1 Press **ON**.

2 Connect the patient ECG cable, apply ECG electrodes to the ECG cable and patient, and select Lead I, II, or III. To receive the best monitoring signal, ensure there is adequate space between the ECG electrodes and the therapy electrodes.

3 Identify the QUIK-COMBO electrode sites on the patient. For pacing, use either the anterior-lateral or anterior-posterior position (refer to page 4-3).

4 Prepare patient's skin for electrode application as described in Step 3 of the Defibrillation Procedure.

5 Apply QUIK-COMBO electrodes to the patient.

6 Connect the therapy electrodes to the therapy cable.

7 Press **PACER**. Confirm the LED illuminates, indicating that the power is on.

Note: If the ***REMOVE TEST PLUG*** message appears, disconnect test plug and connect therapy electrodes to QUIK-COMBO therapy cable.

8 Observe the ECG rhythm. Confirm that a triangle sense marker appears near the middle of each QRS complex. If the sense markers do not appear or are displayed in the wrong location (for example, on the T-wave), select another lead. (It is normal for the sense marker location to vary slightly on each QRS complex.)

9 Press **RATE** or rotate the Speed Dial to select the desired pacing rate.

Note: The **RATE** button changes the rate in 10 pulse per minute (ppm) increments; the Speed Dial changes the rate in 5 ppm increments.

10 Press **CURRENT** or rotate the Speed Dial to increase current until electrical capture occurs. For each delivered pacing stimulus, the **PACER** indicator flashes off and a positive pace marker displays on the ECG waveform.

11 Palpate the patient's pulse or check blood pressure and compare the SpO_2 pulse rate with the set pacing rate to assess for mechanical capture. Consider use of sedation or analgesia if patient is uncomfortable.

Note: The **CURRENT** button changes the current in 10 mA increments; the Speed Dial changes the current in 5 mA increments.

Note: To change rate or current during pacing, press **RATE** or **CURRENT**, and then rotate the Speed Dial.

Note: To interrupt pacing and view the patient's intrinsic rhythm, press and hold the **PAUSE** button. This causes the pacer to pace at 25% of the set rate. Release the **PAUSE** button to resume pacing at the set rate.

12 To stop pacing, reduce current to zero or press **PACER**.

Note: To defibrillate and stop noninvasive pacing, press **ENERGY SELECT** and charge the defibrillator. Pacing automatically stops when charging is initiated. Proceed with defibrillation.

If the monitor detects ECG leads off during pacing, pacing continues at a fixed rate until the ECG lead is reattached. During fixed-rate pacing, the pacemaker delivers pulses at the set pace rate regardless of any intrinsic beats that the patient may have. The monitor continues to display the pacing rate (ppm) and the current (mA). To reestablish demand pacing, reattach the ECG lead.

While pacing, visually monitor the patient at all times, *do not* rely on the ***ECG LEADS OFF*** warning to detect changes in pacing function. Routinely assess the ECG for proper sensing, pace pulse delivery, electrical capture, and mechanical capture.

If pacing electrodes detach during pacing, the ***CONNECT ELECTRODES*** and ***PACING STOPPED*** messages appear and an alarm sounds. The pacing rate is maintained and the current resets to 0 mA. Reattaching the pacing electrodes silences the alarm and removes the ***CONNECT ELECTRODES*** message. The current remains at 0 mA until you increase the current manually.

Troubleshooting Tips for Noninvasive Pacing

Table 4-4 Troubleshooting Tips for Noninvasive Pacing

Observation	Possible Cause	Corrective Action
1 Device does not function when **PACER** is pressed.	Power off.	• Check if power is **ON**.
	Low battery.	• Connect to AC power.
2 **PACER** LED on, but **CURRENT (MA)** will not increase.	Therapy electrodes off.	• Check for message displayed. • Inspect therapy cable and electrode connections.
3 **PACER** LED on, **CURRENT (MA) >0,** but pace markers absent (not pacing).	Pacing rate set below patient's intrinsic rate.	• Increase pacing rate.
	Pacer oversensing (ECG artifact, ECG size too high).	• Establish clean ECG; decrease ECG size. • Select nondemand pacing.
4 Pacing stops spontaneously.	**PACER** button pressed off.	• Press **PACER** and increase the current.
	Internal error detected. Service message indicates an internal failure.	• Check for service indicator. • Cycle power and start pacing again. • Obtain service by qualified service personnel.
	Therapy electrode off.	• Check for message. Check pacing cable and electrode connections.
	ENERGY SELECT or **CHARGE** pressed.	• Press **PACER** and increase current. • Check for service message. • Cycle power and start pacing again.
	Radio frequency interference.	• Move radio equipment away from pacemaker.

©2018 Physio-Control, Inc.

Table 4-4 Troubleshooting Tips for Noninvasive Pacing (Continued)

Observation	Possible Cause	Corrective Action
5 Monitor screen displays distortion while pacing.	ECG electrodes not optimally placed with respect to pacing electrodes.	• Reposition electrodes away from pacing electrodes.
	Patient response to pacing is highly variable with respect to capture threshold and ECG distortion.	• Select another lead (I, II, or III). • Consider changing pacing rate.
6 Capture does not occur with pacing stimulus.	Current (mA) set too low.	• Increase pacing current. (Administer sedation/ analgesia as needed.)
7 ***CONNECT ELECTRODES*** message appears.	Pacing cable or electrode disconnected.	• Reconnect and set current.
	Electrodes not adhering to skin.	• Prepare skin.
	Electrodes outdated.	• Apply new electrodes and set current.
8 Pacing stops spontaneously and ***PACER FAULT*** message appears.	Internal error detected.	• Cycle power and start pacing again. • Obtain service by qualified service personnel.
9 ***REMOVE TEST PLUG*** message appears.	Test plug connected to therapy cable.	• Disconnect test plug from therapy cable. • Connect electrodes to therapy cable.
10 Intrinsic QRS complexes not sensed when pacing.	ECG amplitude too low to be sensed.	• Select another lead.
	Intrinsic QRS complexes are occurring during pacemaker's refractory period.	• Adjust pacing rate.
11 Pacing starts spontaneously.	Patient’s heart rate falls below set pacing rate.	• Appropriate pacemaker function assess patient.
	During standby pacing, ECG lead disconnects.	• Reconnect ECG lead.
12 Set pacing rate (ppm) and ECG paced rate do not appear to match.	Internal error detected.	• Print ECG and calculate the pace rate.
13 Improper sensing (for example, sensing on T-waves).	QRS complex too small. T-wave too large.	• Select another lead.

PADDLE ACCESSORY OPTIONS

Therapy Electrodes	page 5-2
Standard Paddle Set (Optional)	5-6
Sterilizable Internal Defibrillation Paddles	5-8

©2018 Physio-Control, Inc.

THERAPY ELECTRODES

The following paragraphs describe:

- About Therapy Electrodes
- Electrode Placement
- Cable Connection
- ECG Monitoring and Therapy Procedures
- Replacing and Removing Electrodes
- Testing
- Cleaning and Sterilizing

About Therapy Electrodes

There are two pre-gelled, self-adhesive therapy electrodes available: QUIK-COMBO pacing/defibrillation/ECG electrodes (Figure 5-1). QUIK-COMBO electrodes are used for defibrillation, synchronized cardioversion, ECG monitoring, and pacing.

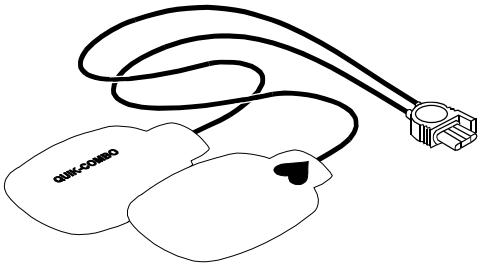

Figure 5-1 QUIK-COMBO Electrodes

A QUIK-COMBO electrode set:

- Is a substitute for standard paddles.
- Provides a Lead II monitoring signal when placed in the anterior-lateral position.
- Quickly restores the ECG trace on the monitor following defibrillation.

To help prevent electrode damage:

- Do not fold the electrodes.
- Do not trim the electrodes.
- Do not crush, fold, or store the electrodes under heavy objects.
- Store therapy electrodes in a cool, dry location. These electrodes are designed to withstand environmental temperature fluctuations between -40° to 50°C (-40° to 122°F). Continuous exposure to temperatures above 23°C (73°F) reduces the shelf life of electrodes.

There are several types of QUIK-COMBO electrodes available as described in Table 5-1.

Table 5-1 QUIK-COMBO Electrodes

Type	Description
QUIK-COMBO	Electrodes, with .6 m (2 ft) of lead wire, designed for patients weighing 15 kg (33 lb) or more.

Table 5-1 QUIK-COMBO Electrodes (Continued)

Type	Description
QUIK-COMBO - RTS	Electrodes, providing a radio-transparent electrode and lead wire set, designed for patients weighing 15 kg (33 lb) or more.
QUIK-COMBO with REDI-PAK™ preconnect system	Electrodes designed for patients weighing 15 kg (33 lb) or more and allow preconnection of the electrode set to the device while maintaining electrode shelf life and integrity.
Pediatric QUIK-COMBO	Electrodes designed for patients weighing 15 kg (33 lb) or less.

Electrode Placement

When using QUIK-COMBO electrodes, ensure that the electrodes:

- Fit completely on the chest as described on page 3-4 or page 4-3.
- Have at least 2.5 cm (1 in.) of space between electrodes.
- Do not overlap bony prominences of sternum or spine.

To place the electrodes:

1 Prepare the patient for electrode placement:
   - Remove all clothing from the patient's chest.
   - Remove excessive chest hair as much as possible. Avoid nicking or cutting the skin if using a shaver or razor. If possible, avoid placing the electrodes over broken skin.
   - Clean and dry the skin. If there is ointment on the patient's chest, use soap and water to clean the skin. Briskly wipe the skin dry with a towel or gauze. This mildly abrades the skin and removes oils, dirt, and other debris for better electrode adhesion to the skin. Do not use alcohol, tincture of benzoin, or antiperspirant to prepare the skin.

2 Slowly peel back the protective liner on the electrodes, beginning with the cable connection end (refer to Figure 5-2).

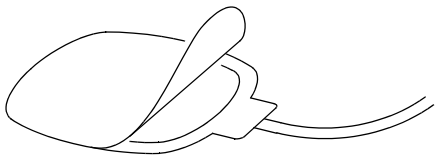

Figure 5-2 Peeling the Liner from the Electrode

3 Place the electrodes in the anterior-lateral or anterior-posterior position, as described on page 3-4 or page 4-3, depending on the therapy to be provided and special placement considerations.

4 Starting from one edge, firmly press the electrode on the patient's chest to eliminate air pockets between the gel surface and the skin. Firmly press all adhesive edges to the skin.

   Note: Once applied, therapy electrodes should not be repositioned.

©2018 Physio-Control, Inc.

Cable Connection

To connect QUIK-COMBO electrodes to the QUIK-COMBO therapy cable:

1 Open the protective cover on the QUIK-COMBO therapy cable connector (refer to Figure 5-3).
2 Insert the QUIK-COMBO electrode connector into the therapy cable connector by aligning the arrows and pressing the connectors firmly together for proper attachment.

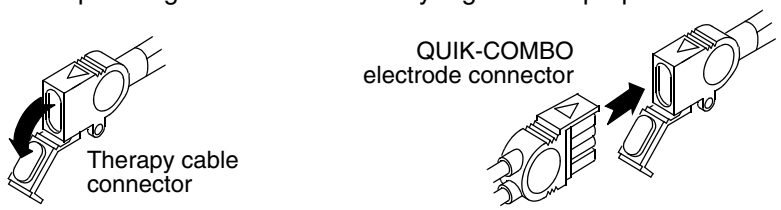

Figure 5-3 Connecting QUIK-COMBO Electrodes to Therapy Cable

Note: If you are reattaching the defibrillation cable to an electrode that is already on the patient, lift the adhesive edge under the electrode post slightly and place your finger under the post. Connect the cable as described in the preceding steps.

ECG Monitoring and Therapy Procedures

WARNINGS!

Possible patient skin burns.

Do not use Pediatric QUIK-COMBO electrodes on adults or larger children. Delivery of defibrillation energies equal to or greater than 100 joules (typically used on adults) through these smaller electrodes increases the possibility of skin burns.

Possible pediatric patient skin burns.

Noninvasive pacing may cause patient skin irritation and burns, especially with higher pacing current levels. Inspect underlying skin of the ♥ electrode frequently after 30 minutes of continuous pacing. Discontinue noninvasive pacing if skin burn develops and another method of pacing is available. On cessation of pacing, immediately remove or replace electrodes with new ones.

For adult patients, follow the procedures for ECG monitoring, AED defibrillation, manual defibrillation, synchronized cardioversion, and pacing described in Section 3 or Section 4.

For pediatric patients, follow the procedures for ECG monitoring, manual defibrillation, synchronized cardioversion, and pacing except for the following:

- Select the appropriate defibrillation energy for the weight of the pediatric patient according to the American Heart Association (AHA) recommendations or local protocol. Using energy levels of 100 joules or greater is likely to cause burns.
- When pacing, frequently inspect the patient's skin under the heart electrode for signs of burns.

Note: The amount of pacing current needed for capture is similar to the pacing current needed for adults.

Replacing and Removing Electrodes

Replace QUIK-COMBO, QUIK-COMBO RTS, or QUIK-COMBO REDI-PAK electrodes with new electrodes after 50 defibrillation shocks or 24 hours on the patient's skin, or after 8 hours of continuous pacing. Replace pediatric QUIK-COMBO electrodes after 25 defibrillation shocks or 24 hours on the patient's skin, or after 8 hours of continuous pacing.

To remove QUIK-COMBO electrodes from the patient:

1 Slowly peel back the electrode from the edge, supporting the skin as shown in Figure 5-4.

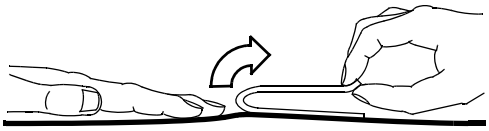

Figure 5-4 Removing Therapy Electrodes from Skin

2 Clean and dry the patient's skin.
3 When replacing electrodes, adjust the electrode positions slightly to help prevent skin burns.
4 Close the protective cover on the QUIK-COMBO therapy cable connector when the cable is not in use.

WARNING!

Possible cable damage and ineffective energy delivery or loss of monitoring.

Improper disconnection of the defibrillation cable may damage the cable wires. This can result in failure to deliver energy or loss of ECG signal during patient care. Position the cable so that it will not be pulled, snagged, or tripped over. Do not disconnect the defibrillation cable snap connectors from electrode posts or posts on testing devices by pulling on the cable. Disconnect the cable by pulling each cable connector straight out (refer to Figure 5-6).

Figure 5-5 Disconnecting Defibrillation Cable from Test Post

Testing

As part of your defibrillator test routine, inspect and test the QUIK-COMBO therapy cable. Daily inspection and testing will help ensure that the defibrillator and therapy cables are in good operating condition and are ready for use when needed. (Refer to "Maintaining the Equipment," page 7-1 and the "LIFEPAK® 20e Defibrillator/Monitor Operator's Checklist," page D-1.)

Note: During the daily auto test and the user test, energy is discharged through the therapy cable, testing the defibrillation component of the therapy cable. Performing the therapy cable test on the Operator's Checklist checks the sensing component of the therapy cable. Complete therapy cable integrity is checked when both tests are performed.

If you detect any discrepancy during inspection and testing, remove the therapy cable from use and immediately notify a qualified service technician.

Cleaning and Sterilizing

QUIK-COMBO electrodes are not sterile or sterilizable. They are disposable and are to be used for a single patient application. Do not autoclave, gas sterilize, immerse in fluids, or clean electrodes with alcohol or solvents.

©2018 Physio-Control, Inc.

STANDARD PADDLE SET (OPTIONAL)

The following paragraphs describe:

- About the Standard Paddle Set
- Accessing the Pediatric Paddles
- Replacing the Adult Paddle Attachment
- Cleaning the Standard Paddle Set

Figure 5-6 illustrates the standard paddles' features.

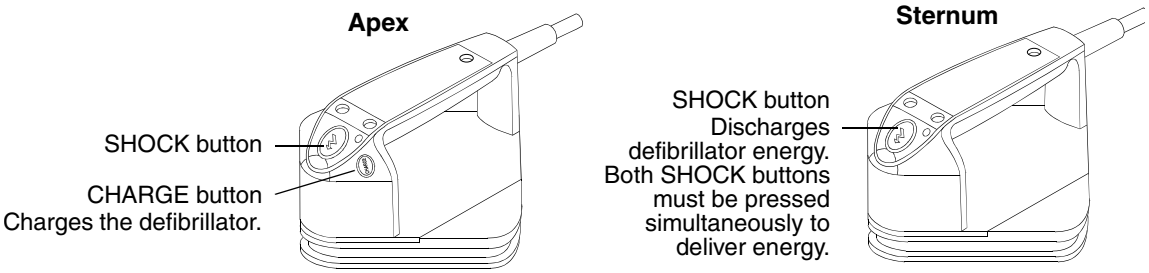

Figure 5-6 Standard Paddles

About the Standard Paddle Set

A standard paddle set:

- Can be used instead of QUIK-COMBO therapy electrodes.
- Provides Lead II monitoring signal when held in the anterior-lateral position.
- Is used for defibrillation, synchronized cardioversion, and QUIK-LOOK® ECG checks.

To help prevent standard paddles damage:

- Handle with care to prevent damage to paddle surfaces.
- Store in paddle wells on the device to protect the electrode surface.
- Clean dried or wet gel from the electrode surface after each use.

The standard paddle set consists of two parts:

1 The handle assembly, which includes the pediatric paddle
2 The adult paddle attachment

Features of the QUIK-LOOK defibrillation paddles can be used with both the pediatric paddle and adult paddle attachment.

Accessing the Pediatric Paddles

To access the pediatric paddles:

1 Grasp the standard paddle handle with one hand and the bottom of the adult paddle electrode with the other hand.
2 Slide the paddle handle back until you hear a click (refer to Figure 5-7).
3 Lift the paddle handle away from the adult attachment.

4 The pediatric paddle is now exposed and ready for use (refer to Figure 5-8).

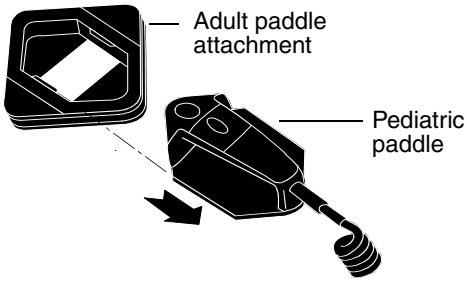

Figure 5-7 Accessing a Pediatric Paddle

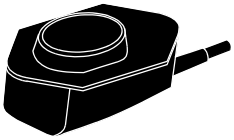

Figure 5-8 Pediatric Paddle (Bottom)

Replacing the Adult Paddle Attachment

To replace the adult paddle attachment:

1 Hold the adult paddle attachment with one hand and the standard handle with the other hand.
2 Fit the pediatric paddle onto the adult paddle attachment.
3 Slide the paddle handle forward until you hear a click. (Refer to Figure 5-9.)

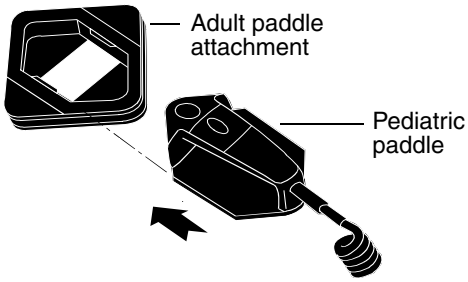

Figure 5-9 Replacing a Pediatric Paddle

Each adult paddle attachment has a contact spring plate that transfers energy from the pediatric paddle to the adult paddle. Routinely inspect the spring plates and pediatric paddle surfaces to make sure that they are clean and intact.

Cleaning the Standard Paddle Set

Individually protect paddles before and after cleaning to prevent damage to paddle surfaces. After each use:

1 Separate the adult and pediatric paddles.
2 Wipe or rinse paddle electrodes, cable connector, handles, and cables with mild soap and water or disinfectant using a damp sponge, towel, or brush. Do not immerse or soak.
3 Dry all parts thoroughly.
4 Examine paddles (including electrode surfaces), cables, and connectors for damage or signs of wear.

Note: Cables showing signs of wear, such as loose cable connections, exposed wires, or cable connector corrosion, should be removed from use immediately.

Note: Paddles with rough or pitted electrodes should be removed from use immediately.

©2018 Physio-Control, Inc.

STERILIZABLE INTERNAL DEFIBRILLATION PADDLES

Physio-Control internal paddles are specifically designed for open chest cardiac defibrillation.

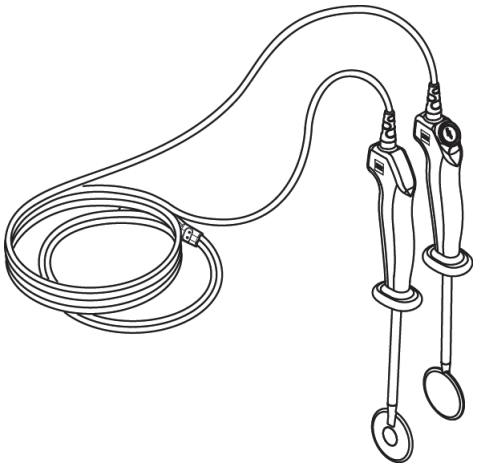

Figure 5-10 Sterilizable Internal Defibrillation Paddles

Internal paddles are available in several sizes. To order internal paddles, contact your Physio-Control representative or order online at store.physio-control.com (U.S. only).

For complete information about using internal paddles to provide open chest cardiac defibrillation, see the *Instructions for Use* provided with the internal paddles.

DATA MANAGEMENT

This section describes data management functions.

Overview of Data Storage and Retrieval	page 6-2
CODE SUMMARY Report	6-2
Managing Archived Patient Records	6-7
Entering Archives Mode	6-7
Printing Archived Patient Reports	6-7
Transmitting Archived Patient Records	6-9
Editing Archived Patient Records	6-10
Deleting Archived Patient Records	6-11
Overview of Connections for Transmitting Reports	6-12
Data Transfer from TrueCPR Device	6-13
Troubleshooting Tips for Data Transmission	6-14

©2018 Physio-Control, Inc.

OVERVIEW OF DATA STORAGE AND RETRIEVAL

The following paragraphs describe patient data storage and retrieval using the LIFEPAK 20e defibrillator/monitor.

Data Storage

When you turn on the LIFEPAK 20e defibrillator/monitor, you create a new Patient Record stamped with the current date and time. All events and associated waveforms are digitally stored in the Patient Record as patient reports, which you can print. When you turn off the device, the current Patient Record data is saved in the patient archives.

To access the patient archives, press **OPTIONS** and select **ARCHIVES**. You can print, transmit, or delete patient records stored in the archived Patient Record. When you enter the archives mode, patient monitoring ends and the current Patient Record is saved and closed. Turn off the device to exit the archives mode.

Report Types

Patient reports within a Patient Record are stored as a CODE SUMMARY Critical Event Record, which includes patient information, event and vital signs logs, and waveforms associated with events (for example, defibrillation) as described on page 6-4.

Memory Capacity

The LIFEPAK 20e defibrillator/monitor retains data for two or more patients when you switch power off or remove the batteries. The number of patient reports that the defibrillator can store depends on various factors, including the number of displayed waveforms, the duration of each use, and the type of therapy. Typically, memory capacity includes up to 100 single waveform reports. When the defibrillator reaches the limits of its memory capacity, the defibrillator deletes an entire Patient Record using a “first in, first out” priority to accommodate a new Patient Record. Deleted Patient Records cannot be retrieved.

CODE SUMMARY REPORT

The LIFEPAK 20e defibrillator/monitor automatically stores a CODE SUMMARY report as part of the Patient Record for each patient. The report consists of the following:

- Preamble
- Event/vital signs log
- Waveforms associated with certain events

Figure 6-1 is an example of a CODE SUMMARY report. Press **CODE SUMMARY** to print the report.

Preamble

Name:	**DAVIDO, GUIDO**	**CODE SUMMARY™**	
ID	041495094322	**critical event record**	
Patient ID:	52876004	Power On:	24 April 09 06:03:12
Location:	L483	Device:	100
Age: 45	Sex: M	Site:	ABCD
		Total Shocks:	3
		Total time paced	00:15:00
		Elapsed Time:	00:52:43
	35.1 3434 LP20PRB005		

Event/Vital Signs Log

Time	Event	HR	SpO2•PR	COMMENTS:
07:15:34	Power On			
07:16:34	Initial Rhythm	95	99•95	
07:20:34	Vital Signs	92	98•94	
07:22:14	Pacing 1 Started	95	98•95	
07:24:34	Pacing 2 Set	99	98•99	
07:25:34	Vital Signs	92	98•93	
07:26:36	Alarm HR	152	99	

Figure 6-1 CODE SUMMARY Report

Preamble

The preamble contains patient information (name, event identification, patient identification, location, age, and sex) and device information (date, time, and therapy information) as shown in Figure 6-1. The event identification is a unique identifier that the defibrillator automatically enters in the ID field for each Patient Report. This identifier includes the date and time that the defibrillator is turned on. The location field allows you to enter up to 25 alpha-numeric characters to identify where the device was used. You can link the data you enter to other patient information.

Event/Vital Signs Log

The LIFEPAK 20e defibrillator/monitor documents events and vital signs in chronological order. Events are operator or device actions that are related to monitoring, pacing, AED therapy, data transmission, and more. Table 6-1 shows a complete listing of events that can be found in the event log.

Vital signs (or active parameters) are entered into the log automatically every 5 minutes (or for each event) and when alarm limits are exceeded. Refer to **AUTO LOG** in Table 8-1 for more information.

©2018 Physio-Control, Inc.

Table 6-1 Event Types

Event Types	Events			
Monitoring	• Initial rhythm	• Alarm events	• Vital signs	
Operator initiated	• Event	• Print	• Sync On/Off	• Internal Pacer Detection On/Off
	• Alarms On	• VF/VT Alarm On/ Off		
Therapy AED	• AED mode	• Connect electrodes	• Analysis	• Shock advised
	• Check patient	• Motion	• Analysis stopped	• No shock advised
Defibrillation	• Manual mode	• Charge removed	• Shock X Delivered	• Shock X Not Delivered
Pacing	• Started	• Set	• Changed	• Stopped
	• Paused			
Memory Status	• Out of Waveform Memory [memory low]	• Out of Event Memory [memory full]		

Waveform Events

In addition to being documented in the Event Log, therapy and other selected events also capture waveform data as described in Table 6-2.

Table 6-2 Waveform Events

Event Name	Waveform Data
INITIAL RHYTHM	• 8 seconds after leads on.
CHECK PATIENT	• 8 seconds prior to alert.
SHOCK **or** NO SHOCK ADVISED	• 2–3 segments of analyzed ECG. Each segment may be 2.7 seconds.
ANALYSIS X STOPPED	• 8 seconds of data prior to cessation of analysis.
SHOCK X	• 3 seconds prior to shock and 5 seconds after shock.
PACING X STARTED	• 8 seconds prior to increase of current from 0.
PACING X SET	• 8 seconds after ppm and mA are stable for 10 seconds.
PACING X CHANGED	• 8 seconds after pacing rate, current, or mode is changed.
PACING X STOPPED	• 3 seconds prior to pacing current is zero and 5 seconds after.
PACING X PAUSED	• Initial 8 seconds while **PAUSE** is pressed.
ALARM*	• 3 seconds prior to violated parameter and 5 seconds after.
EVENT*	• 3 seconds prior to event selection and 5 seconds after.
PRINT	• 3 seconds prior to pressing **PRINT** and 5 seconds after.

*To reduce the length of the CODE SUMMARY report, storing waveform data with these events can be configured **OFF** (refer to page 8-11).

Waveform events are preceded by a header that includes the following information:

- Patient data
- Event name
- Therapy data
- Vital signs
- Device configuration information
- Transthoracic impedance measured during the shock (defibrillation events only)

CODE SUMMARY Format

You can configure the LIFEPAK 20e defibrillator/monitor to print a CODE SUMMARY report in one of the formats described in Table 6-3. CODE SUMMARY reports are always stored in the medium format.

Table 6-3 CODE SUMMARY Formats

Format	Attributes	
Medium format	• Preamble • Event/vital signs log	• Event waveforms
Short format	• Preamble	• Event/vital signs log

The format determines only which reports are printed when the **CODE SUMMARY** button is pressed. If you interrupt printing of a CODE SUMMARY report, the entire CODE SUMMARY report will be reprinted when printing is resumed.

CODE SUMMARY Complete is printed immediately following the last waveform event.

©2018 Physio-Control, Inc.

Refer to Figure 6-2 for examples of waveform data event printouts in the CODE SUMMARY report.

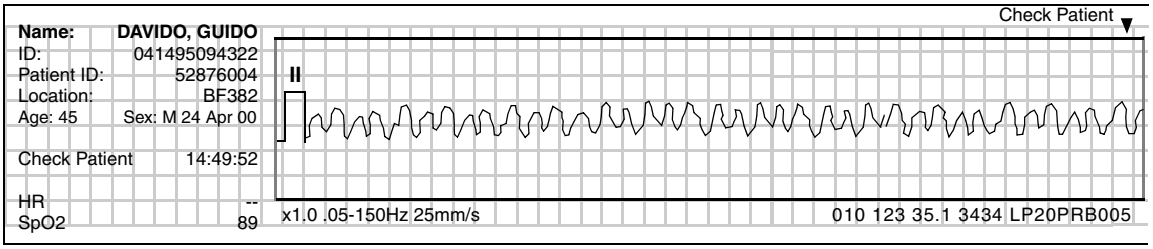

Check Patient Event

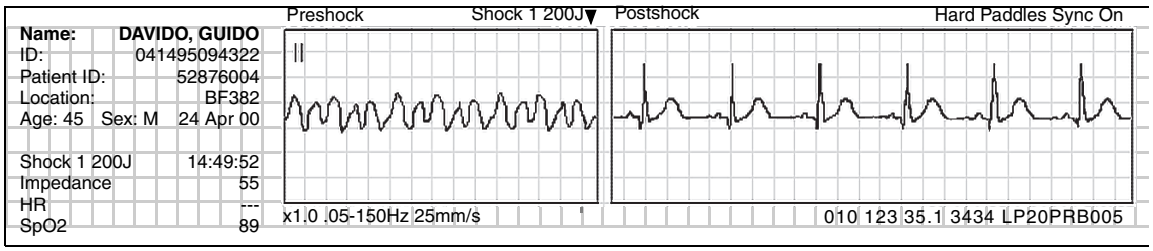

Defibrillation Event

Pacing Event

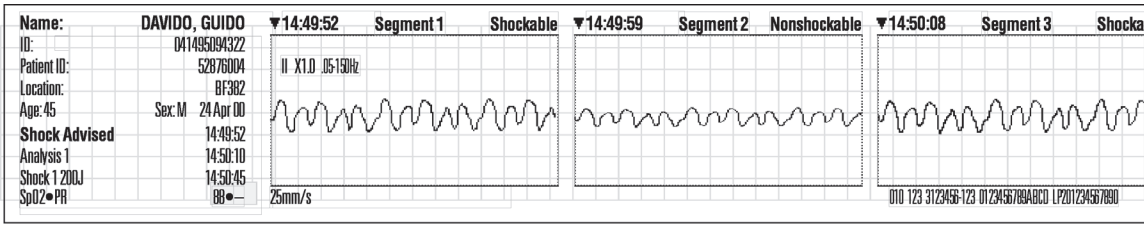

Shock Advisory System (SAS) Event

Parameter Alarm Event

Figure 6-2 Waveform Event Printout Examples

MANAGING ARCHIVED PATIENT RECORDS

When you turn off the LIFEPAK 20e defibrillator/monitor, the current Patient Record is saved in the archives. The following options are available for managing archived Patient Records:

- Print archived patient reports
- Transmit archived patient records
- Edit archived patient records
- Delete archived patient records

To perform any or all of these options, you must first enter the archives mode and then proceed with the desired option.

ENTERING ARCHIVES MODE

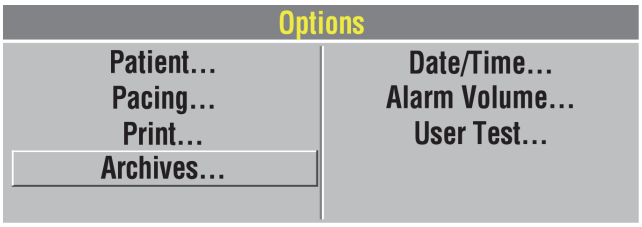

To enter the archives mode:

1 Press **OPTIONS**.

2 Select **ARCHIVES**.

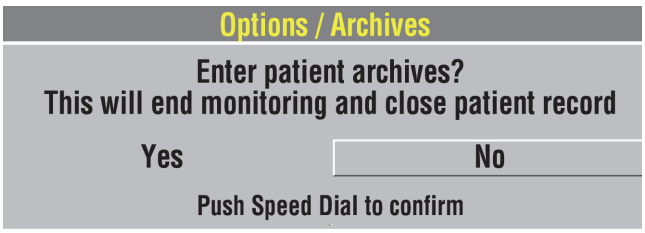

3 Select **YES** to enter the patient archives.

YES closes and saves the current Patient Record and ends patient monitoring.

–or–

SELECT **NO** to clear the overlay and return to the previous screen.

Note: When you enter the archives mode, patient monitoring ends (for example, no ECG, no alarms) and the current Patient Record is saved and closed.

PRINTING ARCHIVED PATIENT REPORTS

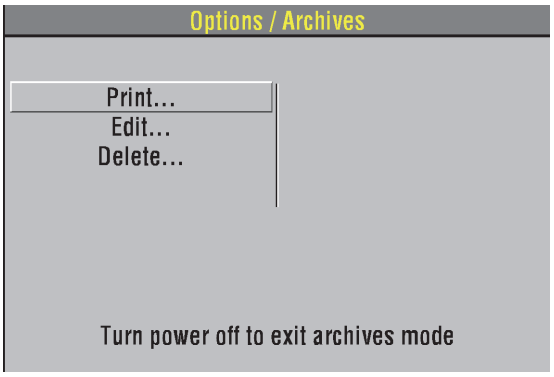

To print:

1 Be sure that you are in the archives mode (refer to "Entering Archives Mode," page 6-7).

2 Select **PRINT**.

©2018 Physio-Control, Inc.

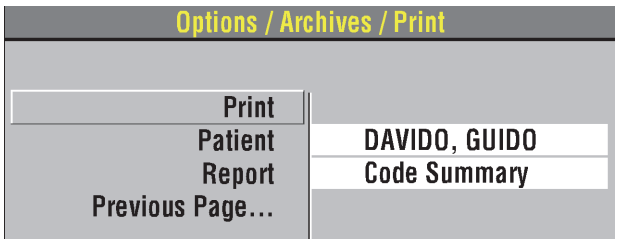

3 If the **PATIENT** and **REPORT** settings are correct, select **PRINT** to print the report.

Otherwise, select **PATIENT** and proceed to the next step.

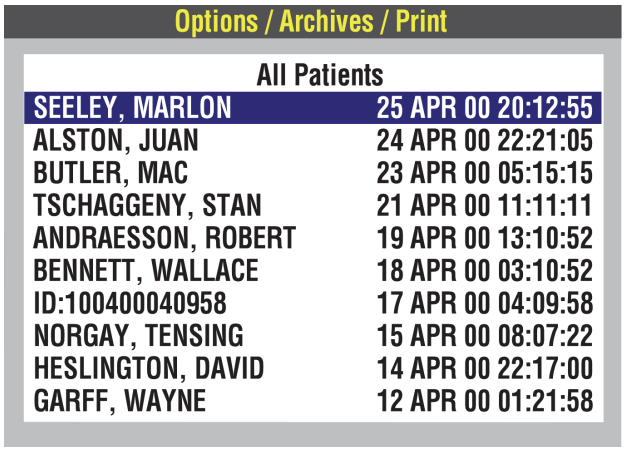

4 Select a patient from the list of Patient Records or select **ALL PATIENTS** to print a list of all Patient Records in the archives.

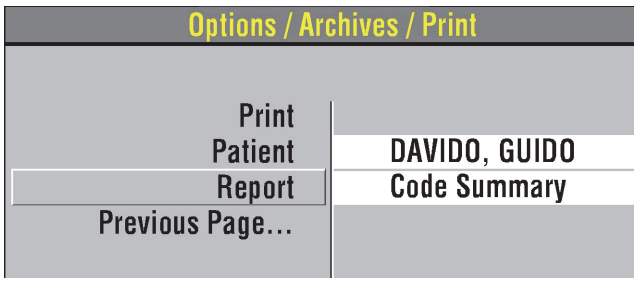

5 Select **REPORT** to display the report list:

CODE SUMMARY – Prints the CODE SUMMARY report (medium format).
A check mark indicates that a report was previously printed.

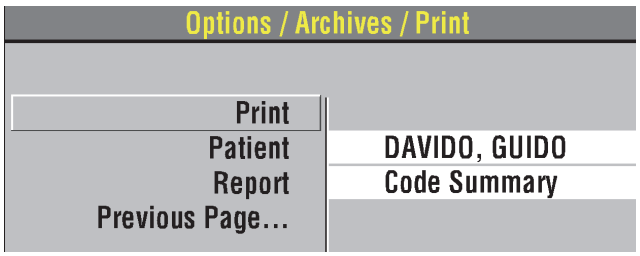

6 Select **PRINT**.

To return to the Options/Archives menu, press **HOME SCREEN**.
–or–
To exit the archives mode, turn off the device.

TRANSMITTING ARCHIVED PATIENT RECORDS

You can use the CodeManagement Module to transmit patient records to CODE-STAT™ Data Review Software via wireless connection to the LIFENET System. For information about configuring your CodeManagement Module to work in the LIFENET System, see the LIFENET System help documentation or contact your Physio-Control representative.

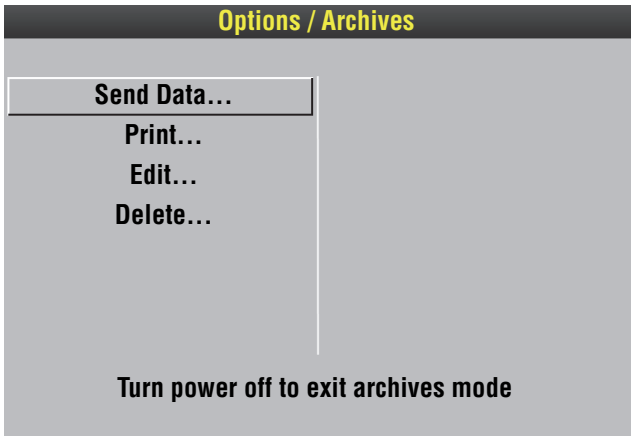

To transmit:

1 Be sure that you are in the archives mode (refer to "Entering Archives Mode," page 6-7).

2 Select **SEND DATA**.

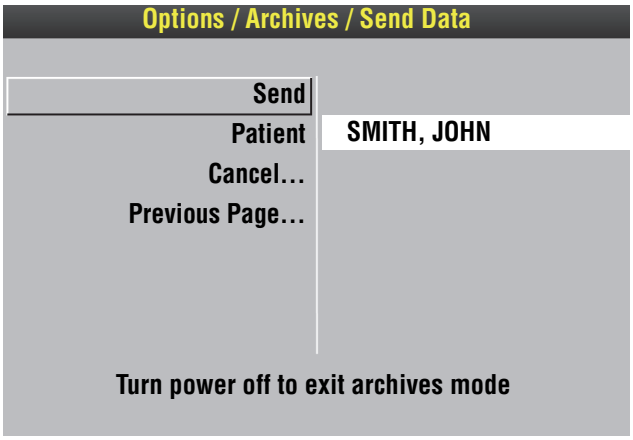

3 If the **PATIENT** setting is correct, proceed to Step 5.

Otherwise, select **PATIENT** and proceed to Step 4.

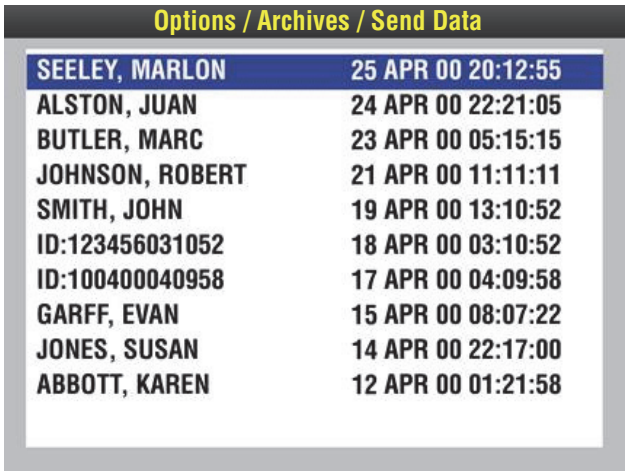

4 Select a patient from the list of Patient Records.

©2018 Physio-Control, Inc.

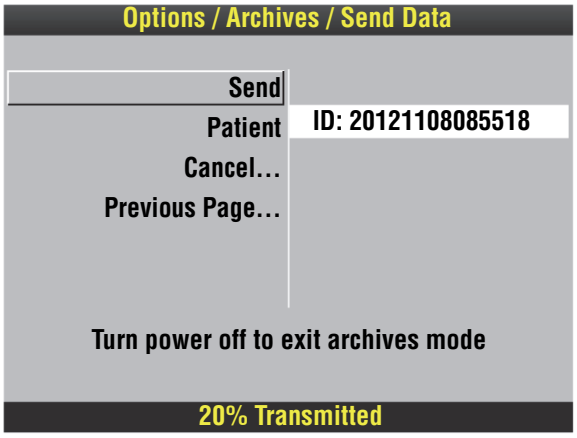

5 Select **SEND** to transmit the report. The transmission status appears in the status message area.

6 To cancel transmission, select **CANCEL**, and then select **YES**.

7 To return to the Options/Archives menu, press **HOME SCREEN**.

–or–

To exit the archives mode, turn off the device.

EDITING ARCHIVED PATIENT RECORDS

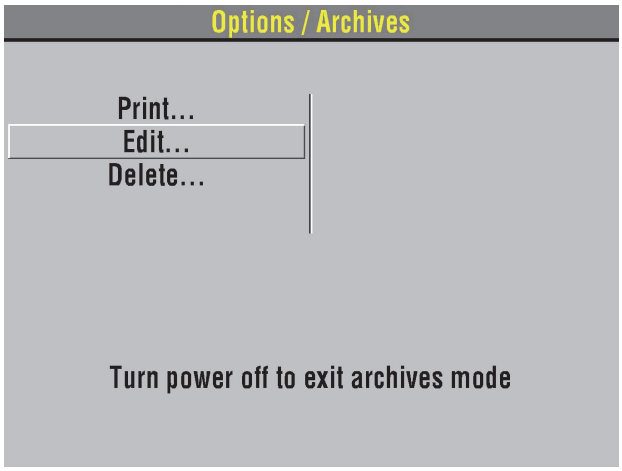

To edit:

1 Be sure that you are in the archives mode (refer to "Entering Archives Mode," page 6-7).

2 Select **EDIT.**

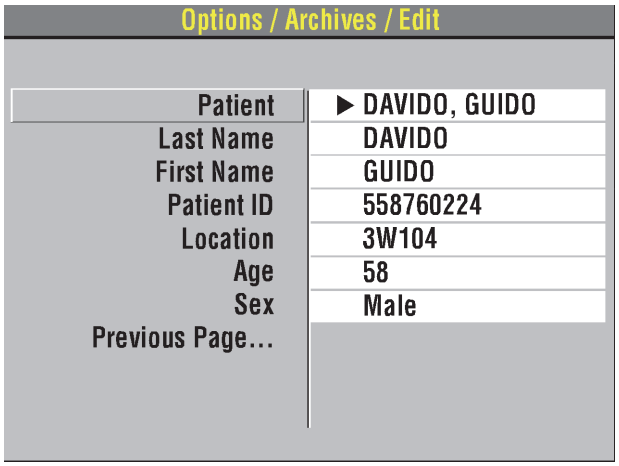

3 Select **PATIENT**.

4 Add or change the necessary patient information.

5 Press **HOME SCREEN**, then turn off the device.

DELETING ARCHIVED PATIENT RECORDS

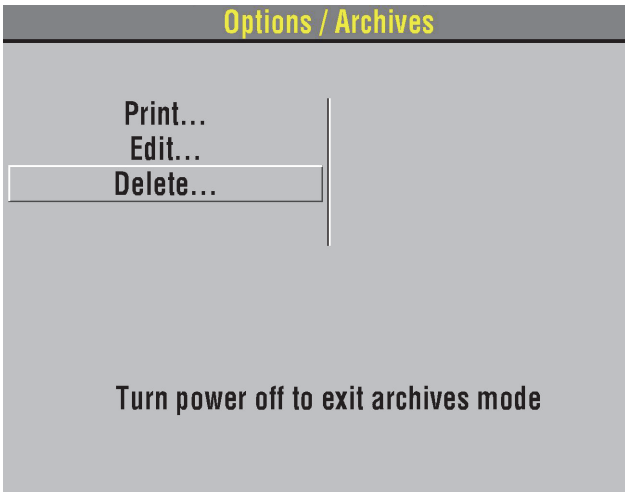

To delete:

1 Be sure that you are in the archives mode (refer to "Entering Archives Mode," page 6-7).

2 Select **DELETE**.

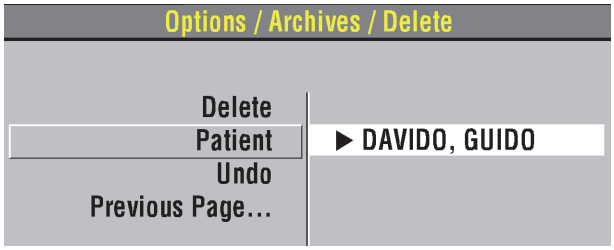

3 Select **PATIENT**.

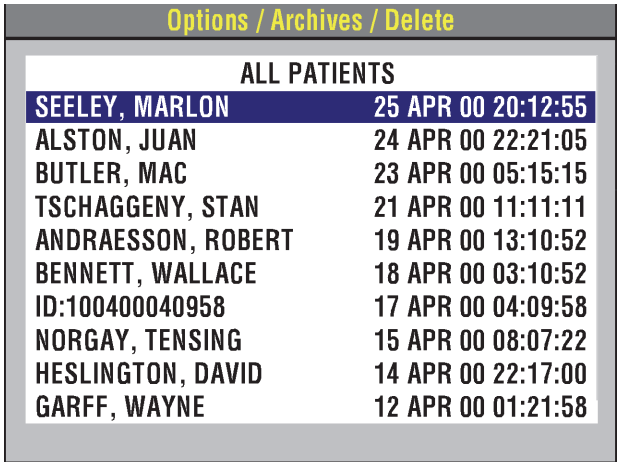

4 Select a patient from the list.

©2018 Physio-Control, Inc.

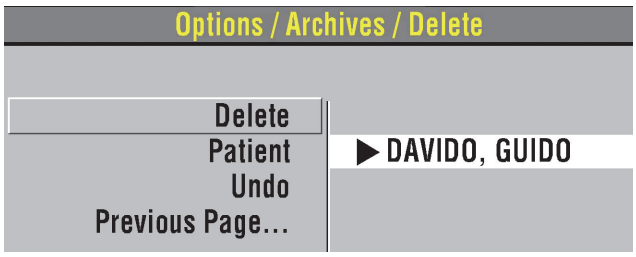

5 Select **DELETE** to permanently remove the selected Patient Record from the archives.

Note: If, after you select **DELETE**, you decide you do not want to remove the patient record, immediately select **UNDO**. If you continue operations, you cannot reverse the **DELETE** selection.

6 Press **HOME SCREEN** and then turn off the device.

OVERVIEW OF CONNECTIONS FOR TRANSMITTING REPORTS

Patient reports can be transmitted from the LIFEPAK 20e defibrillator/monitor to compatible Physio-Control data management tools. You can transmit data using either of the following two methods.

- Wireless connection—the optional CodeManagement Module transmits data via wireless connection to the LIFENET System. Refer to "Transmitting Archived Patient Records," page 6-9, for instructions.
- IrDA connection—an IrDA port, located on the front of the LIFEPAK 20e defibrillator/monitor (refer to page 2-8), supports wireless, infrared communications for transmitting reports from the defibrillator to your computer.

Note: When the CodeManagement Module is attached to the LIFEPAK 20e defibrillator/monitor, the IrDA connection is disabled.

Considerations for IrDA Transmission

You initiate and control IrDA transmission of device data at your computer using Physio-Control post-event review tools. This includes entering patient information, selecting reports to be transmitted, and monitoring transmission progress. More information about configuring Physio-Control post-event review tools and instructions for gathering device data can be found in the relevant documentation and online help.

To receive an IrDA transmission, your computer must have an operational IrDA port. If your computer does not have an IrDA port, you can install an IrDA adapter to provide the needed interface. Physio-Control recommends installing an IrDA adapter on all computers to ensure successful communication connections and data transmissions.

IrDA adapters are available for serial or USB computer ports. Follow the installation and usage instructions provided with the adapter, ensuring that the adapter mount (receiving end) is positioned on a stable surface. Figure 6-3 provides guidelines to follow for positioning the defibrillator and the IrDA adapter before initiating a transmission.

Note: The shaded cone in Figure 6-3 represents the approximate parameters for positioning the defibrillator's IrDA port opposite the IrDA adapter. As the distance between the two increases, so does the possible range for aligning them.

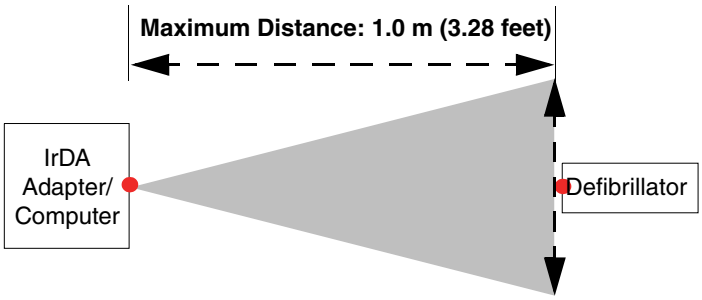

Figure 6-3 IrDA Connections

DATA TRANSFER FROM TrueCPR DEVICE

Note: The TrueCPR device may not be available in all countries. Contact your local Physio-Control representative for more information.

You can transfer data from the Physio-Control TrueCPR device to Physio-Control post-event review tools using the TrueCPR device port on the CodeManagement Module. To transfer data:

1 Confirm the LIFEPAK 20e defibrillator/monitor is either turned off or in archives mode.

2 Connect an approved USB cable between the TrueCPR device and the CodeManagement Module.

   Note: Use only a USB cable that meets the following specifications: USB 2.0 A-Male to Mini-B 5-pin Male, 28/24 AWB cable with ferrite core (gold plated), 1 m (3 ft).

3 Turn on the TrueCPR device and follow the instructions in the TrueCPR device Instructions for Use.

   Notes:

   - It may take up to one minute for the TrueCPR device to display the Data Transfer screen.
   - Data transfer takes approximately 3–5 minutes.
   - If you attempt to transmit data from the LIFEPAK 20e defibrillator/monitor and the TrueCPR device simultaneously, the data from the defibrillator will be transmitted first.

©2018 Physio-Control, Inc.

TROUBLESHOOTING TIPS FOR DATA TRANSMISSION

Table 6-4 Troubleshooting Tips for Data Transmission

Observation	Possible Cause	Corrective Action
1 ***SEND DATA*** option does not appear in Options/ Archives screen.	CodeManagement Module not properly connected to defibrillator.	• Contact qualified service personnel.
2 ***TRANSMISSION FAILED*** message appears.	No wireless connection to LIFENET System.	• Verify Wireless switch on side of CodeManagement Module is in the **ON** position. See "Side View of CodeManagement Module," page 2-16. • Contact your facility's LIFENET System administrator to verify the receiving computer is operational.

MAINTAINING THE EQUIPMENT

This section describes how to perform operator-level maintenance, testing, and troubleshooting for the LIFEPAK 20e defibrillator/monitor and selected accessories. For additional information about accessories, refer to specific accessory operating instructions.

General Maintenance and Testing	page 7-2
General Troubleshooting Tips	7-10
Service and Repair	7-12
Product Recycling Information	7-12
Warranty	7-13
Accessories, Supplies, and Training Tools	7-13

©2018 Physio-Control, Inc.

GENERAL MAINTENANCE AND TESTING

Periodic maintenance and testing of the LIFEPAK 20e defibrillator/monitor and accessories will help detect and prevent possible electrical and mechanical discrepancies. If testing reveals a possible discrepancy with the defibrillator or accessories, refer to "General Troubleshooting Tips," page 7-10. If the discrepancy cannot be corrected, immediately remove the defibrillator from service and contact qualified service personnel. For testing information regarding accessories, refer to the accessory operating instructions.

Each time you turn on the defibrillator/monitor, it performs self tests. If the defibrillator/monitor detects a failure, the service LED illuminates.

A ***MAINTENANCE DUE*** message can be configured to appear on the screen at selected intervals (3, 6 or 12 months) to remind you that the device is due for maintenance. The factory default is **OFF**, but it can be activated by service personnel.

Maintenance and Testing Schedule

Table 7-1 lists the recommended maintenance and testing schedule. This schedule may be used in conjunction with the internal quality assurance program of the hospital, clinic, or emergency medical service where the defibrillator is used. An Operator's Checklist is included in these operating instructions (refer to Appendix D). Cables and paddles are a critical part of therapy delivery and suffer wear and tear. Physio-Control recommends replacement of these accessories every three years to reduce the possibility of failure during patient use.

Additional periodic preventive maintenance and testing, such as electrical safety tests, performance inspection, and required calibration should be performed regularly by qualified service personnel. The internal battery should be replaced by qualified service personnel every two years.

Table 7-1 Recommended Maintenance Schedule

Operation	Daily	After Use	As Required	6 Months	12 Months
Daily auto test – performed automatically by defibrillator.	X				
Complete Operator's Checklist (refer to Appendix D).	X				
Inspect defibrillator and CodeManagement Module.		X	X		
Clean defibrillator and CodeManagement Module.		X	X		
Check that all necessary supplies and accessories are present (for example, gel, electrodes, ECG paper, etc.).		X	X		
Perform user test.			X		
Perform function checks:					
Standard paddles monitoring check				X	
Standard paddles defibrillation and synchronized cardioversion check on battery power				X	
Therapy cable monitoring check				X	
Therapy cable defibrillation and synchronized cardioversion check on battery power				X	
Therapy cable pacing check				X	
Preventive maintenance and testing.					X

Daily Auto Test

For routine testing and inspection, the user can rely on the daily auto test and the checks completed using the Operator's Checklist (refer to Appendix D).

Each day at approximately 0300 (3:00am), the LIFEPAK 20e defibrillator/monitor automatically completes the following tasks:

- Turns itself on
- Performs self-test
- Charges to a low energy level (approximately 1-3 joules) and then discharges through a test plug or hard paddles
- Tests the pacing circuitry (if noninvasive pacing installed)
- Prints the results, if configured **ON**
- Transmits the results, if equipped with CodeManagement Module
- Turns itself off

The daily auto test is not performed if the LIFEPAK 20e defibrillator/monitor is already turned on at 0300. If you must use the defibrillator while the daily auto test is in progress, press **ON** to turn the defibrillator off and press **ON** again. The test is halted and the LIFEPAK 20e defibrillator/monitor resumes normal operation.

The daily auto test is a functional test, which checks the defibrillator and pacer circuitry and the defibrillation component of the therapy cables. This test may take the place of your daily defibrillator charging and discharging protocol.

It is important that the standard paddles set is securely seated in the paddle wells or that the QUIK-COMBO therapy cable is connected to the QUIK-COMBO test plug (refer to Figure 7-1) for the daily auto test to perform properly. There are two reasons why the daily auto test may not complete. The first is if the standard paddles set is not securely seated in the paddle wells or the QUIK-COMBO therapy cable is not connected to the QUIK-COMBO test plug (refer to Figure 7-1). The second is when there is a problem with the therapy cable or the defibrillator. When the daily auto test does not complete, a report prints (if configured ON) and a momentary message appears on the screen indicating the self test did not complete. In the event of an incomplete daily auto test, confirm proper cable connection and perform the manual user test in the **OPTIONS** menu. While attempting to perform the user test, if the message ***CONNECT TO TEST PLUG*** appears, contact a qualified service representative.

If connected to AC power and the defibrillator detects a problem during the auto test, it remains on and the service LED illuminates. If the defibrillator is not connected to AC power and the defibrillator detects a problem during the auto test, the defibrillator will turn off after the auto test. The service LED illuminates the next time the defibrillator is turned on. If the setup option for auto print is on, a test report will automatically print at completion of the auto test. Refer to "General Troubleshooting Tips," page 7-10.

Note: Integrity of the Standard Paddles and the QUIK-COMBO therapy cable is tested when both the daily auto test is properly performed and section 8 on the Operator's Checklist is completed (refer to Appendix D).

Note: The daily auto test cannot be relied on if REDI-PAK electrodes are connected to the therapy cable. For daily testing, you must manually perform the user test in the Options menu (refer to the User Test section).

Note: The factory setting for printed test reports is **OFF**. To obtain printed test reports, set the self test to **ON** in the auto print menu (refer to the "Setup Options" section).

©2018 Physio-Control, Inc.

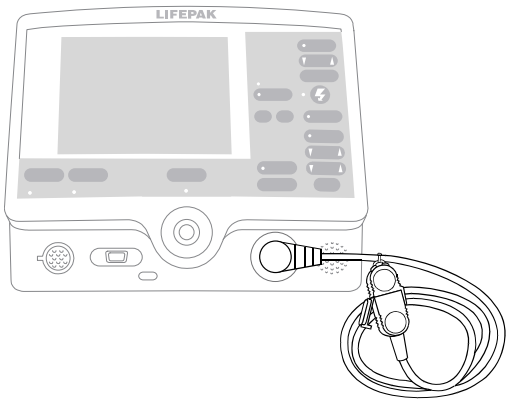

Figure 7-1 QUIK-COMBO Test Plug

User Test

The LIFEPAK 20e defibrillator/monitor user test performs the same functions as the daily auto test (refer to the "Daily Auto Test" section). The manual user test is recommended if the daily auto test was not completed, if a test failure was reported, or if REDI-PAK electrodes are preconnected to the therapy cable as part of defibrillator readiness. This test may also be performed to meet more frequent defibrillator testing requirements.

To perform the user test, the standard paddles set must be securely seated in the paddle wells or the QUIK-COMBO therapy cable must be connected to the QUIK-COMBO test plug (see Figure 7-1). For REDI-PAK electrodes, disconnect the REDI-PAK electrodes from the QUIK-COMBO therapy cable and connect the QUIK-COMBO test plug to the therapy cable.

Perform User Test

Procedure:

1 Press **ON**.

Note: To perform the user test, ignore all ***REMOVE TEST PLUG*** prompts and keep the test plug connected.

2 Press **OPTIONS**. If the defibrillator is in AED mode, switch to manual mode and then press **OPTIONS**. Refer to "Switching from AED to Manual Mode," page 4-14.

3 Select **USER TEST**.

Note: If the message ***CONNECT TEST PLUG*** appears and the standard paddles set is securely seated in the paddle wells or the QUIK-COMBO therapy cable is correctly connected to the QUIK-COMBO test plug, contact a qualified service representative.

4 Select **YES** to initiate user test.

After selecting **YES**, the user test automatically performs the following tasks:

- Performs self-tests.
- Charges to a low energy level (approximately 1-3 joules) and then discharges through a test plug or hard paddles.
- Tests the pacing circuitry (if noninvasive pacing installed).
- Prints the results.
- Turns itself off.

Note: During the user test, all front panel controls and standard paddles controls are disabled. Pressing the **ON** button will power off the defibrillator.

If the LIFEPAK 20e defibrillator/monitor detects a problem during the user test, the service LED lights and a printed report indicates that the test failed. Turn off the defibrillator and contact qualified service personnel. Refer to "General Troubleshooting Tips," page 7-10.

If it is necessary to interrupt the user test, turn the power off and then on again. The test will stop and the defibrillator will operate normally. A Pass/Fail test report will not print.

Note: It is important to understand defibrillator operation. Refer to page 7-2 through page 7-10 for suggested procedures to help ensure that personnel are acquainted with normal defibrillator operation and to troubleshoot device performance. The procedures used may vary according to your local protocols. To test the defibrillator by performing the function checks requires the use of an optional test load simulator.

Cleaning

CAUTION!

Possible equipment damage.

Do not clean any part of this device or accessories with bleach, bleach dilution, or phenolic compounds. Do not use abrasive or flammable cleaning agents. Do not attempt to sterilize this device or any accessories unless otherwise specified in accessory operating instructions.

Clean the LIFEPAK 20e defibrillator/monitor, cables, and accessories with a damp sponge or cloth. Use only the cleaning agents listed below:

- Quaternary ammonium compounds
- Isopropyl alcohol
- Peracetic (peroxide) acid solutions

Clean the carrying case accessory as follows and as described on its instruction tag:

- Hand wash using mild soap or detergent and water. A scrub brush may be useful for heavily soiled spots. Cleaners such as Formula 409® are helpful for grease, oil, and other tough stains.

Function Checks

CAUTION!

Possible simulator damage.

Do not discharge more than 30 shocks within an hour or 10 shocks within a five-minute period, or pace continually into Physio-Control patient simulators. Simulators may overheat.

The following function checks are provided to help personnel keep acquainted with normal operating procedures and to troubleshoot device performance.

Older Physio-Control simulators and testers respond differently to defibrillators configured with a biphasic defibrillation waveform. Older QUIK-COMBO simulators require a 275 joules biphasic shock to change simulated VF rhythm to NSR. Sometimes no amount of energy can change the simulated VF rhythm. The pace LED flashes when the shock does not change the simulated rhythm.

Newer QUIK-COMBO simulators, described in the Physio-Control accessories catalog and on the Web site, respond appropriately to defibrillators with a biphasic defibrillation waveform. For further information, in the USA, call 1.800.442.1142. Outside the USA, contact your local Physio-Control representative.

©2018 Physio-Control, Inc.

Patient ECG Cable Check

Equipment needed:

- LIFEPAK 20e defibrillator/monitor
- Fully charged batteries
- Patient ECG cable (3-wire or 5-wire)
- 3-lead or 12-lead simulator

Procedure:

1 Press **ON**.
2 Connect the ECG cable to the defibrillator.
3 Connect all cable leads to the simulator.
4 Turn on the simulator and select a rhythm.
5 After a few seconds confirm that the screen displays a rhythm and no ***LEADS OFF*** or ***SERVICE*** messages appear.

Standard Paddles Monitoring Check

Equipment needed:

- LIFEPAK 20e defibrillator/monitor
- Standard paddles

Procedure:

1 Press **ON**.
2 Select **PADDLES** lead.
3 Press the paddle electrode surfaces together and confirm that a flat line appears.
4 Shake each paddle in the air and confirm that irregular noise signals appear.
5 Install the paddles in the paddle wells.

Standard Paddles Defibrillation and Synchronized Cardioversion Check on Battery Power

WARNING!

Shock hazard.

When discharged as described in this test, the defibrillator delivers up to 360 J of electrical energy. Unless discharged properly as described in this test, this electrical energy may cause serious personal injury or death. Do not attempt to perform this test unless you are qualified by training and experience and thoroughly familiar with these operating instructions.

Equipment needed:

- LIFEPAK 20e defibrillator/monitor with fully charged internal battery
- Standard paddles
- Defibrillator checker
- Patient ECG cable
- 3-lead or 12-lead patient simulator

Procedure:

Ensure the defibrillator is connected to AC power 4 hours prior to performing this test. The battery should be fully charged.

1 Disconnect the defibrillator from AC power.
2 Press **ON**.
3 Connect the ECG cable to the monitor and the patient simulator.
4 Turn on the simulator and select any rhythm except asystole or ventricular fibrillation.
5 Select Lead II.
6 Press **SYNC**.
7 Confirm the sync LED lights. Adjust ECG size until the sense markers appear on the QRS complexes. Confirm that the sync LED blinks off with each detected QRS complex and the heart rate is displayed.
8 Place the standard paddles on the defibrillator checker paddle plates.
9 Select 200 J.
10 Press **CHARGE**.

Note: If the defibrillator takes more than 10 seconds to charge to 200 joules, the battery may need to be replaced. Contact qualified service personnel.

11 Confirm that the tone indicating full charge sounds within 10 seconds or less.
12 Press only the apex **SHOCK** button and confirm that the defibrillator does not discharge. Release the apex **SHOCK** button.
13 Press only the sternum **SHOCK** button and confirm that the defibrillator does not discharge. Release the sternum **SHOCK** button.
14 Press **PRINT**.

WARNING!

Possible paddle damage and patient burns.

Press paddles firmly onto test load plates when discharging to prevent arcing and formation of pits on paddle surfaces. Pitted or damaged paddles may cause patient skin burns during defibrillation.

15 Apply firm pressure with both paddles on the defibrillator checker and hold both **SHOCK** buttons while observing the screen.
16 Confirm the defibrillator discharges on the next sense QRS complex.
17 Confirm the defibrillator returns to asynchronous mode (sense markers are no longer displayed and sync LED is off).
18 Confirm that the printer annotates the time, date, sync **ON**, sync sense markers prior to energy delivered, energy selected, no sense markers after **SHOCK** 1, and sync **OFF** on the ECG strip.
19 Connect defibrillator to AC power and power off.

Note: The defibrillator may be configured to remain in synchronous mode after discharge.

Note: To perform a defibrillation check with standard paddles *seated in the paddle wells*, perform the user test (page 7-4), not the standard paddles defibrillation check.

©2018 Physio-Control, Inc.

Therapy Cable Monitoring Check

Equipment needed:

- LIFEPAK 20e defibrillator/monitor
- QUIK-COMBO® therapy cable
- QUIK-COMBO 3-lead or 12-lead patient simulator, or posted patient simulator
- Fully charged batteries

Procedure:

1 Press **ON**.
2 Turn on the simulator and select normal sinus rhythm.
3 Connect the therapy cable to the patient simulator.
4 Select **PADDLES** lead.
5 Confirm that the screen shows a normal sinus rhythm and that no ***PADDLES LEADS OFF*** or ***SERVICE*** message appears.
6 Disconnect the therapy cable from the simulator. Confirm the ***PADDLES LEADS OFF*** message appears and an audible alarm sounds.

Therapy Cable Defibrillation and Synchronized Cardioversion Check on Battery Power

Equipment needed:

- LIFEPAK 20e defibrillator/monitor with fully charged internal battery
- QUIK-COMBO therapy cable
- QUIK-COMBO 3-lead or 12-lead patient simulator, or posted patient simulator
- Patient ECG cable

Procedure:

Note: Ensure the defibrillator is connected to AC power 4 hours prior to performing this test. The battery should be fully charged.

1 Disconnect the defibrillator from AC power.
2 Press **ON**.
3 Connect the ECG cable to the monitor and the patient simulator.
4 Connect the therapy cable to the simulator.
5 Turn on the simulator and select any rhythm except asystole or ventricular fibrillation.
6 Select Lead II.
7 Press **SYNC**.
8 Confirm the sync LED lights. Adjust ECG size until the sense markers appear on the QRS complexes. Confirm that the sync LED blinks off with each detected QRS complex and the heart rate is displayed.
9 Select 200 J.
10 Press **CHARGE**.

Note: If the defibrillator takes more than 10 seconds to charge to 200 joules, the battery may need to be replaced. Contact qualified service personnel.

11 Confirm that the tone indicating full charge sounds within 10 seconds or less.
12 Press **PRINT.**

WARNING!

Shock hazard.

During defibrillation checks, the discharged energy passes through the cable connectors. Securely attach cable connectors to the simulator.

13 After the tone sounds, indicating full charge, press and hold **SHOCK** while observing the monitor screen.
14 Confirm the defibrillator discharges on the next sense QRS complex.
15 Confirm the defibrillator returns to asynchronous mode (sense markers are no longer displayed and sync LED is off).
16 Confirm that the printer annotates the time, date, sync **ON**, sync sense markers prior to energy delivered, energy selected, no sense markers after **SHOCK** 1, and sync **OFF** on the ECG strip.
17 Connect defibrillator to AC power and power off.

Note: The defibrillator may be configured to remain in synchronous mode after discharge.

Therapy Cable Pacing Check

Equipment needed:

- LIFEPAK 20e defibrillator/monitor
- QUIK-COMBO therapy cable
- Patient ECG cable
- QUIK-COMBO 3- or 12-lead patient simulator
- Fully charged batteries

Procedure:

1 Press **ON**.
2 Connect the QUIK-COMBO therapy cable to the QUIK-COMBO simulator.
3 Turn on the simulator and select **BRADY**.
4 Connect the ECG cable to the defibrillator and the simulator.
5 Select **LEAD II**.
6 Press **PACER**.
7 Confirm that sense markers appear on each QRS complex. If sense markers do not appear, or appear elsewhere on the ECG, press the selector on waveform Channel 1 and adjust ECG size on the overlay.
8 Confirm that the Rate overlay appears.
9 Press **CURRENT** and increase the current to 80 mA.
10 Observe the screen for captured complexes. Confirm the pacer LED flashes with each delivered pacing pulse.
11 Disconnect the QUIK-COMBO therapy cable from the simulator. Confirm that the pacemaker stops pacing, the ***CONNECT ELECTRODES*** message appears, and an audible alarm sounds.
12 Reconnect the QUIK-COMBO therapy cable to the simulator. Confirm that the audible alarm ceases, the ***PACING STOPPED*** message displays, and that the current is 0 mA.
13 Increase current to 80 mA.
14 Press **CHARGE**. Confirm the pacer LED turns off and the heart rate and available energy appear on the screen.

©2018 Physio-Control, Inc.

GENERAL TROUBLESHOOTING TIPS

If a problem with the defibrillator/monitor is detected during operation or testing, refer to the troubleshooting tips in Table 7-2. If the problem cannot be corrected, remove the defibrillator/monitor from use and contact qualified service personnel.

Table 7-2 General Troubleshooting Tips

Observation	Possible Cause	Corrective Action
1 No power when defibrillator/monitor is turned **ON.**	Low battery voltage.	• Connect to AC power.
2 Defibrillator/monitor operates, but screen is blank.	Operating temperature is too low or too high.	• Connect to AC power.
	Screen is not displaying properly.	• Contact qualified service personnel.
3 ***CHECK PRINTER*** message appears.	Printer paper jams, slips, or misfeeds.	• Reinstall paper.
	Printer is out of paper.	• Add new paper. • If problem persists, contact qualified service personnel.
4 AC Mains LED on defibrillator/monitor not illuminated when connected to AC power.	Loose or improper connection between defibrillator and power source.	• Check power connections and cables.
	Loose or improper connection between defibrillator and CodeManagement Module.	• Contact qualified service personnel.
5 Service LED illuminates.	Device self-test circuitry detects service condition.	• Continue to use defibrillator or pacemaker if needed. • Turn device off and then on again. Note that this creates a new Patient Record. • If service LED does not clear, remove device from active use. • Report occurrence of service LED to qualified service personnel.
6 ECG monitoring problems.		• Refer to Section 3, page 3-5.
7 Problems with AED operation.		• Refer to Section 4, page 4-13.
8 Problems with defibrillation/ synchronized cardioversion.		• Refer to Section 4, page 4-22.
9 Problems with pacing.		• Refer to Section 4, page 4-25.
10 Displayed time is incorrect.	Time is incorrectly set.	• Change the time setting. Refer to Section 2, page 2-8.

Table 7-2 General Troubleshooting Tips (Continued)

Observation	Possible Cause	Corrective Action
11 Date printed on report is incorrect.	Date is incorrectly set.	• Change the date setting. Refer to Section 2, page 2-8.
12 Displayed messages are faint or flicker.	Low battery power. Out of temperature range.	• Connect to AC power immediately.
13 Low speaker volume.	Moisture in speaker grill holes.	• Wipe moisture from speaker grill and allow device to dry.
14 ***MAINTENANCE DUE*** message appears.	Maintenance prompt is set to display at a selected interval in service mode.	• Continue to use device if needed. • Contact service personnel to reset or turn off the maintenance prompt. • Contact Physio-Control Technical Support for instructions on how to reset or turn off this prompt.
15 ***SELF TEST DID NOT COMPLETE*** message appears.	Test plug not connected to QUIK-COMBO therapy cable during daily auto test.	• Connect test plug to QUIK-COMBO therapy cable. • Perform manual user test.
	Standard paddles not seated in paddle wells during daily auto test.	• Make sure standard paddles are securely seated in the paddle wells for daily auto test.
	Defective therapy cable or a problem with the defibrillator.	• Contact qualified service personnel.
16 ***SELF TEST FAILED*** message appears.	Device self-test circuitry detects service condition during daily auto test.	• Use defibrillator or pacemaker if needed in an emergency. • Report occurrence of self-test failure to qualified service personnel.
17 ***USER TEST DID NOT COMPLETE*** message appears.	Test plug not connected to QUIK-COMBO therapy cable during user test.	• Connect test plug to QUIK-COMBO therapy cable for user test.
	Standard paddles not seated in paddle wells during user test.	• Make sure standard paddles are securely seated in the paddle wells for user test.
	Defective therapy cable or a problem with the defibrillator.	• Contact qualified service personnel.
18 ***USER TEST FAILED*** message appears.	Device self-test circuitry detects service condition during user test.	• Use defibrillator or pacemaker if needed in an emergency. • Report occurrence of user-test failure to qualified service personnel.
19 Printout annotated 79 J, but > 79 J was selected.	Paddles discharged when seated in the paddle wells or shorted together.	• Refer to "Standard Paddles Defibrillation and Synchronized Cardioversion Check on Battery Power," page 7-6. • Perform User Test.
20 Defibrillator does not charge to 200 J within 10 seconds while on battery power.	Low battery condition.	• Connect the defibrillator to AC power.
	Defective battery.	• Contact qualified service personnel.

©2018 Physio-Control, Inc.

SERVICE AND REPAIR

WARNINGS!

Shock hazard.

Do not disassemble the defibrillator. It contains no operator serviceable components and dangerous high voltages may be present. Contact qualified service personnel for repair.

Possible ineffective energy delivery.

Service mode is for authorized personnel only. Improper use of service mode may inappropriately alter the device's configuration and may change energy output levels. Contact qualified service personnel for assistance or information about device configuration.

If testing, troubleshooting, or a service message indicates the LIFEPAK 20e defibrillator/monitor requires service, contact qualified service personnel. In the USA, call 1.800.442.1142. Outside the USA, contact your local Physio-Control representative.

When calling Physio-Control to request service, identify the model and serial number and describe the observation. If the device must be shipped to a service center or the factory, pack the device in the original shipping container, if possible, or in protective packing to prevent shipping damage.

The *LIFEPAK 20e Defibrillator/Monitor Service Manual* provides detailed technical information to support service and repair by qualified service personnel.

PRODUCT RECYCLING INFORMATION

All materials should be recycled according to national and local regulations. Contact your local Physio-Control representative for assistance or refer to www.physio-control.com/recycling for instructions on disposing of this product.

Do not dispose of this product or its batteries in the unsorted municipal waste stream. Any batteries must be removed from the device and disposed of separately before disposing of the device. At all times dispose of this product and its batteries according to local regulations.

Recycling Assistance

The defibrillator and its accessories should be recycled according to national and local regulations. Contact your local Physio-Control representative for assistance.

Preparation

The device should be clean and contaminant-free prior to being recycled.

Recycling of Disposable Electrodes

After using disposable electrodes, follow your local clinical procedures for recycling.

Packaging

Packaging should be recycled according to national and local regulations.

WARRANTY

To obtain a detailed warranty statement, contact your local Physio-Control representative or go to www.physio-control.com.

ACCESSORIES, SUPPLIES, AND TRAINING TOOLS

The following accessories are approved for use with the LIFEPAK 20e defibrillator/monitor. To order, contact your Physio-Control representative or order online at store.physio-control.com. For non-CE marked accessories, see the LIFEPAK 20 Accessory Catalog.

Note: The LIFEPAK 20e defibrillator/monitor and its accessories that are intended for direct or casual contact with the patient are not made with natural rubber latex.

Therapy
- QUIK-COMBO® pacing/defibrillation/ECG electrodes
- QUIK-COMBO RTS pacing/defibrillation/ECG electrodes
- QUIK-COMBO Pediatric pacing/defibrillation/ECG electrodes
- QUIK-COMBO pacing/defibrillation/ECG electrodes with REDI-PAK™ preconnect system
- QUIK-COMBO defibrillation cable
- Standard paddles with built-in pediatric paddles
- Internal defibrillation paddles

Monitoring

ECG
- Cleartrace™ ECG electrodes
- 3-wire ECG cable
- 5-wire ECG cable

SpO_2 - Masimo®
- LNOP® Patient cables (4, 8, 12 ft)
- LNCS™ Patient cables (4, 10, 14 ft)
- LNCS Extension cable (4 ft)
- LNOP and LNCS Reusable sensors
- LNOP and LNCS Disposable sensors

SpO_2 - Nellcor™
- Reusable Oximax™ DS-100A Adult sensor
- Dura-Y™ Multisite sensor
- Oxiband Reusable sensor Adult/Neonatal
- MNC-1 Adapter cable for use with Nellcor sensors (4, 10 ft)
- Sensor Extension cable (4, 8 ft)

$EtCO_2$ - Oridion®
- FilterLine® SET Adult/Pediatric
- FilterLine H SET Adult/Pediatric, Infant/Neonatal
- Smart CapnoLine® Plus with O_2 Adult/Intermediate
- Smart CapnoLine Plus Adult/Intermediate
- Smart CapnoLine with O_2 Pediatric
- Smart CapnoLine Pediatric

©2018 Physio-Control, Inc.

Other accessories

- CodeManagement Module for use with the LIFEPAK 20e defibrillator/monitor
- QUIK-COMBO Test Plug
- Docking Station
- Serial Cable (system connector)
- ECG recording paper
- SIGNAGEL® Electrode Gel
- 3-Lead ECG Patient Simulator
- 12-Lead ECG Patient Simulator

SETUP OPTIONS

This section describes how to select setup options for the LIFEPAK 20e defibrillator/monitor.

Setup Options	page 8-2
Entering Setup Options	8-2
General Setup Menu	8-4
Manual Mode Setup Menu	8-5
AED Mode Setup Menu	8-7
CPR Metronome Setup Menu	8-8
Pacing Setup Menu	8-9
Monitoring Menu	8-9
Events Setup Menu	8-10
Alarms Setup Menu	8-11
Printer Setup Menu	8-11
Clock Setup Menu	8-12
Reset Defaults Setup Menu	8-13
Print Defaults	8-13
Send Configuration Setup Menu	8-13
Set Passcodes Setup Menu	8-14
Service Mode	8-14

©2018 Physio-Control, Inc.

SETUP OPTIONS

Setup options allow you to define operating features for the LIFEPAK 20e defibrillator/monitor such as device identification numbers and default settings. Table 8-1 through Table 8-21 list all setup options along with the factory default settings.

Setup options can be selected in either of two ways:

- Use the Setup Options menu on the LIFEPAK 20e device. See "Entering Setup Options," page 8-3, for more information.
- Use LIFENET Device Agent to manage setup options on the LIFEPAK 20e device. See the Help system for LIFENET Device Agent for more information.

WARNING!

Possible improper defibrillator performance.

Changing factory default settings will change the behavior of the device. Changes to the default settings must only be made by authorized personnel.

Print Configurations Before Service or Repair

If the defibrillator receives service or repair that affects the internal memory components, such as replacement of the main printed circuit board, any changes previously made to the option definitions may be lost from memory. Before allowing service or repair, be sure to print the current user setup defaults so the customized definitions may be reentered after service or repair. (Refer to "Print Defaults," page 8-13.)

Passcode Security

To prevent unauthorized access, a security passcode is required for access to the Setup menu and service mode (refer to page 8-14). The LIFEPAK 20e defibrillator/monitor allows you to change both of these passcodes. The passcode definition is part of the device identification option.

Note: To use the defibrillator with any new settings, you must turn the defibrillator off and on again.

WARNING!

Possible ineffective energy delivery.

Service mode is for authorized personnel only. Improper use of service mode may inappropriately alter the defibrillator's configuration and may change energy output levels. Contact service personnel for assistance or information about defibrillator configuration.

ENTERING SETUP OPTIONS

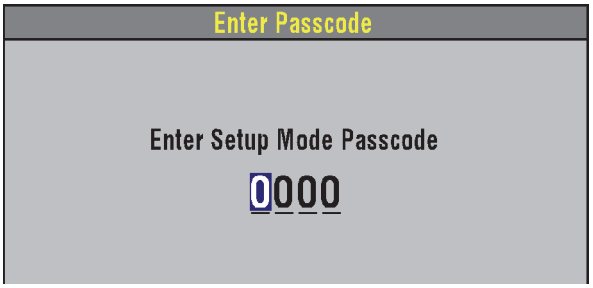

To enter the Setup menu:

1 Press **ON** while holding down **OPTIONS** and **EVENT.** Continue to hold these controls down until the passcode screen appears.

2 Enter the passcode by scrolling through the digits in the highlighted fields.

3 Select the digit. The digit changes to a dot to protect the passcode. If you enter the correct digit, the next number in line highlights automatically.

When you have entered the correct passcode, the setup overlay appears.
If you enter the passcode incorrectly, the message ***PASSCODE INCORRECT—TRY AGAIN*** appears in the status message area. You have three chances to enter the passcode correctly. Turn the power off and on to start again.

Pressing **HOME SCREEN** after selecting a menu item returns you to the Setup screen.

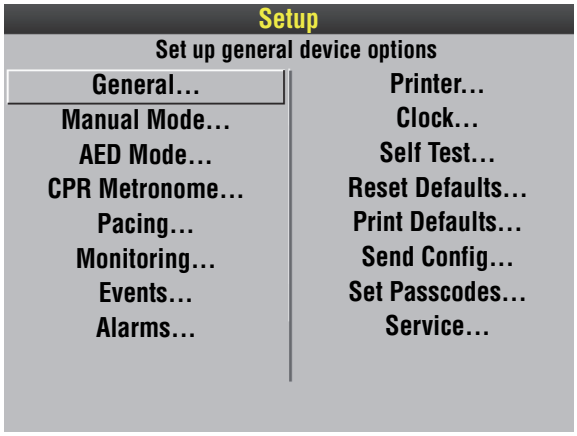

©2018 Physio-Control, Inc.

GENERAL SETUP MENU

The General Setup menu allows you to define general purpose settings. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-1 General Setup Menu

Menu Item	Help Message	Options
LANGUAGE	Language used for all messages and prompts	Options are: **ENGLISH**, **FRENCH, GERMAN, SPANISH, SWEDISH, ITALIAN, DUTCH, FINNISH, DANISH, NORWEGIAN, POLISH, PORTUGUESE, BRAZILIAN, JAPANESE, CHINESE MANDARIN, CZECH, RUSSIAN, HUNGARIAN,** and **KOREAN**.
CODE SUMMARY	CODE SUMMARY Format	Options are: **SHORT** and **MEDIUM** (refer to page 6-2).
SITE NUMBER	Site ID Number	Prints on reports. **0-9, A-Z** available**.** Maximum 25 digits.
DEVICE NUMBER	Defibrillator ID Number	Prints on reports. **0-9, A-Z** available. Maximum 25 digits.
AUTO LOG	Auto vital sign event capture every 5 minutes	**ON**: Vital sign data entered into event/vital sign log every 5 minutes. **OFF**: Vital sign entered only when events occur.
LINE FILTER	Line filter center frequency	**50** or **60 HZ**.
TIMEOUT SPEED	Delay before a menu is dismissed	Time that menus stay on screen (**30**, **10**, or **5 SECONDS**). (Pacing and Transmit menus are fixed at 30 seconds.)
AC LOSS ALERT	A series of warning beeps if the defibrillator is turned off and not connected to AC power.	Options are: **5**, **15**, or **30 MINUTES**, or **NEVER ALERT**.
PREVIOUS PAGE		Go back to previous page.

MANUAL MODE SETUP MENU

The Manual Mode Setup menu allows you to define defibrillation and synchronized cardioversion settings. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-2 Manual Mode Setup Menu

Menu Item	Help Message	Options
SYNC	Set up sync defaults	Refer to Table 8-3.
PADDLES DEFAULT	Default energy for paddles or QUIK-COMBO electrodes	Power-on energy setting for standard paddles and therapy electrodes: **2, 5, 10, 50, 100, 125, 150, 175, 200** (joules), or **ENERGY PROTOCOL**.
ENERGY PROTOCOL...	Energies for energy protocol	Refer to Table 8-4.
INTERNAL DEFAULT	Default energy for internal paddles	Power-on energy setting for internal paddles: **2**, **5, 10, 20, 30,** or **50**.
VOICE PROMPTS	Voice prompts active in manual mode	**ON**: Voice prompts active. **OFF**: Voice prompts inactive.
SHOCK TONE	Tone when defibrillator is fully charged	**ON**: A tone sounds. **OFF:** No tone.
MANUAL ACCESS	Means for accessing manual mode	**MANUAL / DIRECT:** No restrictions to manual mode. **AED / DIRECT:** No restrictions to AED mode. **AED / CONFIRM**: Confirmation required to gain manual access. **AED / PASSCODE**: Passcode required to enter manual mode.
SET PASSCODE...	Passcode required to enter manual mode	If configured for passcode access: None: Default passcode enabled. New: User-defined 4-digit code enabled.

Table 8-3 Synchronization Defaults

Menu Item	Help Message	Options
SYNC AFTER SHOCK	Resume sync after energy transfer	**ON**: Defibrillator returns to synchronous mode after energy transfer. **OFF**: Defibrillator returns to asynchronous mode.
REMOTE SYNC	Allow sync with remote monitor	**ON**: Remote synchronization active with connection to a compatible remote monitor. **OFF**: No remote monitor connection active.

©2018 Physio-Control, Inc.

Table 8-4 Manual Mode Energy Protocol Setup Menu

Menu Item	Help Message	Options
PRESET PROTOCOL	Select preset energy protocol	**FULL RANGE**, **PEDIATRIC**.
ENERGY 1	Select energy level for shock 1	Full range: **100, 125, 150, 175**, **200**, **225, 250, 275, 300, 325, 360**. Pediatric: **2, 3, 4**, **5**, **6, 7, 8, 9, 10, 15, 20, 30, 50, 70, 100**.
ENERGY 2*	Select energy level for shock 2	Full range: **100, 125, 150, 175, 200, 225, 250, 275**, **300**, **325, 360**. Pediatric: **2**, **3**, **4**, **5**, **6**, **7**, **8**, **9**, **10**, **15**, **20**, **30**, **50**, **70**, **100**.
ENERGY 3*	Select energy level for shock 3	Full range: **100, 125, 150, 175, 200, 225, 250, 275, 300, 325**, **360**. Pediatric: **2, 3, 4, 5, 6, 7, 8, 9,** **10**, **15, 20, 30, 50, 70, 100, 125, 150**.

***ENERGY 2** cannot be less than **ENERGY 1**. **ENERGY 3** cannot be less than **ENERGY 2**.

To activate, select **ENERGY PROTOCOL** in the Paddle Default menu. Auto energy sequences are disabled if you press the **ENERGY SELECT** control or change to or from AED mode during use.

AED MODE SETUP MENU

The AED Mode Setup menu allows you to define automated external defibrillator (AED) settings. When you select a menu item, the screen displays a help message describing the option. The underlined options are factory default settings and are consistent with 2015 American Heart Association (AHA) and European Resuscitation Council (ERC) guidelines. Refer to Appendix G for a more detailed description of CPR setup options.

Table 8-5 AED Mode Setup Menu

Menu Item	Help Message	Options
ENERGY PROTOCOL...	Sequence of defibrillation energies	Refer to Table 8-7.
VOICE PROMPTS	Voice prompts on in AED Mode	**ON:** Voice prompt active. **OFF**: Voice prompt inactive.
AUTO ANALYZE	Select Auto Analyze options	**AFTER 1ST SHOCK**: The second and third rhythm analyses of each three-shock stack start automatically. (Stacked Shocks must be set to **ON**.) **OFF**: Auto analyze inactive.
MOTION DETECTION	Alert when motion is detected	**ON** or **OFF**.
ECG DISPLAY	Display ECG waveform in AED Mode.	**ON** or **OFF**.
CPR...	Set CPR options for AED Mode	
PULSE CHECK	Enable Pulse Check prompt	**ALWAYS**: After every stack of shocks and every NSA finding. **AFTER EVERY NSA**: Only after ***NO SHOCK ADVISED.*** **AFTER SECOND NSA**: After every NSA except for first analysis NSA result. **NEVER:** Never prompt for ***PULSE CHECK***.

Table 8-6 AED Mode CPR Setup Mode

Menu Item	Help Message	Options
CPR TIME 1	Set CPR interval after shocks	**15**, **30**, **45**, **60**, **90**, **120**, **180 SECONDS**, or **30 MINUTES**
CPR TIME 2	Set CPR interval after **NO SHOCK ADVISED**	**15**, **30**, **45**, **60**, **90**, **120**, **180 SECONDS**, or **30 MINUTES**
INITIAL CPR	Enable Initial CPR	**OFF**, **ANALYZE FIRST**, **CPR FIRST**
INITIAL CPR TIME	Set CPR interval for initial CPR	**15**, **30**, **45**, **60**, **90**, **120**, **180 SECONDS**

©2018 Physio-Control, Inc.

Table 8-6 AED Mode CPR Setup Mode (Continued)

Menu Item	Help Message	Options
PRESHOCK CPR	Set CPR interval after shock advised decisions	**OFF, 15, 30 SECONDS**

Table 8-7 AED Mode Energy Protocol Setup Menu

Menu Item	Help Message	Options
PRESET PROTOCOLS	Select a preset energy protocol	Energy 1: **150**, **175**, **200**, **225**, **250**, **275**, **300**, **325**, **360** Energy 2: **150**, **175**, **200**, **225**, **250**, **275**, **300**, **325**, **360** Energy 3: **150**, **175**, **200**, **225**, **250**, **275**, **300**, **325**, **360** Energy 2 cannot be less than Energy 1. Energy 3 cannot be less than Energy 2.
FLEXIBLE PROTOCOLS	Repeat previous energy after ***NO SHOCK ADVISED***	**ON** or **OFF**.
STACKED SHOCKS	Enable consecutive shocks without CPR	**ON** or **OFF**.

CPR METRONOME SETUP MENU

The CPR Metronome Setup menu allows you to enable the CPR metronome for AED mode, and define the C:V (compression to ventilation) ratio for each Age-Airway setting. The C:V ratio is adjustable to provide different settings based on patient age and airway status and according to local medical protocols.

Table 8-8 CPR Metronome Setup Menu

Menu Item	Help Message	Options
METRONOME	Enable metronome during CPR	**ON** or **OFF** (Turns metronome on or off for AED mode.)
ADULT – NO AIRWAY	Set Adult – No Airway compression/ventilation ratio	**30:2**, **16:1**, **15:2**, **12:1**, **10:1**, **100:0**
ADULT – AIRWAY	Set Adult – Airway compression/ventilation ratio	**30:2**, **16:1**, **15:2**, **12:1**, **10:1**, **100:0**
YOUTH – NO AIRWAY	Set Youth – No Airway compression/ventilation ratio	**30:2**, **16:1**, **15:2**, **12:1**, **10:1**, **100:0**
YOUTH – AIRWAY	Set Youth – Airway compression/ventilation ratio	**30:2**, **16:1**, **15:2**, **12:1**, **10:1**, **100:0**

PACING SETUP MENU

The Pacing Setup menu allows you to define noninvasive pacemaker settings. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-9 Pacing Setup Menu

Menu Item	Help Message	Options
RATE	Default pacing rate	**40–170**, **60 PPM**.
CURRENT	Default pacing current	**0–200 mA**.
MODE	Default pacing mode	**DEMAND** or **NON-DEMAND**.
INTERNAL PACER	Detect internal pacemaker and print arrows	**DETECTION OFF** or **DETECTION ON.**

MONITORING MENU

Use the Monitoring menu to define settings for the ECG and SpO_2 monitoring. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-10 Monitoring Menu

Menu Item	Help Message	Options
CHANNELS...	Set up default channel waveforms	Refer to Table 8-11.
CONTINUOUS ECG	Continuously store ECG waveform	**ON** or **OFF**.
SPO2 TONE	SpO2 pulse tone	**ON** or **OFF**.
CO2...	Set up CO2 defaults	Refer to Table 8-13.

Channels Setup Menu

To define the default set and up to five optional waveform sets for Channels 1 and 2, select an item from the Channels Setup menu.

Table 8-11 Channels Setup Menu

Menu Item	Help Message	Options
Default **SET**	Select default waveform set	**SET 1**, **SET 2**, **SET 3**, **SET 4**, or **SET 5**.
SET 1	Select channel waveforms for Set 1	Refer to Table 8-12.
SET 2	Select channel waveforms for Set 2	Refer to Table 8-12.
SET 3	Select channel waveforms for Set 3	Refer to Table 8-12.
SET 4	Select channel waveforms for Set 4	Refer to Table 8-12.
SET 5	Select channel waveforms for Set 5	Refer to Table 8-12.

©2018 Physio-Control, Inc.

Waveform Sets Setup Menu

Table 8-12 Waveform Sets Setup Menu

Menu Item	Help Message	Options*
CHANNEL 1	Select waveform for Channel 1	**PADDLES, ECG LEAD I, ECG LEAD II, ECG LEAD III, (AVR, AVL, AVF, C)**
CHANNEL 2	Select waveform for Channel 2	**NONE**, **CASCADING ECG, PADDLES, ECG LEAD I, ECG LEAD II, ECG LEAD III, (AVR, AVL, AVF, C), SPO2, CO2**

*Only available leads appear as options.

CO_2 Setup Menu

Table 8-13 CO_2 Setup Menu

Menu Item	Help Message	Options*
UNITS	Set up CO2 units of measure	**mmHg**, **%**, **kPa**
BTPS	Apply body temperature correction factor to EtCO2 value	**ON** or **OFF**

EVENTS SETUP MENU

Use the Events Setup menu to configure or create user-annotated events. When you select a menu item, the screen displays a help message.

Table 8-14 Events Setup Menu

Menu Item	Help Message	Options
EVENTS PAGE 1	Select events for Page 1	Select events 2 to 9 from a preset list.
EVENTS PAGE 2	Select events for Page 2	Select events 10 to 18 from a preset list.
CUSTOM EVENTS	Create custom events to use in event screen	Create up to 16 event names to include in the preset list. Resetting to defaults will delete the custom list.

ALARMS SETUP MENU

The Alarms Setup menu allows you to define alarms and set the alarm volume level. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-15 Alarms Setup Menu

Menu Item	Help Message	Options
VOLUME	Set volume for alarms, tones, and voice prompts	Select volume level from gradient display. The minimum setting reduces but does not silence alarms.
ALARMS	Enable alarms at power up	**ON**: Enables alarms for Heart Rate, SpO_2, and CO_2 whenever defibrillator power is turned on. **OFF**: Alarms available through **ALARMS** button.
VF/VT ALARM	Alarms when VF or VT detected	**ON**: Enables VF/VT alarm whenever defibrillator power is turned on. **OFF**: VF/VT alarm available through **ALARMS** button.

PRINTER SETUP MENU

The Printer Setup menu allows you to define automatic event printing and ECG frequency response. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-16 Printer Setup Menu

Menu Item	Help Message	Options
AUTO PRINT	Specify Auto Print Event	Refer to Table 8-17.
ECG MODE	Default ECG frequency response	**MONITOR** or **DIAGNOSTIC**
MONITOR MODE	Default monitor frequency response for printer and display	**1–30 HZ** or **.5–40 HZ**.
DIAGNOSTIC MODE	Default diagnostic frequency response for printer	**.05–40 HZ** or **.05–150 HZ**.
ALARM EVENTS	Print waveforms with alarm events and print with CODE SUMMARY report	**ON** or **OFF**.
EVENT WAVEFORMS	Print waveforms with user-entered events and print with CODE SUMMARY report	**ON** or **OFF**.

©2018 Physio-Control, Inc.

Auto Print Setup Menu

Table 8-17 Auto Print Setup Menus

Menu Item	Help Message	Options
DEFIBRILLATION	Auto print defibrillation events	**ON** or **OFF**.
PACING	Auto print pacing events	**ON** or **OFF**.
CHECK PATIENT	Auto print check patient events	**ON** or **OFF**.
SAS	Auto print SAS events	**ON** or **OFF**.
PATIENT ALARMS	Auto print patient alarms	**ON** or **OFF**.
EVENTS	Auto print operator annotated events	**ON** or **OFF**.
INITIAL RHYTHM	Auto print initial rhythm	**ON** or **OFF**.
SELF TEST	Auto print self test result	**ON** or **OFF**.

CLOCK SETUP MENU

Use the Clock Setup menu to define settings for the time to be displayed. When you select a menu item, the screen displays a help message. The underlined options are factory default settings.

Table 8-18 Clock Setup Menu

Menu Item	Help Message	Options
TIME ZONE	Select time zone for this device	**NONE**, 74 time zone settings.
DATE/TIME	Set current date and time	Current date will be active next time device is turned on.*
CLOCK MODE	Real or elapsed time on display	**REAL TIME** or **ELAPSED TIME**.
DST	Daylight saving time	**ON** or **OFF**.

* The date and time are automatically updated when the CodeManagement Module connects to the LIFENET System.

RESET DEFAULTS SETUP MENU

Use the Reset Defaults menu to configure the defibrillator for all factory default settings.

Table 8-19 Reset Defaults Setup Menu

Menu Item	Help Message	Options
CANCEL	Cancel and return to Setup screen	Cancels reset operation.
RESET	Reset to factory configuration settings	Resets setup parameters to the factory default settings, except the maintenance interval, which remains unchanged.

PRINT DEFAULTS

Use the Print Defaults menu to print the current device configuration.

SEND CONFIGURATION SETUP MENU

Use the Send Configuration Setup menu to transfer the setup in one device to overwrite the setup in another device. You can send setup configurations between devices with different features because all devices have identical setup menus, regardless of features.

Note: If a CodeManagement Module is attached to the defibrillator, the Send Configuration Setup option will not function. In this case, you should use the LIFENET System to manage device configurations.

To send the setup from one device to another:

1 Connect the transport configuration cable to the system connector port on both devices.
2 Turn on the sending defibrillator and enter setup mode (refer to page 8-2).
3 Select the **SEND CONFIG...** menu option.
4 Turn on the receiving defibrillator.
5 On the sending defibrillator, click **SEND** and then follow the screen prompts.

Table 8-20 Send Configuration Setup Menu

Menu Item	Help Message	Options
SEND	Send device configuration to another device.	Connect devices with a cable, display this screen on both defibrillators, and then select **SEND**.
PREVIOUS PAGE	Go back to previous page.	Cancels the operation.

©2018 Physio-Control, Inc.

SET PASSCODES SETUP MENU

Use the Set Passcodes menu to change the factory default passcode of 0000 to some other number. If you lose the setup passcode, contact the factory for assistance.

Table 8-21 Set Passcodes Setup Menu

Menu Item	Help Message	Options
SETUP MODE	(The current passcode appears.) Set passcode to enter setup mode	Rotate the Speed Dial to select digits.
ARCHIVES ACCESS	Select passcode access for archives mode	**NO PASSCODE, ARCHIVES ONLY, DELETE ONLY, ARCHIVES/DELETE**.
ARCHIVES MODE	Set passcode to enter archives mode.	Rotate the Speed Dial to select digits.
DELETE RECORDS	Set passcode to delete records in archives mode.	Rotate the Speed Dial to select digits.

SERVICE MODE

The service mode contains tests and logs intended for service personnel. For specific information concerning access to the service mode, refer to the *LIFEPAK 20e Defibrillator/ Monitor Service Manual*.

APPENDIX A

SPECIFICATIONS AND PERFORMANCE CHARACTERISTICS

©2018 Physio-Control, Inc.

All specifications are at 20°C (68°F) unless otherwise stated.

GENERAL

Classification	Defibrillator—Externally powered Class 1 with battery backup (per IEC 60601-1)
	Applied parts—ECG is Type CF patient connection. Therapy, SpO_2, and CO_2 are Type BF patient connections (per IEC 60601-1). Therapy with internal electrodes is Type CF patient connection.

The LIFEPAK 20e defibrillator/monitor has seven main operating modes:

Manual Mode	Provides normal operating capability for ALS users
AED Mode	Provides normal operating capability for BLS users
Archive Mode	Allows operator to print, edit or delete previous patient records
Setup Mode	Allows operator to configure the instrument
Service Mode	Allows operator to execute device diagnostic tests and calibrations
Inservice Mode	Provides simulated waveforms for demonstration purposes
Auto Test Mode	Provides daily automatic tests of critical circuits

POWER

AC Powered	100-120 VAC 50/60 HZ, 220-240 VAC 50/60 HZ. Total power draw less than 120 Volt-Amperes (VA), or less than 150 VA with the CodeManagement Module installed.

Operating Time

A new, fully charged, internal backup battery provides a minimum of the following prior to shutdown:

	--total--	--after low battery--
Monitoring plus SpO_2 (minutes)	210	5
Defibrillation (360 J discharges):	140	3
Monitoring Plus Pacing (minutes at 100 mA, 60 ppm) Plus SpO_2:	110	2

Battery Charging Time	Battery charges while defibrillator operates from AC power. Typical battery charge time of less than four hours when defibrillator is powered off and AC power is applied.
Low Battery Indication	Low battery message in status area and warning tone sounds.

©2018 Physio-Control, Inc.

Battery Status Indicator	Indicates available battery capacity for defibrillator.
A Service Indicator	When Error Detected.

PHYSICAL CHARACTERISTICS

Weight (maximum)	Basic defibrillator/monitor: 5.31 kg (11.7 lb)	
	Fully featured defibrillator/monitor (Pacing, SpO_2, and door) without paper or cables: 5.58 kg (12.3 lb)	
	QUIK-COMBO cable, add: 0.20 kg (0.43 lb) For Standard (Hard) Paddles, add: 0.88 kg (1.95 lb)	
	CodeManagement Module, add: 1.63 kg (3.6 lb)	
Size (maximum)	LIFEPAK 20e device	LIFEPAK 20e device with CodeManagement Module
Height	21.3 cm (8.4 in.)	25.4 cm (10.0 in.)
Width	26.2 cm (10.3 in.)	26.2 cm (10.3 in.)
Depth	26.2 cm (10.3 in.)	29.7 cm (11.7 in.)

DISPLAY

Size (active viewing area)	115.18 mm (4.53 in.) wide x 86.38 mm (3.4 in.) high
Display Type	320 dot x 240 dot color LCD
	Displays a minimum of 3.7 seconds of ECG and alphanumerics for values, device instructions, or prompts
	Option to display one additional waveform
	Waveform display sweep speed: 25 mm/sec for ECG and SpO_2; 12.5 mm/sec for CO_2

DATA MANAGEMENT

	The device captures and stores patient data, events (including waveforms and annotations), and continuous ECG and CO_2 waveform records in internal memory
	The user can select and print reports
Report Types	Two format types of CODE SUMMARY critical event record (short and medium)
	• Initial ECG (except short format)
	• Auto vital sign measurements every 5 minutes
Memory Capacity	Two full-capacity patient records that include CODE SUMMARY critical event records - up to 100 single waveform events

MONITOR

ECG	ECG is monitored via several cable arrangements. A 3-wire cable is used for 3-lead ECG monitoring. A 5-wire cable is used for 3-lead ECG plus AVR, AVL, AVF, and C. Standard paddles or therapy electrodes (QUIK-COMBO pacing/ defibrillation/ECG electrodes) are used for Paddles lead monitoring. Compatible with LIFEPAK 12 ECG and Therapy Cables.
Lead Selection	Leads I, II, III (3-wire ECG cable) Leads I, II, III, AVR, AVL, AVF, and C acquired simultaneously (5-wire ECG cable)
ECG Size	4, 3, 2.5, 2, 1.5, 1, 0.5, 0.25 cm/mV
Heart Rate Display	20–300 bpm digital display Out of range indication: Display symbol "---" Heart symbol flashes for each QRS detection Accuracy: ±4% or ±3 bpm, whichever is greater
Recovery Time after Defibrillation	10 seconds
Continuous Patient Surveillance System (CPSS)	In AED mode, while Shock Advisory System is not active, CPSS monitors the patient, via QUIK-COMBO paddles or Lead II ECG, for potentially shockable rhythms.
Voice Prompts	Used for selected warnings and alarms (configurable on/off).
Analog ECG Output	1 V/mV x 1.0 gain <35 msec delay. No internal pacemaker pulse enhancement or detection markers included.
Common Mode Rejection	90 dB at 50/60 Hz
Pacemaker Pulse Rejection	Rejects pacemaker pulses having amplitudes from ±2 mV to ±700 mV and pulse widths from 0.1 ms to 2.0 ms with and without overshoot. Pacemaker pulse overshoot of up to 4 ms time constant is defined as 2.5% to 25% of the pacemaker pulse amplitude not to exceed 2 mV. Refer to IEC 60601-2-27. **Note:** Does not apply when internal paddles are connected.
SpO_2	Masimo® sensors
Saturation Range	1 to 100%

Saturation accuracy is specified for range 70–100% (0–69% unspecified)

Adults/Pediatrics Accuracy (RMS)*	±2% (during no motion conditions - Masimo) ±3% (during no motion conditions - Nellcor) ±3% (during motion conditions - Masimo)
Neonatal Accuracy (RMS)*	±3% (during no motion conditions - Masimo) ±4% (during no motion conditions - Nellcor) ±3% (during motion conditions - Masimo)

*Because the above SpO_2 measurements are statistically distributed, only about two-thirds of the measurements can be expected to fall within the accuracies specified above.

©2018 Physio-Control, Inc.

Dynamic Signal Strength Bar Graph	
Pulse Tone at the Onset of the Pleth Waveform	
SpO_2 Averaging Time	User selectable 4, 8, 12 or 16 seconds
SpO_2 Data Update Period	1 second
SpO_2 Alarm Condition Delay	21 seconds (maximum time from physiological change to detection by device, with default 8 second averaging selected)
SpO_2 Alarm Signal Generation Delay	1 second (time for device to generate alarm after alarm condition is detected)
SpO_2 Measurement	Functional SpO_2 values are displayed and stored
Pulse Rate Range	25 to 240 pulses per minute
Pulse Rate Accuracy	
Adults/Pediatrics/ Neonates	±3% (during no motion conditions) ±5% (during motion conditions)
SpO_2 Waveform with Autogain Control	
SpO_2 Measurement Wavelengths	
Note: Information about wavelength range can be useful to clinicians, for example, when performing photodynamic therapy.	
Masimo	Red: 660 nanometers Infrared: 905 nanometers
Nellcor	Red: 660 nanometers Infrared: 900 nanometers
SpO_2 Optical Power	
Masimo	Maximum optical output power = 15 mW
Nellcor	Maximum optical output power = 15 mW
Alarms	
Quick Set	Activates alarms for all parameters
VF/VT Alarm	Activates continuous CPSS monitoring in Manual Mode

CO_2

CO_2 Range	0 to 99 mmHg (0 to 13.2 kPa) Units: mmHg, %, or kPa	
CO_2 Accuracy*	CO_2 partial pressure at sea level:	Accuracy:
(0–80 bpm)**	0 to 38 mmHg (0 to 5.1 kPa)	±2 mmHg (0.27 kPa)
	39 to 99 mmHg (5.2 to 13.2 kPa)	±5% of reading + 0.8% for every 1 mmHg (0.13 kPa) above 38 mmHg (5.1 kPa)
(>80 bpm)	0 to 18 mmHg (0 to 2.4 kPa)	±2 mmHg (0.27 kPa)
	19 to 99 mmHg (2.53 to 13.2 kPa)	±4 mmHg (0.54 kPa) or ±12% of reading, whichever is higher
	*Determined by the methods in ISO 21647.	
	**For RR > 60 bpm, to achieve specified CO_2 accuracy, the Microstream® FilterLine® H Set for infants must be used.	
	The accuracy specifications listed above are maintained within an additional 4% in the presence of interfering gases defined in ISO 80601-2-55.	
Drift of Measurement Accuracy	No drift in accuracy for at least 6 hours	
Respiration Rate Accuracy	0 to 70 bpm: ±1 bpm 71 to 99 bpm: ±2 bpm	
Respiration Rate Range	0 to 99 breaths/minute	
Flow Rate	42.5 to 65 ml/min (measured by volume)	
Rise Time	190 msec	
Response Time	4.5 seconds with 200 cm FilterLine tubing 6.5 seconds with 400 cm FilterLine tubing (includes delay time and rise time)	
Initialization Time	30 seconds (typical), 10–180 seconds	
Ambient Pressure	Automatically compensated internally	
Waveform Scale Factors	Autoscale, 0–20 mmHg (0–4 Vol%), 0–50 mmHg (0–7 Vol%), 0–100 mmHg (0–14 Vol%)	

PRINTER

	Prints continuous strips of the displayed patient information
Paper Size	50 mm (2.0 in.)
Print Speed	Continuous ECG 25 mm/sec ±5%
	25 mm/sec print speed for CODE SUMMARY Reports
Delay	8 seconds
Autoprint	Waveform events print automatically (user configurable)

©2018 Physio-Control, Inc.

FREQUENCY RESPONSE	
Diagnostic Frequency Response	0.05 to 150 Hz or 0.05 to 40 Hz (user configurable)
Monitor Frequency Response	0.67 to 40 Hz or 1 to 30 Hz (user configurable)
Paddles Frequency Response	2.5 to 30 Hz
Analog ECG Output Frequency Response	0.67 to 32 Hz (except 2.5 to 30 Hz for Paddles ECG)
DEFIBRILLATOR	
Manual	
Energy Select	2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 30, 50, 70, 100, 125, 150, 175, 200, 225, 250, 275, 300, 325, and 360 J or one of two user configurable protocols of three sequential shock levels
Full Range	100–360, 100–360, 100–360 J
Pediatric	2–100, 2–100, 2–150 J
Charge Time	Charge time to 200 J in less than 5 seconds with fully charged battery Charge time to 360 J in less than 7 seconds with fully charged battery Charge time to 360 J in less than 10 seconds while not in low battery operations
Synchronous Cardioversion	Energy transfer begins within 60 msec of the QRS peak Energy transfer begins with 25 msec of the External Sync Pulse External Sync Pulse: 0-5V (TTL Level) Pulse, active High, > 5 msec in duration, no closer than 200 msec apart and no further than 1 sec apart
Paddles Leads Off Sensing	When using QUIK-COMBO electrodes, the device indicates Paddles Leads Off if the resistive part of the patient impedance is greater than 300 ± 15% Ω, or if the magnitude of the patient impedance is greater than 440 ± 15% Ω.
Waveform	Biphasic Truncated Exponential
	The following specifications apply from 25–200Ω, unless otherwise specified.
	Energy Accuracy: ±1 J or 10% of setting, whichever is greater, into 50Ω; ±2 J or 15% of setting, whichever is greater, into any impedance from 25–100Ω.
	Voltage Compensation: Active when therapy electrodes are in contact with patient. Energy output within ±5% or ±1 J, whichever is greater, of 50Ω value limited to the available energy which results in the delivery of 360 J into 50Ω.

Waveform Shape and Measured Parameters

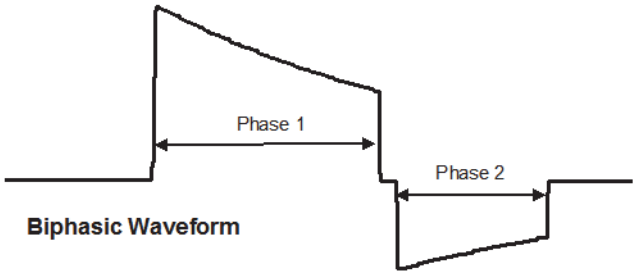

Patient Impedance (Ω)	Phase 1 Duration (ms)		Phase 2 Duration (ms)		Tilt (%)	Delivered Energy (Joules)
	Min	Max	Min	Max	Nominal	
25	5.1	6.0	3.4	4.0	77.5	360
50	6.8	7.9	4.5	5.3	65.8	370
100	8.7	10.6	5.8	7.1	52.6	342
125	9.5	11.2	6.3	7.4	47.8	326
200	10.9	13.4	7.3	9.0	38.5	284

©2018 Physio-Control, Inc.

Rated Energy Output

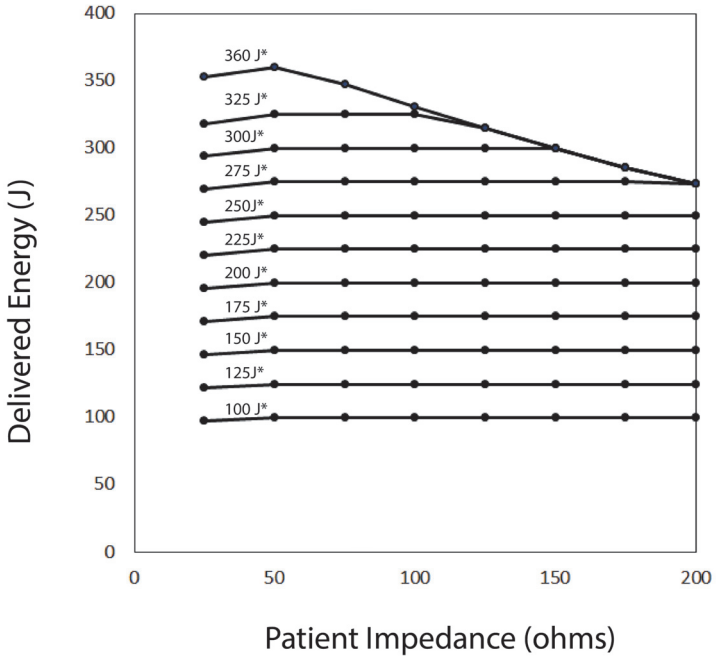

*Selected Energy

Paddle Options	QUIK-COMBO pacing/defibrillation/ECG electrodes (standard)
	Standard Paddles (optional)
	Internal Paddles (optional)
Cable Length	2.4 m (8 ft) long QUIK-COMBO cable (not including electrode assembly)
AED Mode	
Shock Advisory System	ECG analysis system that advises the operator if the algorithm detects a shockable or nonshockable ECG rhythm. Shock Advisory System acquires ECG via therapy electrodes only.
Shock Ready Time (AED Mode)	Using a fully charged battery at normal room temperature, the defibrillator is ready to shock within 16 seconds of power on, if the initial rhythm finding is **SHOCK ADVISED**.
Output Energy	One user configurable protocol with three sequential shock levels
Full Range	150–360, 150–360, 150–360 J

PACER

Pacing Mode	Demand or non-demand Rate and current defaults (user configurable)
Pacing Rate	40 to 170 ppm
Rate Accuracy	±1.5% over entire range
Output Waveform	Monophasic, amplitude stable to ±5% relative to leading edge for currents greater than or equal to 40 mA, Duration 20 ±1 msec, Rise/Fall times <= 1 msec [10-90% levels]
Output Current	0 to 200 mA
Output Current Accuracy	±10% or 10 mA, whichever is greater over the specified load impedance range
Pause	Pacing pulse frequency reduced by a factor of 4 when activated
Refractory Period	200 to 300 msec ±3% (function of rate)
Physio-Control Therapy Electrode Post-Pacing Performance per IEC 60601-2-4	After pacing: AC large signal impedance ≤ 4.2 Ω DC offset voltage ≤ 1053 mV After pacing followed by 360 J shock: DC offset voltage ≤ 1228 mV, 4 seconds after shock DC offset voltage ≤ 966 mV, 60 seconds after shock

ENVIRONMENTAL

Temperature, Operating	0° to 40°C (32° to 104°F)
Temperature, Non-Operating	-20° to 60°C (-4° to 140°F) except therapy electrodes
Relative Humidity, Operating	5 to 95%, non-condensing
Atmospheric Pressure, Operating	Ambient to 522 mmHg (0 to 3048 meters) (0 to 10,000 ft)
Water Resistance, Operating (without accessories except for ECG Cable and Hard Paddles)	IPX1 (vertically dripping water) per IEC 60529
EMC	IEC 60601-1-2, Medical Equipment-General Requirements for Safety-Collateral Standard: Electromagnetic Compatibility-Requirements and Tests.
Shock (drop)	1 drop on each side from 45.7 cm (18 in.) onto a steel surface
Vibration	MIL-STD-810E Method 514.4, Cat 1

©2018 Physio-Control, Inc.

CHARACTERISTIC	
Respiration, Leads Off Sensing, Noise Cancellation Current, and Voltage	The ECG leads off function uses AC current at 57.1 kHz for sensing leads off, the disposable defibrillation electrodes use AC current at 57.1 kHz for leads off, and the ECG leads use a noise cancellation signal which ranges from DC to approximately 5k Hz. The amplitude of these signals conforms to IEC 60601-1.
Heart Rate Averaging Method	The heart rate average is formed by a weighted average of approximately 8 seconds duration. When the input rate is trending rapidly, the rate meter will track more quickly. refer to heart rate response time disclosure. The display update interval is every heartbeat or every 2 seconds, whichever is shorter.
Heart Rate Step Response Time	80 bpm to120 bpm input step change: ≤ 10 seconds to indicate a minimum of 100 bpm. 80 bpm to 40 bpm input step change: ≤ 10 seconds to indicate a maximum of 60 bpm.
Heart Rate With Irregular Rhythm	The rate meter output can range from the heart rate associated with the shortest R-R interval to the heart rate associated with the longest R-R interval. When present, intermediate length R-R intervals are favored as the basis for the rate. When evaluated per IEC 60601-2-27, rates are as follows: • A1. Ventricular bigeminy: HR = 80 to 86 • A2. Slow alternating ventricular bigeminy: HR = 60 to 63 • A3. Rapid alternating ventricular bigeminy: HR = 123 to 124 • A4. Bidirectional systoles: HR = 97 to 99
Heart Rate Alarm Time	In five trials for a 1 mV, 206 bpm tachycardia, the average detection time was 7.1 seconds. The maximum detection time was 7.9 seconds. The minimum time was 5.6 seconds. For a test signal half as large, the average was 6.1 seconds, the maximum was 6.4, and the minimum was 5.7. In this case the device sensitivity was increased to 5 mV/cm. For a test signal twice as large, the average was 5.7 seconds, the maximum was 6.3, and the minimum was 5.1. In five trials for a 2 mV, 195 bpm tachycardia, the average detection time was 6.2 seconds. The maximum detection time was 7.1 seconds. The minimum time was 5.8 seconds. For a test signal half as large, the average was 6.0 seconds, the maximum was 6.7, and the minimum was 5.4. In this case the device sensitivity was increased to 5 mV/cm. For a test signal twice as large, the average was 6.0 seconds, the maximum was 6.4, and the minimum was 5.8.

CHARACTERISTIC	
Accuracy Of Signal Reproduction	The device is a digital sampled data system. It meets requirements for both test methods for diagnostic frequency response described in AAMI EC11.
Audible Alarms	This is a standalone device. All alarm tones are internal to the biphasic LIFEPAK 20e defibrillator/monitor. The alarm tone volumes range from 45 to 85 dB. Alarm violations are manifested by tones, voice prompts, and visual indications. Alarm manifestation occurs within 1 second after a displayed parameter violates its alarm limit. User selectable alarm volume adjustment is provided. This adjustment does not allow alarm volume to attain/reach a zero level. Shock Advisory System tones reinforce Shock Advisory System messages provided on the product display. The following identifies the tone assignments for each type of alarm: • The priority 1 tone is used to alert the user to the possibility of imminent death. This tone is a 440 Hz and 880 Hz alternating tone with a 50% duty cycle and a 4 Hz alternation frequency. The volume of the priority 1 tone is between 65 and 85 dB and is not adjustable. • The priority 2 tone is used to alert the user that a possible life-threatening condition exists. This tone is a continuous 698 Hz tone. • The priority 3 tone is used to alert the user that an abnormal condition exists. Three beeps at 1046 Hz for 100 msec duration each with a 150 msec silence between the first and second and the second and third, followed by a 200 msec silence. • Priority 3 tones come in single and repeating types: for a single tone, the 3-beep sequence sounds only once. For a repeating tone, the 3-beep sequence sounds every 20 seconds. • The priority 4 tone is a momentary tone between 500 and 1500 Hz. Specific characteristics are: – QRS and Volume Setting Tone - 100 msec duration at 1397 Hz. – Key click - 4 msec duration at 1319 Hz.

©2018 Physio-Control, Inc.

CHARACTERISTIC	
	The alert tone shall consist of one set of two tones to precede voice prompts and to draw attention to the display. Specific characteristics shall be: • 1000 Hz square wave, 100 msec duration. • Silence, 100 msec duration. • 1000 Hz square wave, 100 msec duration. • Silence, 140 msec duration (when preceding a voice prompt). • Voice prompt, when used.
Visual Alarms	Alarms are indicated visually by: The violated parameter flashes in inverse video with a message in the status region of the display. These visual indications remain on the display until the alarm is corrected. Visual indication of alarms continue even when the tones have been silenced.
Alarm Silencing	If a violated parameter alarms, the tone may be silenced for two minutes by pressing the Alarms button. A preemptive alarm silence is provided with selectable settings of 2, 5, 10, and 15 minutes. Visual alarms remain on at all times.
VF/VT Alarm	Automatically monitors the patient's ECG rhythm for a potentially shockable rhythm using the Continuous Patient Surveillance System (CPSS). The VF/VT alarm requires that the patient's ECG be monitored in Lead II or Paddles lead using therapy electrodes. The VF/VT alarm will be suspended if pacing is enabled or Standard paddles are connected and Paddles is the displayed lead.

CHARACTERISTIC	
Priorities for Alarm Conditions	Alarm conditions have the following priorities: Priority 1: • VF or VT detected based on ECG signal Priority 2: • Heart rate high or low limit exceeded • SpO_2 high or low limit exceeded • $EtCO_2$ high or low limit exceeded • $FiCO_2$ high limit exceeded • Respiration rate high or low limit exceeded • No breath detected Priority 3: • ECG leads off detected • Low battery (11-15% capacity) detected • Very low battery (0-10% capacity) detected Note: For this condition, the priority 3 tone is followed by the **LOW BATTERY: CONNECT TO AC POWER** prompts. • Service condition that could prevent normal operation detected
Energy Shunting	If the paddles input is connected in parallel with a second defibrillator, energy delivery to the patient is reduced by less than 10 percent.
Tall T-wave Rejection	T-waves that are 1 mV high are not detected by the monitor when the R-wave size is 1 mV and input rate is 80 ppm.
Displayed SpO_2	The LIFEPAK 20e defibrillator/monitor is calibrated to display functional saturation, which is the standard for SpO_2.
Essential Performance	The LIFEPAK 20e defibrillator/monitor with CodeManagement Module includes the following essential performance features: • Defibrillation, Synchronized Cardioversion, and AED Shock Advisory System • ECG Monitoring, Heart Rate, and Alarms • SpO_2 Monitoring, Pulse Rate, and Alarms • $EtCO_2$ Monitoring and Alarms Refer to this appendix (Appendix A) for specifications related to essential performance. Refer to General Maintenance and Testing, page 7-2, for recommended maintenance and testing to ensure continued basic safety and essential performance of your LIFEPAK 20e defibrillator/monitor.

©2018 Physio-Control, Inc.

CHARGE TIME

AC Operation Only:

Maximum Time from Charge to Shock Ready

Voltage	Manual Mode		AED Mode	
100–120V	360 J	7 seconds	200 J	5 seconds
220–240V	360 J	7 seconds	200 J	5 seconds
90V (90% of Nominal -100)	360 J	7 seconds	200 J	5 seconds
198V (90% of Nominal -220)	360 J	7 seconds	200 J	5 seconds

Maximum Time from Initiation of Analysis to Shock Ready (AED only)

Voltage	AED Mode	
100–120V	200 J	12 seconds
220–240V	200 J	12 seconds
90V (90% of Nominal -100)	200 J	12 seconds
198V (90% of Nominal -220)	200 J	12 seconds

Maximum Time from Power-on to Shock Ready

Voltage	Manual Mode		AED Mode	
90V (90% of Nominal -100)	360 J	11 seconds	200 J	16 seconds
198V (90% of Nominal -220)	360 J	11 seconds	200 J	16 seconds

Battery-only Operation:

Maximum Time from Charge to Shock Ready

Battery	Manual Mode		AED Mode	
Fully charged	360 J	7 seconds	200 J	5 seconds
Fully charged battery, followed with 15 full energy discharges	360 J	7 seconds	200 J	5 seconds

Maximum Time from Initiation of Analysis to Shock Ready (AED only)

Battery	AED Mode	
Fully charged	200 J	12 seconds
Fully charged battery, followed with 15 full energy discharges	200 J	12 seconds

Maximum Time from Power-on to Shock Ready

Battery	Manual Mode		AED Mode	
Fully charged battery, followed with 15 full energy discharges	360 J	11 seconds	200 J	16 seconds

APPENDIX B

DEFIBRILLATION CLINICAL SUMMARIES

©2018 Physio-Control, Inc.

DEFIBRILLATION OF VENTRICULAR FIBRILLATION AND VENTRICULAR TACHYCARDIA

Background

Physio-Control conducted a multi-centered, prospective, randomized and blinded clinical trial of biphasic truncated exponential (BTE) shocks and conventional monophasic damped sine wave (MDS) shocks. Specifically, the equivalence of 200 J and 130 J BTE shocks to 200 J MDS shocks[1] was tested.

Methods

Ventricular fibrillation (VF) was induced in 115 patients during evaluation of implantable cardioverter defibrillator function and 39 patients during electrophysiologic evaluation of ventricular arrhythmias. After 19±10 seconds of VF, a customized defibrillator delivered an automatically randomized shock. Efficacy was based on success of this shock. To demonstrate equivalence of test shocks to control shocks, the 95% upper confidence limit of the difference in efficacy (95UCLD), control minus test, was required to be less than 10%.

Results

Ventricular Fibrillation

The efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks (95UCLD=2%). The difference in success rates of 200 J MDS minus 200 J BTE shocks was -10% (exact 95% confidence interval from -27% to 4%). The 130 J BTE shocks were not demonstrated equivalent to 200 J MDS shocks (95UCLD=22%). However, neither was their efficacy significantly lower than that of the 200 J MDS shocks (statistical power limited by small sample sizes). For all shock types, hemodynamic parameters (oxygen saturation and systolic and diastolic blood pressure) were at or near their pre-induction levels by 30 seconds after successful shocks.

Shock	Ventricular Fibrillation 1st Shock Success	Exact 95% Confidence Interval
200 J MDS	61/68 (90%)	80-96%
200 J BTE	39/39 (100%)	91-100%
130 J BTE	39/47 (83%)	69-92%

[1]S.L. Higgins et al., “A comparison of biphasic and monophasic shocks for external defibrillation,” *Prehospital Emergency Care*, 2000, 4(4):305-13.

©2018 Physio-Control, Inc.

Ventricular Tachycardia

Seventy-two episodes of ventricular tachycardia (VT), induced in 62 patients, were treated with randomized shocks. High rates of conversion were observed with biphasic and monophasic shocks. Sample sizes were too small to statistically determine the relationship between success rates of the waveforms tested.

Shock	Ventricular Tachycardia 1st Shock Success	Exact 95% Confidence Interval
200 J MDS	26/28 (93%)	77-99%
200 J BTE	22/23 (96%)	78-100%
130 J BTE	20/21 (95%)	76-100%

Conclusions

In this double-blinded study, the efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks for defibrillation of short duration, electrically-induced VF. However, the comparison of efficacy of 130 J biphasic and 200 J monophasic shocks for VF was inconclusive. All waveforms tested provided a high rate of termination of VT. The VT sample sizes were too small to statistically determine the relationship between VT success rates of the waveforms tested.

Compared to conventional shocks for VF, we found no positive or negative effect of biphasic shocks for VF on hemodynamic parameters following the defibrillating shock. It is possible that, compared to 200 J monophasic shocks, 200 J biphasic shocks will in some cases enable earlier termination of VF. Therefore, we conclude that biphasic shocks for VF delivered at conventional energy levels have the potential to improve outcome in resuscitation of patients with cardiac arrest.

EXTERNAL CARDIOVERSION OF ATRIAL FIBRILLATION

Overview

The performance of the Physio-Control biphasic truncated exponential (BTE) waveform was compared to the conventional monophasic damped sine (MDS) waveform in an international, multi-center, prospective, randomized clinical study of adult patients undergoing elective cardioversion of atrial fibrillation (AF). A total of 80 patients were enrolled in the study and were treated with one or more study shocks. The primary dataset consisted of 72 enrolled patients confirmed to have been in AF. Data from seven patients with atrial flutter were analyzed separately. One patient who did not satisfy all protocol criteria was excluded from analysis.

Subjects were randomized to receive biphasic or monophasic shocks from LIFEPAK 12 defibrillator/monitors. Progressive shocks of 70, 100, 200 and 360 J of the assigned waveform, and a 360 J crossover shock of the other waveform, were delivered if AF persisted. Shocks were delivered using EDGE System QUIK-COMBO® Pacing/Defibrillation/ECG electrodes applied in the standard anterior-lateral position. Successful cardioversion was defined as the confirmed removal of AF after delivery of a shock, as determined by ECG over-read by two cardiologists with no knowledge of the shock waveform. Patients rated skin pain on a scale from 0 to 8 after the procedure.

This study showed that these biphasic shocks provide higher efficacy for cardioversion of atrial fibrillation, requiring fewer shocks, 65% less current and 65% less energy to cardiovert atrial fibrillation. Patients undergoing elective cardioversion with the biphasic protocol, as compared to those receiving the monophasic protocol, reported significantly less post-procedure pain.

Objectives

The primary objective of the study was to compare the cumulative efficacy of biphasic and monophasic shocks of 200 J or less for cardioversion of atrial fibrillation. A triangular sequential design was used to test for a statistically significant difference between groups of patients treated with these two waveforms.

Secondary objectives included 1) providing an estimation of the dose response relationship for the two waveforms which would allow clinicians to make well-informed selections of energy doses for cardioversion with biphasic shocks and 2) comparing the pain experienced by patients following treatment with monophasic and biphasic shocks.

Results

Seventy-two of the patients enrolled were in atrial fibrillation and 7 were in atrial flutter. On average, patients had been in atrial fibrillation for 88 days, were 66 years old, weighed 81 kg and had 72 ohms of transthoracic impedance. Sixty-three percent were male and 46% had been previously cardioverted. There were no significant differences between the groups of patients treated with monophasic and biphasic shocks, either in these baseline characteristics or in left atrial dimension, cardiac medications or diagnosis.

The cumulative success rates for cardioversion of atrial fibrillation are presented in Table B-1 and Figure B-1. These data provide a reasonable estimate of the expected probability of cardioversion success for a single shock at any given energy level within the range studied. Energy and peak current delivered for all shocks at each energy setting are presented in Table B-2.

©2018 Physio-Control, Inc.

Table B-1 Cumulative Success Rates and Crossover Results for Cardioversion of AF

Energy Setting	70 J	100 J	200 J	360 J	360 J Crossover Successes
MDS: *n* = 37	5.4%	19%	38%	86%	4 of 5 pts succeeded with 360 J BTE shock
BTE: *n* = 35	60%	80%	97%	97%	0 of 1 pts succeeded with 360 J MDS shock

Cumulative percentages of successes for cardioversion of AF with shocks of 200 J or less, the primary endpoint of the study, was significantly higher in the biphasic group than the monophasic group ($p<0.0001$). The observed cumulative percentage of successes at 360 J was also higher for biphasic shocks than for monophasic shocks, but did not attain statistical significance.

Table B-2 Energy Settings, Delivered Energy and Peak Current for Shocks Delivered to Patients in AF

Energy Setting	Number of Patients	Delivered Energy	Peak Current, Amps
Monophasic shocks			
70 J	37	73±3	21.0±3.5
100 J	35	105±4	24.6±4.3
200 J	30	209±7	34.6±5.9
360 J	23	376±13	46.8±8
360 J crossover shocks	1	380	44.7
Biphasic shocks*			
70 J	35	71±0	11.9±2.5
100 J	14	102±0	14.9 ±3.5
200 J	7	203±1	20.6±3.5
360 J	1	362	28.5
360 J crossover shocks	5	361±6	32.4±8.5

* Peak current and delivered energy are not available for two of the patients treated with biphasic shocks.

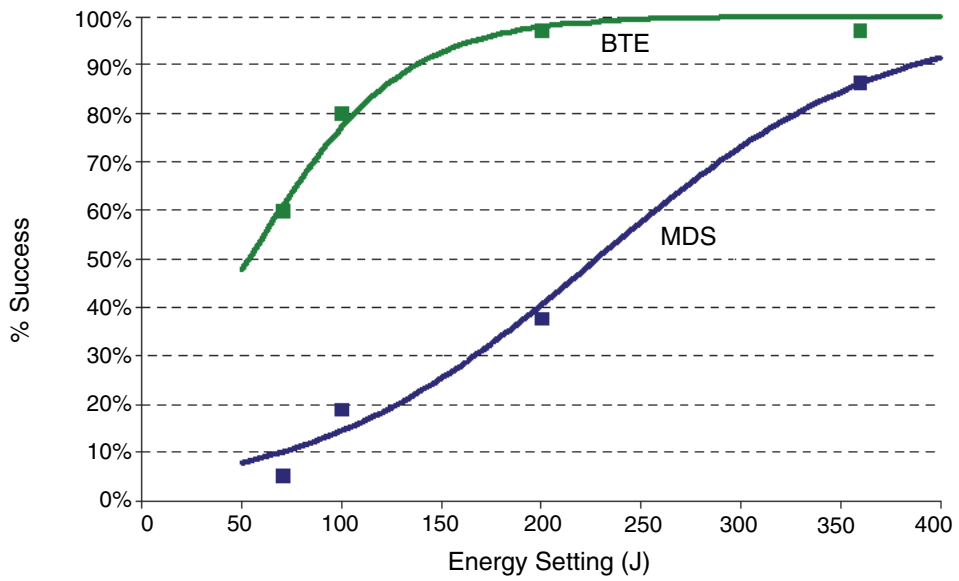

Figure B-1 Cumulative Shock Success for Cardioversion of Atrial Fibrillation with Monophasic (MDS) and Biphasic (BTE) Shocks: Observed Rates (*n*) Plotted with Estimated Dose Response Curves

Compared to monophasic shocks, biphasic shocks cardioverted atrial fibrillation with less peak current (14.0 ± 4.3 vs. 39.5 ± 11.2 A, p<0.0001), less energy (97 ± 47 vs. 278 ± 120 J, p<0.0001), fewer shocks (1.7 vs. 3.5 shocks, p < 0.0001) and less cumulative energy (146 ± 116 vs. 546 ± 265 J, p<0.0001). Patients treated with the biphasic protocol, as compared to those treated with the monophasic protocol, reported significantly less post-procedure pain just after (0.4 ± 0.9 vs. 2.5 ± 2.2, p<0.0001) and 24 hours after the procedure (0.2 ± 0.4 vs. 1.6 ± 2.0, p<0.0001).

All patients with atrial flutter were cardioverted with the first shock (70 J), whether that shock was monophasic (n=4) or biphasic (n=3).

Anterior-lateral electrode placement was used for treatment of most (96%) of the patients studied. Reports in the literature differ on whether anterior-posterior electrode placement provides better shock efficacy than anterior-lateral placement. If there is a benefit to anterior-posterior electrode placement, it may be possible to obtain modestly higher cardioversion success rates with both waveforms than those observed in this study. However, placement is not likely to affect the observed relationship *between* the efficacies of monophasic and biphasic waveforms.

Conclusions

The data demonstrate the Physio-Control biphasic waveform is clinically superior to the conventional monophasic damped sine waveform for cardioversion of atrial fibrillation. Specifically, compared to monophasic shocks, biphasic shocks cardioverted atrial fibrillation with less peak current, less energy, fewer shocks and less cumulative energy. Patients undergoing elective cardioversion with the biphasic protocol, as compared to those receiving the monophasic protocol, reported significantly less post-procedure pain just after and 24 hours after the procedure. This may be due to fewer required shocks, less cumulative energy, less delivered peak current or other characteristics of this biphasic waveform.

©2018 Physio-Control, Inc.

Guidance for Selection of Shock Energy

Biphasic waveform technology is a standard in cardiac defibrillators. The study summarized here[1] provides the best information available on which to base energy selections for cardioversion with this waveform.

For cardioversion of atrial fibrillation, the results of this study provide specific guidance for three possible strategies in selection of shock energy levels.

- To optimize for more rapid cardioversion and fewer shocks, select the same biphasic energy levels used previously with monophasic defibrillators (e.g., use 200 J biphasic instead of 200 J monophasic). This can be expected to increase the success rate yet decrease the peak current of the first and subsequent shocks.
- To maintain shock efficacy equivalent to that previously observed with monophasic shocks, select a biphasic energy level of about one-third the energy previously used for monophasic shocks (e.g., use 100 J biphasic instead of 300 J monophasic).
- To optimize for low initial and cumulative energy using a step-up protocol, select 70 J for the first shock and use small increases in energy if further shocks are needed.

Each of these strategies should provide effective cardioversion therapy while substantially reducing the amount of peak current to which the heart is exposed.

For cardioversion of atrial arrhythmias other than atrial fibrillation, the data available to guide the selection of energy settings is very limited. It is likely that biphasic doses below 50 J will provide high success rates when treating atrial flutter and paroxysmal supraventricular tachycardia. However, until more clinical data becomes available, it may be advisable to use the same energy settings for biphasic shocks as are customarily used for monophasic shocks.

Arrhythmias may persist for a variety of reasons unrelated to the type of waveform used for cardioversion. In persistent cases, clinicians continue to have the option to either increase shock intensity or switch to an alternate electrode placement.

---

[1]Koster R, Dorian P., et al. A randomized trial comparing monophasic and biphasic waveform shocks for external cardioversion of atrial fibrillation. *American Heart Journal*, 2004;147(5):K1-K7.

INTRA-OPERATIVE VENTRICULAR DEFIBRILLATION

Overview

The defibrillation efficacy of the Physio-Control biphasic truncated exponential (BTE) waveform was compared to the standard monophasic damped sine waveform (MDS) in a prospective, randomized multi-center study of patients undergoing intra-operative, direct defibrillation for ventricular fibrillation (VF). A total of 251 adult patients were enrolled in the study; 98 of these developed VF that was treated with one or more study shocks. Seven patients who did not satisfy all protocol criteria were excluded from analysis.

Subjects were randomized to receive BTE or MDS shocks from LIFEPAK 12 defibrillator/monitor. Those who developed VF after removal of the aortic clamp received progressively stronger shocks of 2, 5, 7, 10 and 20 joules (J) using 2-inch paddles until defibrillation occurred. A 20 J crossover shock of the alternate waveform was given if VF persisted.

This study showed that these biphasic shocks have higher defibrillation efficacy, requiring fewer shocks, less threshold energy and less cumulative energy than monophasic damped sine shocks.

Objectives

The primary objective of the study was to compare the cumulative efficacy of BTE shocks to MDS shocks at 5 J or less. A triangular sequential design was used to test for a difference between waveform groups.

The secondary objective was to provide an estimation of the dose response relationship for the two waveforms that would allow physicians to make well-informed selections of energy doses for intra-operative defibrillation with biphasic shocks.

Results

Thirty-five male and 15 female subjects were randomized to the BTE group; 34 and 7 to the MDS group. Mean age was 66 and 68 years, respectively. There were no significant differences between BTE and MDS treatment groups for cardiac etiology, arrhythmia history, current cardiac medications, American Society of Anesthesiology (ASA) risk class, left ventricular wall thickness, cardiopulmonary bypass time, core temperature or blood chemistry values at the time of aortic clamp removal.

Cumulative defibrillation success at 5 J or less, the primary endpoint of the study, was significantly higher in the BTE group than in the MDS group (p=0.011). Two of the 91 patients included in this primary endpoint analysis could not be included in more comprehensive analyses due to protocol variances that occurred in the shock sequence after the 5 J shock. Thus, the cumulative success rates for intra-operative defibrillation in the remaining 89 patients are presented in Table B-3 and Figure B-2. These data provide a reasonable estimate of the expected probability of defibrillation success for a single shock at any given energy level within the range studied.

Compared to the MDS group, the BTE group required, on average, fewer shocks (2.5 vs. 3.5: p=0.002), less threshold energy (6.8 J vs. 11.0 J: p=0.003) and less cumulative energy (12.6 J vs. 23.4 J: p=0.002). There was no significant difference between success rates for BTE versus MDS crossover shocks.

©2018 Physio-Control, Inc.

Table B-3 Cumulative Shock Success Rates and Crossover Shock Results for Intra-operative Defibrillation

Energy Setting	2 J	5 J	7 J	10 J	20 J	20 J Crossover Successes
MDS: n = 41	7%	22%	34%	51%	76%	3 of 8 pts succeeded with 20 J BTE shock
BTE: n = 48*	17%	52%	67%	75%	83%	3 of 8 pts succeeded with 20 J MDS shock

*Two subjects randomized to the BTE group were unable to be included in the cumulative success rates shown in the table and figure due to protocol deviations occurring after the 5 J shock.

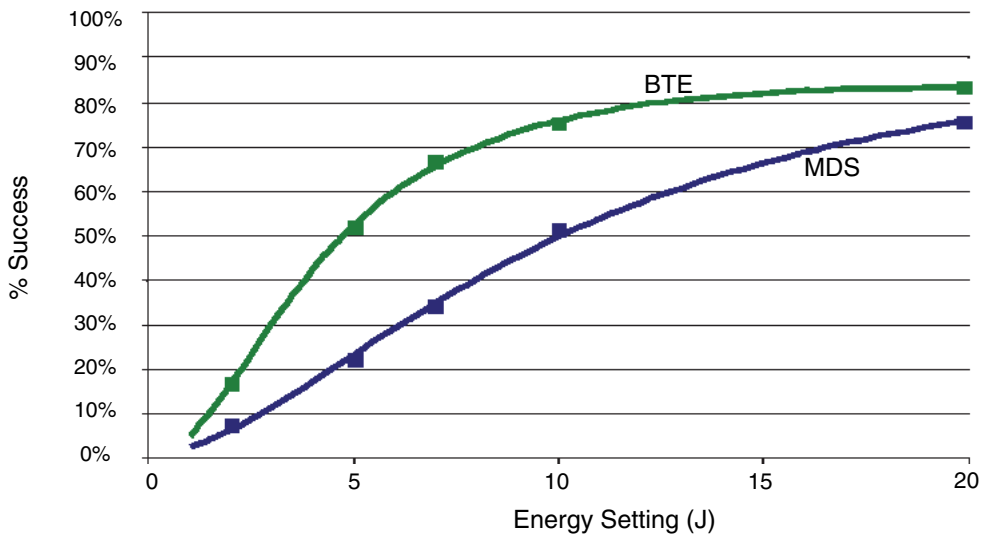

Figure B-2 Cumulative Shock Success for Intra-operative Defibrillation with Monophasic (MDS) and Biphasic (BTE) Shocks: Observed Rates (*n*) Plotted with Estimated Dose Response Curves

Conclusions

The data demonstrate the Physio-Control biphasic waveform is clinically superior to the conventional monophasic damped sine waveform for intra-operative internal defibrillation of VF. Specifically, these biphasic shocks have higher defibrillation efficacy, while requiring fewer shocks, less threshold energy and less cumulative energy than monophasic damped sine shocks. There were no unsafe outcomes or adverse effects from the use of the biphasic waveform.

Guidance for Selection of Shock Energy

Biphasic waveform technology is a standard in cardiac defibrillators. The results of this study[1] provide specific guidance for three possible strategies in developing a dosing regimen.

- To optimize for lower initial and cumulative energy using a step-up protocol, select 5 J for the first shock and use small incremental increases in energy if further shocks are needed. In this study, biphasic shocks of 5 J were successful in approximately half of the patients.
- To optimize for more rapid defibrillation and fewer shocks, select the same BTE energy level used previously with MDS (e.g., 20 J BTE instead of 20 J MDS), which can be expected to increase the success rate yet decrease by approximately 30% the peak current of the first and subsequent shocks.
- To maintain an equivalent degree of efficacy as previously observed with MDS shocks, a BTE energy level one-half of that previously used for MDS shocks (e.g., 10 J BTE instead of 20 J MDS) would be an appropriate choice.

Each of these strategies should provide effective defibrillation therapy while substantially reducing the amount of peak current to which the heart is exposed.

Fibrillation may persist for a variety of reasons unrelated to the type of waveform used for defibrillation. In cases where fibrillation is persistent, physicians continue to have the option to either increase shock intensity or switch to a larger paddle size. Larger paddle size is known to decrease energy requirements for successful defibrillation.[2]

[1]B. Schwarz et al., Biphasic shocks compared with monophasic damped sine wave shocks for direct ventricular defibrillation during open heart surgery. *Anesthesiology.* 2003;98(5):1063-1069.

[2]Y. Zhang et al., “Open chest defibrillation: biphasic versus monophasic waveform shocks,” *J Am Coll Cardiol*, 2001, 37(2 supplement A):320A.

©2018 Physio-Control, Inc.

MONOPHASIC VS. BIPHASIC WAVEFORMS: OUT-OF-HOSPITAL TRIAL

Background

In a publication by Van Alem et al., the authors noted "Evidence suggests that biphasic waveforms are more effective than monophasic waveforms for defibrillation in out-of-hospital cardiac arrest (OHCA), yet their performance has only been compared in un-blinded studies."[1] The authors subsequently conducted and reported on a randomized clinical trial comparing the effectiveness of the LIFEPAK 500 defibrillation waveform (monophasic versus biphasic). Specifically, the success of biphasic truncated exponential (BTE) and monophasic damped sine wave (MDS) shocks for defibrillation were compared in a prospective, randomized, double-blinded clinical trial of out-of-hospital (OOH) cardiac arrest patients.

Note: The identical ECG analysis Shock Advisory System and BTE (ADAPTIV biphasic waveform) used in the LIFEPAK 500 AED is also used in the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

Methods

First responders were equipped with either a Physio-Control LIFEPAK 500 MDS or BTE (ADAPTIV biphasic waveform) AED in a random fashion. Patients in VF received BTE or MDS first shocks of 200 J. The ECG was recorded for subsequent analysis continuously. The success of the first shock as a primary endpoint was removal of VF and required a return of an organized rhythm for at least two (2)QRS complexes, with an interval of <5 seconds, within 1 minute after the first shock. The secondary endpoint was termination of VF at 5 seconds.

Results

VF was the initial recorded rhythm in 120 patients in OHCA, 51 patients received BTE and 69 received MDS shocks. The median time from collapse to first shock was 9 minutes for the monophasic shock and 11 minutes for the BTE. The success rate of 200 J first shocks was significantly higher for BTE than for MDS shocks, 35/51 (69%) and 31/69 (45%), p=0.01. Termination of VF at 5 seconds after the first shock was 91% for the monophasic shock and 98% for BTE waveform. Return of spontaneous circulation was 61% for the Physio-Control defibrillation shock. In a logistic regression model, the odds ratio of success for a BTE shock was 4.01 (95% CI 1.01-10.0), adjusted for baseline cardiopulmonary resuscitation, VF-amplitude and time between collapse and first shock. No difference was found with respect to the secondary endpoint, termination of VF at 5 seconds (RR 1.07 95% CI: 0.99-1.11) and with respect to survival to hospital discharge (RR 0.73 95% CI:0.31-1.70).

Conclusion

The authors concluded that BTE-waveform AEDs provide significantly higher rates of successful defibrillation with return of an organized rhythm in OHCA than MDS waveform AEDs. This supports the safety and effectiveness of the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

---

[1]Van Alem AP, Chapman FW, Lank P, Hart AAM, Koster RW. A prospective, randomised and blinded comparison of first shock success of monophasic and biphasic waveforms in out-of-hospital cardiac arrest. *Resuscitation* 2003;58(1): 17-24.

APPENDIX C
SCREEN MESSAGES

This appendix provides the Summary of Screen Messages table and describes screen messages that the LIFEPAK 20e defibrillator/monitor may display during operation.

©2018 Physio-Control, Inc.

Table C-1 Summary of Screen Messages

Message	Description
ABNORMAL ENERGY DELIVERY	A discharge occurred when the paddles were shorted together (refer to warning, page 4-15); an open air discharge occurred; or, the patient impedance is out of range. This message may also appear in certain types of internal faults.
ACCESS DENIED	Three consecutive incorrect passcode attempts were entered.
AED MODE	The device is monitoring the patient condition and functioning as a semiautomatic external defibrillator.
ALARM NO BREATH	The no breath message occurs when a breath has not been detected for 30 seconds.
ALARMS SILENCED	The alarms are silenced. An alert tone and this message appear periodically to remind you that alarms have been silenced.
ANALYZING NOW–STAND CLEAR	The AED is analyzing the patient ECG rhythm.
C LEAD OFF	The ECG electrode “C” is disconnected.
CHARGING TO XXX J	The front panel or the standard paddles **CHARGE** button was pressed.
CHECK CO2	$EtCO_2$ FilterLine tubing or exhaust port is blocked.
CHECK FOR PULSE	The AED prompt that appears after each standard 3-shock sequence or ***NO SHOCK ADVISED*** message.
CHECK PATIENT!	A potentially shockable rhythm is detected when the VF/VT alarm is on.
CHECK PRINTER	The printer door is open; there is no paper in the printer; or, there is another printer malfunction.
CO2 AUTOZERO	$EtCO_2$ monitor is automatically performing a zero-point calibration.
CO2 FILTERLINE BLOCKAGE	$EtCO_2$ FilterLine tubing is kinked or clogged; the message appears after 30 seconds of unsuccessful purging.
CO2 FILTERLINE OFF	$EtCO_2$ FilterLine tubing is disconnected or is not securely connected to the device.
CO2 FILTERLINE PURGING	$EtCO_2$ FilterLine tubing is kinked or clogged with liquid.
CO2 INITIALIZING	$EtCO_2$ monitor is performing a self-check.
CONNECT CABLE	In manual mode, the therapy cable was not connected when you pressed **CHARGE**. In pacing mode, the QUIK-COMBO cable was not connected when you increased current. In AED advisory mode, the QUIK-COMBO cable was not connected when you pressed **ANALYZE.**
CONNECT ELECTRODES	The defibrillator detects that the therapy electrodes are disconnected.

©2018 Physio-Control, Inc.

Table C-1 Summary of Screen Messages (Continued)

Message	Description
CONNECT SYNC CABLE TO REMOTE MONITOR	Remote sync is selected and the device is not connected to the remote monitor.
CONNECT TO AC POWER	Remote sync is selected and the device is not connected to AC power.
CONNECT TO TEST PLUG	Test plug not connected to QUIK-COMBO therapy cable or standard paddles not seated in paddle wells during user test.
CPR: ADULT-AIRWAY X:Y	An option for CPR metronome. The patient is an adult for whom an advanced airway has been established. The specified C:V ratio will be used.
CPR: ADULT-NO AIRWAY X:Y	An option for CPR metronome. The patient is an adult for whom an advanced airway has not been established. The specified C:V ratio will be used.
CPR: YOUTH-AIRWAY X:Y	An option for CPR metronome. The patient is a youth (younger than the age of puberty) for whom an advanced airway has been established. The specified C:V ratio will be used.
CPR: YOUTH-NO AIRWAY X:Y	An option for CPR metronome. The patient is a youth (younger than the age of puberty) for whom an advanced airway has not been established. The specified C:V ratio will be used.
CURRENT FAULT	The comparison between delivered and selected pacing current is out of tolerance.
DEMAND	The pacemaker is in the demand mode.
DISARMING...	The decision was made to remove the energy charge.
ECG CABLE OFF	The ECG cable was removed during printing.
ECG LEADS OFF	Multiple ECG electrodes were disconnected either when the device was turned on or during monitoring.
ENERGY DELIVERED	Energy transfer was completed.
ENERGY NOT DELIVERED	An open air discharge is detected with standard paddles. Usually this is because the electrodes are not in contact with a patient or test load when the shock is initiated.
ENERGY SELECT/XXX J	The front panel or standard paddles **ENERGY SELECT** button was pressed.
IF NO PULSE, PUSH ANALYZE	This message appears following a CPR interval (if activated in setup configuration).
IF NO PULSE, START CPR	Initiate CPR if no pulse and continue with CPR until completion tone.
IF YOU WITNESSED THE ARREST, PUSH ANALYZE	Initial CPR message following **START CPR** prompt to remind user to deliver a shock immediately, if the user witnessed the arrest.

Table C-1 Summary of Screen Messages (Continued)

Message	Description
LA LEADS OFF L LEADS OFF	ECG electrode LA is disconnected. ECG electrode L is disconnected.
LL LEADS OFF F LEADS OFF	ECG electrode LL is disconnected. ECG electrode F is disconnected.
LOW BATTERY	Battery status indicator shows one yellow segment; low battery condition exists.
LOW BATTERY: CONNECT TO AC POWER	Battery status indicator shows one flashing red segment; very low battery condition exists.
LOW IMPEDANCE–RECHARGING	Patient impedance of <15 ohms detected.
MOTION DETECTED!/ STOP MOTION!	The defibrillator detected motion during ECG analysis, thereby inhibiting analysis.
NO SHOCK ADVISED	The defibrillator does not detect a shockable rhythm.
NON-DEMAND	The pacemaker is in nondemand (asynchronous) mode.
PACER FAULT	The pacemaker detects a pacing fault condition due to high pacing rate or loss of interprocessor communication. Pacing function stops.
PACING STOPPED	Pacing stops and this message appears whenever any of the following occur: pacer electrodes off, pacer cable disconnected, or pacer failure due to high pacing rate or high impedance.
PAUSED	The pacing **PAUSE** button was pressed and held. Current pulses are applied at reduced frequency while the mA and ppm settings are maintained.
PUSH ANALYZE	Press **ANALYZE** to begin ECG analysis.
PUSH AND HOLD PADDLE BUTTON TO SHOCK!	The front panel **SHOCK** button is disabled if internal paddles are attached. This message appears if the defibrillator is in Sync mode and you attempt to transfer energy by pressing the front panel **SHOCK** button.
PUSH AND HOLD PADDLE BUTTONS TO SHOCK!	The front panel **SHOCK** button is disabled if standard paddles are attached. This message appears if the defibrillator is in Sync mode and you attempt to transfer energy by pressing the front panel **SHOCK** button.
PUSH AND HOLD SHOCK BUTTON!	The defibrillator is in Sync mode, fully charged, and ready to provide therapy.
PUSH AND HOLD SHOCK BUTTONS!	The defibrillator is in Sync mode, fully charged, and ready to provide therapy with standard paddles.
PUSH PADDLE BUTTON TO SHOCK!	The front panel **SHOCK** button is disabled if internal paddles are attached. This message appears if you attempt to transfer energy by pressing the front panel **SHOCK** button.

©2018 Physio-Control, Inc.

Table C-1 Summary of Screen Messages (Continued)

Message	Description
PUSH PADDLE BUTTONS TO SHOCK!	If standard paddles are attached, the front panel **SHOCK** button is disabled. Message appears if you attempt to transfer energy by pressing the front panel **SHOCK** button.
PUSH SHOCK BUTTON!	The defibrillator is fully charged and ready to provide therapy (a therapy cable or internal paddles must be connected).
PUSH SPEED DIAL TO DISARM	An instruction on the charging screen overlays for disarming the charge.
RA LEADS OFF R LEADS OFF	ECG electrode RA is disconnected. ECG electrode R is disconnected.
RL LEADS OFF N LEADS OFF	ECG electrode RL is disconnected. ECG electrode N is disconnected.
REMOVE TEST PLUG	The QUIK-COMBO test plug is connected to the QUIK-COMBO therapy cable.
SEARCHING FOR SIGNAL	Remote sync is selected and the device is qualifying the input signal.
SELF TEST DID NOT COMPLETE	Test plug not connected to QUIK-COMBO therapy cable, standard paddles not seated in paddle wells, possible defective therapy cable, or a problem with the defibrillator during daily auto test.
SELF TEST DID NOT COMPLETE – CONNECT TO TEST PLUG	Test plug not connected to QUIK-COMBO therapy cable, standard paddles not seated in paddle wells, possible defective therapy cable, or a problem with the defibrillator during daily auto test.
SELF TEST FAILED	An unsuccessful self test has occurred.
SELF TEST IN PROGRESS	Confirms that the self test is in progress.
SELF TEST SUCCEEDED	A successful self test was completed.
SHOCK ADVISED!	The defibrillator detected a shockable rhythm.
SPO2: CHECK SENSOR	The SpO_2 sensor detached from the patient after a measurement was obtained.
SPO2: LOW PERFUSION	Patient has a weak pulse.
SPO2: NO SENSOR DETECTED	A sensor was disconnected from the monitor.
SPO2: SEARCHING FOR PULSE	Confirms the pulse oximetry sensor is connected to the defibrillator.
SPO2: UNKNOWN SENSOR	A sensor is connected to the device that is not compatible with the Masimo SpO_2 module.

Table C-1 Summary of Screen Messages (Continued)

Message	Description
STAND CLEAR/PUSH SHOCK BUTTON	Stand clear of the patient and push the **SHOCK** button.
START CPR	Initiate CPR in AED mode.
SWITCHING PRIMARY TO LEAD II	**PADDLES** lead is not available and you pressed the **ANALYZE** button.
SWITCHING PRIMARY TO PADDLES	**PADDLES** lead is available and you pressed the **ANALYZE** button.
TRANSMISSION CANCELLED	Data transmission has been cancelled.
TRANSMISSION COMPLETE	Data transmission completed successfully.
TRANSMISSION FAILED	Data transmission was not successful.
UNABLE TO TRANSMIT	Unable to send data.
USE ECG LEADS	The device is attempting synchronized cardioversion and **PADDLES** lead was selected.
USER TEST DID NOT COMPLETE	Test plug not connected to QUIK-COMBO therapy cable, standard paddles not seated in paddle wells, possible defective therapy cable, or a problem with the defibrillator during user test.
USER TEST DID NOT COMPLETE – CONNECT TO TEST PLUG	Test plug not connected to QUIK-COMBO therapy cable, standard paddles not seated in paddle wells, defective therapy cable, or a problem with the defibrillator during user test.
USER TEST FAILED	An unsuccessful user test has occurred.
USER TEST IN PROGRESS	Confirms that the user test is in progress.
USER TEST SUCCEEDED	A successful user test was completed.
XX% TRANSMITTED	Specified percent of the transmission is completed.

©2018 Physio-Control, Inc.

APPENDIX D
OPERATOR'S CHECKLIST

This Operator's Checklist may be reproduced.

©2018 Physio-Control, Inc.

LIFEPAK® 20e Defibrillator/Monitor Operator's Checklist

PHYSIO CONTROL

Unit Serial No.:_____

Location: _____

Daily inspection and testing of the defibrillator/monitor using this Operator's Checklist is recommended. This form may be reproduced.

Instruction	Recommended Corrective Action	Date							
		Initials							

Insert a ✓ in the box after completing each instruction.

1 Check printed result of 3 A.M. daily auto test. (If no self-test results have printed, refer to Step 10.) If:

SELF-TEST FAILED	Contact qualified service personnel.						
SELF-TEST DID NOT COMPLETE – PERFORM MANUAL TEST	Connect test plug or secure paddles in well, and perform manual User Test. If ***CONNECT TO TEST PLUG*** message appears, contact qualified service personnel.						

2 Inspect physical condition for:

Foreign substances	Clean the defibrillator.						
Damage or cracks	Contact qualified service personnel.						

3 Inspect power source for:

AC power connector plugged into unit and AC power source; AC Mains LEDs on defibrillator and optional CodeManagement Module are lit	If AC Mains LEDs are not lit, contact qualified service personnel.						
Broken, loose, or worn power cable	Replace damaged or broken parts.						

4 Check therapy and ECG electrodes for:

Use By date	Replace if past expiration date.						
Spare electrodes available	Obtain spare electrodes.						

5 Examine accessory cables for:

Cracking, damage, broken or bent parts or pins, and paddle surfaces for pitting	Replace damaged or broken parts.						

6 Disconnect the defibrillator from AC power, wait 2 seconds, press ON and check for:

Momentary ***SELF-TEST*** messages, illumination of LEDs, and speaker beep	If absent, contact qualified service personnel.						
Service LED is lit	If lit, power off device, then power back on. If service LED stays lit, contact qualified service personnel.						

7 Check ECG printer for:

Adequate paper supply	Replace if necessary.						
Ability to print	If not working, contact qualified service personnel.						

8 Confirm therapy cable connected to defibrillator and perform cable check:

<u>If QUIK-COMBO® therapy cable is connected:</u>

• Confirm test plug connected to therapy cable.							
• Press **ANALYZE** button.							
• After ***ANALYZING NOW*** message, look for ***REMOVE TEST PLUG*** message.	If ***CONNECT CABLE*** or ***CONNECT ELECTRODES*** message appears, contact qualified service personnel.						

<u>If HARD PADDLES are connected:</u>

• Confirm paddles properly seated in wells.							
• Select 10 J and press the **CHARGE** button. **Note:** Discharging > 10 joules in paddle wells may damage defibrillator	If ***CONNECT CABLE*** or ***CONNECT ELECTRODES*** message appears, contact qualified service personnel.						
• When fully charged, press the **SHOCK** button on the paddles and look for the ***ENERGY DELIVERED*** message.	If no energy delivered and shock tone continues, press Speed Dial to disarm, and contact qualified service personnel.						

9 Reconnect to AC power and then power off the device.

Instruction	Recommended Corrective Action	Date							
		Initials							

10 *Perform manual User Test if:

User Test Performed

- Hospital protocol requires more frequent device testing than the recommended daily auto test — If User Test fails, contact qualified service personnel.
- Daily auto test did not complete or did not print
- REDI-PAK™ electrodes pre-connected to therapy cable — **Note**: Reconnect electrodes to therapy cable after user test is completed.

APPENDIX E

SHOCK ADVISORY SYSTEM

This appendix describes the basic function of the Shock Advisory System.

©2018 Physio-Control, Inc.

OVERVIEW OF THE SHOCK ADVISORY SYSTEM

The Physio-Control patented Shock Advisory System (SAS™) is an ECG analysis system built into the LIFEPAK 20e defibrillator/monitor that advises the operator whether it detects a shockable or nonshockable rhythm. This system makes it possible for individuals not trained to interpret ECG rhythms to provide potentially-lifesaving therapy to victims of ventricular fibrillation or pulseless ventricular tachycardia. The Shock Advisory System contains the following features:

- Electrode Contact Determination
- Automated Interpretation of the ECG
- Operator Control of Shock Therapy
- Continuous Patient Surveillance System (CPSS)
- Motion Detection

The Shock Advisory System is active when the LIFEPAK 20e defibrillator/monitor is used as an automated external defibrillator (AED). CPSS may be activated during monitoring.

Electrode Contact Determination

The Shock Advisory System measures the patient's transthoracic impedance through the therapy electrodes. If the baseline impedance is higher than a maximum limit, it determines that the electrodes do not have sufficient contact with the patient or are not properly connected to the AED. When this occurs, ECG analysis and shock delivery are inhibited. The AED advises the operator to connect electrodes when there is insufficient electrode contact.

Automated Interpretation of the ECG

The defibrillator recommends a shock if either of the following rhythms is detected:

- Ventricular fibrillation
- Rapid ventricular tachycardia (see below for definition)

The defibrillator recommends no shock for nonshockable ECG rhythms as indicated in the Shock Advisory System Performance Report in this appendix.

The defibrillator is designed to detect and remove pacemaker pulses from the ECG so that an accurate decision can be reached while a pacemaker is functioning. Some pacemaker pulses may prevent advisement of an appropriate shock, regardless of the patient’s underlying rhythm. If this occurs, the rescuer is advised to continue chest compressions.

PERFORMANCE VERIFICATION

The Shock Advisory System (SAS) in the LIFEPAK 20e defibrillator/monitor was verified by inputting specific ECG waveform segments from Physio-Control databases through the electrode connector and recording the SAS decision of 'shock' or 'no shock.' The 'shock' or 'no shock' decision made by the SAS for each ECG waveform segment was compared to the treatment recommendation by clinical experts when they classified these individual ECG segments into rhythm groups and made a treatment recommendation of 'shock' or 'no shock.'

The main ECG database used to verify the performance of the LIFEPAK 20e defibrillator/monitor for SAS is named the Physio-Control Test Set. In addition, the ECG database named SAS Test Set was used to provide samples of shockable rapid ventricular tachycardia from pulseless patients for verification purposes. The following information about the test sets and the Summary Performance Report is provided in accordance with AHA recommendations[1] and IEC requirements[2] for reporting performance data for a rhythm recognition detector.

©2018 Physio-Control, Inc.

A. Acquisition and Annotation Methodology

This section includes recording methods, rhythm source, rhythm selection criteria, annotation methods, and annotation criteria for the Shock Advisory System test sets.

Physio-Control Test Set

The Physio-Control Test Set includes ECG segments gathered from a variety of sources. The test set includes both adult and pediatric ECG segments, ECGs from the standard anterior-lateral (AL, AA) defibrillation electrode placement, ECGs from anterior-posterior (AP) defibrillation electrode placement, and ECGs from patients who have a pacemaker. Each ECG segment is 10 seconds in duration. Sources for the ECGs include:

- AHA Ventricular Arrhythmia Database (Holter recordings)
- MIT-BIH Arrhythmia Database (Holter)
- MIT-BIH Malignant Ventricular Arrhythmia Database (Holter)
- Creighton University Ventricular Tachyarrhythmia Database (hospital monitor)
- A series of consecutive LIFEPAK 500 automated external defibrillator recordings collected by Physio-Control
- DiMarco AA-AP ECG Database (simultaneous AA and AP defibrillation leads, recorded in the electrophysiology laboratory)
- Vanderbilt Pediatric ECG Database (AA and/or AP defibrillation leads, recorded in the pediatric intensive care unit, the pediatric electrophysiology laboratory, and the pediatric operating room during open heart surgery)
- A series of 12-lead recordings from consecutive chest pain patients, recorded in the pre-hospital setting with the LIFEPAK 11 monitor/defibrillator.

SAS Test Set

The SAS Test Set includes 65 ECG samples of shockable rapid ventricular tachycardia from pulseless patients recorded during pre-hospital use of LIFEPAK 5 defibrillators by paramedics. Selected ECG segments were sampled and the ECG rhythm was classified by clinical experts. Each ECG segment is 5 seconds in duration.

B. ECG Rhythm Types

The ECG rhythms were placed into the following categories by the clinical experts.

Shockable

- Coarse ventricular fibrillation (VF) (≥0.20 mV peak-to-peak amplitude)
- Rapid ventricular tachycardia, pulseless (VT) (HR ≥120 bpm, QRS duration ≥160 ms, no apparent P waves, patient reported to be pulseless by paramedics)

Nonshockable

- Normal sinus rhythm (NSR) (sinus rhythm, heart rate 60-100 bpm)
- Asystole (<0.08 mV peak-to-peak amplitude)
- Other organized rhythms including 30 or more of each of the following rhythms: atrial fibrillation, atrial flutter, 2nd degree atrioventricular block, 3rd degree atrioventricular block, idioventricular rhythms, sinus bradycardia, supraventricular tachycardia, and rhythms with premature ventricular complexes

Intermediate

- Fine ventricular fibrillation (VF) (<0.20 and ≥0.08 mV peak-to-peak amplitude)
- Other VT (ventricular tachycardia that does not meet criteria for VT in the shockable rhythms category)

Also included are coarse VF with pacemaker pulses and nonshockable rhythms with pacemaker pulses.

C. Summary Shock Advisory System Performance Report

The results of tests with the SAS and Physio-Control test sets in the LIFEPAK 20e defibrillator/monitor are shown below in the context of requirements from IEC 60601-2-4 and the recommendations from the American Heart Association.

Table E-1 IEC 60601-2-4 Requirements and SAS Performance for Adult and Pediatric Patients

Rhythm Category	Requirement	Test Result
Shockable (Sensitivity)		
Coarse VF	>90%	Met
Rapid VT, pulseless	>75%	Met
Nonshockable (Specificity)	>95%	Met
Positive Predictive Value	Report Only	>90%
False Positive Rate	Report Only	<5%

Table E-2 AHA Recommendations and SAS Performance for Adult Patients

Rhythm Category	Performance Goal	Minimum Sample Size	Sample Size Tested	Test Result (Goal and Sample Size)
Shockable (Sensitivity)				
Coarse VF	>90%	200	206	Met
Rapid VT, pulseless	>75%	50	65	Met
Nonshockable (Specificity)	>95%	300		Met
Normal Sinus Rhythm	>99%	100	509	Met
Other QRS	>95%	30	749	Met
Asystole	>95%	100	124	Met
Intermediate				
Fine VF	Report Only	25	32	>30% shocked
Other VT	Report Only	25	27	>20% shocked

©2018 Physio-Control, Inc.

The Shock Advisory System was also tested using ECGs acquired from hospitalized pediatric patients ranging in age from <1 day old to 17 years old. The results are summarized in the following table.

Table E-3 SAS Performance for Pediactric Patients

Rhythm Category	Performance Goal	Sample Size Tested	Test Result (Goal and Sample Size)
Shockable (Sensitivity)			
Coarse VF	>90%	63	Met
Nonshockable (Specificity)	>95%		Met
Normal Sinus Rhythm	>99%	69	Met
Other QRS	>95%	507	Met
Asystole	>95%	60	Met
Intermediate			
Fine VF	Report Only	1	>20% shocked

The Shock Advisory System was also tested using paced rhythms recorded at high-fidelity from patients with implanted pacemakers. The high-fidelity pacemaker spikes were also added to samples of ventricular fibrillation to test the defibrillator's ability to reach a shock decision in the case of ventricular fibrillation with an implanted, active pacemaker. The results are summarized in the following table.

Table E-4 SAS Performance with Active Pacemakers

Rhythm Category	Performance Goal	Sample Size Tested	Test Result
Shockable (Sensitivity)			
Coarse VF	>90%	35	Met
Nonshockable (Specificity)	>95%	35	Met

Operator Control of Shock Therapy

The Shock Advisory System causes the AED to charge automatically when it detects the presence of a shockable rhythm. When a shock is advised, the operator presses the **SHOCK** button to deliver the energy to the patient. Analysis is disabled while the device is charging or charged.

Continuous Patient Surveillance System

The Continuous Patient Surveillance System (CPSS) automatically monitors the patient's ECG rhythm for a potentially shockable rhythm while the electrodes are attached and the AED is turned on. CPSS is not active during ECG analysis or when the AED is in a CPR cycle.

MOTION DETECTION

The Shock Advisory System detects patient motion independent of ECG analysis. Motion detection is intended to detect periods when the ECG may be affected by substantial motion artifact. **MOTION DETECTION** can be configured in the setup mode to be **ON** or **OFF**.

A number of activities can create motion, including CPR, rescuer movement, patient movement, and vehicle movement. If variations in the transthoracic impedance signal exceed a maximum limit, the Shock Advisory System determines that patient motion of some kind is present. If motion is detected, the ECG analysis is inhibited. The operator is advised by a voice prompt. After 10 seconds, if motion is still present, the motion alert stops and the analysis always proceeds to completion. This limits the delay in therapy in situations where it may not be possible to stop the motion. However, the rescuer should remove the source of motion whenever possible to minimize the chance of artifact in the ECG.

There are two reasons why ECG analysis is inhibited when the motion alert occurs, and why the rescuer should remove the source of the motion whenever possible:

- Such motion may cause artifact in the ECG signal. This artifact may occasionally cause the Shock Advisory System to reach an incorrect decision.
- The motion may be caused by a rescuer's interventions. To reduce the risk of inadvertently shocking a rescuer, the motion alert prompts the rescuer to move away from the patient. This will stop the motion and ECG analysis will proceed.

The motion detection feature can be set to off. When this option is off, analysis of the ECG is allowed to proceed uninhibited even in the presence of motion, which may or may not cause artifact in the ECG as described previously. Artifact in the ECG can sometimes cause an erroneous shock advisory decision.

The skill and training level of the care providers should be taken into consideration when deciding whether or not to turn off the motion detection feature. How readily do the users respond to the AED voice prompt? For example, do they immediately stop CPR upon hearing the **STAND CLEAR, ANALYZING NOW** prompt?

DEFINITIONS AND REFERENCES

A true positive (A) is a correct classification of a shockable rhythm. A true negative (D) is a correct classifications of all rhythms for which a shock is not indicated. A false positive (B) is an organized or perfusing rhythm or asystole that has been incorrectly classified as a shockable rhythm. A false negative (C) is a VF or VT associated with cardiac arrest that has been incorrectly classified as non-shockable.

The sensitivity of the device for shockable rhythms is A/(A+C). The true predictive value is expressed as A/(A+B). The specificity of the device for non-shockable rhythms is D/(B+D). The false positive rate is expressed as B/(B+D).[3]

1 Kerber RE, et al, "Automatic External Defibrillators for Public Access Defibrillation: Recommendations for Specifying and Reporting Arrhythmia Analysis Algorithm Performance, Incorporating New Waveforms, and Enhancing Safety: A Statement for Health Professionals from the American Heart Association Task Force on Automatic External Defibrillation", Subcommittee on AED Safety and Efficacy. Circulation, 1997: Vol. 95: 1677-1682.

2 Clause 201.7.9.3.103, "Essential Performance data of the Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment - Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators*: 2010.

3 Quoted from clause 201.107, "Requirements for Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment - Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators*: 2010.

©2018 Physio-Control, Inc.

APPENDIX F

SpO_2 SPECIFICATIONS AND VALIDATION

This appendix describes clinical validation data for SpO_2 monitoring.

©2018 Physio-Control, Inc.

SpO_2 SPECIFICATIONS AND VALIDATION

The following accuracy information is provided by sensor family type and reflects the sensor family accuracy distribution. The data is comprised of healthy male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70-100% SpO_2 against a laboratory CO-Oximeter.

Reuseable Sensors

The following chart applies to these sensors:

- Masimo® LNCS Reusable SpO_2 Sensor, Adult
- Masimo LNCS Reusable SpO_2 Sensor, Pediatric

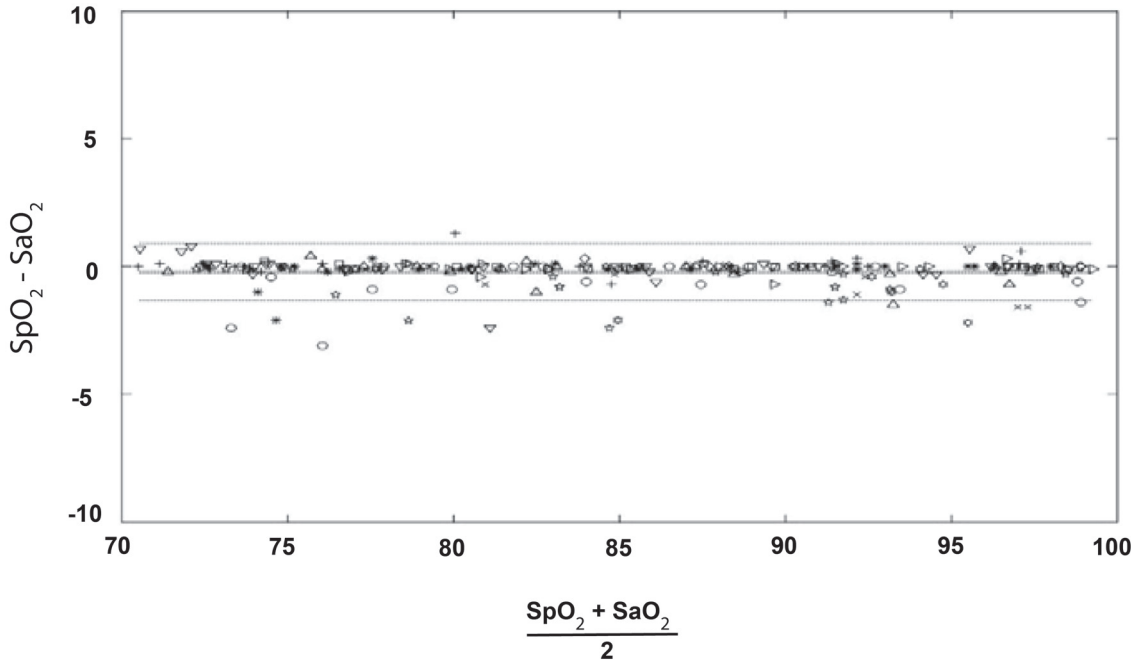

Measured Arms Values	
SpO_2 Range	Arms
90-100%	0.60%
80-90%	0.54%
70-80%	0.67%

©2018 Physio-Control, Inc.

The following chart applies to these sensors:

- Masimo DigitBoot Direct Connect Reusable Soft Sensor, Adult
- Masimo DigitBoot LNCS, Adult Reusable SpO_2 Sensor, 3 ft (Ref 2653)

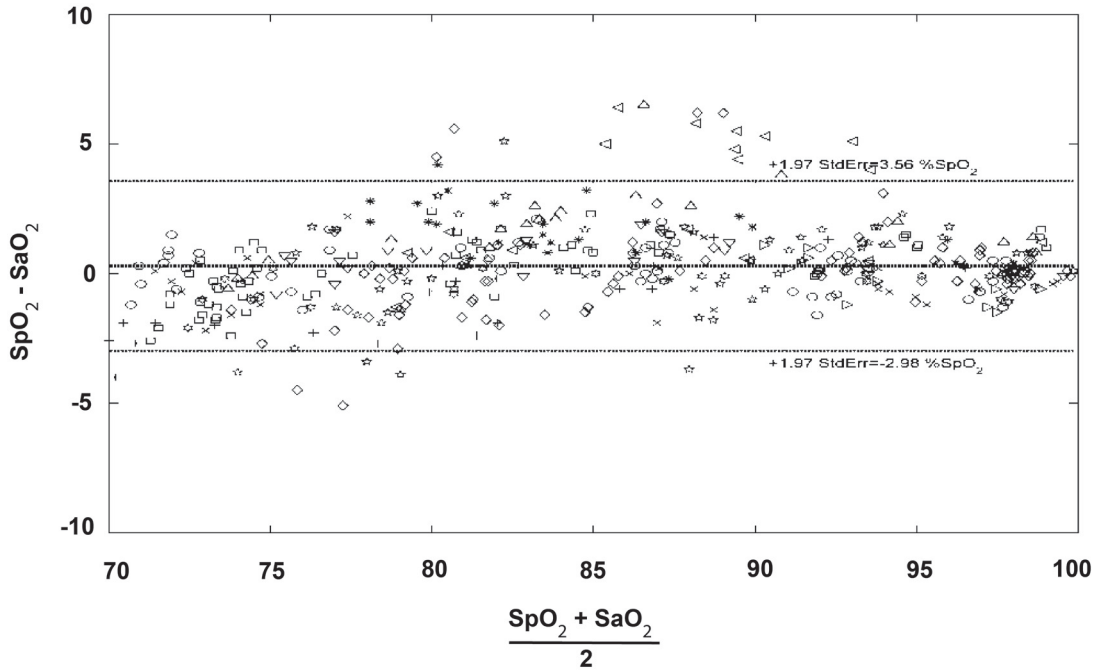

Measured Arms Values	
SpO_2 Range	Arms
90-100%	1.03%
80-90%	2.03%
70-80%	1.03%

The following chart applies to this sensor:

- Nellcor™ DURASENSOR Reusable Clip, Adult Fingertip Sensor, DS100A

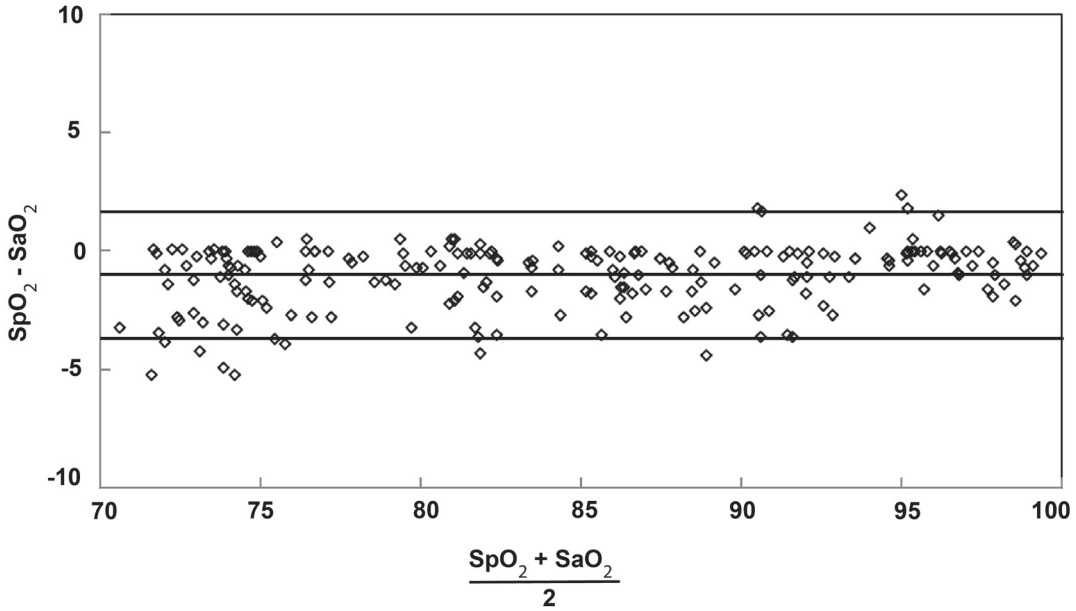

Measured Arms Values	
SpO_2 Range	Arms
90-100%	1.38%
80-90%	1.56%
70-80%	2.01%

©2018 Physio-Control, Inc.

Disposable Sensors

The following chart applies to these sensors:

- Masimo LNCS Disposable Adhesive Sensor, Adult (20/Box)
- Masimo LNCS Disposable Pediatric SpO_2 Sensor (20/Box)

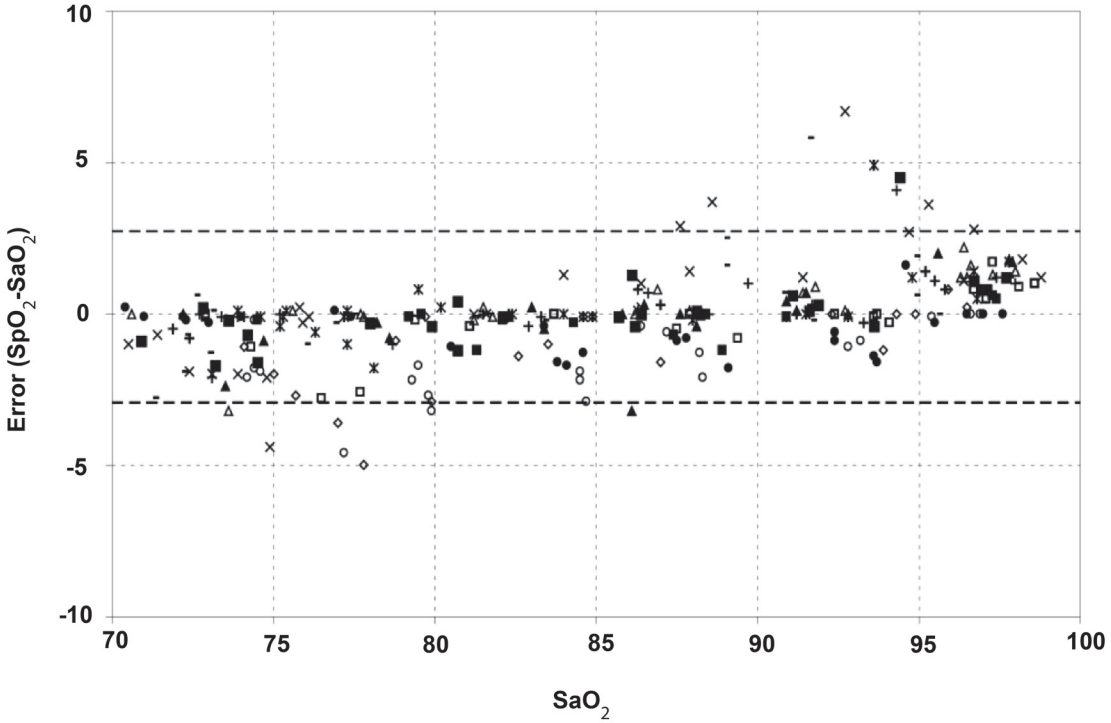

Measured Arms Values	
SpO_2 Range	Arms
90-100%	1.64%
80-90%	1.07%
70-80%	1.55%

The following chart applies to these sensors :

- Masimo LNCS Disposable Infant SpO_2 Sensor (20/Box)
- Masimo LNCS Disposable Neonatal SpO_2 Sensor (20/Box)
- Masimo LNCS Disposable Neonatal PT-L SpO_2 Sensor (20/Box)

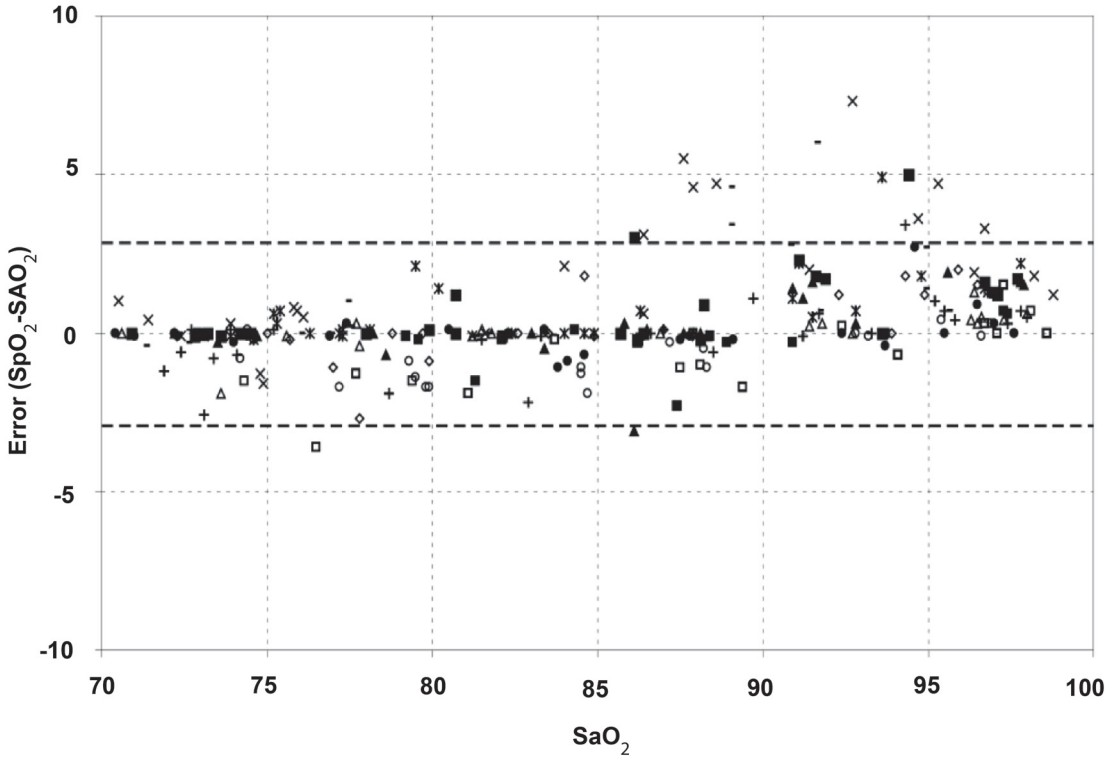

Measured Arms Values	
SpO_2 Range	Arms
90-100%	1.85%
80-90%	1.44%
70-80%	0.89%

©2018 Physio-Control, Inc.

The following chart applies to this sensor:

- Masimo LNCS E1, Adult, ear Sensor, REF 2918, RoHS

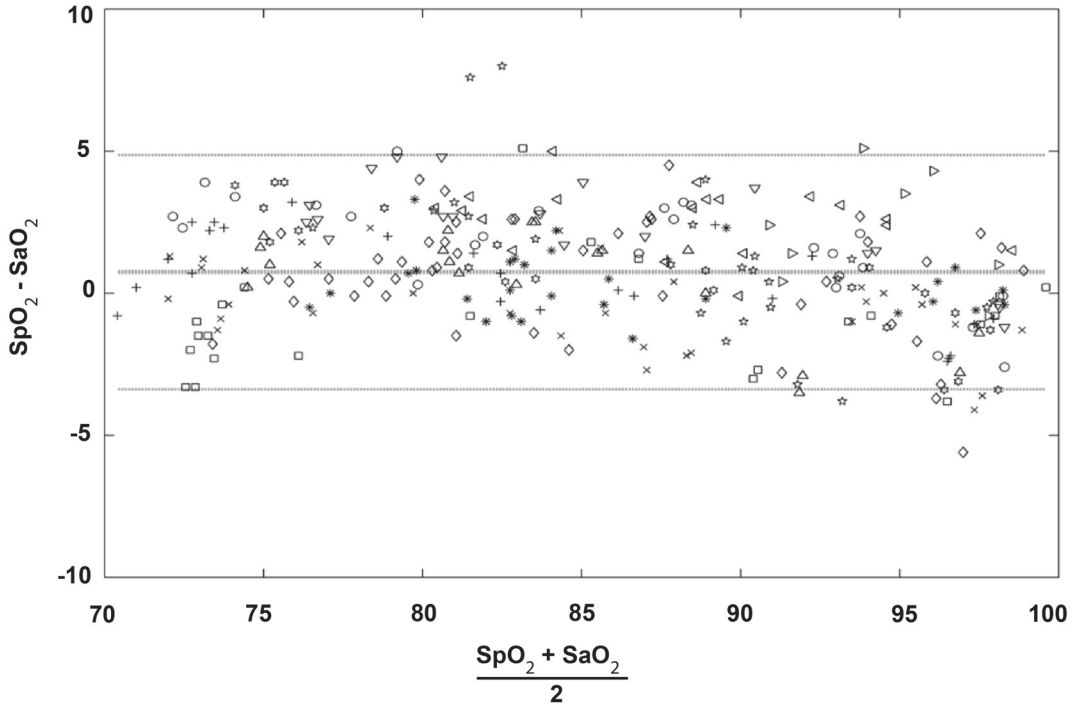

Measured Arms Values	
SpO_2 Range	Arms
90-100%	2.04%
80-90%	2.06%
70-80%	2.52%

MASIMO CLINICAL VALIDATION DATA

Masimo Corporation conducted clinical studies and tests to assess the accuracy of the SpO_2 measurement function. The following paragraphs provide a summary of that data.

Test Methods for Accuracy

SpO_2 accuracy was determined by testing on healthy adult volunteers in the range of 60-100% against a laboratory CO-oximeter. SpO_2 accuracy was determined on 16 neonatal intensive care patients ranging in age from 7-135 days old and weighing between 0.5-4.25 kg. Seventy-nine (79) data samples were collected over a range of 70-100% SaO_2 with a resultant accuracy of 2.9% SpO_2.

The Masimo sensors have been validated for no motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70-100% SpO_2 against a laboratory CO-oximeter and ECG monitor. This variation equals plus or minus one standard deviation. Plus or minus one standard deviation encompasses 68% of the population weight.

The Masimo sensors have been validated for motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies while performing rubbing and tapping motions at 2 to 4 Hz at an amplitude of 1 to 2 cm, and a non-repetitive motion between 1 to 5 Hz at an amplitude of 2 to 3 cm in induced hypoxia studies in the range of 70-100% SpO_2 against a laboratory CO-oximeter and ECG monitor. This variation equals plus or minus one standard deviation which encompasses 68% of the population.

The Masimo sensors have been validated for pulse rate accuracy for the range of 25-240 bpm in bench top testing against a Biotek Index 2 simulator. This variation equals plus or minus one standard deviation which encompasses 68% of the population.

©2018 Physio-Control, Inc.

NELLCOR CLINICAL VALIDATION DATA

Nellcor conducted clinical studies and tests to assess the accuracy of the SpO_2 measurement function of the Nellcor SpO_2 sensors. The following paragraphs provide a summary of that data.

Test Methods for Accuracy

SpO_2 accuracy specifications for Nellcor sensors are based on controlled hypoxia studies with healthy nonsmoking adult volunteers over the specified saturation SpO_2 range. Pulse oximeter SpO_2 readings were compared to SaO_2 values of drawn blood samples measured by hemoximetry.

Subjects used to validate SpO_2 measurement accuracies were healthy and recruited from the local population. The study group comprised both men and women; subjects spanned a range of skin pigmentations and ranged in age from 18-50 years old. When sensors are used on neonatal subjects as recommended, the specified accuracy is decreased by ±1%, as compared to adult usage, to account for the theoretical effect on oximeter measurements of fetal hemoglobin in neonatal blood.

APPENDIX G

About cprMAX Technology

©2018 Physio-Control, Inc.

ABOUT cprMAX TECHNOLOGY

Physio-Control cprMAX™ technology is designed to allow resuscitation protocols to maximize the quantity of CPR administered during treatment with an AED, consistent with the 2015 American Heart Association Guidelines for Cardiopulmonary Resuscitation and Emergency Cardiovascular Care (AHA Guidelines) and the European Resuscitation Council Guidelines for Resuscitation 2015.

Setup options should be changed only under the direction of a physician knowledgeable in cardiopulmonary resuscitation who is familiar with the literature in this area.

The cprMAX technology includes the following setup options:

- **INITIAL CPR**. Prompts the user to perform an initial period of CPR. Applies only to immediately after turning on the AED or after the first analysis.
- **PRESHOCK CPR** time. Prompts for CPR after a shockable ECG rhythm is detected, before the shock is delivered. If **INITIAL CPR** is set to **OFF**, then **PRESHOCK CPR** applies to all shock advised decisions (including the first analysis).
- **CPR TIME 1** and **2**. CPR time periods after shocks or no shock advised decisions respectively.
- **STACKED SHOCKS**. Eliminates the analysis after each shock and inserts prompting for CPR after each shock. This eliminates the three-shock stack.
- **PULSE CHECK**. Indicates when, if ever, the device is to prompt for pulse checks.

AED protocols are aligned with the AHA and ERC Guidelines when the setup options are set as follows:

- Initial CPR: **OFF**
- PreShock CPR time: **OFF**
- CPR Times 1 & 2: **120 SECONDS**
- Stacked Shocks: **OFF**
- Pulse Check: **NEVER**

The above options are the factory default settings for cprMAX technology. Your hospital procedures should determine whether or not to change the options and should ensure that you receive training.

The adult ventricular fibrillation (VF) energy label is also provided as the recommended energy for treating VF. Refer to the label on your defibrillator for recommended doses.

©2018 Physio-Control, Inc.

AED OPERATION WITH cprMAX TECHNOLOGY

The following paragraphs describe AED operation with cprMAX technology setup options.

Initial CPR

The **INITIAL CPR** option prompts the user to perform an initial period of CPR. The choices are: **OFF, ANALYZE FIRST** and **CPR FIRST**. The factory default is **OFF**.

- The **OFF** setting has no prompting for an initial CPR period.
- The **ANALYZE FIRST** setting prompts for analysis and then CPR. If the analysis determines that a shock is needed, the AED will prompt, ***IF YOU WITNESSED THE ARREST, PUSH ANALYZE***, which provides the opportunity to end CPR early and proceed directly to delivering a shock.
- The **CPR FIRST** setting prompts the user to perform CPR immediately after the defibrillator is powered on. The AED will also prompt, ***IF YOU WITNESSED THE ARREST, PUSH ANALYZE,*** which provides the opportunity to end CPR early and proceed directly to analysis.

Hospitals that choose to implement this option should develop a protocol and provide training to responders instructing them when to end the initial CPR interval early. Potential situations for instructing responders to end CPR early include:

- The patient's collapse was witnessed by the responder.
- The responder ascertains that fewer than four or five minutes have elapsed since the patient's collapse.
- The patient exhibits agonal breathing, an indicator of a short downtime.
- The responder ascertains that CPR of adequate quality and duration has already been provided before attaching the AED electrodes.

Refer to Continuous Patient Surveillance System for a more detailed description of the AED prompting sequence for each **INITIAL CPR** option.

Initial CPR Time

The **INITIAL CPR TIME** option applies when **INITIAL CPR** is set to **ANALYZE FIRST** or **CPR FIRST**. It sets the CPR time for that CPR period. The time choices for **INITIAL CPR TIME** are: **15**, **30**, **45**, **60**, **90**, **120**, and **180 SECONDS**. The default setting is **120 SECONDS**.

PreShock CPR Time

The **PRESHOCK CPR** time option inserts prompting for CPR when a shockable ECG rhythm is detected and during the time the AED is charging. It applies only when analysis results in ***SHOCK ADVISED*** decisions. When **INITIAL CPR** is set to **OFF** or **CPR FIRST**, **PRESHOCK CPR** time applies to the first and all subsequent shocks. When **INITIAL CPR** is set to **ANALYZE FIRST**, **PRESHOCK CPR** time apples to the second and all subsequent shocks. The choices for **PRESHOCK CPR** time are: **OFF, 15,** and **30 SECONDS**. To prompt for CPR only for the time the capacitor is charging, select the 15-seconds CPR interval. The **SHOCK** button is not enabled until charging and CPR time are completed. The default setting for **PRESHOCK CPR** time is **OFF**.

Note: Although the **SHOCK** button is disabled during the **PRESHOCK CPR** interval, it becomes active as soon as the **PRESHOCK CPR** interval ends. To minimize the interval between the final chest compression and shock delivery (while maintaining responder safety), hospital protocols that select this option should provide specific training and protocols to address the rapid transition from **PRESHOCK CPR** to shock delivery.

Stacked Shocks

When set to **OFF**, the **STACKED SHOCKS** option inserts prompting for CPR after each (a single) shock. This eliminates the three-shock stack. CPR is prompted after the shock regardless of the ECG rhythm. The CPR time following the shock is determined by the **CPR TIME 1** setting selected. Choices for the **STACKED SHOCKS** option are **ON** or **OFF**. The default setting is **OFF**.

When this option is set to **ON**, the defibrillator follows the previously traditional stacked shock protocol and delivers up to three consecutive shocks, as necessary, without interposed CPR.

Pulse Check

The **PULSE CHECK** option inserts prompting to check for a pulse or check the patient, depending on the **PULSE PROMPT** setting. The choices for **PULSE CHECKS** are: **ALWAYS, AFTER EVERY NSA, AFTER SECOND NSA**, and **NEVER**. The default setting is **NEVER**.

- The **ALWAYS** option prompts for a pulse check after CPR Times 1 and 2, after a ***NO SHOCK ADVISED*** decision, after a single ***SHOCK ADVISED*** decision with **STACKED SHOCKS OFF**, or after three consecutive ***SHOCK ADVISED*** decisions if **STACKED SHOCKS** is **ON**.
- The **AFTER EVERY NSA** option prompts for a pulse check after every ***NO SHOCK ADVISED*** decision.
- The **AFTER SECOND NSA** option prompts for a pulse check after the second analysis if the second analysis results in a ***NO SHOCK ADVISED*** decision, regardless of the first analysis decision (***SHOCK ADVISED*** or ***NO SHOCK ADVISED***).
- The **NEVER** option eliminates all **PULSE CHECK** prompts.

©2018 Physio-Control, Inc.

APPENDIX H

DOCKING STATION

This appendix describes how to install and use the LIFEPAK 20e defibrillator/monitor docking station.

©2018 Physio-Control, Inc.

LIFEPAK 20E DEFIBRILLATOR/MONITOR DOCKING STATION

The LIFEPAK 20e defibrillator/monitor docking station allows you to secure your defibrillator to an emergency cart or other flat surface. The docking station provides a 360-degree turning radius for the viewing of the LIFEPAK 20e defibrillator/monitor display from any angle.

Note: The docking station cannot be used with the CodeManagement Module.

To insert the LIFEPAK 20e defibrillator/monitor into the docking station:

1 Hold the LIFEPAK 20e defibrillator/monitor by the handle over the docking station (refer to Figure H-1, arrow 1).
2 Tilt the LIFEPAK 20e defibrillator/monitor backward into the docking station, aligning slots in the rear of the defibrillator to rollers on the docking station (refer to Figure H-1, arrow 2).
3 Align recess in lower front panel of the LIFEPAK 20e defibrillator/monitor with the front roller on the docking station and press down on the front of the LIFEPAK 20e defibrillator/monitor until you hear a click (refer to Figure H-1, arrow 3).
4 Check to make sure that the LIFEPAK 20e defibrillator/monitor is securely locked into position.

To turn the LIFEPAK 20e defibrillator/monitor while in the docking station:

1 Grasp the LIFEPAK 20e defibrillator/monitor by the handle, or by its sides.
2 Turn to the correct position. You will hear clicking sounds as the defibrillator locks into place.

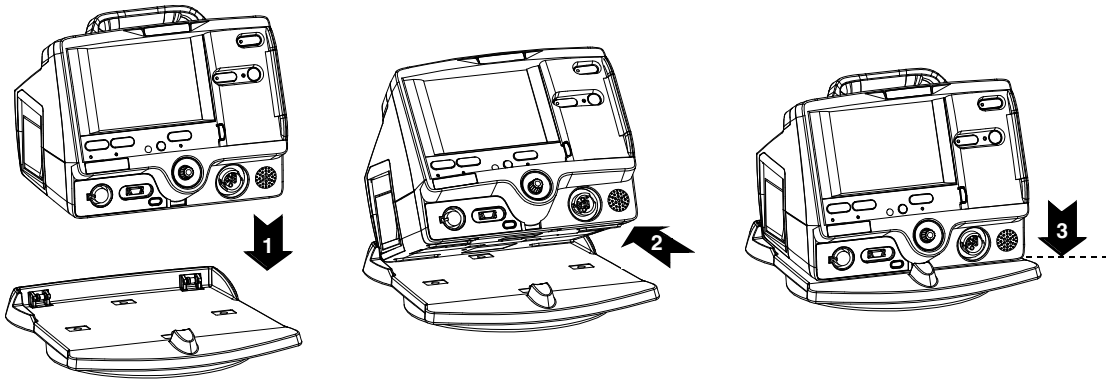

Figure H-1 Docking Station

To remove the LIFEPAK 20e defibrillator/monitor from the docking station:

1 Grasp the LIFEPAK 20e defibrillator/monitor by the handle.
2 Pull briskly on the LIFEPAK 20e defibrillator/monitor until it releases from the docking station.

Note: To install the docking station to a flat surface or wall mount (GCX) bracket, refer to the docking station installation instructions or consult the *LIFEPAK 20e Defibrillator/Monitor Service Manual*.

©2018 Physio-Control, Inc.

APPENDIX I

ELECTROMAGNETIC COMPATIBILITY GUIDANCE

©2018 Physio-Control, Inc.

Table 1

Guidance and Manufacturer's Declaration - Electromagnetic Emissions		
The LIFEPAK 20e defibrillator/monitor is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 20e defibrillator/monitor should ensure that the defibrillator/monitor is used in such an environment.		
Emissions Test	Compliance	Electromagnetic Environment - Guidance
RF emissions CISPR 11	Group 1	The LIFEPAK 20e defibrillator/monitor uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The LIFEPAK 20e defibrillator/monitor is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Complies	

Federal Communications Commission (FCC) Declaration

Note: This section applies only if a CodeManagement Module is attached to the LIFEPAK 20e defibrillator/monitor.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

Changes or modifications not expressly approved by Physio-Control could void the user's authority to operate the equipment.

©2018 Physio-Control, Inc.

Table 2

Guidance and Manufacturer's Declaration - Electromagnetic Immunity			
The LIFEPAK 20e defibrillator/monitor is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 20e defibrillator/monitor should ensure that the defibrillator/monitor is used in such an environment.			
Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% U_T (>95% dip in U_T) for 0.5 cycle 40% U_T (60% dip in U_T) for 5 cycles 70% U_T (30% dip in U_T) for 25 cycles <5% U_T (>95% dip in U_T) for 5 s	<5% U_T (>95% dip in U_T) for 0.5 cycle 40% U_T (60% dip in U_T) for 5 cycles 70% U_T (30% dip in U_T) for 25 cycles <5% U_T (>95% dip in U_T) for 5 s	Mains power quality should be that of a typical commercial or hospital environment. If the user of the LIFEPAK 20e defibrillator/monitor requires continued operation during power mains interruptions, it is recommended that the LIFEPAK 20e defibrillator/monitor be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
Note: U_T is the AC Mains voltage prior to application of the test level.			

Table 3

Guidance and Manufacturer's Declaration - Electromagnetic Immunity			
The LIFEPAK 20e defibrillator/monitor is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 20e defibrillator/monitor should ensure that the defibrillator/monitor is used in such an electromagnetic environment.			
Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
			Portable and mobile RF communications equipment should be used no closer to any part of the LIFEPAK 20e defibrillator/monitor, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. **Recommended separation distance**
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz outside ISM bands[1]	3 Vrms	$d = 1.2\sqrt{P}$
	10 Vrms 150 kHz to 80 MHz in ISM bands[1]	10 Vrms	$d = 1.2\sqrt{P}$
Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.5 GHz	10 V/m	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz $d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz Where *P* is the maximum output power rating of the transmitter in watts (w) according to the transmitter manufacturer and *d* is the recommended separation distance in meters (m).[2] Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,[3] should be less than the compliance level in each frequency range.[4] Interference may occur in the vicinity of equipment marked with the following symbol:
Note 1: At 80 MHz and 800 MHz, the higher frequency range applies. Note 2: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			

1. The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz.
2. The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in these frequency ranges.
3. Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitter, an electromagnetic site survey should be considered. If the measured field strength in the location in which the LIFEPAK 20e defibrillator/monitor is used exceeds the applicable RF compliance level above, the LIFEPAK 20e defibrillator/monitor should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the LIFEPAK 20e defibrillator/monitor.
4. Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3V/m.

©2018 Physio-Control, Inc.

Table 4

Recommended Separation Distances between Portable and Mobile RF Communications Equipment and the LIFEPAK 20e Defibrillator/Monitor Series

The LIFEPAK 20e defibrillator/monitor is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the LIFEPAK 20e defibrillator/monitor can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LIFEPAK 20e defibrillator/monitor as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m			
	150 kHz to 80 MHz outside ISM bands $d = 1.2\sqrt{P}$	150 kHz to 80 MHz in ISM bands $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.12	0.23
0.1	0.38	0.38	0.38	0.73
1	1.2	1.2	1.2	2.3
10	3.8	3.8	3.8	7.3
100	12	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance *d* in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where *P* is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

Note 1: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

Note 2: The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz.

Note 3: An additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas.

Note 4: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Table 5

CodeManagement Module Wireless Specifications					
The CodeManagement Module meets the following specifications for wireless transmission and reception, in accordance with IEC 60601-1-2.					
IEEE Protocol 802.11	Frequency (MHz)	Modulation Type	Bandwidth (MHz)	Effective Radiated Power (mW)	Effective Radiated Power (dbm)
802.11a	5180–5700	OFDM[1]	18	17.8	12.504
802.11b	2412–2472	DSSS[2]	12.4	25.1	13.99
802.11g	2412–2472	OFDM	16.6	25.1	13.99
802.11n	2412–2472	OFDM	16.6	25.1	13.99
802.11n	5180–5825	OFDM	18	17.8	12.504

1. Orthogonal Frequency-Division Multiplexing
2. Direct-Sequence Spread Spectrum

©2018 Physio-Control, Inc.

INDEX

Numerics
3-lead cable 3-5
5-wire cable 3-5
5-wire control, location of 2-10

A
AC Mains indicator 2-10
Accessories 7-13
Advisory Mode (refer to AED)
AED
  About x
  Contraindications x
  Indications for x
  Motion detected message 4-10
  Operator considerations x
  Procedure 4-6
  Setup menu 8-7
  Therapy 4-5
  Troubleshooting tips 4-13
AED Configuration 4-5
AED Mode (see AED)
AED Mode indicator 2-6
AED procedure
  Electrodes off 4-9
  Motion detected 4-10
  No shock advised 4-9, 4-11, 4-12
  Shock advised 4-7
Alarms
  Adjusting volume in OPTIONS 2-8
  Limits 2-19
  Managing 2-21
  Quick Set 2-19
  Setting 2-19
  Setup menu 8-11
  Silence 2-19
  Suspending, preemptively 2-21
  VF/VT Alarm 2-19
  Wide or narrow limits 2-19
ALARMS Control, location of 2-7
American Heart Association 4-17
  Surviving cardiac arrest xi
ANALYZE Control, location of 2-6
Anterior-lateral placement 3-4, 4-3, 4-21
Anterior-posterior placement 4-3, 4-21
Applying ECG electrodes 3-6
Auto test 7-3
Automated External Defibrillation (see AED)

B
battery
  check 2-23, 7-7, 7-8
  description 2-22
  status indicator 1-5, 2-11, 2-23
  status monitoring area 2-11
Bradycardia xii

C
Cable connectors 2-8
Capnography
Cardiopulmonary Resuscitation (see CPR)
CHARGE Control, location of 2-6
Checklist, Operator's D-1
Checks, function
  Patient ECG cable 7-6
  QUIK-COMBO cable pacing 7-9
  Standard paddles defibrillation 7-6
  Standard paddles monitoring 7-6
  Therapy cable defibrillation 7-8
  Therapy cable monitoring 7-8
  Therapy cable synchronized cardioversion 7-8
Cleaning 7-5
Clock Setup menu 8-12
CO2, see EtCO2
CODE SUMMARY 2-7
  Critical event record 6-2
  Event/vital signs log 6-3
  Preamble 6-3
  Printing 6-3
  Report 6-2
  Report Formats 6-5
CodeManagement Module
  Back view 2-15
  Front view 2-10

©2018 Physio-Control, Inc.

Installation 2-3
Side view 2-16
Wireless connection 6-9, 6-12
Color coding for ECG leads 3-6
Connecting the patient ECG cables 3-5
Controls, indicators, and connectors 2-4
CPR
Defibrillation therapy and xi
Metronome 4-17
Relation to CPSS E-1
CPR Metronome
Age-airway selection 4-17
Compression to ventilation ratio 4-17
Setup menu 8-8
CPSS
Activate with ADVISORY control 2-6
Event 6-6
Overview E-0, F-1
Critical Event Record 6-2
CURRENT Control, location of 2-6

D

Data Management 6-2
Data storage 6-2
Memory capacity 6-2
Report Types 6-2
Defibrillation Shock Overlays 4-15
Defibrillation Therapy
About xi
Contraindications xi
Procedure for pediatric patients 4-21
Deleting archived patient reports 6-11
Device tracking ii

E

ECG
3-lead cable 3-5
5-wire cable 3-5
Adjusting systole volume 3-3
Channels on screen 2-13
Connecting the ECG cable 3-5
Electrode requirements 3-6
Monitoring xii, 3-2
Procedure 3-5
Troubleshooting 3-7
With paddles and paddles accessories 3-4
Selecting lead and size 3-2
Size and QRS complexes 2-13
ECG CONNECTOR, location of 2-8
ECG size (screen) 2-11
Editing archived patient reports 6-10
Electrodes
Placement 4-4
Placement, special situations 4-4
Replacing and removing 5-4
ENERGY SELECT Control, location of 2-6
EtCO2
About xiii
Monitoring 3-16
Setup menu 8-10
European Resuscitation Council 4-17
EVENT
Control, location of 2-7
Screen overlay 2-7
Event Log 2-7
Event marker 1-7
Event/vital signs log 6-3
Events
Monitoring 6-4
Operator initiated 6-4
Setup menu 8-10
Therapy 6-4
Defibrillation 6-4
Pacing 6-4

H

Heart rate monitor 2-12
Heart rate/pulse rate indicator 1-5
HOME SCREEN
Control, location of 2-7
How to use 2-7
Hypoxemia xii

I

Implanted Defibrillators 4-4
Implanted Defibrillators, patients with 3-4
Implanted Pacemakers 4-4
Implanted Pacemakers, patients with 3-4
Internal Defibrillation Paddles 5-8
Internal pacemakers 3-6, 4-4
International Transmit connections G-1, H-1
IrDA adapter 6-12
IrDA Port
Location of 2-8
Positioning 6-12
Transmitting reports 6-12

L

LEAD button 3-2
LEAD Control, location of 2-7
Leads off messages 3-6
Limb leads 3-6
electrode placement 3-5
Loading 50mm paper 2-14
Long format, CODE SUMMARY 6-5

M

Maintaining the equipment 7-1
Maintenance and testing schedule 7-2
Managing archived patient reports 6-7
Manual defibrillation procedure 4-16
Manual Mode
CPR metronome 4-18
Defibrillation procedure 4-16
Entering passcode 4-14
Setup menu 8-5
Switching from AED 4-14
Troubleshooting tips 4-22
Medium format, CODE SUMMARY 6-5
Memory capacity 6-2
Metronome
Age-airway selection 4-17
Compression to ventilation ratio 4-17
CPR 4-17
Modes of Operation
Manual Mode 4-14
Service Mode 8-14
Setup Mode 8-3
Monitoring 3-1
EtCO2 3-16
Events 6-4
Patients with internal pacemakers 3-6
Procedure 3-4
Special placement situations 3-4
The ECG 3-2
Monitoring area
EtCO2 2-13
Heart rate 2-12
Pulse rate 2-13
Screen 2-11
SpO2 (pulse oximeter) 2-13
Monitoring EtCO2 3-16
Alarms 3-20
CO2 detection 3-21
How capnography works 3-17
Procedure 3-18
Monitoring SpO2
Considerations 3-10
How a pulse oximeter works 3-10
Procedure 3-12
SpO2 volume 3-12
Monitoring the ECG
Adjusting the systole volume 3-3
Motion Detection E-5

N

Noninvasive Pacing 4-3
Indications xii
Therapy 4-25

Noninvasive Pacing (see Pacing)

O
ON Control, location of 2-6
Operator's Checklist D-1
OPTIONS
  Control, location of 2-7
  How to use 2-17, 8-3
  Screen overlay 2-8
Overlay
  Alarms 2-19
  Channel 1 3-2, 3-3
  Manual Mode 4-14
  Options 2-8, 2-17
  Options/Patient 2-17
  Setup passcode 8-3
  SpO2 3-12

P
Pace arrow
  Internal pacing 1-7
  Noninvasive pacing 1-7
PACER Control, location of 2-6
Pacing
  Adjust current using CURRENT Control 2-6
  Demand and nondemand 4-25
  Noninvasive 4-3
  Noninvasive pacing procedure 4-26
  Setup menu 8-9
  Slow rate using PAUSE control 2-6
Paddle accessory options 5-1
Paper, loading 50mm 2-14
Passcode
  Manual Mode 4-14
  Set for Setup Mode 8-14
  Setup mode 8-2
Patient data, entering
  Using OPTIONS 2-8
Patient Reports 6-2
  Accessing previous 2-8
  Deleting archived patient reports 6-11
  Editing archived patient reports 6-10
  Managing archived patient reports 6-7
  Transmitting archived patient reports 6-9
PAUSE Control, location of 2-6
Pediatric paddles 5-1, 5-6
  Defibrillation procedure 4-22
  Placement 4-21
  Removing 5-6, 5-7
Preamble, CODE SUMMARY 6-3
Print configurations before service or repair 8-2
PRINT Control, location of 2-10
Print Defaults 8-13
Printer
  Controls, location of 2-10
  Loading 50mm paper 2-14
  Setup menu 8-11
Printing
  Archived patient reports 6-7
  Auto Print Setup menu 8-12
  CODE SUMMARY 6-3
  Starting 2-10
  Stopping 2-10
Pulse Oximeter Sensors 3-13

Q
QRS complex 3-6, 4-26
QRS detection 2-12
Quick Set alarms, setting 2-19
QUIK-COMBO Electrodes 5-2
  Connecting to therapy cable 5-4
  Electrode placement 3-4, 4-4
  Removing electrodes 5-4
  Replacing electrodes 5-4
  Using when pacing 4-25

R
RATE Control, location of 2-6
Recycling 7-12
Report Types 6-2
Reset Defaults Setup menu 8-13
Resuscitation (see CPR)
R-wave sense marker 1-7

S
Safety
  Symbols 1-4
  Terms 1-2
SAS, see Shock Advisory System
Screen
  Alarms 2-11
  Battery charge 2-11
  ECG size display 2-11
  Messages C-1
  Monitoring alarms 2-11
  Monitoring parameters 2-11
  Selected energy 2-11
  Selecting waveform channels 2-13
  Status message area 2-11
  Time display 2-11
  VF/VT Alarm display
    Warning messages 2-11
  Waveform channel areas 2-11, 2-12, 2-13
Screen Overlay (see Overlay)
Selected energy (screen) 2-11
Send Configuration Setup menu 8-13
Service and Repair 7-12
SERVICE Indicator, location of 2-10
Setup Configuration
  Printing before service or repair 8-2
Setup Menus
  Advisory Mode 8-7
  Alarms 8-11
  Auto Print 8-12
  Clock 8-12
  CPR metronome 8-8
  EtCO2 8-10
  General 8-4
  Manual Mode 8-5
  Pacing 8-9
  Printer 8-11
  Reset Defaults 8-13
  Send Config 8-13
  Set Passcode (Setup) 8-14
Setup mode passcode 8-14
Setup Options 8-2
SHOCK
  Control and Indicator, location of 2-6
  Indicator, using the E-4
Shock Advisory System
  Activate with ANALYZE control 2-6
  Electrode contact impedance E-1
  Event 6-6
  How Shock Advisory System operates E-1, F-7
  Overview E-1
  When shock recommended E-1
Shock report 6-6
Short format, CODE SUMMARY 6-5
SIZE
  Button 3-3
  Control, location of 2-7
Speaker, location of 2-8
SPEED DIAL
  Control, location of 2-8
  Using the 2-9, 3-2, 3-3, 3-12, 4-26
SpO2
  Adjusting pulse tone volume 3-12
  Cable connector 2-8
  Contraindications xii
  How a pulse oximeter works 3-10
  Indications xii
  Monitoring xii, 3-9
  Monitoring area on screen 2-13
  Monitoring considerations 3-11
  Monitoring procedure 3-12
  Pulse Oximeter sensors 3-13
SpO2 Connector
  Connecting a cable 3-12
  Location of 2-8
Standard Paddles

©2018 Physio-Control, Inc.

Features 5-6
Placement 3-4, 4-3
User Test 7-4
Status messages (screen) 2-11
Sterilizable Internal Defibrillation Paddles 5-8
Sternum paddle 3-4
Supplies, accessories, and training tools 7-13
Switching from AED to Manual mode 4-14
SYNC Control, location of 2-6
Synchronized Cardioversion 4-3
Procedure 4-18
Troubleshooting tips 4-22

T

Testing 5-5
Auto 7-3
Checklist D-1
Schedule 7-2
User 7-4
Therapy
Defibrillation 4-3
Electrode and standard paddle placement 4-3
Noninvasive pacing 4-3
Synchronized cardioversion 4-3
Therapy cable
Connecting 2-9
Disconnecting 2-9
Therapy Connector
Connecting electrodes to 4-16, 4-19
Location of 2-8
Message if no connection 4-9
Time (screen) 2-11
Training Tools 7-13
Transmit connections, International G-1, H-1
Transmitting
Archived patient reports 6-9
Overview of connections 6-12
Troubleshooting tips
Defibrillation and synchronized cardioversion 4-22
ECG monitoring 3-7
EtCO2 monitoring 3-22
General 7-10
Noninvasive pacing 4-27
SpO2 3-14

U

Unpacking and inspecting 2-3
User Controls 2-7
User testing 7-4

V

VF/VT Alarm
On screen 2-11
Turning on and off 2-20

W

Warranty 7-13
Waveform
Channel (screen) 2-11, 2-12
Channel areas 2-13
CPSS event 6-6
Events 6-4
Events, examples of 6-6
Selecting channels 2-13
Shock Advisory System event 6-6
Shock report 6-6

Physio-Control is now part of Stryker.

For further information, please contact your local Physio-Control representative or visit www.physio-control.com

Physio-Control, Inc.
11811 Willows Road NE
Redmond, WA 98052 USA
Telephone: 425.867.4000
Toll Free (USA only): 800.442.1142
Fax: 425.867.4121
www.physio-control.com

Physio-Control, Inc., 11811 Willows Road NE, Redmond, WA 98052 USA

EC REP Stryker European Operations B.V., Herikerbergweg 110, 1101 CM Amsterdam, The Netherlands

CE 0123

REF 26500-003495

PN 3313187-013

Publication date: 12/2018

PHYSIO CONTROL

LIFEPAK® 15 MONITOR/DEFIBRILLATOR

Operating Instructions

LIFEPAK® 15 MONITOR/DEFIBRILLATOR

Operating Instructions

Important Information

!USA Rx Only

!USA Device Tracking

The U.S. Food and Drug Administration requires defibrillator manufacturers and distributors to track the location of their defibrillators. If the device is located somewhere other than the shipping address or the device has been sold, donated, lost, stolen, exported, destroyed, permanently retired from use, or if the device was not obtained directly from Physio-Control, please do one of the following: register the device at http://www.physio-control.com, call the device registration phone line at 1.800.426.4448, or use one of the postage-paid address change cards located in the back of this manual to update this vital tracking information.

Text Conventions

Throughout these operating instructions, special text characters (for example, **CAPITAL LETTERS** such as **CHECK PATIENT** and **SPEED DIAL**) are used to indicate labels, screen messages, and voice prompts.

Applicable Products

These operating instructions are for use with the following product catalog numbers.

REF

99577-001368, 99577-001372, 99577-001373, 99577-001588, 99577-001930, 99577-001931, 99577-001932, 99577-001933, 99577-001934, 99577-001935, 99577-001936, 99577-001937, 99577-001938, 99577-001939, 99577-001940, 99577-001941, 99577-001942, 99577-001943, 99577-001944, 99577-001945, 99577-001946, 99577-001947, 99577-001948, 99577-001949, 99577-001950, 99577-001951, 99577-001952, 99577-001953, 99577-001954, 99577-001955, 99577-001956, 99577-001957, 99577-001958, 99577-001959, 99577-001960, 99577-001961, 99577-001962, 99577-001963, 99577-001964, 99577-001965, 99577-001966

Physio-Control or its affiliates own, use, or have applied for the following trademarks or service marks: LIFEPAK, LIFEPAK CR, LIFEPAK EXPRESS, REDI-PAK, LIFENET, QUIK-LOOK, QUIK-COMBO, CODE SUMMARY, Shock Advisory System, CODE-STAT, DT EXPRESS, SunVue, and cprMAX. All other trademarks are trademarks of their respective owners or holders. The Oridion medical capnography in this product is covered by one or more of the following US patents: 6,428,483; 6,997,880; 5,300,859; 6,437,316 and their foreign equivalents. Additional patent applications pending. Specifications are subject to change without notice.

Masimo SET.

©2018 Physio-Control, Inc.
Publication Date: 12/2018

PN 3314911-010

Contents

Chapter 1 Preface 9

Introduction 11

Intended Use 11

Modes of Operation 12

Chapter 2 Safety Information 13

Terms 15

General Dangers and Warnings 15

Chapter 3 Basic Orientation 19

Front View 21

Back View 31

Batteries 33

Home Screen 35

Alarms 39

Options 41

Events 43

Chapter 4 Monitoring 45

Monitoring the ECG 47

Acquiring a 12-Lead ECG 59

Monitoring SpO2, SpCO, and SpMet 69

Monitoring Noninvasive Blood Pressure 80

Monitoring ETCO2 88

Monitoring Invasive Pressure 96

Monitoring Continuous Temperature 104

Vital Sign and ST Segment Trends 108

Chapter 5 Therapy 113

General Therapy Warnings and Cautions 115

Therapy Electrode and Standard Paddle Placement 117

Automated External Defibrillation (AED) 119

Manual Defibrillation 133

Synchronized Cardioversion Procedure 139

Noninvasive Pacing 144

Pediatric ECG Monitoring and Manual Mode Therapy Procedures 150

Chapter 6 Paddle Accessory Options **151**
QUIK-COMBO Therapy Electrodes 153
Standard Paddles 156
Sterilizable Internal Defibrillation Paddles 160

Chapter 7 Data Management **161**
Patient Records and Reports 163
Memory Capacity 169
Managing Current Patient Records 169
Managing Archived Patient Records 171

Chapter 8 Data Transmission **175**
About Transmitting Patient Records and Reports 177
Preparing the Monitor for Transmission 178
Using Bluetooth Wireless Communication 178
Using a Direct Connection 183
Transmitting Reports 185
Considerations When Transmitting Data 187
Troubleshooting Tips 188

Chapter 9 Power Adapter **191**
Basic Orientation 193
Using the Power Adapter 195
General Maintenance 198
Warranty 199

Chapter 10 Maintaining the Equipment **201**
General Maintenance and Testing 203
Battery Maintenance 211
Cleaning the Device 214
Storing the Device 214
Loading Paper 215
General Troubleshooting Tips 216
Service and Repair 220
Service Life 220
Product Recycling Information 221

Warranty....221
Accessories....222

Appendix A Specifications and Performance Characteristics 225

Specifications and Performance Characteristics....227

Appendix B Screen Messages 251

Summary of Screen Messages....253

Appendix C Defibrillation Clinical Summaries 259

Defibrillation of Ventricular Fibrillation and Ventricular Tachycardia....261
External Cardioversion of Atrial Fibrillation....263
Intra-Operative Ventricular Defibrillation....267
Clinical Summary: Monophasic vs. Biphasic Waveforms: Out-of-Hospital Trial....270

Appendix D Shock Advisory System 271

Overview....273
Performance Verification....274

Appendix E SpO2 Specifications and Validation 279

SpO2 Specifications and Validation....281
Masimo Clinical Validation Data....289
Nellcor Clinical Validation Data....290

Appendix F Electromagnetic Compatibility Guidance 291

Electromagnetic Compatibility Guidance....293

Appendix G Symbols 297

Symbols....299

Index 305

Chapter 1

Preface

This chapter provides a brief introduction to the LIFEPAK® 15 monitor/defibrillator and describes the product's intended use.

Introduction 11
Intended Use 11
Modes of Operation..... 12

Introduction

The LIFEPAK 15 monitor/defibrillator is a complete acute cardiac care response system designed for basic life support (BLS) and advanced life support (ALS) patient management protocols.

These operating instructions include information and procedures related to *all* features of the LIFEPAK 15 monitor/defibrillator. Your LIFEPAK 15 monitor/defibrillator may not have all of these features.

These operating instructions describe the operation of the LIFEPAK 15 monitor/defibrillator when the factory default settings are used. The factory default settings for all setup options are identified in table, Setup Options Factory Default Settings (on page 247). Your device may be set up with different default settings, based on your protocols. For information about changing default settings, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

IMPORTANT! Some LIFEPAK 15 monitor/defibrillator accessories are *not* interchangeable with accessories that are used with other LIFEPAK monitor/defibrillators. Specific accessory incompatibilities are noted in the related sections.

Intended Use

The LIFEPAK 15 monitor/defibrillator is intended for use by trained medical personnel. For information about training options, contact your local Physio-Control representative.

The LIFEPAK 15 monitor/defibrillator can be used in out-of-doors and indoor emergency care settings within the environmental conditions specified in Appendix A. The monitor/defibrillator is designed to be used during ground transportation.

Monitoring and therapy functions may only be used on one patient at a time. Manual mode monitoring and therapy functions are intended for use on adult and pediatric patients. Automated external defibrillation mode is intended for use on patients eight years of age and older.

For additional intended use information, and information about the indications and contraindications of the monitoring and therapy functions, see the individual sections identified below.

• ECG Monitoring	See Monitoring the ECG (on page 47)	Standard feature
• 12-Lead Electrocardiography	See Acquiring a 12-Lead ECG (on page 59)	Optional
• SpO_2, SpCO, and SpMet Monitoring	See Monitoring SpO2, SpCO, and SpMet (on page 69)	Optional
• Noninvasive Blood Pressure Monitoring	See Monitoring Noninvasive Blood Pressure (on page 80)	Optional
• End-Tidal CO_2 Monitoring	See Monitoring ETCO2 (on page 88)	Optional

• Invasive Pressure Monitoring	See Monitoring Invasive Pressure (on page 96)	Optional
• Temperature Monitoring	See Monitoring Continuous Temperature (on page 104)	Optional
• Vital Sign and ST Segment Trends	See Vital Sign and ST Segment Trends (on page 108)	Optional
• Automated External Defibrillation	See Automated External Defibrillation (AED) (on page 119)	Standard feature
• Manual Defibrillation	See Manual Defibrillation (on page 133)	Standard feature
• Noninvasive Pacing	See Noninvasive Pacing (on page 144)	Standard feature

Modes of Operation

The LIFEPAK 15 monitor/defibrillator has the following modes of operation:

- **AED mode**—for automated ECG analysis and a prompted treatment protocol for patients in cardiac arrest.
- **Manual mode**—for performing manual defibrillation, synchronized cardioversion, noninvasive pacing, and ECG and vital sign monitoring.
- **Archive mode**—for accessing stored patient information.
- **Setup mode**—for changing default settings of the operating functions. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
- **Demo mode**—for simulated waveforms and trend graphs for demonstration purposes.
- **Service mode**—for authorized personnel to perform diagnostic tests and calibrations. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Service Manual*.

Chapter 2

Safety Information

This chapter provides important information to help you operate the LIFEPAK 15 monitor/defibrillator. Familiarize yourself with all of these terms and warnings.

Terms 15

General Dangers and Warnings 15

Terms

The following terms are used either in these operating instructions or on the LIFEPAK 15 monitor/defibrillator:

Danger: Immediate hazards that will result in serious personal injury or death.

Warning: Hazards or unsafe practices that may result in serious personal injury or death.

Caution: Hazards or unsafe practices that may result in minor personal injury, product damage, or property damage.

General Dangers and Warnings

The following are general danger and warning statements. Other specific warnings and cautions are provided as needed in other sections of these operating instructions.

DANGER!	**Explosion Hazard** Do not use this defibrillator in the presence of flammable gases or anesthetics.
WARNING	**Shock Hazard** The defibrillator delivers up to 360 joules of electrical energy. Unless properly used as described in these operating instructions, this electrical energy may cause serious injury or death. Do not attempt to operate this device unless thoroughly familiar with these operating instructions and the function of all controls, indicators, connectors, and accessories.
WARNING	**Shock Hazard** Do not disassemble the defibrillator. It contains no operator serviceable components and dangerous high voltages may be present. Contact authorized service personnel for repair.
WARNING	**Possible Device Failure** Do not modify the device.

©2018 Physio-Control, Inc.

WARNING

Shock or Fire Hazard

Do not immerse any portion of this defibrillator in water or other fluids. Avoid spilling any fluids on defibrillator or accessories. Spilled liquids may cause the defibrillator and accessories to perform inaccurately or fail. Do not clean with ketones or other flammable agents. Do not autoclave or sterilize this defibrillator or accessories unless otherwise specified.

WARNING

Possible Fire

Use care when operating this device close to oxygen sources (such as bag-valve-mask devices or ventilator tubing). Turn off gas source or move source away from patient during defibrillation.

WARNING

Possible Electrical Interference With Device Performance

Equipment operating in close proximity may emit strong electromagnetic or radio frequency interference (RFI), which could affect the performance of this device. If use of equipment in close proximity is necessary, observe the device to verify normal operation in the configuration in which the device will be used. RFI may result in distorted ECG, incorrect ECG lead status, failure to detect a shockable rhythm, cessation of pacing, or incorrect vital sign measurements. Avoid operating the device near cauterizers, diathermy equipment, portable and mobile RF communications equipment, metal detectors, or electronic articles surveillance gates. Do not rapidly key EMS radios on and off. Refer to Electromagnetic Compatibility Guidance (on page 291) for recommended distances of equipment. Contact Physio-Control Technical Support if assistance is required.

WARNING

Possible Electrical Interference

This defibrillator should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the defibrillator should be observed to verify normal operation in the configuration in which it will be used.

WARNING

Possible Electrical Interference

Using cables, electrodes, or accessories not specified for use with this defibrillator may result in increased emissions or decreased immunity from electromagnetic or radio frequency interference (RFI) which could affect the performance of this defibrillator or of equipment in close proximity. Use only parts and accessories specified in these operating instructions.

WARNING

Possible Electrical Interference

This defibrillator may cause electromagnetic interference (EMI) especially during charge and energy transfers. EMI may affect the performance of equipment operating in close proximity. Verify the effects of defibrillator discharge on other equipment prior to using the defibrillator in an emergency situation, if possible.

WARNING

Possible Equipment Damage

Use only ECG cables that are specified for use with this device. Protection of the device against defibrillator discharge is dependent on the use of ECG cables that are specified by Physio-Control.

WARNING

Possible Improper Device Performance

Using other manufacturers' cables, electrodes, power adapters, or batteries may cause the device to perform improperly and may invalidate the safety agency certifications. Use only the accessories that are specified in these operating instructions.

WARNING

Possible Improper Device Performance

Changing factory default settings will change the behavior of the device. Changes to the default settings must only be made by authorized personnel.

WARNING

Possible Device Shutdown

Always have immediate access to a spare, fully charged, properly maintained battery. Replace the battery when the device displays a low battery warning.

WARNING

Safety Risk And Possible Equipment Damage

MR unsafe: Keep the defibrillator away from magnetic resonance imaging (MRI) equipment.

WARNING

Possible Patient Burns

A defect in the neutral electrode connection on HF surgical equipment could cause burns at the lead or sensor site and damage to the monitor/defibrillator. Do not apply patient leads, sensors, or catheters when using high frequency (HF) electrosurgical equipment.

Note: The features of the LIFEPAK 15 monitor/defibrillator which could come in either direct or casual contact with the patient or caregiver during normal use are not made with natural rubber latex.

Chapter 3

Basic Orientation

This chapter provides a basic orientation to the LIFEPAK 15 monitor/defibrillator device and its controls, indicators, and connectors.

Front View 21

Back View 31

Batteries 33

Home Screen 35

Alarms 39

Options 41

Events 43

Front View

This figure shows the front of the LIFEPAK 15 monitor/defibrillator. The front of the device is described in the following sections.

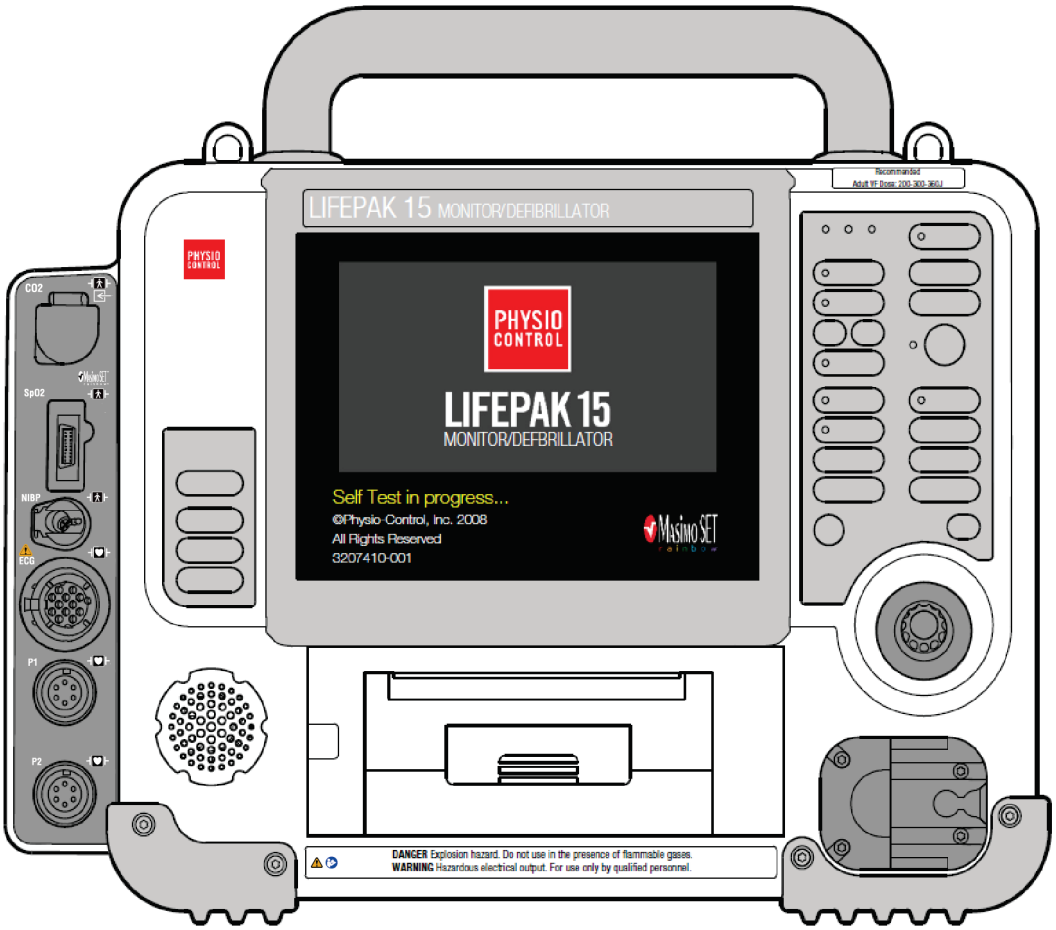

Figure 1 Front View

Area 1

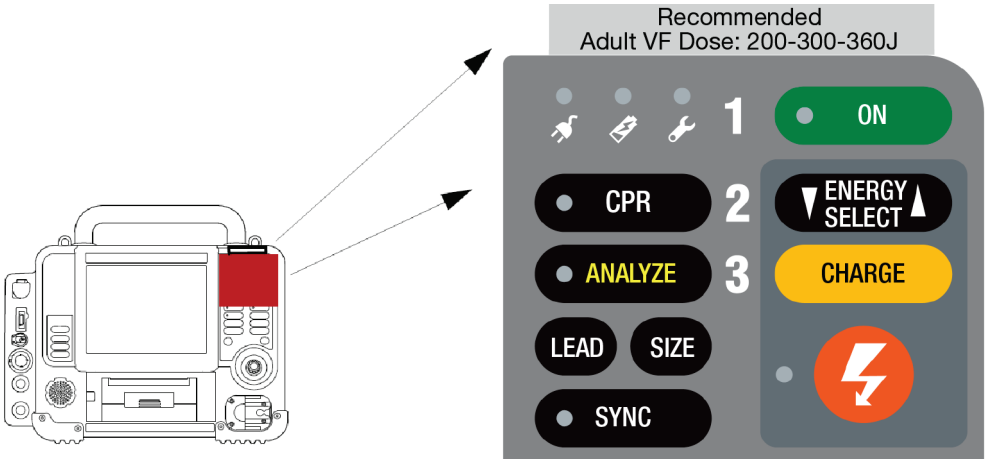

Figure 2 Area 1 Controls

Table 1 Area 1 Controls

	CONTROL	DESCRIPTION	FOR MORE INFORMATION
	VF dose label	Physio-Control recommended energy dose for adult Ventricular Fibrillation (VF).	See *Biphasic Clinical Summaries* at www.physio-control.com/Biphasic
1	ON	Turns device ON or OFF. LED illuminated when ON. Press and hold to turn device off.	
2	ENERGY SELECT	Increases or decreases energy level in Manual mode.	See Manual Defibrillation (on page 133)
3	CHARGE	Charges the defibrillator in Manual mode.	See Manual Defibrillation (on page 133)
		Shock button. Initiates discharge of defibrillator energy to patient. LED flashes when charging is complete.	See Manual Defibrillation (on page 133)
		Auxiliary power indicator. LED illuminated when defibrillator is connected to auxiliary AC or DC power source, whether defibrillator is turned on or off.	See Using the Power Adapter (on page 195)
		Battery charging indicator. LED illuminated when installed batteries are fully charged. LED flashes when either battery is charging. LED is not illuminated when no batteries are installed or a battery is unable to be charged.	See AC Power Adapter Operation (on page 195)
		Illuminated Service LED indicates a condition exists that prevents or could prevent normal defibrillator operation.	See General Troubleshooting Tips (on page 216)
	CPR	Controls CPR metronome. LED illuminated when metronome function is active.	See Using the CPR Metronome (on page 137)
	ANALYZE	Activates Shock Advisory System™ (AED mode). LED illuminated when AED is analyzing the ECG, and flashes when user is prompted to push **ANALYZE**.	See Automated External Defibrillation (AED) (on page 119)
	LEAD	Changes ECG lead.	See Selecting ECG Lead (on page 48)
	SIZE	Changes ECG size.	See Changing ECG Size (on page 49)
	SYNC	Activates Synchronized mode. LED illuminated when Sync mode is active and flashes with detection of each QRS.	See Synchronized Cardioversion Procedure (on page 139)

Area 2

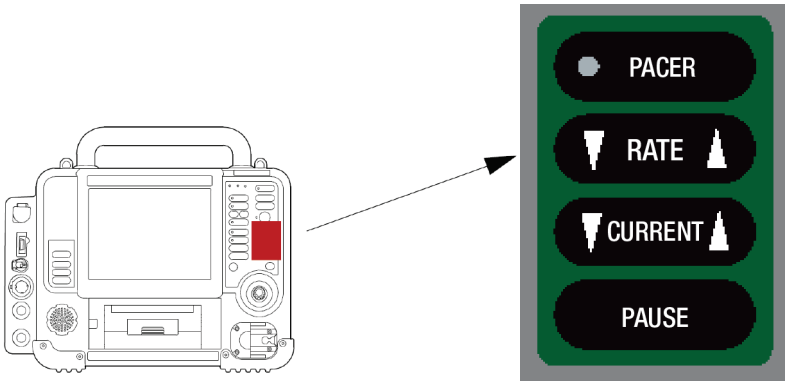

Figure 3 Area 2 Controls

Table 2 Area 2 Controls

CONTROL	DESCRIPTION	FOR MORE INFORMATION
PACER	Activates pacer function. LED illuminated when function is activated and flashes with each current pulse.	See Noninvasive Pacing (on page 144)
RATE	Increases or decreases pacing rate.	See Noninvasive Pacing (on page 144)
CURRENT	Increases or decreases pacing current.	See Noninvasive Pacing (on page 144)
PAUSE	Temporarily slows pacing rate.	See Noninvasive Pacing (on page 144)

Area 3

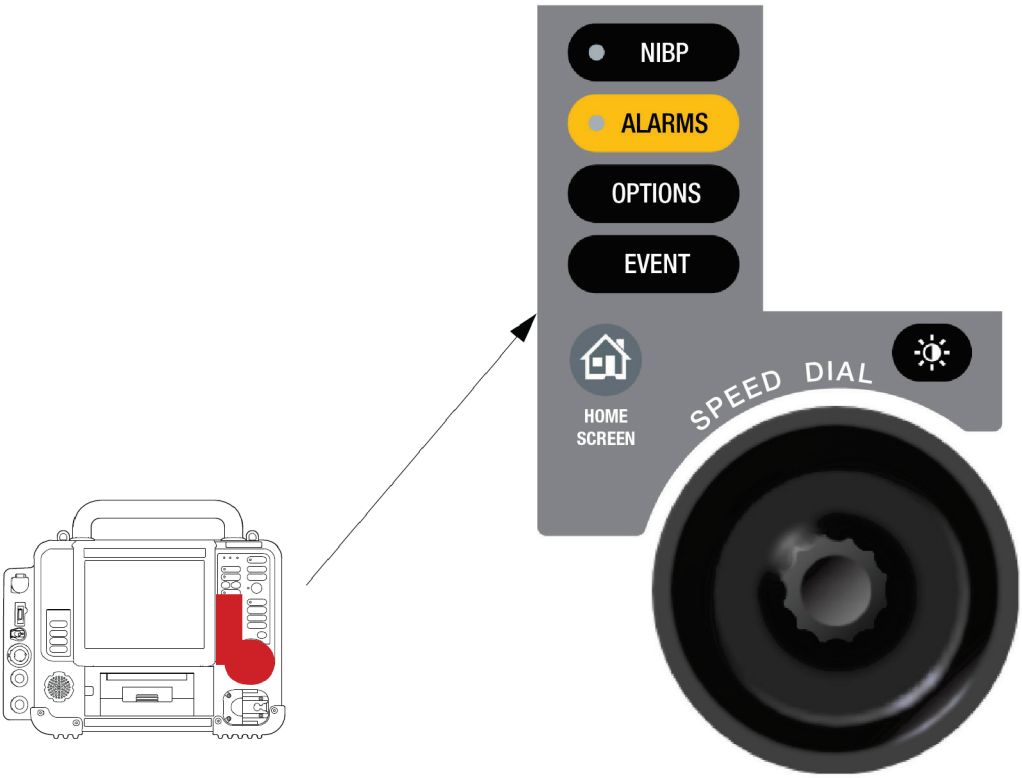

Figure 4 Area 3 Controls

Table 3 Area 3 Controls

CONTROL	DESCRIPTION	FOR MORE INFORMATION
NIBP	Initiates blood pressure measurement. LED illuminated when BP measurement is being obtained.	See Monitoring Noninvasive Blood Pressure (on page 80)
ALARMS	Activates and silences alarms. LED illuminated when alarms are enabled and flashes when an alarm condition occurs.	See Alarms (on page 39)
OPTIONS	Accesses optional functions.	See Options (on page 41)
EVENT	Accesses user-defined events.	See Events (on page 43)
HOME SCREEN	Returns to Home Screen display.	See Home Screen (on page 35)
SPEED DIAL	Scrolls through and selects screen or menu items.	See Navigating the Home Screen (on page 37)
	Display mode button switches between color display and high contrast SunVue™ display.	

Area 4

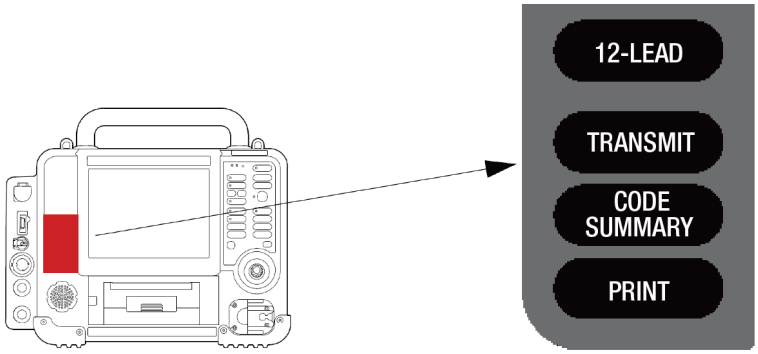

Figure 5 Area 4 Controls

Table 4 Area 4 Controls

CONTROL	DESCRIPTION	FOR MORE INFORMATION
12-LEAD	Initiates acquisition of 12-lead ECG.	See Acquiring a 12-Lead ECG (on page 59)
TRANSMIT	Initiates transmission of patient data.	See Transmitting Reports (on page 185)
CODE SUMMARY	Prints CODE SUMMARY™ critical event record.	See CODE SUMMARY Report (on page 164)
PRINT	Starts and stops printer.	See How to Print a Current Report (on page 169)

Area 5

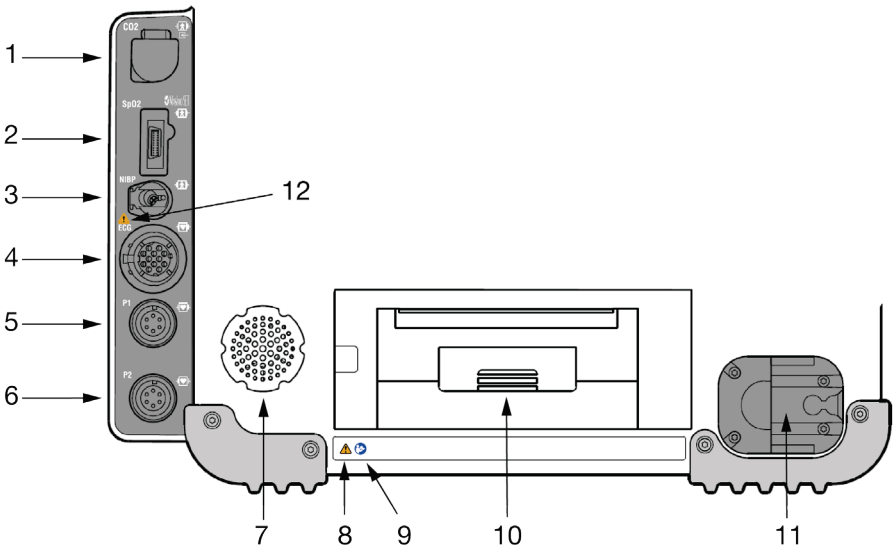

Figure 6 Area 5 Connectors, Speaker, and Printer

Table 5 Area 5 Connectors, Speaker, and Printer

ITEM	LABEL	DESCRIPTION	FOR MORE INFORMATION
1	CO2	FilterLine® set port	See Monitoring ETCO2 (on page 88)
2	SpO2/SpCO/ SpMet	Sensor cable port	See Monitoring SpO2, SpCO, and SpMet (on page 69)
3	NIBP	Pneumatic tubing port	See Monitoring Noninvasive Blood Pressure (on page 80)
4	ECG	Green electrically isolated ECG cable port	See Monitoring the ECG (on page 47)
5	P1	Invasive pressure cable port	See Monitoring Invasive Pressure (on page 96)
6	P2	Invasive pressure cable port	See Monitoring Invasive Pressure (on page 96)
7	Speaker	Projects device tones and voice prompts	
8	Symbol	General warning	See Warnings (on page 17)
9	Symbol	Follow instructions for use	
10	Printer	Door for 100 mm printer paper	See Loading Paper (on page 215)
11	Therapy cable receptacle	QUIK-COMBO® therapy cable and standard (hard) paddles cable receptacle	See Connecting and Disconnecting the Therapy Cable (on page 29)
12	Symbol	General warning	See Warnings (on page 17)

Note: If your LIFEPAK 15 monitor/defibrillator is configured for temperature monitoring, P1 and P2 are replaced by a single port labeled TEMP. For more information about temperature monitoring, see Monitoring Continuous Temperature (on page 104).

Connectors

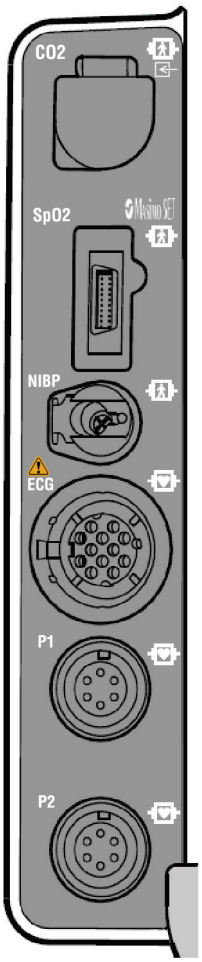

CONNECTOR	ACTION
CO2	**Connect:** Open CO_2 port door, insert FilterLine connector, and turn clockwise until connector is firmly seated. **Disconnect:** Rotate FilterLine connector counterclockwise and pull connector out.
SpO2/ SpCO/ SpMet	**Connect:** Align cable connector with SpO_2 port and push in until connector clicks into place. **Disconnect:** Press the gray buttons on each side of the cable connector simultaneously and pull connector out.
NIBP	**Connect:** Insert NIBP tubing connector into the NIBP port. **Disconnect:** Press the latch on the left side of the port and pull tubing connector out.
ECG	**Connect:** Align the green ECG connector with the ECG port; position the white line on the cable facing left. Insert the cable connector into the port until the connector is firmly seated. **Disconnect:** Pull the ECG connector straight out.
P1/P2	**Connect:** Align the IP (invasive pressure) cable connector with the P1 or P2 port; position the gap on the connector facing up. Insert the cable connector into the port until the connector is firmly seated. **Disconnect:** Grip the connector and pull straight out.

Figure 7 Connectors for IP Monitoring Configuration

Note: If your LIFEPAK 15 monitor/defibrillator is configured for temperature monitoring, P1 and P2 are replaced by a single port labeled TEMP. For more information, see the following figure, Connectors for Temperature Monitoring Configuration.

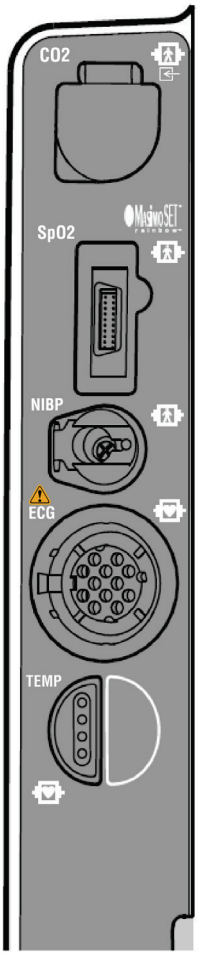

CONNECTOR	ACTION
CO2	**Connect:** Open CO_2 port door, insert FilterLine connector, and turn clockwise until connector is firmly seated. **Disconnect:** Rotate FilterLine connector counterclockwise and pull connector out.
SpO2/ SpCO/ SpMet	**Connect:** Align cable connector with SpO_2 port and push in until connector clicks into place. **Disconnect:** Press the gray buttons on each side of the cable connector simultaneously and pull connector out.
NIBP	**Connect:** Insert NIBP tubing connector into the NIBP port. **Disconnect:** Press the latch on the left side of the port and pull tubing connector out.
ECG	**Connect:** Align the green ECG connector with the ECG port; position the white line on the cable facing left. Insert the cable connector into the port until the connector is firmly seated. **Disconnect:** Pull the ECG connector straight out.
TEMP	**Connect:** Align the temperature adapter cable connector with the TEMP port. Insert the cable connector into the port until the connector is firmly seated. **Disconnect:** Grip the connector and pull straight out.

Figure 8 Connectors for Temperature Monitoring Configuration

Connecting and Disconnecting the Therapy Cable

WARNING

Possible Equipment Damage and Inability to Deliver Therapy

To help protect the therapy cable connector from damage or contamination, keep therapy cable connected to the defibrillator at all times. Inspect and test the therapy cable daily according to the Operator's Checklist in the back of this manual. Physio-Control recommends replacement of therapy cables every three years to reduce the possibility of failure during patient use.

IMPORTANT! The LIFEPAK 15 monitor/defibrillator QUIK-COMBO therapy cable and standard (hard) paddles have the same type of connector and connect to the defibrillator at the same location. These therapy cables are not compatible with other LIFEPAK defibrillator/monitors.

To connect a therapy cable to the defibrillator:

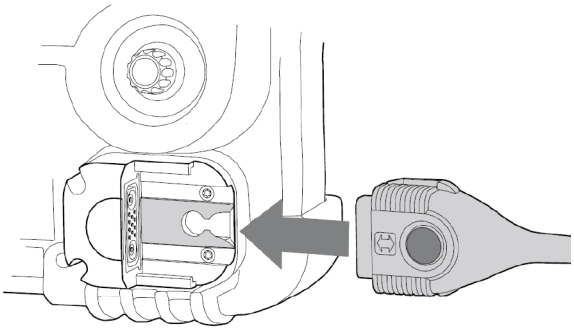

1. Align the therapy cable connector with the receptacle.
2. Slide the therapy cable until you feel the connector lock in place. You will also hear a “click.”

Figure 9 Connect Therapy Cable

To disconnect the therapy cable from the defibrillator:

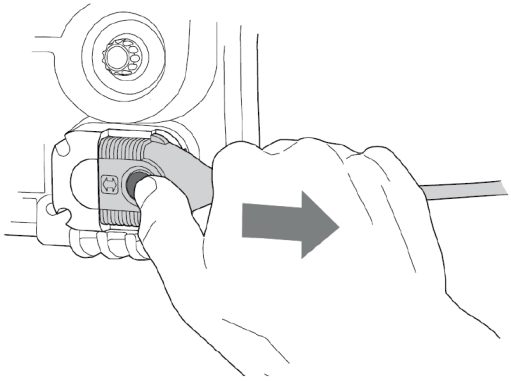

1. Press the release button on the therapy cable connector.
2. Slide the therapy cable connector out.

Figure 10 Disconnect Therapy Cable

Back View

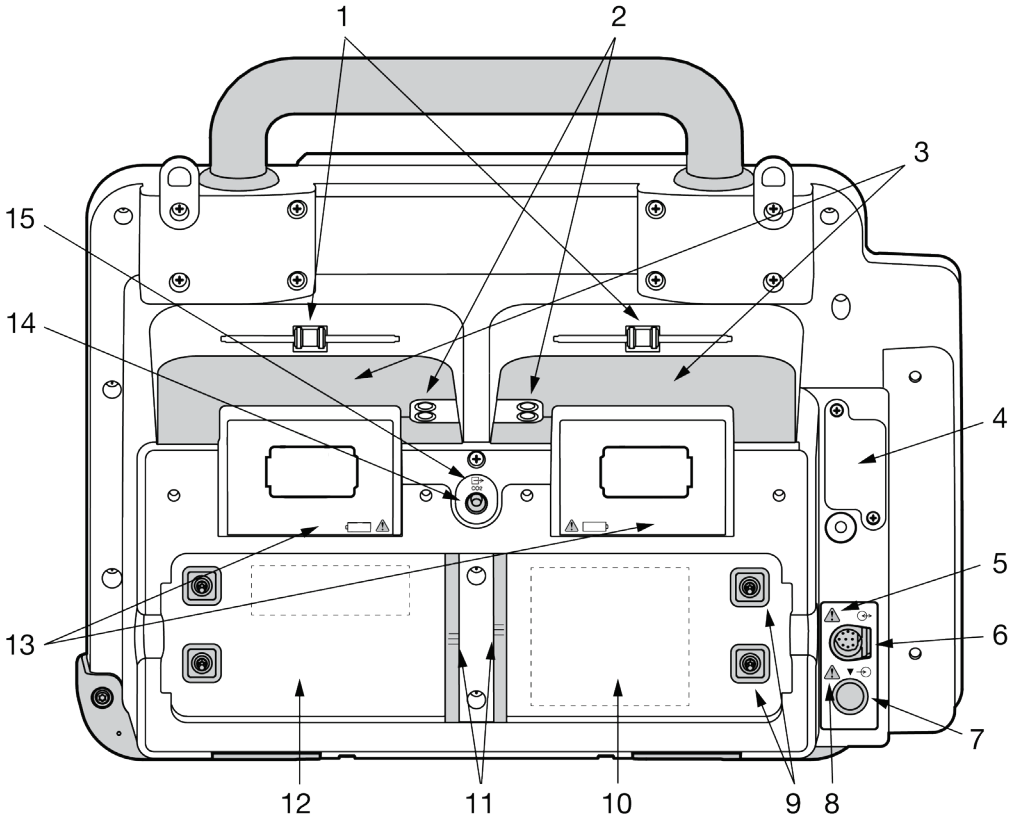

Figure 11 Back View

FIGURE LEGEND			
1	Paddle retainers	9	Battery pins
2	Paddle test contacts	10	Battery well 1; includes serial number label
3	Standard paddle wells	11	Battery contacts
4	USB port cover	12	Battery well 2; includes *Bluetooth* label
5	See shock hazard warning (on page 32)	13	See battery warnings (on page 211) and stored battery warning (on page 212)
6	System connector	14	CO_2 exhaust port
7	Auxiliary power connector	15	See $EtCO_2$ monitoring warnings (on page 88)
8	See power adapter warnings (on page 194) and battery warnings (on page 211)		

Table 6 Back View

LABEL	DESCRIPTION	FOR MORE INFORMATION
Battery wells, pins, and contacts	Each well holds one Lithium-ion battery. Two pins in each well transfer the battery power. Battery contacts transfer battery status information. See serial number label in battery well 1 for device part number, serial number, date of manufacture, and IP rating (dust and splash resistance). See *Bluetooth* label in battery well 2 for *Bluetooth* identification. See Using *Bluetooth* Wireless Communication for more information.	See Battery Maintenance (on page 211)
CO_2 exhaust port	Connects to a scavenger system when monitoring $EtCO_2$ during use of anesthetics.	See Monitoring ETCO2 (on page 88)
Standard paddle wells, retainers, and test contacts	Paddle wells stow standard (hard) paddles. Retainers provide secure retention and quick removal of the paddles. Test contacts allow complete paddles defibrillation checks according to the Operator's Checklist.	See Standard Paddles (on page 156) and Operator's Checklist in the back of this manual
USB port cover	Protects USB port from the environment.	For future use
System connector	Connects device to a gateway or external computer for transfer of patient reports. Also provides real-time ECG output.	See Patient Records and Reports (on page 163)
Auxiliary power connector	Connects to an optional AC or DC power adapter. Allows use of auxiliary power source.	See Basic Orientation (on page 193)

WARNING

Shock Hazard

All equipment connected to the system connector must be battery powered or electrically isolated from AC power according to IEC 60601-1. If in doubt, disconnect the patient from the defibrillator before using the system connector. Only use Physio-Control recommended data transmission cables. For more information, contact Physio-Control Technical Support.

Note: To prevent inadvertent depletion of the defibrillator batteries, disconnect external devices from the system connector when not in use.

Batteries

The LIFEPAK 15 monitor/defibrillator operates either on battery power using two Lithium-ion batteries, or with auxiliary power using the AC Power Adapter or DC Power Adapter. Batteries may be charged in the Station or Mobile Li-ion Battery Charger, the REDI-CHARGE™ Battery Charger, or in the monitor/defibrillator if it is connected to auxiliary power.

Note: Although the monitor/defibrillator can operate using auxiliary power with no batteries installed, at least one battery must be installed at all times. If the monitor/defibrillator loses power for more than 30 seconds, the device reverts to the user-configured default settings and begins a new patient record.

IMPORTANT! The LIFEPAK 15 monitor/defibrillator Lithium-ion batteries are not interchangeable with batteries that are used in other LIFEPAK defibrillators.

Routinely inspect batteries for damage or leakage. Recycle or discard damaged or leaking batteries.

Each battery has a fuel gauge that indicates the approximate charge level in the battery. Press the gray button above the battery symbol to check the battery's charge level prior to installing it in the defibrillator. The four battery indicators shown here represent approximate charge—greater than 70%, greater than 50%, greater than 25%, and 25% or less, respectively.

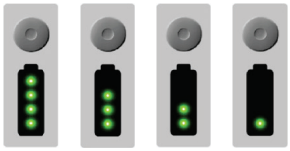

Figure 12 Battery Charge Indicators

Battery warning indicators are shown below. A single flashing LED indicates that the battery is very low and needs to be charged. Any two or more flashing LEDs indicate that the battery is faulty and should be returned to your authorized service personnel.

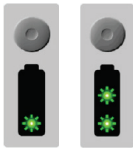

Figure 13 Battery Warning Indicators

Note: Older or heavily used batteries lose charge capacity. If a battery fuel gauge indicates fewer than four LEDs immediately after completing a charge cycle, the battery has reduced capacity. If the battery fuel gauge shows two or fewer LEDs after the battery completes a charge cycle, the battery should be replaced.

To install a battery:

1. Confirm that the battery is fully charged, unless the battery will be charged in the monitor/defibrillator using the power adapter.
2. Inspect battery pins and contacts in the battery wells for signs of damage.
3. Align battery so battery clip is over the pins in the battery well.
4. Insert the end of the battery that is opposite the battery clip into the battery well.
5. Firmly press the clip end of the battery into the battery well until it clicks into place.
6. Repeat Step 1 through Step 5 to insert second battery.

To remove a battery, press the battery clip in and tilt the battery out of the battery well.

WARNING

Possible Loss of Power During Patient Care

Battery pins in the defibrillator may be damaged if batteries are dropped or forced into battery wells. Inspect pins routinely for signs of damage. Keep batteries installed at all times except when the device is removed from service for storage.

For information about battery maintenance, see Battery Maintenance (on page 211).

Home Screen

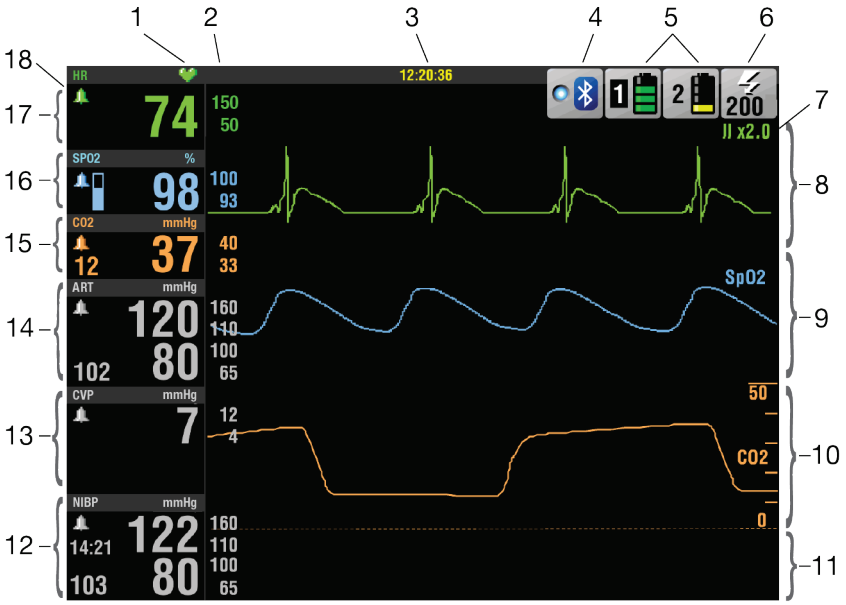

Figure 14 Home Screen

FIGURE LEGEND			
1	Heart symbol	10	Channel 3
2	Alarm limits	11	Message area
3	Time	12	NIBP
4	Bluetooth icon	13	IP2
5	Battery indicator	14	IP1
6	Selected energy	15	$EtCO_2$
7	ECG Lead/Size	16	SpO_2/SpCO/SpMet
8	Channel 1	17	Heart rate
9	Channel 2	18	Alarm indicator

The Home Screen is the main screen that displays ECG and other information. When a monitoring cable is attached to the device, the corresponding monitoring area on the screen is activated and the current patient values for that function are displayed. For example, when you connect an SpO_2 cable, the SpO_2 area is activated on the screen. SpO_2 values for the patient appear after the patient is connected. When the cable is disconnected, the SpO_2 patient values are replaced by dashes (--). Separate controls do not activate the monitoring functions, except for NIBP.

Each vital sign monitoring area is colored to match its waveform. This color scheme aids in associating the displayed waveform with its vital sign value. When a function does not have a waveform displayed, the vital sign area is gray.

WARNING

Failure to Detect a Change in ECG Rhythm

Heart rate meters may count internal pacing pulses during cardiac arrest or some arrhythmias. Do not rely entirely on heart rate meter alarms. Keep pacemaker patients under close surveillance.

Table 7 Home Screen

AREA	DESCRIPTION	FOR MORE INFORMATION
Alarm limits	Limits display along the right side of the parameter.	See Alarms (on page 39)
Heart symbol	Flashes with detected QRS signals.	
Alarm indicator	Indicates whether alarms are on or silenced. Absence of indicator means alarms are off.	See Alarms (on page 39)
Heart rate	Device accurately detects and displays heart rates between 20 and 300 beats per minute (bpm). If patient's heart rate is below 20 bpm or above 300 bpm, or pacing is active, dashes (– – –) appear. If ECG is not active, the SpO_2 or NIBP monitor can display pulse rate, indicated by **PR (SPO_2)** or **PR (NIBP)**.	
SpO2/SpCO/SpMet	Oxygen saturation level displays as a percentage from 50 to 100. Saturation below 50% displays as <50%. A fluctuating bar graph represents the pulse signal strength. When available and selected, the SpCO or SpMet value is displayed as a percent for 10 seconds, and then the SpO_2 area reverts to the SpO_2 reading.	See Monitoring SpO2, SpCO, and SpMet (on page 69)
EtCO2	End-tidal CO_2 level displays in mmHg, Vol%, or kPa. Respiratory rate (RR) displays in breaths per minute.	See Monitoring ETCO2 (on page 88)
IP1/IP2	Displays systolic, diastolic, and mean invasive pressures in mmHg. Two channels are available; default labels are P1 and P2. User-selectable labels include the following: • ART (arterial pressure) • PA (pulmonary artery pressure) • CVP (central venous pressure) • ICP (intracranial pressure) • LAP (left atrial pressure)	See Monitoring Invasive Pressure (on page 96)
Temp	Displays skin, esophageal, rectal, or bladder temperature.	See Monitoring Continuous Temperature (on page 104)
NIBP	Displays systolic, diastolic, and mean arterial pressures (MAP) in mmHg, and time to next BP, when interval is set.	See Monitoring Noninvasive Blood Pressure (on page 80)

AREA	DESCRIPTION	FOR MORE INFORMATION
Time	Real or elapsed.	See *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
Bluetooth icon	Indicates *Bluetooth* capability. The LED is illuminated when a *Bluetooth* connection is established. Select this icon to access the *Bluetooth* setup menu.	See About Transmitting Patient Records and Reports (on page 177)
Battery indicator	Indicates presence of battery in battery well 1 and 2, relative level of charge, and battery in use.	See Battery Status Indicators (on page 38)
Selected energy	Selected defibrillation energy.	
ECG Lead/Size	Lead and size for ECG.	See Selecting ECG Lead (on page 48)
Channel 1	Displays the primary ECG waveform and is always visible.	See Selecting ECG Lead (on page 48)
Channel 2	Displays an additional waveform, a continuation of the Channel 1 ECG (cascading ECG), or a trend graph.	See The Pleth Waveform (on page 75)
Channel 3	Displays an additional waveform or a trend graph.	See Displaying and Printing Trend Graphs (on page 112)
Message area	Displays up to two lines of status messages.	See Summary of Screen Messages

Navigating the Home Screen

Use the **SPEED DIAL** to navigate around the Home Screen. As you rotate the **SPEED DIAL**, the individual vital sign areas and waveform channels on the Home Screen are outlined. If you outline a vital sign area or channel and then press the **SPEED DIAL**, a menu appears.

For example, rotate the **SPEED DIAL** to outline Channel 3, and then press the **SPEED DIAL**. The following menu appears.

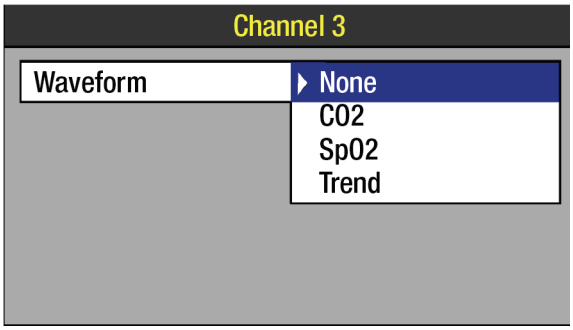

1. Rotate the **SPEED DIAL** to the desired setting.
2. Press the **SPEED DIAL** to select the setting.

Whenever a menu is displayed, the ECG is always visible in Channel 1. To return to the Home Screen from any menu, press the **HOME SCREEN** button.

Rotate and press the **SPEED DIAL** to select an option in a menu.

Battery Status Indicators

The Home Screen displays battery indicators that show the following information about the batteries installed in the defibrillator:

- Presence or absence of battery in battery well
- Battery in use
- Battery charge state

IMPORTANT! Always check the battery charge level and ensure batteries are adequately charged before use.

When two batteries are installed, the defibrillator uses the battery with the lowest level of charge first. The battery in use is indicated by a white battery number in a black box. When a battery reaches the replace battery state, the defibrillator automatically switches to the other battery. When all battery capacity is exhausted, the defibrillator turns off. If you insert a charged battery and repower the device in less than 30 seconds, the defibrillator retains its settings. The following table provides a description of the various battery status indicators.

Table 8 Battery Status Indicators

INDICATOR	MEANING	DESCRIPTION
	Active battery	The defibrillator is using the battery in well 1 for power. Battery status indicators display up to four green bars. Each green bar represents approximately 25% remaining charge. For example, three green bars indicate about 75% remaining charge.
	Low battery	Battery in well 1 is in use and is low. One yellow bar indicates 5% to 10% remaining charge.
	Very low battery	Battery in well 1 is in use and is very low. One red flashing bar indicates 0 to 5% remaining charge. The defibrillator automatically switches to the other battery only if adequate charge is available. If both batteries show red bars, the **REPLACE BATTERY** voice prompt occurs.
	Unrecognized battery	Battery in well 2 is not in use. Battery communication failed or a non-Physio-Control battery is installed. The battery may power the defibrillator but the level of charge is unknown and low battery messages and prompts will not occur.
	No battery installed or fault detected	No battery is installed in battery well 1, or a fault was detected in the battery in well 1 and the device will not use the battery.

Note: When the defibrillator is operating on auxiliary power using a power adapter, the battery indicators show the battery charge level, but the well numbers are not highlighted. The **LOW BATTERY** and **REPLACE BATTERY** messages and prompts do not occur when operating on auxiliary power.

Note: Older or heavily used batteries lose charge capacity. If a fully charged battery is installed in the defibrillator and the battery status indicator shows less than four bars, the battery has reduced capacity. If a battery status indicator shows only one or two bars after a fully charged battery is installed, the battery has less than half the normal use time and should be recycled.

Alarms

LIFEPAK 15 monitor/defibrillator alarms can be set up to be ON or OFF when the defibrillator is turned on. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

When alarms are set up to be ON, default limits are set. The limits temporarily appear to the right of the active vital signs. For all vital sign default alarm limits, see Alarm Limits.

If alarms are set up to be OFF, press **ALARMS** to enable the alarms. Whether alarms are set up to be ON or are enabled by pressing **ALARMS**, they can only be turned off by pressing **ON** to turn off the device. If power is lost for less than 30 seconds, for example due to a system reset or changing the only active battery, alarm settings are restored automatically.

Setting Alarms

When you press **ALARMS**, the following menu appears:

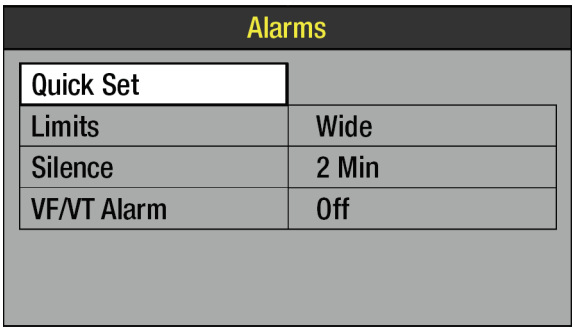

Select **QUICK SET** to activate the alarms for all active monitoring functions.

The Quick Set limits automatically set high and low limits based on the patient's current vital sign values. For example, if the patient's HR is 70, selecting **WIDE** results in a high limit of 110 and a low limit of 45; selecting **NARROW** results in a high limit of 100 and a low limit of 50. The default is **WIDE**.

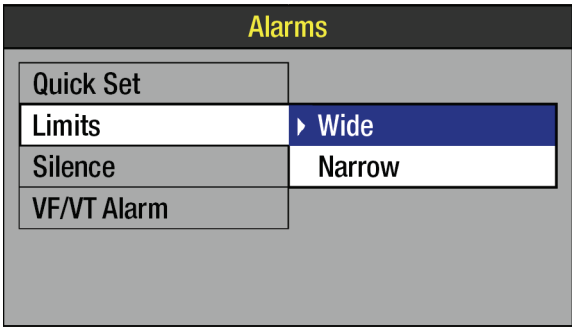

Select **LIMITS** to change alarm limits to **WIDE** or **NARROW**. See Alarm Limits.

Select **SILENCE** to turn off the audible alarm for up to 15 minutes. If an alarm limit is exceeded while the alarm is silenced, the violated vital sign flashes and an alarm message appears, but the alarm tone remains silent.

If alarms are silenced for more than two minutes, an alert tone of two quick beeps sounds every 2.5 minutes. If alarms are silenced for two minutes, the alert tone sounds after 60 seconds.

Note: The heart rate display and corresponding heart rate alarm should not be relied upon to provide an indication of ventricular fibrillation. Turn on the VF/VT alarm.

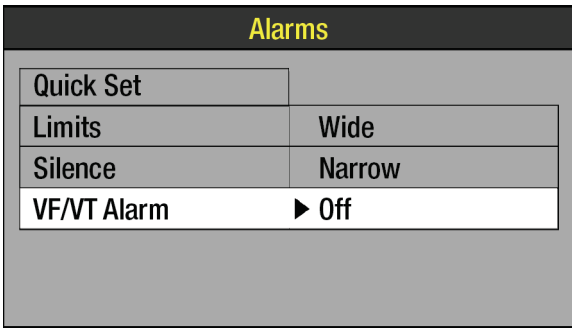

Select **VF/VT ALARM** to turn on continuous monitoring for ventricular fibrillation and ventricular tachycardia in Manual mode.

The VF/VT alarm indicator appears above the primary ECG when the alarm is ON.

When the alarm is silenced or suspended, a red X appears across the indicator .

Reselect **VF/VT** to turn off this alarm.

Note: When the **VF/VT ALARM** is ON, you are limited to **PADDLES** lead or Lead **II** in Channel 1. See Selecting ECG Lead (on page 48).

Note: The VF/VT alarm is suspended when the metronome is active, the noninvasive pacemaker is on, or when standard paddles are attached and **PADDLES** lead is selected. The alarm is also suspended when the monitor/defibrillator is charging or is charged.

Managing Alarms

The alarm bell symbol indicates when alarms are ON or OFF . All alarms that are controlled by **QUICK SET** have equal priority. When alarms are ON and an alarm limit is exceeded, a tone sounds and the violated vital sign flashes.

To manage an alarm:

1. Press **ALARMS**. This silences the alarm for 2 minutes.

   Note: After alarms are silenced by pressing the **ALARMS** button, an alert tone of two quick beeps sounds after 60 seconds.

2. Assess the cause of the alarm.
3. Assess the appropriateness of the limits settings (**WIDE** or **NARROW**).

   If the patient is unstable, consider silencing the alarm for up to 15 minutes while attending to the patient. Do NOT reselect **QUICK SET**.

WARNING

Possible Failure to Detect an Out of Range Condition

Reselecting **QUICK SET** resets the alarm limits around the patient's current vital sign values, which may be outside the safe range for the patient.

4. After the patient is stable, reselect **QUICK SET**, if necessary.

When alarms are ON, you can silence them preemptively for up to 15 minutes.

To silence alarms preemptively:

1. Press **ALARMS**.
2. Select **SILENCE**.
3. Select **SILENCE** duration of 2, 5, 10, or 15 minutes.

The message **ALARMS SILENCED** appears in the message area at the bottom of the Home Screen. If alarms are silenced for more than two minutes, an alert tone of two quick beeps sounds every 2.5 minutes. If alarms are silenced for two minutes, the alert tone sounds after 60 seconds.

Note: When you select **SILENCE**, the VF/VT alarm is not silenced.

Options

Press **OPTIONS** to display the Options menu. Rotate the **SPEED DIAL** to scroll through the choices. Press the **SPEED DIAL** to make a selection.

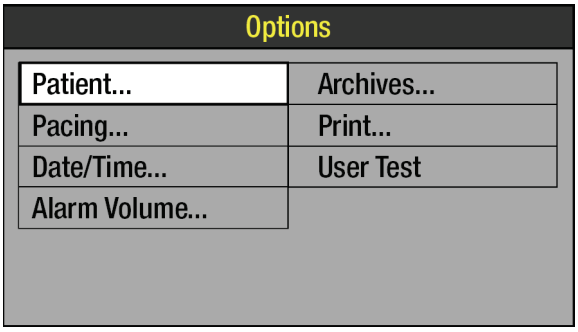

Table 9 Options Menu Selections

SELECTION	DESCRIPTION	FOR MORE INFORMATION
Patient	Enter patient name, patient ID, incident, age, and sex.	See Entering Patient Data (on page 42) in next section
Pacing	Select demand or nondemand pacing. Set internal pacer detection ON or OFF.	See Noninvasive Pacing (on page 144)
Date/Time	Set date and time. Cycle power for change to take effect.	See *LIFEPAK 15 Monitor/Defibrillator Setup Options* for time display options.
Alarm Volume	Adjust volume for alarms, tones, voice prompts and CPR metronome.	
Archives	Access archived patient records.	See Managing Archived Patient Records (on page 171)
Print	Select report, format, mode, and speed for printing a current patient report.	See How to Print a Current Report (on page 169)
User Test	Initiate device self-test.	See User Tests (on page 205)

Entering Patient Data

To enter patient data:

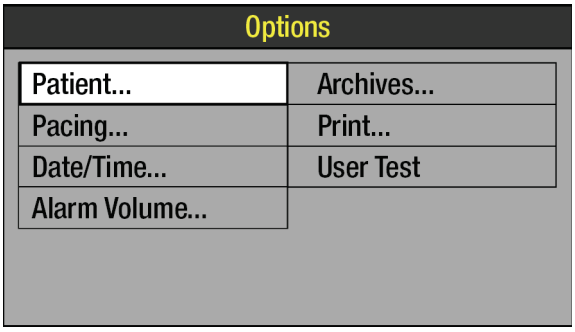

1 Press **OPTIONS**.

2 Use the **SPEED DIAL** to select **PATIENT.**

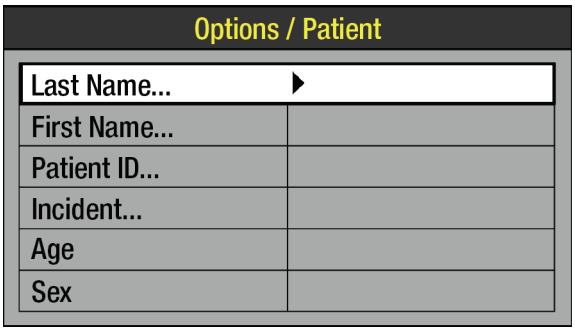

3 Select **LAST NAME**, **FIRST NAME**, **PATIENT ID**, **INCIDENT**, **AGE**, or **SEX**. (**LAST NAME** is selected in the example.)

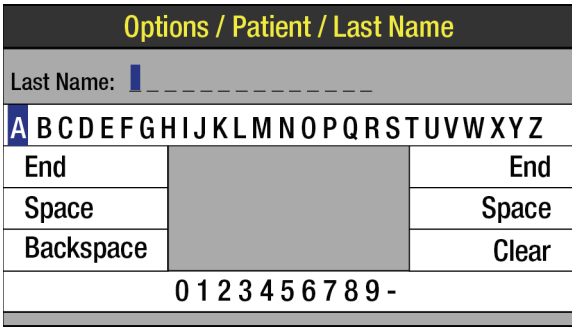

4 Rotate the **SPEED DIAL** to scroll through the characters and commands. Press the **SPEED DIAL** to make a selection. The selected character appears.

5 Repeat Step 4 until the name is complete.

6 Select **END**.

Three additional commands are available:

SPACE—inserts blank space.

BACKSPACE—deletes last character and moves selection back one space.

CLEAR—clears all characters.

Events

Use the Events menu to annotate patient events. A selected event appears in the Event log of the CODE SUMMARY critical event record. Events can be customized in Setup mode. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

To select an event:

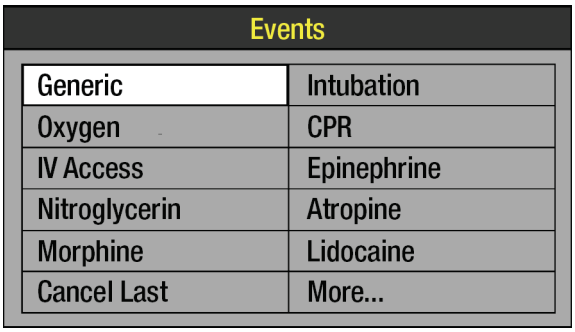

1. Press **EVENT** to display the Events menu.
2. Rotate the **SPEED DIAL** to scroll through the choices. Press the **SPEED DIAL** to make a selection.
3. Select **MORE** to display additional event selections.

When an event is selected, the event and time stamp appear in the message area on the Home Screen.

Notes:

- If you highlight an event but do not select it and the menu times out, a Generic event and time stamp are annotated in the event log.
- If you highlight an event but do not select it and then press **HOME SCREEN**, a Generic event and time stamp are annotated in the event log.
- Select **CANCEL LAST** to indicate that an incorrect event was selected. A Cancel Last event and time stamp print in the event log.

Chapter 4

Monitoring

This chapter describes the monitoring features of the LIFEPAK 15 monitor/defibrillator.

Monitoring the ECG 47
Acquiring a 12-Lead ECG 59
Monitoring SpO2, SpCO, and SpMet 69
Monitoring Noninvasive Blood Pressure 80
Monitoring ETCO2 88
Monitoring Invasive Pressure 96
Monitoring Continuous Temperature 104
Vital Sign and ST Segment Trends 108

Monitoring the ECG

Intended Use

The electrocardiogram (ECG) is a recording of the electrical activity of the heart. ECG monitoring allows for identification and interpretation of cardiac rhythms or dysrhythmias and calculation of heart rate. The ECG is obtained by placing either electrodes or paddles on the patient and allows the heart's electrical activity to be monitored and recorded.

ECG monitoring is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the ECG monitor.

ECG Monitoring Warning

WARNING

Possible Misinterpretation of ECG Data

The frequency response of the monitor screen is intended only for basic ECG rhythm identification; it does not provide the resolution required for diagnostic and ST segment interpretation. For diagnostic or ST segment interpretation, or to enhance internal pacemaker pulse visibility, attach the multi-lead ECG cable. Then print the ECG rhythm in diagnostic frequency response (DIAG) or obtain a 12-lead ECG.

Selecting ECG Lead

The LIFEPAK 15 monitor/defibrillator includes two methods for selecting or changing the ECG lead.

To select or change the displayed ECG lead using the **LEAD** button:

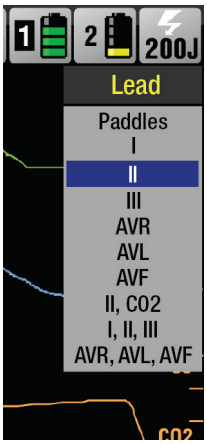

1. Press **LEAD**. If any ECG lead currently appears on the Home Screen, the lead changes to **PADDLES**. If **PADDLES** lead is currently displayed, the lead changes to Lead **II**.
2. While the **LEAD** menu is displayed, press **LEAD** again or rotate the **SPEED DIAL** to the desired lead.

Note: If lead sets are predefined for Channels 2 and 3, the lead sets show on the menu. The ECG cable that is connected to the device, such as 3-lead or 5-wire, determines the leads you can select. For information about defining lead sets, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

To select or change the displayed ECG lead using the **SPEED DIAL**:

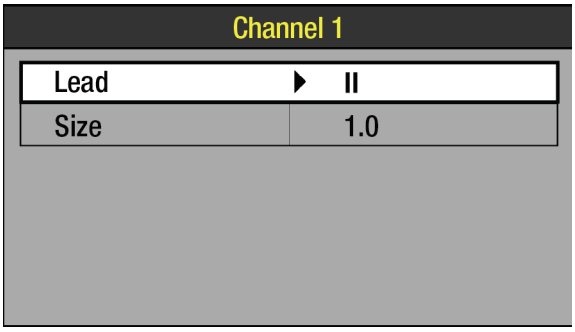

1. For the primary ECG, outline and select **CHANNEL 1** and then select **LEAD**.
2. Rotate the **SPEED DIAL** to the desired ECG lead.
3. Press the **SPEED DIAL** to select the ECG lead.
4. Repeat this procedure to select or change displayed ECG waveforms for Channels 2 and 3.

Note: The ECG shows dashed lines until the electrodes are connected to the patient.

Note: When the **VF/VT ALARM** is ON, you are limited to **PADDLES** lead or Lead **II** in Channel 1. See Setting Alarms (on page 39).

Changing ECG Size

The LIFEPAK 15 monitor/defibrillator includes two methods for selecting or changing ECG size.

To select or change the displayed ECG size using the **SIZE** button:

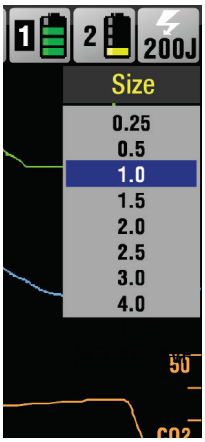

1. Press **SIZE**.
2. While the **SIZE** menu is displayed, press **SIZE** again or rotate the **SPEED DIAL** to the desired size.

To select or change the displayed ECG size using the **SPEED DIAL**:

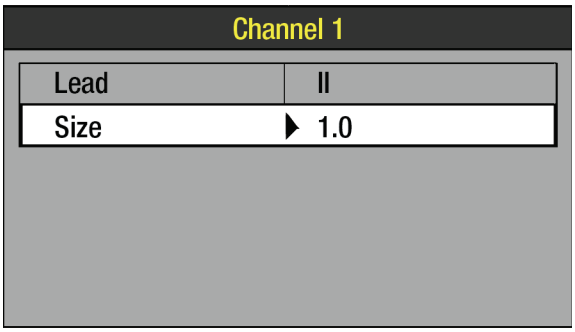

1. For the primary ECG, outline and select **CHANNEL 1** and then select **SIZE**.
2. Rotate the **SPEED DIAL** to the desired ECG size.
3. Press the **SPEED DIAL** to select the ECG size.

Adjusting the Systole Volume

To adjust the systole beep volume, use the **SPEED DIAL** to outline and select the **HR** area on the Home Screen.

The following menu appears:

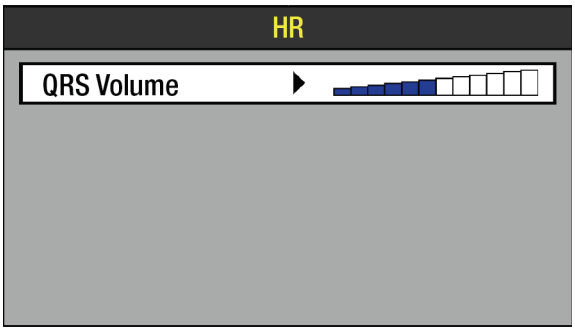

1. Press the **SPEED DIAL** to select **QRS VOLUME**.
2. Rotate the **SPEED DIAL** to the desired volume.
3. Press the **SPEED DIAL** to set the volume.

Note: The volume is reset to OFF each time the device is turned off.

Monitoring Using Paddle Accessories

To monitor ECG using paddles, you can use either QUIK-COMBO therapy electrodes or standard (hard) paddles. For more information about paddle accessories, see Paddle Accessory Options (on page 151).

Anterior-Lateral Placement

Anterior-lateral placement is the only placement that should be used for ECG monitoring using paddle accessories.

To place the therapy electrodes or paddles:

1. Place either the ♥ therapy electrode or **APEX** paddle lateral to the patient's left nipple in the midaxillary line, with the center of the electrode in the midaxillary line, if possible, as shown in the following figure.

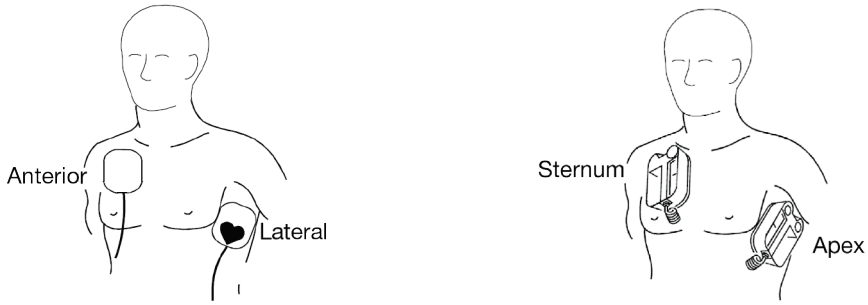

QUIK-COMBO Therapy Electrodes **Standard Paddles**

Figure 15 Anterior-Lateral Placement

2. Place the other therapy electrode or **STERNUM** paddle on the patient’s upper right torso, lateral to the sternum and below the clavicle, as shown in the preceding figure.

Special Situations for Electrode or Paddle Placement

When placing therapy electrodes or standard paddles, be aware of the special requirements in the following possible situations:

Obese Patients or Patients with Large Breasts

Apply therapy electrodes or standard paddles to a flat area on the chest, if possible. If skin folds or breast tissue prevent good adhesion, it may be necessary to spread skin folds apart to create a flat surface.

Thin Patients

Follow the contour of the ribs and spaces when pressing the therapy electrodes or standard paddles onto the torso. This limits air spaces or gaps under the electrodes and promotes good skin contact.

Patients with Implanted Devices Such as Pacemakers or Defibrillators

If possible, place therapy electrodes or standard paddles away from implanted device.

Paddles ECG Monitoring Procedure

To monitor using standard paddles or therapy electrodes:

1. Press **ON**.
2. Prepare the patient's skin:
   - Remove all clothing from the patient's chest.
   - Remove excessive chest hair as much as possible. Avoid nicking or cutting the skin if using a shaver or razor. If possible, avoid placing electrodes over broken skin.
   - Clean and dry the skin, if necessary. Remove any medication patches and ointment on the patient's chest.
   - Briskly wipe the skin dry with a towel or gauze. This mildly abrades the skin and removes oils, dirt, and other debris for better electrode adhesion to the skin.
   - Do not use alcohol, tincture of benzoin, or antiperspirant to prep the skin.
3. Apply the standard paddles or therapy electrodes in the anterior-lateral position. For therapy electrodes, confirm that the package is sealed and the Use By date is not passed. For standard paddles, apply conductive gel over the entire electrode surface.
4. Connect the therapy electrodes to the therapy cable.
5. Select **PADDLES** lead.

Monitoring Using ECG Cable Accessories

The following ECG cables, shown in the figure, are available for ECG monitoring with the LIFEPAK 15 monitor/defibrillator:

- 12-lead (either of 2 types)
- 3-lead
- 4-wire
- 5-wire

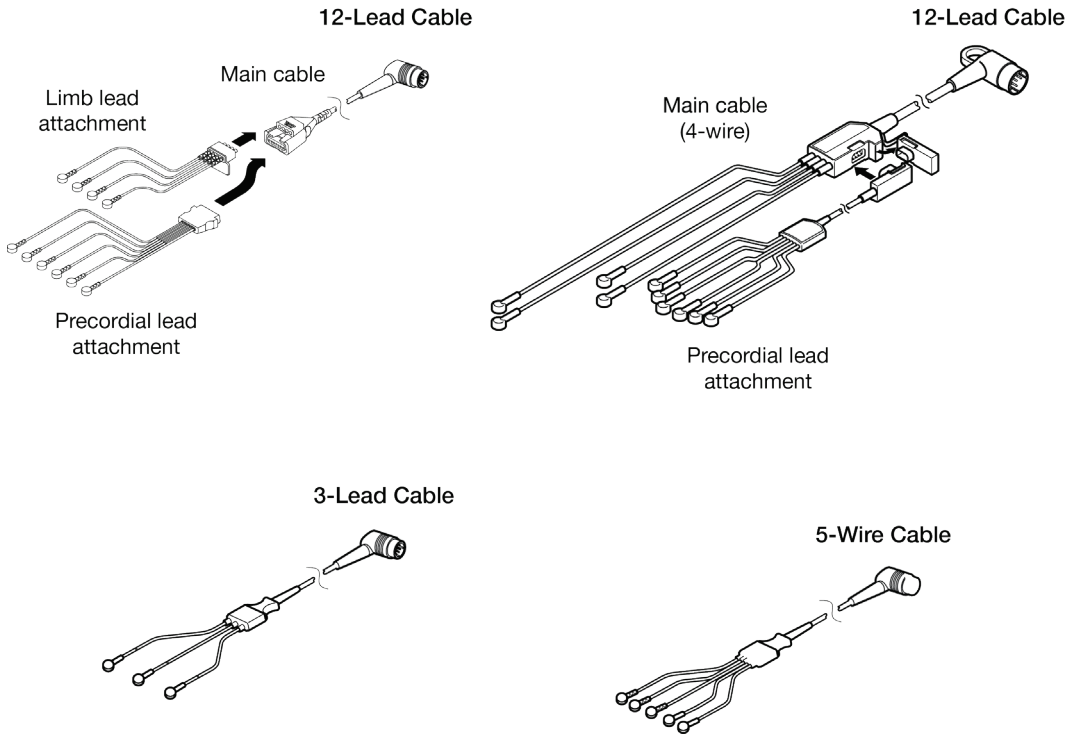

Figure 16 12-Lead, 3-Lead, 4-Wire, and 5-Wire ECG Cables

ECG Monitoring Procedure

To perform ECG monitoring:

1. Press **ON**.
2. Attach the ECG cable to the green connector on the monitor.
3. Identify the appropriate electrode sites on the patient as shown in the following figure.

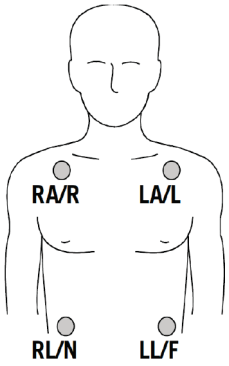

AHA Labels		IEC Labels	
RA	Right Arm	**R**	Right
LA	Left Arm	**L**	Left
***RL**	Right Leg	**N**	Negative
LL	Left Leg	**F**	Foot

***Note**: Not used for 3-lead cable.

Figure 17 Limb Lead Electrode Placement

4. Prepare the patient's skin for electrode application:
   - Shave excessive hair at electrode site.
   - For oily skin, clean skin with alcohol pad.
   - Gently scrape skin to remove surface layer of dead cells and improve conduction of electrical signals.
   - Avoid locating electrodes over tendons and major muscle masses.
   - Clean and dry the skin.
5. Apply ECG electrodes:
   - Confirm that the package is sealed and the Use By date is not passed.
   - Attach an electrode to each of the lead wires.
   - Grasp electrode tab and peel electrode from carrier.
   - Inspect electrode gel and make sure gel is intact (discard electrode if gel is not intact).
   - Hold electrode taut with both hands. Apply the electrode flat to the skin. Smooth tape outwardly. Avoid pressing the center of the electrode.
   - Secure the trunk cable clasp to the patient's clothing.

   Note: Ensure the electrodes do not contact any other conductive parts, including earth (ground).

   Note: Electrode quality is critical for obtaining an undistorted ECG signal. Always check the date code on electrode packages for expiration date before using on a patient. Do not use electrodes that have expired. Disposable electrodes are intended for a single use.

6. Select the desired ECG lead on the monitor screen.
7. If necessary, adjust ECG size for accurate heart rate counting.
8. Press **PRINT** to obtain an ECG printout.

Precordial Lead ECG Monitoring

The precordial (chest) leads (see Table, ECG Leads Color Codes (on page 54)) can be used for monitoring when using the 12-lead cable or 5-wire cable.

To perform precordial lead ECG monitoring:

1. Insert the precordial lead attachment into the main cable as shown in Figure, 12-Lead, 3-Lead, 4-Wire, and 5-Wire ECG Cables (on page 52).
2. Place the precordial lead electrodes on the chest as described in the 12-lead ECG procedure and shown in Figure, Precordial Lead Electrode Placement (on page 60).

Note: When using a 5-wire cable, attach the limb leads as described in ECG Monitoring Procedure (on page 53), and place the C-lead electrode on the chest in the precordial position desired. Note that the LIFEPAK 15 monitor labels the ECG for this lead as V1 on the screen and printout, regardless of the location of the C-lead electrode.

Leads Off

If an electrode or lead wire disconnects during ECG monitoring, the monitor emits an audible alarm and displays a **LEADS OFF** message. The ECG trace becomes a dashed line. The alarm and messages continue until one of the following actions is performed:

- The lead wire is reconnected
- The lead selection is changed to a lead using connected lead wires
- Power is cycled.

Color Coding for ECG Leads

The lead wires and the electrode snaps for the patient ECG cable are color coded according to American Heart Association (AHA) or International Electrotechnical Commission (IEC) standards as listed in the following table.

Table 10 ECG Leads Color Codes

LEADS	AHA LABEL	AHA COLOR	IEC LABEL	IEC COLOR
Limb Leads	RA	White	R	Red
	LA	Black	L	Yellow
	RL	Green	N	Black
	LL	Red	F	Green
	C	Brown	C	Brown
Precordial Leads	V1	Red	C1	Red
	V2	Yellow	C2	Yellow
	V3	Green	C3	Green
	V4	Blue	C4	Brown
	V5	Orange	C5	Black
	V6	Violet	C6	Violet

Monitoring Patients Who Have Internal Pacemakers

The LIFEPAK 15 monitor/defibrillator internal pacemaker detection feature can be used to help identify internal pacemaker pulses on the printed ECG. When enabled, this feature uses lead V4 to detect internal pacemaker pulses. If V4 is not available because it is not attached or is too noisy, Lead II or Paddles Lead is used.

When the internal pacemaker detection feature is ON, the LIFEPAK 15 monitor/defibrillator annotates a hollow arrow ⇧ on the printed ECG if internal pacemaker pulses are detected. Patient history and other ECG waveform data, such as wide QRS complexes, should be used to verify the presence of an internal pacemaker. False annotations of this arrow may occur if ECG artifacts mimic internal pacemaker pulses. If false annotations occur frequently, deactivate the detection feature using the **OPTIONS / PACING / INTERNAL PACER** menu (see Options (on page 41)).

The LIFEPAK 15 monitor/defibrillator typically does not use internal pacemaker pulses to calculate the heart rate. However, when using therapy electrodes or standard paddles to monitor in **PADDLES** lead, the monitor may detect internal pacemaker pulses as QRS complexes, resulting in an inaccurate heart rate.

Large amplitude pacemaker pulses may overload the QRS complex detector circuitry so that no paced QRS complexes are counted. To help minimize ECG pickup of large unipolar pacemaker pulses, place ECG electrodes so the line between the positive and negative electrodes is perpendicular to the line between the pacemaker generator and the heart.

Smaller amplitude internal pacemaker pulses may not be distinguished clearly in **PADDLES** lead. For improved detection and visibility of internal pacemaker pulses, turn on the internal pacemaker detector function using the **OPTIONS / PACING / INTERNAL PACER** menu or connect the ECG cable, select an ECG lead, and print the ECG in diagnostic frequency response. For information about configuring internal pacemaker detection, see the Pacing Setup menu in the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

Troubleshooting Tips

If problems occur while monitoring the ECG, check the table below for aid in troubleshooting. For basic troubleshooting problems, such as no power, see General Troubleshooting Tips (on page 216).

Table 11 Troubleshooting Tips for ECG Monitoring

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Any of these messages displayed: **CONNECT ELECTRODES** **CONNECT ECG LEADS** **ECG LEADS OFF** **XX LEADS OFF**	Therapy electrodes not connected	• Connect therapy electrode.
	One or more ECG electrodes disconnected	• Connect ECG electrode.
	ECG cable is not connected to monitor	• Connect ECG cable.
	Poor electrode-skin contact	• Reposition cable or lead wires to prevent electrodes from pulling away from patient. • Secure trunk cable clasp to patient's clothing. • Prepare skin and apply new electrodes.
	PACER was pressed. The monitor automatically switched to Lead II, but ECG leads are not connected.	• Connect ECG leads and initiate pacing.
	Broken ECG cable lead wire	• Select another lead. • Select **PADDLES** lead, and use standard paddles or therapy electrodes for ECG monitoring. • Check ECG cable continuity.
Screen blank and **ON** LED illuminated	Screen not functioning properly	• Print ECG on recorder as backup. • Contact service personnel for repair.
Systole beeps not heard or do not occur with each QRS complex	Volume too low	• Adjust volume.
	QRS amplitude too small to detect	• Adjust ECG size.
Displayed heart rate (HR) different than pulse rate	ECG size set too high or too low	• Adjust ECG size up or down.
	Monitor detecting the patient's internal pacemaker pulses	• Change monitor lead to reduce internal pacemaker pulse size.
Displayed heart rate (HR) different from displayed ECG waveform	ECG size set too high or too low	• Adjust ECG size up or down.
	Monitor detecting the patient's internal pacemaker pulses	• Change monitor lead to reduce internal pacemaker pulse size.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Monitor displays dashes (---) instead of heart rate	Heart rate is < 20 bpm	• Use ECG printout to calculate heart rate.
	Heart rate is > 300 bpm	• Use ECG printout to calculate heart rate.
	Pacing function is active	• No corrective action needed.
Poor ECG signal quality	Poor electrode-skin contact	• Reposition cable or lead wires to prevent electrodes from pulling away from patient. • Secure trunk cable clasp to patient's clothing. • Prepare skin and apply new electrodes.
	Outdated, corroded, or dried-out electrodes	• Check Use By date on electrode packages. • Use only unexpired silver/silver chloride electrodes. Leave electrodes in sealed pouch until time of use.
	Loose connection. Damaged cable or connector/lead wire	• Check or reconnect cable connections. • Inspect ECG and therapy cables. Replace if damaged. • Check cable with simulator and replace if malfunction observed.
	Noise because of radio frequency interference (RFI)	• Check for equipment causing RFI (such as a radio transmitter) and relocate or turn off equipment power.
Baseline wander (low frequency/high amplitude artifact)	Inadequate skin preparation	• Prepare skin and apply new electrodes.
	Poor electrode-skin contact	• Check electrodes for proper adhesion.
	Diagnostic frequency response	• Print ECG in monitor frequency response.
Fine baseline artifact (high frequency/low amplitude)	Inadequate skin preparation	• Prepare skin and apply new electrodes.
	Isometric muscle tension in arms/legs	• Confirm that limbs are resting on a supportive surface. • Check electrodes for proper adhesion.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
ECG amplitude too small	Poor electrode-skin contact	• Prepare skin and apply new electrodes.
	ECG lead selected	• Increase ECG gain or change ECG lead.
	Patient condition (for example, significant myocardial muscle loss or tamponade)	• Increase ECG gain or change ECG lead.
Monitor displays dashed lines with no ECG **LEADS OFF** messages	**PADDLES** lead selected but patient connected to ECG cable	• Select one of the limb or precordial leads.
Monitor shows isoelectric (flat) line and **PADDLES** lead selected	The Test Load is connected to therapy cable	• Remove the Test Load and connect therapy electrodes to cable. • Connect ECG cable and select another lead.
Internal pacemaker pulses difficult to see	Pacemaker pulses are very small	• Turn on internal pacemaker detector (see Monitoring Patients Who Have Internal Pacemakers (on page 55).
	Monitor frequency response limits visibility	• Connect ECG cable and select a lead other than **PADDLES**. • Print ECG in Diagnostic mode (see How to Print a Current Report (on page 169)).

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Acquiring a 12-Lead ECG

Intended Use

The 12-lead ECG offers paramedics and emergency physicians significant advantages over the single lead ECG trace typically available in EMS. The 12-lead ECG not only provides a diagnostic quality ECG for use in the detection of ST elevation myocardial infarction (STEMI), but also allows the knowledgeable paramedic to determine the area of myocardial injury, anticipate associated potential complications, and implement treatment strategies accordingly. In addition, the 12-lead ECG provides a baseline for serial ECG evaluations.

The 12-lead ECG transmission to the emergency department (ED) is recommended by the AHA and ERC for patients with Acute Coronary Syndrome (ACS). When transmitted from the field, 12-lead ECG has been shown to shorten time to in-hospital treatment by an estimated 10 to 60 minutes. Patients may also benefit from triage and transport to the most appropriate facility. Documentation of transient or intermittent arrhythmias and other electrophysiologic events that occur in the prehospital setting can assist in diagnosis and treatment decisions in the ED.

Indications

The 12-lead electrocardiogram is used to identify, diagnose, and treat patients with cardiac disorders and is useful in the early detection and prompt treatment of patients with acute ST-elevation myocardial infarction (STEMI).

Contraindications

None known.

12-Lead ECG Warning

WARNING

Possible Inability to Obtain a Diagnostic 12-lead ECG

Using previously unpackaged electrodes or electrodes past the Use By date may impair ECG signal quality. Remove electrodes from a sealed package immediately before use and follow the procedure for applying the electrodes.

Identifying Electrode Sites

To obtain a 12-lead ECG, place the electrodes on the limbs and the chest (precordium) as described in the following paragraph.

Limb Lead Electrode Sites

When acquiring a 12-lead ECG, limb lead electrodes are typically placed on the wrists and ankles as shown in the following figure. The limb lead electrodes can be placed anywhere along the limbs. Do not place the limb lead electrodes on the torso when acquiring a 12-lead ECG.

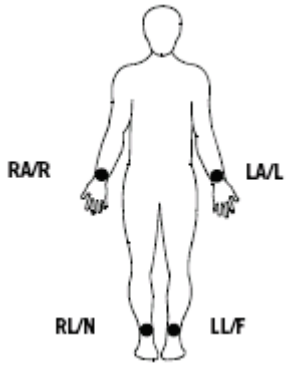

AHA Labels		IEC Labels	
RA	Right Arm	**R**	Right
LA	Left Arm	**L**	Left
RL	Right Leg	**N**	Negative
LL	Left Leg	**F**	Foot

Figure 18 Limb Lead Electrode Placement for 12-Lead ECG

Precordial Lead Electrode Sites

The six precordial (chest) leads are placed on specific locations as shown and summarized in the following figure. Proper placement is important for accurate diagnosis and should be identified as follows: leads are V1 through V6 for AHA, or C1 through C6 for IEC. See ECG Leads Color Codes (on page 54) for color codes.

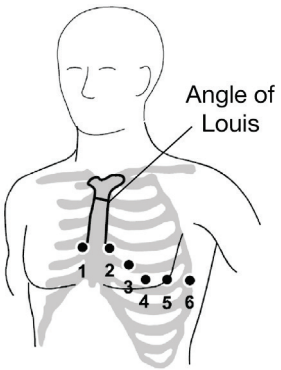

LEAD		LOCATIONS
V1	C1	Fourth intercostal space to the right of the sternum
V2	C2	Fourth intercostal space to the left of the sternum
V3	C3	Directly between leads V2/C2 and V4/C4
V4	C4	Fifth intercostal space at midclavicular line
V5	C5	Level with V4/C4 at left anterior axillary line
V6	C6	Level with V5/C5 at left midaxillary line

Figure 19 Precordial Lead Electrode Placement

Locating the V1/C1 position (fourth intercostal space) is critically important, because it is the reference point for locating the placement of the remaining V/C leads.

To locate the V1/C1 position:

1. Place your finger at the notch in the top of the sternum.
2. Move your finger slowly downward about 3.8 centimeters (1.5 inches) until you feel a slight horizontal ridge or elevation. This is the Angle of Louis where the manubrium joins the body of the sternum.
3. Locate the second intercostal space on the patient's right side, lateral to and just below the Angle of Louis.
4. Move your finger down two more intercostal spaces to the fourth intercostal space, which is the V1/C1 position.
5. Continue locating other positions from V1/C1 (see the preceding figure).

Other important considerations:

- When placing electrodes on female or obese patients, always place leads V3-V6 and C3-C6 *under* the breast rather than *on* the breast.
- Never use the nipples as reference points for locating the electrodes for men or women patients, because nipple locations vary widely.

12-Lead ECG Procedure

To acquire a 12-lead ECG:

1. Press **ON**.
2. Insert the lead attachments into the main cable as shown in the following figure.

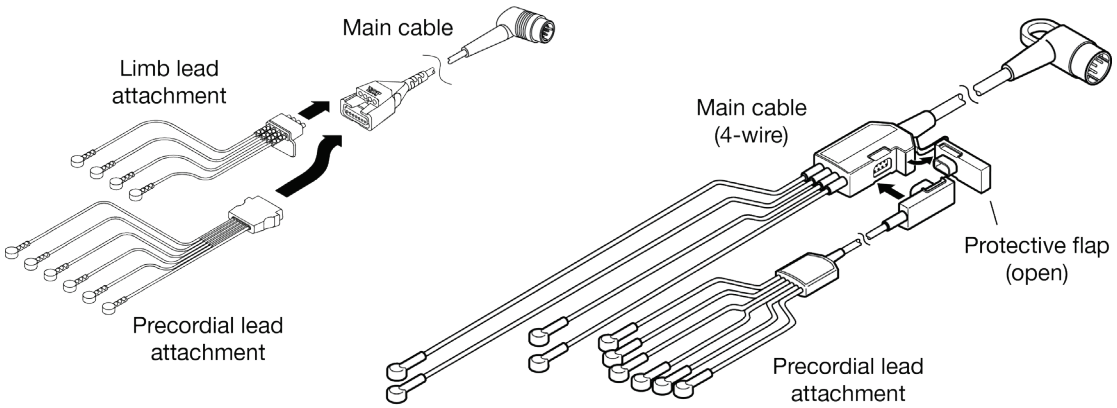

Figure 20 12-Lead ECG Cables

3. Insert the cable connector into the green ECG connector on the monitor.
4. Prepare patient's skin for electrode application (see ECG Monitoring Procedure (on page 53)).
5. Apply ECG electrodes (see Limb Lead Electrode Sites (on page 60)).
6. Encourage the patient to remain as still as possible.

WARNING

Possible Inaccurate Diagnosis

If age and sex are not entered when a 12-lead ECG is obtained, the interpretive statements are based on a default of a 50-year-old male and may provide incorrect analysis for that patient.

7. Press **12-LEAD**. The **12-LEAD / AGE** menu appears, prompting you to enter the patient's age.

   Use the **SPEED DIAL** to select the age. Always enter the patient's age if the patient is 15 years old or younger. If you do not enter an age, the default value of 50 years is used by the interpretive analysis program and annotated on the 12-lead ECG report.

8. The **12-LEAD / SEX** menu appears, prompting you to enter the patient's sex.

   Use the **SPEED DIAL** to select the patient's sex. If you do not enter the sex, the default of male is used by the interpretive analysis program and is annotated on the 12-lead ECG report.

The monitor acquires, analyzes, and automatically prints the 12-lead ECG. An ECG leads-off condition for any lead is indicated on the report by a dashed line.

Notes:

- If 15 years or less is entered for patient age, the 12-lead ECG prints at diagnostic frequency response of 0.05–150 Hz, even when 0.05–40 Hz is set up as the print default.
- When **12-LEAD** is pressed, internal pacemaker detection is automatically enabled, even if the function is set up to be OFF.
- The 12-Lead ECG function is not available while in AED mode.

ECG Override

If the monitor detects signal noise while acquiring data (such as patient motion or a disconnected electrode), the screen displays the message: **NOISY DATA! PRESS 12-LEAD TO ACCEPT**. The message remains and 12-lead ECG acquisition is interrupted until noise is eliminated. Take appropriate action to eliminate the signal noise. This message remains as long as signal noise is detected. When signal noise is eliminated, the monitor resumes acquiring data. To override the message and acquire the 12-lead ECG in spite of the signal noise, press **12-LEAD** again. The 12-lead ECG will be acquired and printed with no interpretive statements. Any 12-lead ECG report acquired in this way is annotated with the following statement: **ECG OVERRIDE: DATA QUALITY PROHIBITS INTERPRETATION**.

If the signal noise persists for longer than 30 seconds, 12-lead ECG acquisition stops. The screen displays **EXCESSIVE NOISE–12-LEAD CANCELLED**. You must then press **12-LEAD** to restart 12-lead ECG acquisition.

Note: If **12-LEAD** is pressed immediately after ECG electrodes are applied, the message **NOISY DATA** may occur. This message is due to the temporary instability between the electrode gel and the patient's skin that is not viewable on the ECG monitor screen, but is detected as noisy data. In general, it is best to wait at least 30 seconds after applying the last electrode before pressing the **12-LEAD** button, to allow for electrode/skin stabilization. Also, good skin preparation shortens the stabilization time.

Computerized ECG Analysis

Computerized ECG analysis statements are automatically printed on 12-lead ECG reports. Printing of the interpretive statements is a setup option and may be turned off in Setup mode. For information on how to change this setup option, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

The interpretative statements pertaining to myocardial injury, infarct, and ischemia are derived from measurements made on a signal-averaged beat (median beat) formed for each of the 12 leads. The computerized ECG analysis selects three representative beats from the ten seconds of data for each lead and averages the three beats to derive the median beat for that lead. The ECG analysis is always based on ECG data obtained at 0.05–150 Hz frequency response.

The analysis program is adjusted for patient age and sex. The 12-lead ECG interpretive algorithm used by the LIFEPAK 15 monitor/defibrillator is the University of Glasgow 12-Lead ECG Analysis Program. For more information, contact your Physio-Control representative for a copy of the *Physio-Control Glasgow 12-Lead ECG Analysis Program Physician's Guide*.

WARNING

Possible Incorrect Treatment with Reperfusion Therapy

Computerized ECG interpretive statements should not be used to withhold or prescribe patient treatment without review of the ECG data by qualified medical personnel. All 12-lead ECG interpretation statements provided by the LIFEPAK 15 monitor/defibrillator include the printed message **UNCONFIRMED**. Always confirm interpretive statements by over-reading the ECG data.

Printed 12-Lead ECG Report Formats

Two 12-lead ECG report formats are available for printing: 3-channel or 4-channel. In addition, each of those formats can be printed in standard and cabrera styles.

3-Channel Format

The 3-channel format prints 2.5 seconds of data for each lead. The following figure is an example of a 12-lead ECG report printed in the 3-channel format, standard style. The following figure is an example of a 12-lead ECG report printed in the 3-channel format, cabrera style. The sequence in which the limb leads are presented differs between the standard and cabrera styles, as shown. The default format for printing 12-lead ECG reports is 3-channel standard. To change the printed format of 12-lead ECG reports, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device. Alternatively, press **OPTIONS**, select **PRINT**, select **REPORT: 12-LEAD**, and then select **FORMAT**.

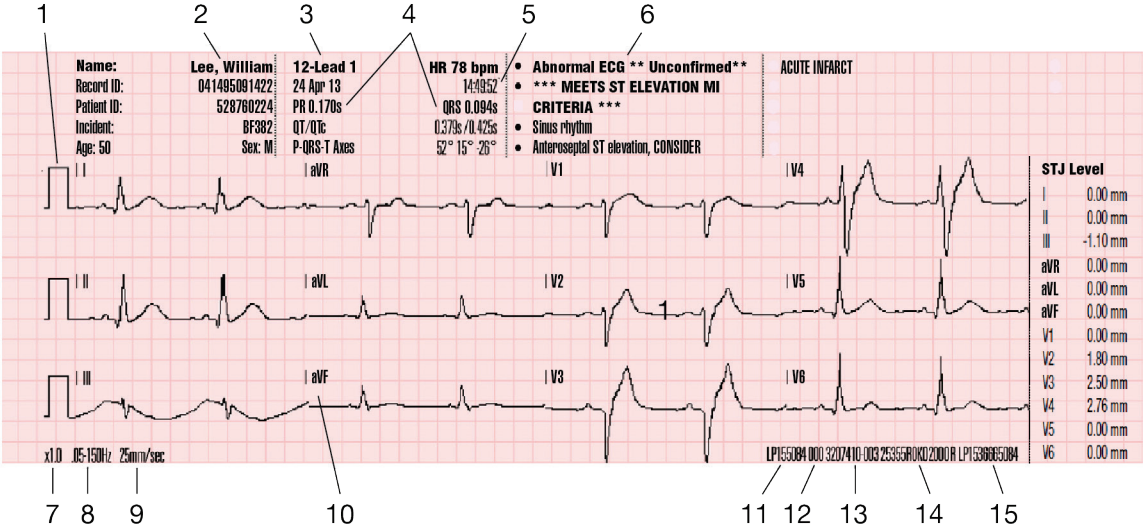

Figure 21 Example of Printed 3-Channel, Standard 12-Lead ECG Report

FIGURE LEGEND			
1	1 mV reference	9	Printer speed
2	Patient ID	10	Lead annotation
3	Report type and number	11	Device number
4	Standard measurement	12	Site number
5	Time/date 12-lead acquired	13	Software version
6	Computerized ECG analysis	14	Configuration code
7	ECG size	15	Serial number
8	Frequency response		

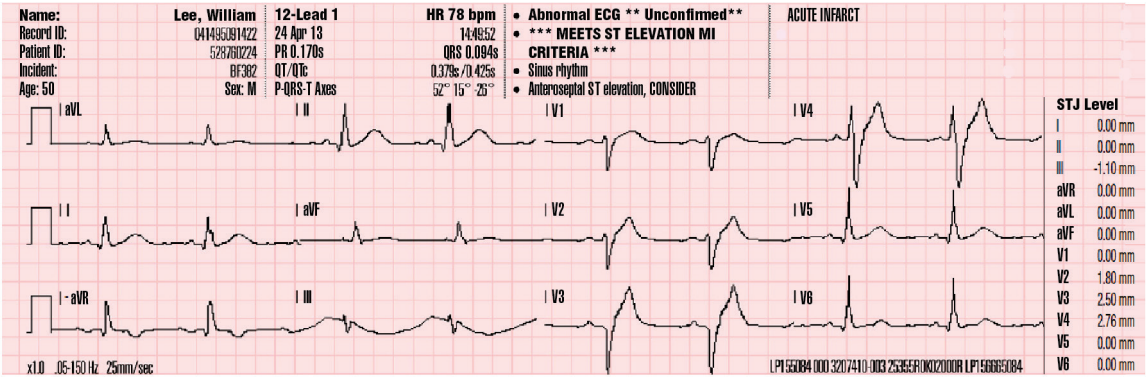

Figure 22 Example of Printed 3-Channel, Cabrera 12-Lead ECG Report

4-Channel Format

The following two figures are examples of 12-lead ECG reports printed in the 4-channel format. The 4-channel format consists of the median complex (or median beat) derived for each of the 12 leads and 10 seconds of data for Lead II.

Note: The fiducial marks displayed in the 4-channel format identify the measurement intervals used for the interpretive statements of the analysis program. These marks are part of the analysis program and cannot be turned off.

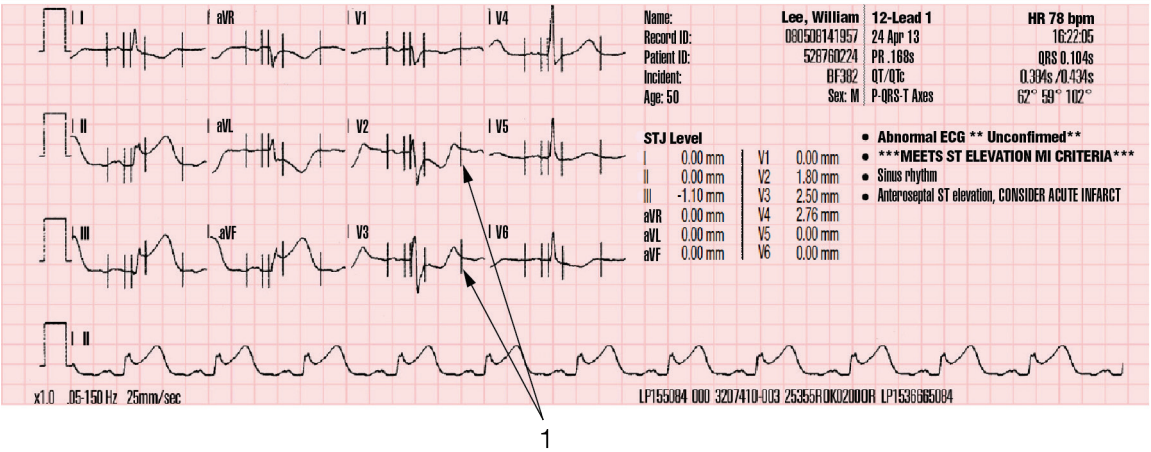

Figure 23 Example of Printed 4-Channel, Standard 12-Lead ECG Report

FIGURE LEGEND

1 Fiducial marks

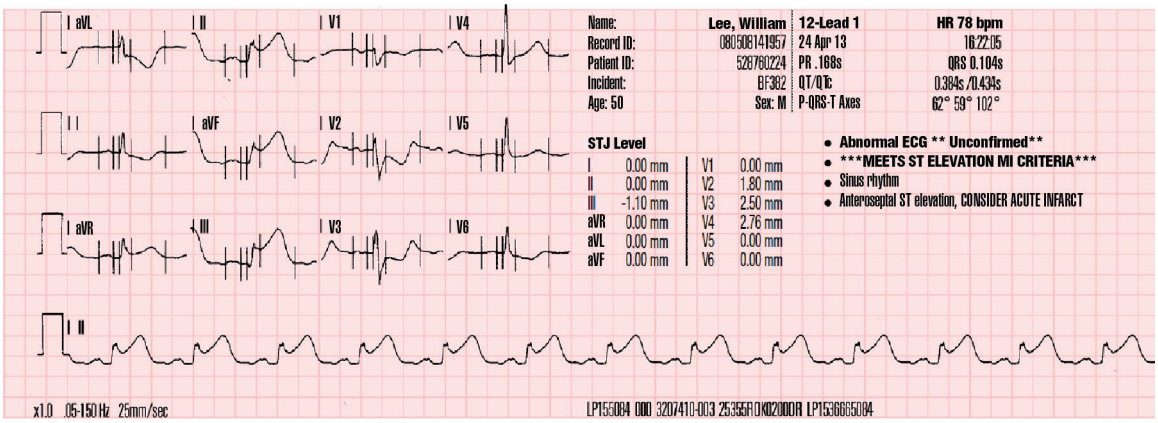

Figure 24 Example of Printed 4-Channel, Cabrera 12-Lead ECG Report

Printed 12-Lead ECG Frequency Response

The 12-lead ECG can be printed in two diagnostic frequency responses (or bandwidths): 0.05–40 Hz and 0.05–150 Hz. The frequency response of 0.05–150 Hz is the Association for the Advancement of Medical Instrumentation (AAMI) standard for diagnostic ECGs. The 0.05–40 Hz setting preserves the low frequency limit that is needed for the diagnosis of myocardial ischemia and infarction while reducing high frequency artifact (in particular from patient muscle tension) to help make the diagnostic printout less noisy and more readable.

Note: The LIFEPAK 15 monitor/defibrillator acquires ECG data and performs the interpretive analysis based on the full frequency of 0.05–150 Hz. The 0.05–40 Hz bandwidth affects only the printed appearance of the ECG data.

The 12-lead ECG printed in the 0.05–40 Hz setting can be used to diagnose acute myocardial ischemia and ST-segment elevation myocardial infarction (STEMI). This is because the low frequency limit of 0.05 Hz is not changed from the standard diagnostic setting of 0.05–150 Hz. The 0.05 Hz frequency provides accurate representation of low frequency signals, that is, the P, ST segment, and T waves. The presence or absence of ST segment changes indicative of myocardial ischemia or infarction will be accurately reproduced. In addition, the criteria for visual analysis and interpretation of cardiac rhythm and PR, QRS, and QT intervals are preserved, as is true with hospital cardiac monitors that have an upper frequency limit of 40 Hz.

However, in some adult patients, the amplitude (that is, voltage) of the QRS may be reduced when 12-lead ECGs are printed at the upper limit of 40 Hz rather than at 150 Hz. Therefore, certain diagnoses, which depend on R wave amplitude (for example, ventricular hypertrophy), should not be made using this setting. In the pediatric patient, this effect on R wave amplitude is particularly noticeable because QRS durations in children are typically quite narrow. Because R wave amplitude reduction is more likely with pediatric patients, the 12-lead ECG automatically prints at 0.05–150 Hz, overriding the 40 Hz limit, when a patient age of 15 years or younger is entered.

Troubleshooting Tips

Table 12 Troubleshooting Tips for the 12-Lead ECG

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Any of these messages displayed: **CONNECT ECG LEADS** **ECG LEADS OFF** **XX LEADS OFF**	One or more ECG electrodes disconnected	• Confirm ECG electrode connections.
	ECG cable is not connected to monitor	• Confirm ECG cable connections.
	Poor electrode-skin contact	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. • Secure trunk cable clasp to patient's clothing. • Prepare skin and apply new electrodes.
	Broken lead wire	• Select another lead. • Select **PADDLES** lead, and use standard paddles or therapy electrodes for ECG monitoring. • Check ECG cable continuity.
Noisy signal and/or message displayed: **NOISY DATA! PRESS 12-LEAD TO ACCEPT**	Noise in a lead other than the displayed lead	• Press **12-LEAD** again to override the message. Examine the printout to determine leads affected by noise. Replace or reposition the affected electrodes and lead wires.
	Poor electrode-skin contact	• Reposition cable and/or lead wires to prevent electrodes from pulling away from patient. • Secure trunk cable clasp to patient's clothing. • Prepare skin and apply new electrodes.
	Loose connection	• Check or reconnect cable connections.
	Patient motion	• Encourage patient to lie quietly. • Support patient's limbs.
	Vehicle motion	• Stop vehicle while acquiring 12-lead ECG data.
	Outdated, corroded, or dried-out electrodes	• Check Use By date on electrode packages. • Use only unexpired silver/silver chloride electrodes. Leave electrodes in sealed pouch until time of use.
	Radio Frequency Interference (RFI)	• Check for equipment causing RFI (such as a radio transmitter) and relocate or turn off equipment power.
	Damaged cable or connector/lead wire	• Inspect main cable and attachments. Replace if damaged.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Monitor does not complete 12-lead ECG operation sequence or **12-LEAD STOPPED** message appears.	Operator pressed another function button (such as **PRINT**) before 12-lead ECG sequence completed	• Press **12-LEAD** to acquire another 12-lead ECG. Allow enough time for sequence to complete.
	12-lead button pressed without 5-lead or 12-lead cable connected.	• Connect 5-lead or 12-lead ECG cable.
Noisy signal and message displayed: **EXCESSIVE NOISE–12-LEAD CANCELLED**	Signal noise for more than 30 seconds	• Press **12-LEAD** to acquire another 12-lead ECG.
Baseline wander (low frequency/high amplitude artifact)	Inadequate skin preparation	• Prepare skin as described in ECG Monitoring Procedure (on page 53) and apply new electrodes.
	Poor electrode-skin contact	• Check electrodes for proper adhesion.
Fine baseline artifact (high frequency/low amplitude)	Inadequate skin preparation	• Prepare skin as described in ECG Monitoring Procedure (on page 53) and apply new electrodes.
	Isometric muscle tension in arms/legs	• Confirm that limbs are resting on a supportive surface. • Check electrodes for proper adhesion.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Monitoring SpO2, SpCO, and SpMet

SpO_2, SpCO™, and SpMet™ are optional features for the LIFEPAK 15 monitor/defibrillator. When all three options (SpO_2, SpCO, and SpMet) are installed, the pulse oximeter measures functional oxygen saturation (SpO_2), carboxyhemoglobin concentration (SpCO), and methemoglobin concentration (SpMet) in the blood.

IMPORTANT! SpO_2-only sensors and combination SpO_2, SpCO, and SpMet sensors are available for use. Masimo® SpO_2-only sensors that have a red connector are compatible with the LIFEPAK 15 monitor. Masimo Rainbow® sensors are necessary to monitor SpCO and SpMet in addition to SpO_2. These sensors are not compatible with other LIFEPAK defibrillator/monitors.

Nellcor SpO_2 sensors may be used with the LIFEPAK 15 monitor/defibrillator, if the Masimo Red™ MNC adapter cable is used.

For a list of SpO_2 sensors and connector cables that are intended for use with the LIFEPAK 15 monitor/defibrillator, see the Physio-Control website. Carefully read the Directions for Use that are provided with the sensors and connector cables for a complete description, instructions, warnings, cautions, and specifications. To order sensors and connector cables, contact your Physio-Control representative. In the USA, call Customer Support at 1.800.442.1142, option 2.

Intended Use

A pulse oximeter is a noninvasive device that continuously measures functional oxygen saturations (SpO_2), carboxyhemoglobin concentration (SpCO), and methemoglobin concentration (SpMet) in the blood. Continuously monitoring SpO_2 can provide an early warning when oxygen saturation is decreasing and can help the clinician act rapidly before the patient develops the later signs of hypoxemia. Previously, the blood parameters SpCO and SpMet could only be obtained from invasive blood gas samples. This new technology assists in identifying the often hidden conditions of carboxyhemoglobinemia (carbon monoxide poisoning) and methemoglobinemia (a condition that impedes delivery of oxygen to the tissues). Low levels of both SpCO and SpMet are normally found in the blood; however, early detection of significantly high levels can lead to proper diagnosis and treatment, and can help improve patient outcome.

Pulse oximetry is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the SpO_2, SpCO, and SpMet measurements. If a trend toward patient deoxygenation is evident or carbon monoxide poisoning or methemoglobinemia is suspected, blood samples should also be analyzed using laboratory instruments to completely understand the patient's condition.

Do not use the pulse oximeter to monitor patients for apnea, or as a replacement or substitute for ECG-based arrhythmia analysis.

Indications

Pulse oximetry is indicated for use in any patient who is at risk of developing hypoxemia, carboxyhemoglobinemia, or methemoglobinemia. SpO_2 monitoring may be used during no motion and motion conditions, and in patients who are well or poorly perfused. SpCO and SpMet accuracies have not been validated under motion or low perfusion conditions.

Contraindications

None known.

SpO2, SpCO, and SpMet Warnings and Cautions

WARNING

Shock or Burn Hazard

Before use, carefully read these operating instructions, the sensor and cable directions for use, and precautionary information.

WARNING

Shock or Burn Hazard

Using other manufacturers' sensors or cables may cause improper oximeter performance and invalidate safety agency certifications. Use only sensors and cables that are specified in these operating instructions.

WARNING

Inaccurate Pulse Oximeter Readings

Do not use a damaged sensor or cable. Do not alter the sensor or cable in any way. Alterations or modification may affect performance and/or accuracy. Never use more than one cable between the pulse oximeter and the sensor to extend the length.

WARNING

Inaccurate Pulse Oximeter Readings

Sensors exposed to ambient light when incorrectly applied to a patient may exhibit inaccurate saturation readings. Securely place the sensor on the patient and check the sensor's application frequently to help ensure accurate readings.

WARNING

Inaccurate Pulse Oximeter Readings

Severe anemia, hypothermia, severe vasoconstriction, carboxyhemoglobin, methemoglobin, intravascular dyes that change usual blood pigmentation, elevated bilirubin, excessive patient movement, venous pulsations, electrosurgical interference, exposure to irradiation and placement of the sensor on an extremity that has a blood pressure cuff, intravascular line, or externally applied coloring (such as nail polish) may interfere with oximeter performance. The operator should be thoroughly familiar with the operation of the oximeter prior to use.

WARNING

Inaccurate Pulse Oximeter Readings

The pulsations from intra-aortic balloon support can be additive to the pulse rate on the oximeter pulse rate display. Verify patient's pulse rate against the ECG heart rate.

WARNING	**Possible Skin Injury** Prolonged, continuous use of a sensor may cause irritation, blistering, or pressure necrosis of the skin. Check the sensor site regularly based on patient condition and type of sensor. Change the sensor site if skin changes occur. Do not use tape to hold the sensor in place as this may cause inaccurate readings or damage to the sensor or skin.
WARNING	**Possible Strangulation** Carefully route patient cabling to reduce the possibility of patient entanglement or strangulation.
CAUTION	**Possible Equipment Damage** To avoid damage to the cable, always hold by the connector rather than the cable, when connecting or disconnecting either end.
CAUTION	**Possible Equipment Damage** Do not soak or immerse the sensors or cables in any liquid solution. Do not attempt to sterilize.

No Implied License

Possession or purchase of the pulse oximeter does not convey any expressed or implied license to use the pulse oximeter with unauthorized sensors or cables which would, alone or in combination with this device, fall within the scope of one or more of the patents relating to this device.

How a Pulse Oximeter Works

A pulse oximeter sensor directs light through a patient's fleshy body site (usually a finger or toe). The sensor sends wavelengths of light from the emitter to the receiving detector as shown in the following figure.

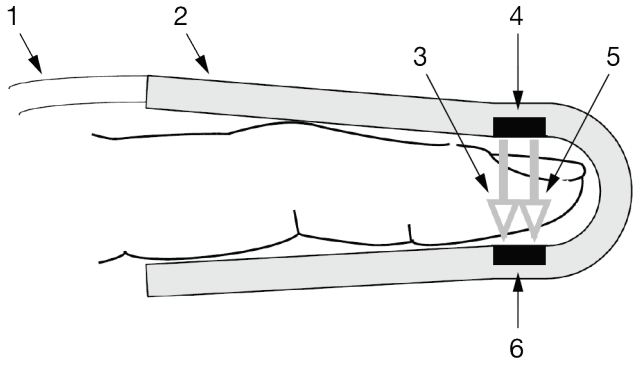

Figure 25 How a Pulse Oximeter Works

FIGURE LEGEND			
1	Cable	4	Light-emitting diodes
2	Sensor (holds LEDs and detector)	5	Infrared
3	Red	6	Light-receiving detector

The pulse oximeter translates the amount of light received by the detector to the various forms of hemoglobin saturation levels and displays them as SpO_2, SpCO, and SpMet percentages. Normal values for SpO_2 typically range from 95% to 100%. Normal values for SpCO are typically less than 9% (the higher range of normal is often seen in smokers). Normal values for SpMet are typically less than 2% and may be caused by exposure to some pharmaceuticals including local anesthetic agents and chemical agents such as nitrites.

SpO2, SpCO, and SpMet Monitoring Considerations

The quality of the SpO_2, SpCO, and SpMet readings depends on correct sensor size and placement, adequate blood flow through the sensor site, and limiting patient motion and sensor exposure to ambient light. For example, with very low perfusion at the sensor site, readings may be lower than core arterial oxygen saturation. Test methods for accuracy are available by contacting your local Physio-Control representative.

Use the following criteria to select the appropriate pulse oximeter sensor:

- Patient size (adult, pediatric, infant) and weight
- Patient perfusion to extremities
- Patient activity level
- Available application sites on the patient's body
- Sterility requirements
- Anticipated duration of monitoring

To help ensure optimal performance:

- Use a dry and appropriately sized sensor.
- Choose a site that is well perfused. The ring finger is preferred.
- Choose a site that least restricts patient movement, such as finger of the non-dominant hand.
- Be sure the fleshy part of the digit completely covers the detector.
- Keep the sensor site at the same level as the patient's heart.
- Apply the sensor according to the Directions for Use provided with the sensor.
- Observe all warnings and cautions noted in the sensor's Directions for Use.

Sensor Application

The preferred site for sensor application is the ring finger of the non-dominant hand. To position the sensor:

1. Orient the sensor so the cable is on the back of the patient's hand.
2. Place the finger in the sensor until the tip of the finger touches the "raised digit stop."
3. The hinged tabs of the sensor should open to evenly distribute the grip pressure of the sensor along the length of the finger. Check the arrangement of the sensor to verify correct positioning. Complete coverage of the detector window is needed to ensure accurate data.

The sensors are sensitive to light. If excessive ambient light is present, remove or reduce lighting, cover the sensor site with an opaque material to block the light, and check appropriateness of sensor site. Failure to do so could result in inaccurate measurements.

If excessive movement presents a problem during SpCO/SpMet monitoring, consider the following possible solutions:

- Be sure the sensor is secure and properly aligned.
- Use a disposable adhesive sensor.
- If possible, move the sensor to a less active site.

Note: Wrapping the sensor too tightly or using supplemental tape to hold the sensor in place may cause inaccurate oximeter readings.

Note: Circulation distal to the sensor site should be checked routinely.

IMPORTANT! Masimo Rainbow sensors are necessary to monitor SpCO and SpMet and are not compatible with other LIFEPAK defibrillator/monitors.

Oximeter Monitoring Procedure

Power to the pulse oximeter is controlled by the LIFEPAK 15 monitor/defibrillator. When the defibrillator is turned on, the oximeter turns on and performs a calibration and self-test that requires approximately 20 seconds. During the calibration and self-test, the screen does not display SpO_2, SpCO, or SpMet information.

To conserve battery power, the pulse oximeter goes into "sleep mode" when not in use. Sleep mode is activated within 10 seconds of disconnecting the sensor. During sleep mode, the screen does not display SpO_2, SpCO, or SpMet information. When a sensor or patient signal is detected, the oximeter performs a self-test and then returns to normal mode.

The pulse oximeter measures and displays SpO_2 levels between 50 and 100%. SpO_2 levels less than 50% are displayed as <50. The pulse oximeter measures and displays SpCO in the range of 0–40%. The pulse oximeter measures and displays SpMet in the range of 0–15%. Measurement accuracies are specified in the SpO_2/SpCO/SpMet section in Appendix A.

To monitor SpO_2:

1. Press **ON**.
2. Connect the pulse oximeter cable to the monitor and sensor.
3. Attach the sensor to the patient.
4. Observe the pulse bar for fluctuation. Amplitude of the pulse bar indicates relative signal quality.
5. Confirm that the SpO_2 reading appears and is stable.
6. Use the **SPEED DIAL** to adjust volume, sensitivity, and averaging time, as necessary.

To monitor SpCO or SpMet:

1. Perform Step 2 through Step 5 above.
2. Verify that an SpCO/SpMet sensor is in use. Only Rainbow sensors are capable of reading SpCO/SpMet.
3. Encourage the patient to remain still.
4. To quickly obtain SpCO or SpMet value, press **PRINT**. If dashes (---) appear on printout instead of values for SpCO or SpMet, allow a few more seconds for measurement to be obtained.

   or

   To display SpCO or SpMet:

   - Use the **SPEED DIAL** to select the SpO_2 area.
   - Select **PARAMETER** from menu.
   - Select **SPCO** or **SPMET**. Selected value displays for 10 seconds.

Note: SpCO and SpMet monitoring are not intended for use under patient motion or low perfusion conditions.

SpCO/SpMet Advisory

If the SpCO or SpMet reading is above normal limits, indicating a dangerous amount of carboxyhemoglobin or methemoglobin, an Advisory occurs.

During an Advisory:

- The elevated SpCO or SpMet value is displayed instead of SpO_2.
- The elevated value flashes and the alarm tone sounds.
- One of the following Advisory messages appears in the message area:

  Advisory: SpCO > 10%

  Advisory: SpMet > 3%

To cancel the Advisory, press **ALARMS**. The SpO_2 area reverts to the SpO_2 reading. The Advisory message remains on the screen until the elevated value returns to within normal limits or the device is turned off.

WARNING

Inaccurate SpO_2 Readings

Carboxyhemoglobin and methemoglobin may erroneously increase SpO_2 readings. The amount that SpO_2 increases is approximately equal to the amount of carboxyhemoglobin or methemoglobin that is present.

WARNING

Inaccurate SpCO and SpMet Readings

Very low arterial oxygen saturation levels may cause inaccurate SpCO and SpMet readings.

Pleth Waveform

You can display the plethysmographic (pleth) waveform in Channel 2 or 3.

To display the pleth waveform:

1. Rotate the **SPEED DIAL** to outline waveform **CHANNEL 2** or **3**.
2. Press the **SPEED DIAL**. The Channel menu appears.
3. Select **WAVEFORM** and then select **SPO2**. The SpO_2 waveform appears in the selected channel. The waveform is automatically sized for optimum waveform viewing.

Volume

To adjust the pulse tone volume:

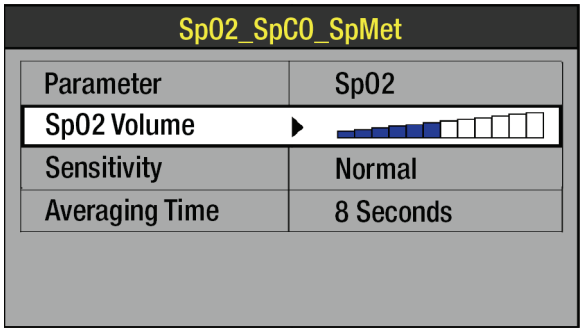

1. Rotate the **SPEED DIAL** to outline the SpO_2 area on the Home Screen.
2. Press the **SPEED DIAL**.
3. Highlight and select **SPO2 VOLUME**.
4. Rotate the **SPEED DIAL** to the desired volume.
5. Press the **SPEED DIAL** to set the volume.

Sensitivity

The sensitivity setting allows you to adjust the oximeter to either **NORMAL** or **HIGH** for differing perfusion states.

To adjust sensitivity:

1. Outline and select the SpO_2 area on the Home Screen.
2. Select **SENSITIVITY** and then select **NORMAL** or **HIGH**.

Note: **NORMAL** sensitivity is recommended for most patients. The **HIGH** sensitivity setting allows SpO_2 monitoring under low perfusion states, such as the severe hypotension of shock. However, when SpO_2 sensitivity is set to **HIGH**, the signal is more susceptible to artifact. Monitor the patient closely when using the **HIGH** sensitivity setting.

Averaging Time

Averaging time allows you to adjust the time period that is used to average the SpO_2 value.

To adjust averaging time:

1. Outline and select the SpO_2 area on the Home Screen.
2. Select **AVERAGING TIME** and then select one of the following:
   - 4 Seconds
   - 8 Seconds
   - 12 Seconds
   - 16 Seconds

Note: Averaging time of 8 seconds is recommended for most patients. For patients with rapidly changing SpO_2 values, 4 seconds is recommended. Use a 12- or 16-second time period when artifact is affecting the performance of the pulse oximeter.

Pulse Rate Monitoring

If ECG monitoring is not active, the SpO_2 sensor can be used to monitor the patient's pulse rate. The pulse rate value is indicated by **PR (SPO2)**.

Pulse rate monitoring is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times. Check pulse manually if patient shows signs of abnormal pulse rate.

Note: This function may not work if ECG leads are attached to a patient.

Cleaning

Pulse oximetry sensors may be adhesive (single-patient use) or reusable.

To clean the reusable sensor and connector cable:

1. Disconnect the sensor and cable from the monitor. Inspect the cable for damage.
2. Use a clean, soft cloth dampened with 70% isopropyl alcohol to wipe clean.
3. Allow to dry thoroughly before placing the sensor on a patient or reconnecting the cable to the monitor.

Note: Do not attempt to sterilize. Do not soak or immerse in any liquid solution. For information about cleaning the device, see Cleaning the Device (on page 214).

Troubleshooting Tips

Table 13 Troubleshooting Tips for SpO2, SpCO, and SpMet

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
The monitor measures a pulse, but there is no oxygen saturation or pulse rate	Excessive patient motion	• Keep patient still. • Check that sensor is secure. • Relocate sensor. • Apply adhesive sensor.
	Patient perfusion may be too low	• Check patient. • Increase sensitivity.
SpO_2 or pulse rate changes rapidly, pulse amplitude is erratic	Excessive patient motion	• Keep patient still. • Check that sensor is secure. • Relocate sensor. • Apply adhesive sensor. • Increase sensitivity.
	An electrosurgical unit (ESU) may be interfering with performance	• Move the monitor as far as possible from the ESU. • Plug the ESU and monitor into different circuits. • Move the ESU ground pad as close to the surgical site as possible.
	Sensor may be damp	• Replace sensor.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
SPO2: NO SENSOR DETECTED message appears	Sensor not connected to patient or cable disconnected from monitor/defibrillator	• Check that sensor and cable are connected properly. • Check that appropriate sensor is in use.
	Damaged cable or sensor	• Replace damaged cable or sensor.
No SpO_2, SpCO, or SpMet value (---) is displayed	Sensor may be too tight	• Reposition sensor. • Relocate sensor.
	Patient is in cardiac arrest or shock	• Check patient.
	Oximeter may be performing self-calibration or self-test	• Wait for completion. • If values do not display within 30 seconds, disconnect and reconnect sensor. If values do not display within another 30 seconds, replace sensor.
	Defibrillator shock just delivered	• None. If values do not display within 30 seconds, disconnect and reconnect sensor. If values do not display within another 30 seconds, replace sensor.
	High intensity lights (such as pulsating strobe lights) may be interfering with performance	• Cover sensor with opaque material, if necessary.
	Damaged cable or sensor	• Replace damaged cable or sensor.
Different SpCO or SpMet measurements on same patient	Every measurement, even on the same patient, can be different	• Confirm by taking three measurements: ring finger, middle finger, and then index finger; average the results.
XXX appears in place of SpO_2 reading	SpO_2 module failed. Internal cable failed.	• Turn device off and then on again. • If problem persists, contact qualified service personnel.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
SPO2: CHECK SENSOR message appears	Sensor is disconnected from patient or cable	• Attach the sensor. • Check that sensor is secure.
	Excessive ambient light	• Remove or block light source, if possible. • Cover sensor with opaque material, if necessary.
	Faulty or defective sensor	• Replace sensor.
	Patient has a weak pulse or low blood pressure, or the sensor is not properly placed	• Change sensor location. • Check if patient perfusion is adequate for sensor location. • Check that sensor is secure and not too tight. • Check that sensor is not on extremity with blood pressure cuff or intravascular line. • Test sensor on someone else.
SPO2: UNKNOWN SENSOR message appears	A sensor that is not Physio-Control approved is connected to the device	• Check that the sensor is approved by Physio-Control. • If using Nellcor sensor, check that it is connected to monitor using Masimo Red MNC adapter cable.
SPO2: SEARCHING FOR PULSE message appears	A sensor is connected to the patient and is searching for a pulse	• Wait for completion.
SPO2: LOW PERFUSION message appears	Patient has a weak pulse	• Change sensor location.
SP02: POOR QUALITY SIGNAL message appears	When the signal quality is low, the accuracy of the measurement may be compromised	• Check that sensor and cable are connected properly. • Move sensor to a better perfused site.
SPCO: POOR QUALITY SIGNAL message appears	When the signal quality is low, the accuracy of the measurement may be compromised	• Check that sensor and cable are connected properly. • Move sensor to a better perfused site.
SPMET: POOR QUALITY SIGNAL message appears	When the signal quality is low, the accuracy of the measurement may be compromised	• Check that sensor and cable are connected properly. • Move sensor to a better perfused site.
SPCO/SPMET: POOR QUALITY SIGNAL message appears	When the signal quality is low, the accuracy of the measurement may be compromised	• Check that sensor and cable are connected properly. • Move sensor to a better perfused site.
SPO2: SENSOR DOES NOT SUPPORT SPCO OR SPMET message appears	SpO_2-only sensor used with SpCO/SpMet capable device	• None necessary, or use Rainbow sensor to measure SpCO or SpMet.

Note: Most Rainbow sensor messages (SpO_2, SpCO, and SpMet) are reported as **SPO2: (MESSAGE)**. The **POOR QUALITY SIGNAL** message indicates the specific parameter affected.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Monitoring Noninvasive Blood Pressure

Intended Use

The LIFEPAK 15 noninvasive blood pressure (NIBP) monitor measures blood pressure (BP) using the oscillometric measurement technique to determine systolic, diastolic, and mean arterial pressures, and pulse rate. The measurement can be initiated manually or set to recur automatically at predetermined intervals.

Blood pressure measurements determined using this device are equivalent to those obtained by a trained observer using the cuff/stethoscope auscultation method, within the limits prescribed by the American National Standard *Electronic or automated sphygmomanometers* (AAMI SP-10).

NIBP is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the NIBP monitor.

Indications

Noninvasive blood pressure monitoring is intended for detection of hypertension or hypotension and monitoring BP trends in patient conditions such as, but not limited to, shock, acute dysrhythmia, or major fluid imbalance. NIBP monitoring is not indicated for neonatal patients less than one month old.

Contraindications

None known.

NIBP Monitoring Warnings and Caution

WARNING

Possible Loss of Intravenous Access and Inaccurate Infusion Rate

Do not apply the blood pressure cuff on an extremity that is used for an intravenous infusion or arterio-venous (A-V) shunt. Patency of the intravenous infusion may be affected by blood pressure measurement due to the occlusion of blood flow.

WARNING

Possible Circulation Impairment

Blood flow to the extremity may be impaired by prolonged, continuous use of a blood pressure cuff, a kink in the tubing, or frequent measurements. Check circulation regularly and loosen or reposition the cuff if changes in circulation occur.

WARNING

Possible Inaccurate Blood Pressure Readings

Do not alter the NIBP monitor's pneumatic tubing. Altering NIBP tubing may cause improper performance and may void the warranty. Avoid compression or restriction of pressure tubes.

WARNING

Possible Patient Harm

Do not apply the blood pressure cuff over a wound. Doing so may cause further injury.

WARNING

Possible Patient Harm

Do not apply the blood pressure cuff on the arm on the side of a mastectomy.

WARNING

Possible Inaccurate Blood Pressure Readings

Using NIBP accessories not recommended by Physio-Control may cause the device to perform improperly and invalidate the safety agency certifications. Use only the accessories that are specified in these operating instructions.

WARNING

Possible Inaccurate Oxygen Saturation Readings

Do not perform NIBP measurement on an extremity used for oxygen saturation monitoring. Oxygen saturation measurement is affected by blood pressure measurement due to the occlusion of blood flow.

CAUTION

Equipment Damage

Do not inflate a cuff unless it is placed on an extremity.

How NIBP Monitoring Works

The NIBP monitor uses the oscillometric measurement technique. The oscillometric technique does not use Korotkoff sounds to determine blood pressure; rather, it monitors the changes in pressure pulses that are caused by the flow of blood through the artery. The NIBP monitor inflates the cuff around the patient's arm to a value that occludes the artery, and then deflates the cuff in steps. When blood starts to flow through the artery, the increasing blood flow causes the amplitude of the pressure pulses in the cuff to increase. As the NIBP monitor steps the pressure down, the pulses reach a peak amplitude and then start to decrease. The rising and falling amplitude values form a curve that is analyzed to yield systolic pressure, diastolic pressure, and mean arterial pressure (MAP).

The NIBP monitor measures the pulse rate by tracking the number of pulses over time. The NIBP monitor uses artifact rejection techniques to provide accurate results under most operating conditions. When a patient is experiencing arrhythmias during a measurement, the accuracy of the pulse determination may be affected or the time needed to complete a measurement may be extended. In shock conditions, the low amplitude of blood pressure waveforms makes it difficult for the monitor to accurately determine the systolic and diastolic pressures.

NIBP Monitoring Considerations

As with any noninvasive oscillometric blood pressure monitor, clinical conditions can affect the accuracy of the measurements obtained, including the following:

- The patient's physiological condition. For example, shock may result in a blood pressure waveform that has a low amplitude, making it difficult for the monitor to accurately determine the systolic and diastolic pressures. Altered hemodynamics caused by pregnancy, including preeclampsia, may result in inaccurate readings.
- The position of the patient.
- Motion may prolong the measurement process since motion artifacts have to be rejected in the data stream. Motion that affects measurement can include patient movement, patient seizure, bumping the cuff, and flexing the extremity under the cuff.
- The presence of other medical devices. The NIBP monitor does not operate effectively if the patient is connected to a heart/lung machine.
- Extremes of temperature, humidity, or altitude.
- When a patient is experiencing arrhythmias, pulse rate accuracy may be affected or the time needed to complete an NIBP measurement may be extended. The device automatically deflates if a blood pressure measurement cannot be obtained in 120 seconds.
- Blood pressure and pulse can fluctuate greatly between measurements; the monitor cannot alert the operator of changes in vital signs that occur between measurement cycles.
- There may be some difference between readings taken manually and readings from the NIBP monitor due to the differing sensitivity of the two methods. The NIBP monitor meets the ANSI/SP10 AAMI standard that requires a mean difference of ±5 mmHg, with a standard deviation no greater than 8 mmHg, compared to auscultatory readings.

- When using the NIBP monitor during defibrillation, the NIBP monitor is not available when the defibrillator is being charged. Upon shock, the monitor resets and dashes (– – –) appear in place of pressure readings. After defibrillation, you can resume blood pressure measurement according to NIBP Monitoring Procedure (on page 83).
- If the blood pressure cuff fails to deflate for any reason or causes undue discomfort to the patient, remove the cuff from the arm or disconnect the tubing from the defibrillator.
- If the patient has been active, optimal resting measurements will be obtained if you wait five minutes before taking a blood pressure measurement.

Cuff Selection

The use of properly designed and sized cuffs is essential for the accurate measurement of blood pressure. The cuff must fit snugly around the extremity to occlude the artery. For a list of BP cuffs that are intended for use with the LIFEPAK 15 monitor/defibrillator, see the LIFEPAK 15 Monitor/Defibrillator Accessories Catalog at www.physio-control.com.

NIBP Monitoring Procedure

The NIBP monitor inflates an occluding cuff and determines systolic and diastolic pressures, mean arterial pressure (MAP), and pulse rate. Pressure measurements are reported in mmHg and pulse rate in beats per minute (bpm).

Note: Pulse rate monitoring may not work if ECG leads are attached to the patient.

Both single-measurement and specified-interval (timer-controlled) methods of blood pressure reading are available.

The NIBP monitor draws power from the defibrillator. When the defibrillator is turned on, the NIBP monitor conducts a self-test that takes approximately three seconds.

IMPORTANT! The LIFEPAK 15 monitor NIBP port and tubing are not compatible or interchangeable with the NIBP tubing that is used with other LIFEPAK monitor/defibrillators.

Changing the Initial Inflation Pressure

The initial cuff pressure should be set approximately 30 mmHg higher than the patient's anticipated systolic pressure. The factory default initial inflation pressure for the first measurement is 160 mmHg. For pediatric patients, the initial cuff pressure may need to be lowered. Initial inflation settings are 80, 100, 120, 140, 160, or 180 mmHg. For infants, the recommended initial cuff pressure is 120 mmHg.

Caution should be taken not to lower the initial pressure below the adult patient's systolic measurement. Doing so may cause the cuff to reinflate and cause patient discomfort. For subsequent measurements, the monitor inflates approximately 30 mmHg higher than the previously determined systolic pressure.

To select an initial pressure:

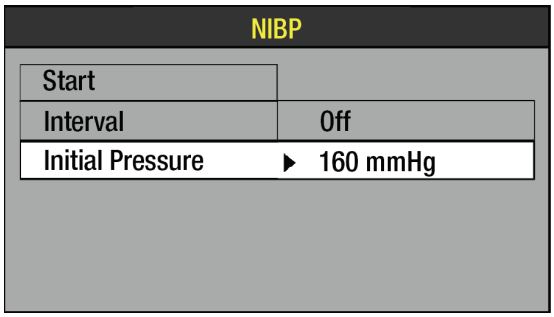

1. Rotate the **SPEED DIAL** to outline the NIBP area.
2. Press the **SPEED DIAL**. The NIBP menu appears.
3. Select **INITIAL PRESSURE**.
4. Rotate the **SPEED DIAL** to the desired pressure.
5. Press the **SPEED DIAL** to set the initial pressure.

Note: Measurement data is recorded in the LIFEPAK 15 monitor/defibrillator Vital Sign Log. For more information about the Vital Sign Log and its use, see Data Management (on page 161).

Manual Single-Measurement Procedure

The NIBP measurement typically takes 40 seconds to complete. If the measurement is not completed within 120 seconds, the cuff automatically deflates.

To obtain a manual single measurement:

1. Press **ON**.
2. Select the appropriately-sized cuff.
3. Properly align the cuff artery markings, if present, and apply snugly to the extremity.
4. Connect the tubing to the cuff and to the NIBP port on the monitor.
5. Change the initial inflation pressure, if necessary.
6. If possible, ensure the patient is comfortably seated with feet flat on the floor, legs uncrossed, and back supported. Ask the patient to relax as much as possible and refrain from talking during the measurement procedure. The operator should be able to view the device screen during the measurement.
7. Position the extremity in a relaxed and supported position at approximately the same level as the right atrium of the patient's heart. Inform the patient that the cuff will inflate and cause a "big squeeze" around the arm and that the patient's fingers may tingle.
8. Press **NIBP** to start the measurement, and check that the patient's arm is not moving. When the measurement is complete, systolic, diastolic, and mean arterial pressures are displayed.

To cancel a measurement, press **NIBP** again.

Note: NIBP pulse rate is displayed only when ECG or SpO_2 is not active.

Timer-Controlled Measurement Procedure

When the timer is set, the monitor performs recurring measurements at a fixed interval. When using timer-controlled measurement, the interval is counted from the start of the measurement to the start of the next measurement. Choices are **OFF** (factory default), **2**, **3**, **5**, **10**, **15**, **30**, and **60** minutes.

To take a manual measurement between timer-controlled measurements, press **NIBP**. The next interval is counted from the beginning of the manual measurement.

Figure 26 NIBP Measurements and Timer

FIGURE LEGEND	
1	Countdown timer–displays time until next measurement
2	Mean arterial pressure (MAP)
3	Systolic pressure
4	Diastolic pressure

To set timer-controlled measurements:

1. Press **ON**.
2. Select the appropriately-sized cuff.
3. Properly align the cuff artery markings, if present, and apply snugly to the extremity.
4. Connect the tubing to the cuff and to the NIBP port on the monitor.
5. Rotate the **SPEED DIAL** to outline the NIBP area.
6. Press the **SPEED DIAL**. The NIBP menu appears.
7. Select **INTERVAL** and then select the desired time interval.
8. Position the extremity in a relaxed and supported position at approximately the same level as the right atrium of the patient's heart. Inform the patient that the cuff will inflate and cause a "big squeeze" around the arm and that the patient's fingers may tingle.
9. Press **NIBP** to start the measurement, and check that the patient's arm is not moving. When the measurement is complete, systolic, diastolic, and mean arterial pressures are displayed. The countdown timer shows the time to the next automatic NIBP measurement.

To cancel a measurement in progress, press **NIBP** again.

Note: If at any time the cuff pressure exceeds 290 mmHg or there is a system failure of the NIBP module, timer-controlled NIBP is terminated. To reactivate, follow the Timer-Controlled Measurement Procedure.

Cleaning

To clean the cuff and pneumatic tubing:

1. Disconnect the tubing from the cuff and monitor. Use a clean, soft cloth dampened with a germicidal solution to wipe clean.
2. Inspect the tubing for cracks or kinks. If any damage is noted, replace the tubing.
3. Inspect the cuff for damage or excessive wear. If any damage is noted, replace the cuff.
4. Allow both to dry before placing the cuff on a patient or reconnecting the tubing to the monitor.

For information about cleaning the device, see Cleaning the Device (on page 214).

Troubleshooting Tips

Table 14 Troubleshooting Tips for NIBP Monitoring

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
NIBP AIR LEAK message appears	Cuff applied too loosely Leak in cuff/monitor pneumatic system	• Check cuff for snug fit on patient. • Check that the cuff/monitor connection is secure. • Check cuff for leaks. Do not use a cuff that exhibits a leak.
NIBP FLOW ERROR message appears	The pneumatic system is not maintaining stable cuff pressure	• Deflate or remove cuff. • Check tubing for leaks. • Replace cuff.
NIBP FAILED message appears	The monitor cannot establish zero-pressure reference	• Check tubing for kink or blockage. • If this message persists, remove monitor from use and obtain service. Use another method to measure the patient's blood pressure.
NIBP INITIALIZING message appears	NIBP requested while NIBP module is still initializing	• Wait until message disappears and request NIBP.
NIBP MOTION message appears	The patient extremity moved too much for the monitor to accurately complete the measurement	• Have patient lie quietly with extremity relaxed and supported. • Check that patient's arm does not move during NIBP measurement.
NIBP OVERPRESSURE message appears	Cuff pressure exceeded 290 mmHg	• Disconnect tubing or remove cuff. • Avoid very rapid squeezing of the cuff. • If this message persists, remove the cuff from use and obtain service.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
NIBP TIME OUT message appears	The monitor did not complete a measurement in 120 seconds	• Check cuff for snug fit on patient. • Check that cuff artery markings are aligned with the artery. • Repeat measurement. • Try a higher initial pressure. • If this message persists, use another method to measure the patient's blood pressure.
NIBP WEAK PULSE message appears	The monitor did not detect any pulses	• Check pulses distal to the cuff. • Check cuff for snug fit on patient. • Check that cuff artery markings are aligned with the artery.
XXX appears in place of NIBP readings	NIBP module failed. NIBP module failed to calibrate successfully.	• Turn device off and then on again. • If problem persists, contact qualified service personnel.
NIBP CHECK CUFF message appears	Cuff is not connected to patient or device	• Check cuff for snug fit on patient. • Check that cuff artery markings are aligned with the artery. • Check cuff tubing connection to device.
Unable to connect NIBP tubing to device	The LIFEPAK 12 NIBP tubing connector is not compatible with the LIFEPAK 15 NIBP port	• Obtain correct NIBP tubing that is compatible with LIFEPAK 15 monitor/defibrillator.
Cuff not deflating	Internal valves fail to open	• Disconnect NIBP tubing. • Remove cuff from patient.
Cuff not inflating	Cuff is not connected to the device	• Check tubing connection to device and cuff.
	Leak in tubing, cuff, or connector	• Replace NIBP tubing or cuff.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Monitoring ETCO2

Intended Use

The end-tidal CO_2 ($EtCO_2$) monitor is a capnometric device that uses non-dispersive infrared spectroscopy to continuously measure the amount of CO_2 during each breath and report the amount present at the end of exhalation ($EtCO_2$). The sample is obtained by the side stream method and can be used with intubated or nonintubated patients. Respiration rate is also measured and displayed in breaths per minute.

The $EtCO_2$ monitor is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the $EtCO_2$ monitor.

Indications

$EtCO_2$ monitoring is used to detect trends in the level of expired CO_2. It is used for monitoring breathing efficacy and treatment effectiveness in acute cardiopulmonary care, for example, to determine if adequate compressions are being performed during CPR or to rapidly detect whether an endotracheal tube has been placed successfully.

Contraindications

None known.

EtCO2 Monitoring Warnings

WARNING

Fire Hazard

Before use, carefully read these operating instructions, the FilterLine® tubing directions for use, and precautionary information.

WARNING

Fire Hazard

The FilterLine tubing may ignite in the presence of O_2 when directly exposed to laser, electrosurgical devices, or high heat. Use with caution to prevent flammability of the FilterLine tubing.

WARNING

Fire Hazard

Anesthetics become mixed with the patient's air that is sampled by the capnometer. When using the $EtCO_2$ monitor in the presence of flammable anesthetic mixture with oxygen or nitrous oxide, connect the $EtCO_2$ gas port to a scavenger system.

WARNING

Possible Inaccurate Patient Assessment

Do not use the EtCO2 monitor for diagnostic purposes. The EtCO2 monitor is intended only as an adjunct in patient assessment and is not to be used as a diagnostic apnea monitor. Do not solely rely on respiratory monitoring for detecting cessation of breathing. Follow hospital guidelines and best clinical practices, including monitoring additional parameters that indicate the patient's oxygenation status.

WARNING

Possible Inaccurate CO_2 Readings

Using other manufacturers' CO_2 accessories may cause the device to perform improperly and invalidate the safety agency certifications. Use only the accessories that are specified in these operating instructions.

WARNING

Possible Strangulation

Carefully route the patient tubing (FilterLine) to reduce the possibility of patient entanglement or strangulation.

WARNING

Infection Hazard

Do not reuse, sterilize, or clean Microstream® CO_2 accessories as they are designed for single-patient one-time use.

WARNING

Infection Hazard

Do not return air from the CO_2 exhaust port to the breathing system.

How Capnography Works

An $EtCO_2$ sensor continuously monitors carbon dioxide (CO_2) that is inspired and exhaled by the patient. The sensor employs Microstream non-dispersive infrared (IR) spectroscopy to measure the concentration of CO_2 molecules that absorb infrared light.

The CO_2 FilterLine system delivers a sample of the exhaled gases directly from the patient into the LIFEPAK 15 monitor for CO_2 measurement. The low sampling flow rate (50 ml/min) reduces liquid and secretion accumulation and prevents obstruction, which maintains the shape of the CO_2 waveform.

The CO_2 sensor captures a micro sample (15 microliters). This extremely small volume allows for fast rise time and accurate CO_2 readings, even at high respiration rates.

The Microbeam IR source illuminates the sample cell and the reference cell. This proprietary IR light source generates only the specific wavelengths characteristic of the CO_2 absorption

spectrum. Therefore, no compensations are required when concentrations of O_2, anesthetic agent, or water vapor are present in the exhaled breath.

You can set up the LIFEPAK 15 monitor/defibrillator to use the capnography Body Temperature Pressure Saturated (BTPS) conversion method. This option corrects for the difference in temperature and moisture between the sampling site and alveoli. The correction formula is 0.97 × the measured $EtCO_2$ value. See the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

EtCO2 Monitoring Waveform Analysis

Valuable information concerning the patient's expired CO_2 can be acquired by examination and interpretation of the waveform.

Phases of the Waveform

The following figure is a graphic representation of a normal capnograph waveform. Four phases of the waveform require analysis. The flat I–II baseline segment (Respiratory Baseline) represents continued inhalation of CO_2-free gas. This value normally is zero. The II–III segment (Expiratory Upstroke), a sharp rise, represents exhalation of a mixture of dead space gases and alveolar gases from acini with the shortest transit times. Phase III–IV (Expiratory Plateau) represents the alveolar plateau, characterized by exhalation of mostly alveolar gas. Point IV is the end-tidal ($EtCO_2$) value that is recorded and displayed by the monitor. Phase IV–V (Inspiratory Downstroke), a sharp fall, reflects the inhalation of gases that are CO_2-free. Alterations of the normal capnograph or $EtCO_2$ values are the result of changes in metabolism, circulation, ventilation, or equipment function.

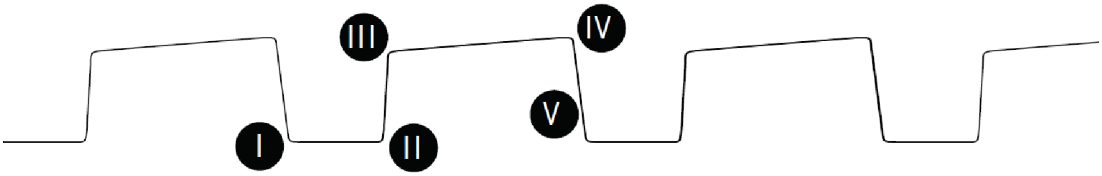

Figure 27 Phases of the Respiratory Waveform

Respiratory Baseline Elevation of the waveform baseline (I–II segment) usually represents rebreathing CO_2. This elevation usually is accompanied by gradual increases in the $EtCO_2$ value. Rebreathing CO_2 is common in circumstances of artificially produced increased dead space and hypoventilation. Precipitous rises in both baseline and $EtCO_2$ values usually indicate contamination of the sensor.

Expiratory Upstroke In the normal waveform, the rising phase (II–III segment) is usually steep. When this segment becomes less steep, CO_2 delivery is delayed from the lungs to the sampling site. The causes of this delay can be physiologic or mechanical and include bronchospasm, obstruction of the upper airway, or obstruction (or kinking) of an endotracheal tube (ETT).

Expiratory Plateau The plateau of the waveform, which represents the remainder of expiration (III-IV segment), should be nearly horizontal. The end of the plateau represents the $EtCO_2$ value. Upward slanting of the expiratory plateau occurs when there is uneven emptying of the alveoli. Similar to the diminished slope of the Expiratory Upstroke, this

pattern can occur in asthma, chronic obstructive pulmonary disease (COPD), partial upper-airway obstruction, or partial mechanical obstruction such as a partially kinked ETT.

Inspiratory Downstroke The fall to baseline (IV-V segment) is a nearly vertical drop. This slope can be prolonged and can blend with the expiratory plateau in cases of leakage in the exhale portion of the breathing circuit. The peak $EtCO_2$ value (IV) is often not reached. Relying on the numeric end-tidal value without observing the breathing waveform may obscure the presence of a leak.

EtCO2 Monitoring Procedure

When activated, the $EtCO_2$ monitor draws power from the defibrillator. The LIFEPAK 15 monitor/defibrillator activates the $EtCO_2$ monitor when it senses the attachment of the FilterLine set. Initialization, self-test, and warm up of the $EtCO_2$ monitor is typically less than 30 seconds, but may take up to two-and-one-half minutes.

CAUTION

Possible Equipment Damage

Failure to replace a broken or missing CO_2 port door may allow water or particulate contamination of the internal CO_2 sensor. This may cause the CO_2 module to malfunction.

To monitor $EtCO_2$:

1. Press **ON**.
2. Select the appropriate $EtCO_2$ accessory for the patient.
3. Open the CO_2 port door and insert the FilterLine connector; turn connector clockwise until tight.
4. Verify that the CO_2 area is displayed. The $EtCO_2$ monitor performs the autozero routine as part of the initialization self-test.
5. Display CO_2 waveform in Channel 2 or 3.
6. Connect the CO_2 FilterLine set to the patient.
7. Confirm that the $EtCO_2$ value and waveform are displayed. The monitor automatically selects the scale for the best visualization of the waveform. You can change the scale, if desired, as described in the next section.

Note: It is possible for the FilterLine set to become loose at the device connection and still have an $EtCO_2$ value and CO_2 waveform, but they may be erroneously low. Make sure the FilterLine connection is firmly seated and tight.

Note: The capnography module performs self-maintenance within the first hour of monitoring and once an hour during continuous monitoring. The self-maintenance includes "auto-zeroing." Self-maintenance is also initiated when the surrounding temperature changes 8°C (14.4°F) or more, or the surrounding pressure changes greater than 20 mmHg. The CO_2 module detects this change and attempts to purge the tubing. To clear the **CO2 FILTERLINE PURGING** or **CO2 FILTERLINE BLOCKAGE** messages, remove the FilterLine tubing and reconnect it to the monitor.

CO2 Display

The following scales are available to display the CO_2 waveform. The LIFEPAK 15 monitor/defibrillator automatically selects the scale based on the measured $EtCO_2$ value. To change the CO_2 scale, outline and select the CO_2 area using the **SPEED DIAL** and then select the desired scale from the scale menu.

- Autoscale (default)
- 0–20 mmHg (0–4 Vol% or kPa)
- 0–50 mmHg (0–7 Vol% or kPa)
- 0–100 mmHg (0–14 Vol% or kPa)

The CO_2 waveform is compressed (displayed at 12.5 mm/sec sweep speed) to provide more data in the 4-second screen. There is a slight delay between when the breath occurs and when it appears on the screen. Printouts are at 25 mm/sec. Continuous print may be changed to 12.5 mm/sec, if desired.

The monitor shows the maximum CO_2 value over the last 20 seconds. If the $EtCO_2$ values are increasing, the change can be seen with every breath. However, if the values are continually decreasing, it will take up to 20 seconds for a lower numerical value to be displayed. Because of this, the $EtCO_2$ value may not always match the level of the CO_2 waveform.

CO2 Alarms

The $EtCO_2$ monitor provides:

- $EtCO_2$ high and low alarms controlled by activating **ALARMS** (see Alarms (on page 39))
- $FiCO_2$ (fractional inspired CO_2) alarm (automatic and not adjustable)
- No breath alarm (automatic and not adjustable)

The no breath alarm occurs when the CO_2 values are below 8 mmHg (1.0% or kPa) for 30 seconds. The message **ALARM NO BREATH** appears in the message area along with the time since the last detected CO_2 value of at least 8 mmHg (1.0% or kPa).

WARNING

Possible Inaccurate Patient Assessment

Do not use the EtCO2 monitor for diagnostic purposes. The EtCO2 monitor is intended only as an adjunct in patient assessment and is not to be used as a diagnostic apnea monitor. Do not solely rely on respiratory monitoring for detecting cessation of breathing. Follow hospital guidelines and best clinical practices, including monitoring additional parameters that indicate the patient's oxygenation status.

Note: Some software versions display Alarm Apnea instead of Alarm No Breath. The Alarm Apnea and Alarm No Breath messages are equivalent.

CO2 Detection

A CO_2 waveform appears when any CO_2 is detected, but CO_2 must be greater than 3.5 mmHg for a numerical value to be displayed. However, the CO_2 module will not recognize a breath until the CO_2 is at least 8 mmHg (1.0% or kPa). Valid breaths must be detected in order for the no breath alarm to function and to count the respiratory rate (RR). The RR represents an average over the last eight breaths.

When CO_2 is not detected in the cardiac arrest situation—for example, the CO_2 waveform is either dashes "---" or a flat solid line at or near zero—several factors must be quickly evaluated. Assess for the following causes:

Equipment issues

- Disconnection of the FilterLine set from the endotracheal tube (ETT)
- System is purging due to fluid in the patient/sensor connection from ET administration of medications
- System is auto-zeroing
- Shock was delivered and system is resetting
- Loose FilterLine set to device connection

Loss of airway function

- Improper placement of ETT
- ETT dislodgment
- ETT obstruction

Physiological factors

- Apneic condition
- Massive pulmonary embolism
- Loss of perfusion
- Inadequate CPR
- Exsanguination

Cleaning

Accessories for CO_2 monitoring are disposable and are intended for single-patient use. Do not clean and reuse a FilterLine set. Dispose of the contaminated waste according to local protocols.

For information about cleaning the device, see Cleaning the Device (on page 214).

Troubleshooting Tips

Table 15 Troubleshooting Tips for EtCO2 Monitoring

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
ALARM NO BREATH message appears and waveform is solid line at or near zero **Note:** Some software versions display Alarm Apnea instead of Alarm No Breath. The Alarm Apnea and Alarm No Breath messages are equivalent.	No breath has been detected for 30 seconds since last valid breath	• Check the patient.
	FilterLine connection to device is loose	• Twist FilterLine connector clockwise until tight and firmly seated.
	FilterLine set is disconnected from patient or ETT	• Check ventilation equipment (if used) for leaks or disconnected tubing.
CO2 FILTERLINE OFF message appears and waveform is "---"	FilterLine set disconnected or not securely connected to device	• Connect FilterLine set to device port. • Twist FilterLine connector clockwise until tight and firmly seated.
CO2 FILTERLINE PURGING message appears and waveform is "---"	FilterLine set is kinked or clogged with fluid, or rapid altitude change occurred	• Disconnect and then reconnect the FilterLine set. • Twist FilterLine connector clockwise until tight and firmly seated.
CO2 FILTERLINE BLOCKAGE message appears and waveform is "---"	The message appears after 30 seconds of unsuccessful purging	• Disconnect and then reconnect the FilterLine set. • Change the FilterLine set.
	FilterLine set is kinked or clogged	• Twist FilterLine connector clockwise until tight and firmly seated..
CO2 INITIALIZING message appears and waveform is "---"	FilterLine set connected to device while module is initializing	• None.
	Defibrillation shock delivered	• None. System resets automatically within 20 seconds.
AUTO ZEROING message appears and waveform is "---"	Module is performing self-maintenance	• None.
	Defibrillation shock delivered	• None. System resets automatically within 20 seconds.
$EtCO_2$ values are erratic	FilterLine connection to device is loose	• Twist FilterLine connector clockwise until tight and firmly seated.
	A leak in the FilterLine set	• Check for connection leaks and line leaks to patient, and correct, if necessary.
	A mechanically ventilated patient breathes spontaneously or patient is talking	• No action required.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
$EtCO_2$ values are consistently higher than expected	Physiological cause such as COPD	• None.
	Inadequate ventilation	• Check ventilator, increase ventilatory rate/bagging.
	Patient splinting during breathing	• Supporting measures such as pain relief.
	Improper calibration	• Contact qualified service personnel.
$EtCO_2$ values are consistently lower than expected	FilterLine connection to device is loose	• Twist FilterLine connector clockwise until tight and firmly seated..
	Physiological cause	• See Physiological factors in CO2 Detection.
	Hyperventilation	• Check ventilator, decrease ventilatory rate/bagging.
	Improper calibration	• Contact qualified service personnel.
CO_2 waveform stays elevated for several seconds	Expiration is prolonged due to bagging technique	• Release bag reservoir completely with expiration. Observe that elevated baseline returns to normal level.
Sudden extreme increase in $EtCO_2$	Fluid has entered CO_2 module	• Contact qualified service personnel.
XXX appears instead of $EtCO_2$ value	CO_2 module malfunction	• Turn device off and then on again. • If problem persists, contact qualified service personnel.
There is no $EtCO_2$ value and the CO_2 waveform is flat	Measured CO_2 is less than 3.5 mmHg	• See CO2 Detection.

Note: To decrease the likelihood of the FilterLine connection coming loose during use, hand-straighten the tubing after removal from the package before connecting to patient or device.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Monitoring Invasive Pressure

Intended Use

The LIFEPAK 15 invasive pressure (IP) monitor is intended for measuring arterial, venous, intracranial, and other physiological pressures using an invasive catheter system with a compatible transducer.

The IP monitor is a tool to be used in addition to patient assessment. Care should be taken to assess the patient at all times; do not rely solely on the IP monitor.

Indications

Invasive pressure monitoring is indicated for use in patients who require continuous monitoring of physiological pressures in order to rapidly assess changes in the patient's condition or response to therapy. It may also be used to aid in medical diagnosis.

Contraindications

None known.

IP Monitoring Warnings

WARNING

Possible Inaccurate Pressure Readings, Air Embolism, Blood Loss, or Loss of Sterility

Before use, carefully read these operating instructions, and the transducer and infusion set instructions for use and precautionary information.

WARNING

Inaccurate Pressure Readings

Pressure readings should correlate with the patient's clinical presentation. If readings do not correlate, verify that the zeroing stopcock is positioned at the patient's zero reference, rezero the transducer, and/or check the transducer with a known or calibrated pressure. Manually check cuff blood pressure.

WARNING

Inaccurate Pressure Readings

Changing the patient's position changes the zero reference level. Relevel the transducer's zeroing stopcock any time the patient's position is changed.

WARNING

Possible Patient Injury or Equipment Damage

Use only IP transducers that are specified for use with this device. Protection of the device against defibrillator discharge is dependent on the use of IP transducers that are specified by Physio-Control.

WARNING

Possible Lethal Arrhythmia

Ventricular fibrillation may be induced if the isoelectric barrier of the transducer is disrupted. The isoelectric barrier within the transducer may be disrupted if the transducer body is damaged. Do not use a transducer that is visibly damaged or leaking fluid.

WARNING

Increased Intracranial Pressure

Do not use a continuous flush device with transducers used for intracranial monitoring.

IP Monitoring

Two channels are available for invasive pressure monitoring, with default labels P1 and P2 and the user-selectable labels shown in the following table.

Table 16 IP Labels and Descriptions

LABEL	DESCRIPTION
ART	Arterial Pressure
PA	Pulmonary Artery Pressure
CVP	Central Venous Pressure
ICP	Intracranial Pressure
LAP	Left Atrial Pressure

When the default labels P1 and P2 are used, the IP monitoring area displays systolic, diastolic, and mean pressures. When ICP, LAP, or CVP labels are used, the IP monitoring area displays mean pressure in large type. Systolic and diastolic pressures are not displayed.

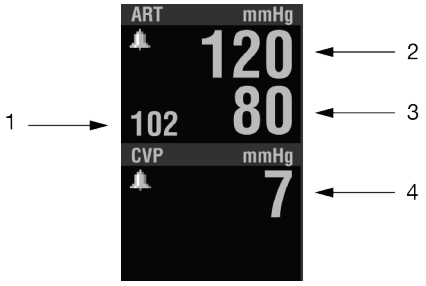

Figure 28 IP Labels

FIGURE LEGEND	
1	ART mean pressure
2	ART systolic pressure
3	ART diastolic pressure
4	CVP mean pressure

Because pressures can change in a short time, data should be checked regularly during vital sign monitoring.

How IP Monitoring Works

IP monitoring involves the conversion of fluid pressure into an electrical signal. The conversion is accomplished with a pressure transducer. The transducer is connected to a patient's indwelling pressure catheter using a special assembly of tubing, stopcocks, adapters, flush valves, and fluids, commonly known as a flush system. The transducer translates the pressure wave into an electrical signal. A well-functioning flush system is essential for obtaining undistorted waveforms and accurate information.

IP monitoring is available on either Channel 2 or 3. The IP monitor is compatible with industry standard (IEC 60601-2-34) pressure transducers with 5μV/V/mmHg sensitivity. The transducer must provide defibrillation protection of at least 360 joules. The following IP transducers may be used with the LIFEPAK 15 monitor/defibrillator.

MANUFACTURER	DESCRIPTION
Utah Medical	Deltran® Disposable Pressure Transducer
Edwards Lifesciences	TruWave® Disposable Pressure Transducer
ICU Medical	Transpac® IV Disposable Pressure Transducer

An invasive pressure adapter cable is used to connect the transducer to the monitor. The IP connector is a 6-pin type 3102A-14S-6S connector. The connector pinout has the following configuration, counterclockwise from 12 o'clock, viewed from the front of the LIFEPAK 15 monitor/defibrillator.

A pin = - signal	B pin = + excitation	C pin = + signal
D pin = - excitation	E pin = shield	F pin = unlabeled

IP Monitoring Procedure

Prepare a flush system according to local protocols. Position the transducer at the patient's phlebostatic axis (zero-reference level).

To avoid offset errors, a zero reference must be established before any meaningful pressure readings are obtained. This is done by opening the transducer stopcock to air so that atmospheric pressure becomes the reference.

The P1 or P2 connector and Channel 2 or 3 can be used for IP monitoring. P1 and Channel 2 are used in these instructions.

To monitor IP:

1. Prepare the transducer system according to the operating instructions provided with the transducer and your local protocol.
2. Press **ON**.
3. Connect the IP cable to the transducer and to the P1 port on the monitor.
4. Use the default label **P1** or select **ART**, **PA**, **CVP**, **ICP**, or **LAP**. To change the label, select the P1 area. From the menu, select **P1**. Select a label from the list.
5. Use the **SPEED DIAL** to outline and select **CHANNEL 2** on the Home Screen. From the Channel 2 menu, select **WAVEFORM** and then select the label that is desired for the waveform.
6. Open the transducer's stopcock to air to zero the transducer and remove stopcock cap. Select the **P1** area. Select **ZERO** from the menu. The message **P1 ZEROED** appears when zeroing is complete and the pressure values are displayed as zeros.
7. Close the stopcock to air. The patient's pressure waveform should be displayed. A scale is automatically selected to display the pressure. Confirm that pressure amplitude correlates with the digital readout.

   Note: If you place a cap on an open port before you close the port to air, an error message may appear. You will be required to zero the transducer again.

If pressure alarms are desired, set the alarms after you obtain a satisfactory waveform. Error or alarm messages appear in the message area at the bottom of the screen. For more information, see Alarms (on page 39).

IP Scale Options

The IP monitor can display pressures from -30 to 300 mmHg. After zeroing the transducer pressure, the monitor automatically selects one of the following scales based on the patient's measured pressure:

- -30 to 30 mmHg
- 0 to 60 mmHg
- 0 to 120 mmHg
- 0 to 150 mmHg
- 0 to 180 mmHg
- 0 to 300 mmHg

You can also manually select one of these scales or autoscale to readjust the waveform within the channel.

To change the scale:

1. Use the **SPEED DIAL** to outline and select the P1 area. The P1 menu appears.
2. From the menu, select **SCALE** and then choose a scale from the list.

Cleaning and Inspection

IP transducers are disposable and are intended for single-patient use. Do not clean and reuse transducers. Dispose of the contaminated waste according to local protocols.

IP cables are reusable and may be cleaned. To clean the reusable IP cable:

1. Disconnect the cable from the monitor.
2. Inspect the cable for damage or wear.
3. Use a clean, soft cloth dampened with a germicidal solution to wipe clean.
4. Allow to dry before reconnecting the cable to the monitor.

For information about cleaning the device, see Cleaning the Device (on page 214).

Troubleshooting Tips

The error messages in the following table use the text **PX** to represent any of the labels for invasive pressure, including P1, P2, and the user-selectable labels ART, PA, CVP, ICP, and LAP.

Table 17 Troubleshooting Tips for IP Monitoring

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Invasive pressure value is blank	No transducer is connected	• Connect the transducer to the cable, and the cable to the monitor.
No scale appears next to the waveform	The zero reference has not been established	• Zero the transducer.
PX NOT ZEROED message appears	The zero reference has not been established	• Zero the transducer.
PX ZERO FAILED message appears	An unsuccessful attempt has been made to set a zero reference value	• Make sure that the transducer is open to air and repeat the attempt to zero.
Dampened waveform	Loose connection	• Check the entire system for leaks. Tighten all connections. Replace any defective stopcocks.
	Tubing too long or too compliant	• Use short, stiff tubing with large diameter.
	Thrombus formation, air bubbles, or blood left in catheter after blood draw	• Use syringe to draw back air or particles in catheter, and then flush system.
	Kinked catheter, catheter tip against vessel wall, arterial spasm	• Reposition catheter. Anchor catheter to skin at insertion site.
Resonating waveform	Tubing too long	• Use short, stiff tubing with a large diameter.
No waveform. No pressure reading.	Transducer closed to patient	• Check patient. Check stopcock positions and monitor setup.
	Defibrillator shock just delivered	• None.
Invasive BP lower than cuff BP	Transducer level higher than the heart	• Reposition transducer to correct height.
	Loose connection	• Tighten all connections.
	Thrombus formation, air bubbles, or blood in catheter, kinking, or arteriospasm	• Use syringe to draw back air or particles in catheter, and then flush system.
	Improper zero reference	• Open stopcock to air and rezero transducer.
	Defective transducer	• Replace transducer.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Invasive BP higher than cuff BP	Transducer level lower than the heart	• Reposition transducer to correct height.
	Improper zero reference	• Rezero.
	Catheter whip artifact	• Change catheter tip position. • Use mean pressure values (mean pressure is less affected by extremes and will therefore reflect a more accurate reading).
Inability to flush system	Pressure bag leaking	• Keep positive pressure in flush bag at all times. • Remove dressing to check for external kinking.
	Partially kinked or obstructed catheter	• Replace catheter, if clotted.
Inability to zero system	Stopcock not open to air or defective	• Check stopcock position. Replace any defective stopcocks.
	Defective transducer	• Replace transducer.
System has been zeroed but continues to indicate zero reference required	Steps to zero system performed in wrong order	• Close stopcock to air before placing cap on port.
Catheter whip (fling) artifact Pulmonary Artery	Excessive catheter movement. Motion of the catheter tip within the vessel accelerates fluid movement in the catheter, causing artifact to be superimposed on the pressure wave, increasing readings by 10–20 mmHg.	• Change catheter tip position. • Use mean pressure values (mean pressure is less affected by extremes and therefore reflects a more accurate reading).
Permanent Pulmonary Wedge Pressure (PWP) tracing (wedge tracing persists after balloon deflation)	Catheter tip partially clotted	• Use syringe to aspirate, and then flush.
	Catheter migrated distally in pulmonary artery	• Observe PA waveform before balloon inflation. Flattening of the waveform could indicate wedging with balloon deflated. Turn patient side to side in Trendelenburg position, or stimulate cough in attempt to dislodge catheter. • Retract catheter with balloon deflated until proper position is obtained. • Minimize chances of catheter advancement by firmly anchoring catheter at insertion site.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Failure to obtain PWP	Malposition of catheter tip	• Reposition catheter.
	Leak in balloon. Ruptured balloon.	• Replace catheter.
Progressive elevation of PWP	Overinflation	• Inflate balloon in small increments while watching scope for confirmation of wedging. Use only enough air to wedge. Do not use more than the volume recommended by the manufacturer.
	Catheter migrated distally in pulmonary artery	• Reposition catheter.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Monitoring Continuous Temperature

Intended Use

The LIFEPAK 15 temperature monitor is intended for continuous monitoring of body temperature.

Indications

Temperature monitoring is indicated for use in patients who require continuous monitoring of body temperature.

Contraindications

None known.

Temperature Monitoring Warnings

WARNING	**Possible Inaccurate Temperature Readings** Using temperature probes or cables that are not approved by Physio-Control may cause improper temperature monitoring performance and invalidate safety agency certifications. Use only probes and cables that are specified in these operating instructions.
WARNING	**Possible Inaccurate Temperature Readings** The Measurement Specialties 4400 Series temperature probes must be used with the adapter cable that is listed on the Physio-Control website. Using other manufacturers' connector cables may cause the device to perform improperly.
WARNING	**Infection Hazard** The temperature probe is disposable and intended for single-patient use. Do not clean and reuse temperature probes. Dispose of contaminated waste according to local protocols.
WARNING	**Possible Strangulation** Carefully route the temperature probe cable to reduce the possibility of patient entanglement or strangulation.

How Temperature Monitoring Works

The temperature probe contains a thermistor which converts temperature to electrical resistance. The LIFEPAK 15 monitor/defibrillator measures the resistance and converts it into degrees Celsius or Fahrenheit. The probe accuracy is ±0.1°C.

Note: Celsius or Fahrenheit reporting may be selected in Setup mode. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

The temperature area of the home screen is blank until a temperature value between 24.8° and 45.2°C (76.6° and 113.4°F) is detected. When a temperature value in this range is detected, the value is automatically displayed.

After a valid body temperature between 31° and 41°C (87.8° and105.8°F) is detected, the device monitors the temperature value for possible sensor dislodgement or disconnection. If the device detects a temperature outside of the valid body temperature range, the **TEMP: CHECK SENSOR** message appears. The following table shows the screen messages and temperature values that are displayed for each temperature range.

Table 18 Temperature Values and Messages

TEMPERATURE	MESSAGE	TEMP VALUE DISPLAY
Less than 24.8°C (76.6°F)	**TEMP: CHECK SENSOR**	Dashes (---)
24.8° to 30.9°C (76.6° to 87.6°F)	**TEMP: CHECK SENSOR**	Current temp value
31° to 41°C (87.8° to 105.8°F)	No message (valid range)	Current temp value
41.1° to 45.2°C (106° to 113.4°F)	**TEMP: CHECK SENSOR**	Current temp value
Greater than 45.2°C (113.4°F)	**TEMP: CHECK SENSOR**	Dashes (---)
Temperature probe disconnected	**TEMP: CHECK SENSOR**	Dashes (---)

The temperature monitor performs an accuracy check each time it is turned on, and periodically while monitoring temperature. If the temperature accuracy check fails, the message **TEMP: ACCURACY OUTSIDE LIMITS** is displayed, and the temperature value is "XXX".

Temperature Monitoring Equipment

The following accessories are required for temperature monitoring:

- Temperature adapter cable
- Measurement Specialties 4400 Series disposable temperature probe. You can use the following probe types with the LIFEPAK 15 monitor/defibrillator:
  - Esophageal/rectal
  - Foley catheter
  - Skin (Note: Measurement Specialties skin temperature probe 4499HD is approved for use with the LIFEPAK 15 monitor/defibrillator. Do not use Measurement Specialties part number 4499.)

For a list of the accessories that are intended for use with the LIFEPAK 15 monitor/defibrillator, contact your Physio-Control representative or see the LIFEPAK 15 Monitor/Defibrillator Accessory Catalog at www.physio-control.com. Carefully read the Instructions for Use that are

provided with the probes and connector cable for sensor placement instructions, use instructions, warnings, cautions, and specifications.

IMPORTANT! The Instructions for Use that are provided with the Measurement Specialties temperature probes refer to a connector cable that is not compatible with the LIFEPAK 15 monitor/defibrillator. Only use the adapter cable that is approved for use with the LIFEPAK 15 monitor/defibrillator.

Temperature Monitoring Procedure

1. Connect the temperature adapter cable to the TEMP port on the monitor/defibrillator.
2. Connect the temperature probe to the temperature adapter cable.
3. Attach the temperature probe to the patient as described in the temperature probe Instructions for Use.

   Notes:

   - The temperature area on the display is not activated until the monitor/defibrillator detects a temperature between 24.8° and 45.2°C (76.6° and 113.4°F). To manually activate the temperature monitoring area, use the **SPEED DIAL** to outline and select the temperature area on the Home Screen. From the menu, select **ON**.
   - The temperature probe may require 3 minutes to equilibrate after placement on the patient monitoring site.
4. Confirm that the temperature reading appears and is stable.
5. Use the default label **TEMP** or select one of the user-selectable labels shown in the following table. To change the label, select the **TEMP** area. From the menu, select **TEMP**. Select a label from the list.

Table 19 TEMP Labels and Descriptions

LABEL	DESCRIPTION
T-esoph	Esophageal Temperature
T-naso	Nasopharangeal Temperature
T-bladder	Bladder Temperature
T-rectal	Rectal Temperature
T-skin	Skin Temperature

Cleaning and Disposal

Temperature probes are disposable and intended for single-patient use. Do not clean and reuse temperature probes. Dispose of the contaminated waste according to local protocols.

Temperature adapter cables are reusable and may be cleaned. To clean the reusable temperature cable:

1. Disconnect the cable from the monitor.
2. Use a clean, soft cloth dampened with a germicidal solution to wipe clean. See Cleaning the Device (on page 214) for a list of acceptable cleaning solutions.
3. Allow to dry before reconnecting the cable to the monitor.

For information about cleaning the device, see Cleaning the Device (on page 214).

Troubleshooting Tips

Table 20 Troubleshooting Tips for Temperature Monitoring

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
CHECK SENSOR message appears and value is "---"	Temperature value is out of range	• Check that probe is positioned properly.
	Temperature probe is dislodged or positioned incorrectly	• Check that probe is positioned properly.
	Probe not connected to cable, or cable not connected to device	• Check that probe and cable are connected properly.
	Damaged cable or probe	• Replace damaged cable or probe.
CHECK SENSOR message appears while value is displayed	Temperature probe is dislodged and value is below 31°C (87.8°F)	• Check that probe is positioned properly.
	Temperature probe is dislodged and value is above 41.0°C (105.8°F)	• Check that probe is positioned properly.
TEMP: ACCURACY OUTSIDE LIMITS message appears and value is **XXX**	Temperature accuracy check failed	• Turn device off and then on again. • If problem persists, contact qualified service personnel.
XXX appears in place of temperature reading	Temperature module is not calibrated	• Turn device off and then on again. • If problem persists, contact qualified service personnel.
	Temperature module failed	• Turn device off and then on again. • If problem persists, contact qualified service personnel.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Temperature area of home screen is blank	Initial temperature not automatically displayed until device detects temperature between 24.8° and 45.2°C (76.6° and 113.4°F)	• Allow up to 3 minutes for probe to equilibrate. • Check that probe is positioned properly.
	Temperature probe not detected by device	• Check connections between probe, adapter cable, and device. • Check that the sensor is approved for use with the LIFEPAK 15 monitor/defibrillator. • Contact qualified service personnel.

Vital Sign and ST Segment Trends

Intended Use

The trends feature of the LIFEPAK 15 monitor/defibrillator provides the ability to graphically display and document the patient's vital signs (VS) and ST segment measurements for up to eight hours. VS trending is intended for use with any patient who requires continuous monitoring of vital signs over an extended period of time to identify changes in patient condition and to document patient response to therapy. ST trending is intended for use with patients suspected of having acute ischemic events, such as unstable angina, and for patients during treatment of an acute ischemic event. ST segment measurement is initiated using a 12-lead ECG and is derived using the University of Glasgow 12-Lead ECG Analysis Program.

VS and ST Trends Warning

WARNING

Inaccurate Interpretation of Patient Status

Vital sign and ST graphs are tools to be used in addition to patient assessment. Artifact and noise may produce spurious data. Ensure artifact-free monitoring as much as possible and assess the patient frequently to confirm the appropriateness of monitor data.

How VS Trends Work

Each active vital sign can be displayed graphically for time ranges of 30 minutes, and 1, 2, 4, and 8 hours. The vital signs are HR, SpO_2, SpCO, SpMet, CO_2, Temp, and RR; and systolic, diastolic, and mean pressures. Data is sampled every 30 seconds. If valid data is not available, a blank space is substituted on the graph. NIBP values are plotted only when an NIBP measurement is obtained. VS measurements are not averaged or filtered. No messages or alarms occur based on changes in VS measurements.

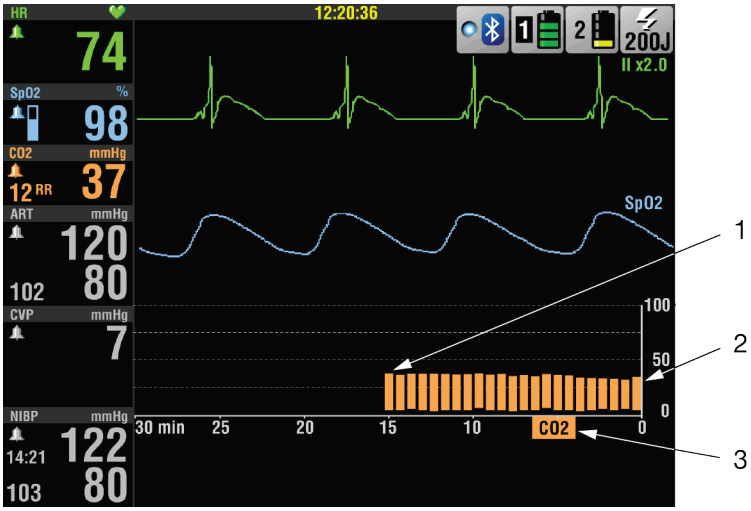

Figure 29 EtCO2 Trend Graph

FIGURE LEGEND	
1	First $EtCO_2$ measurement
2	Most recent $EtCO_2$ measurement
3	VS label

Figure 30 Pressure Trend Graph

FIGURE LEGEND	
1	Systole pressure
2	Diastolic pressure
3	VS label

How ST Trends Work

ST measurements can be displayed graphically for time ranges of 30 minutes, and 1, 2, 4, and 8 hours. ST trending is initiated by obtaining the patient's first 12-lead ECG. The ST J-point (STJ) is the part of the ST segment that is measured (see the following figure). The STJ measurement is plotted on the ST trend graph (see Figure, ST Trend Graph (on page 111)).

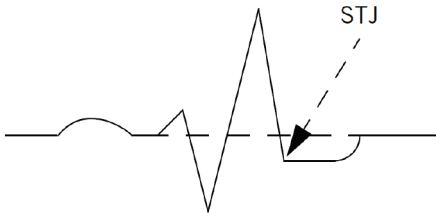

Figure 31 STJ Measurement

When all leads of the 12-lead ECG cable are attached to the patient, STJ measurements are obtained automatically every 30 seconds. If a lead is off, or the ECG data is too noisy, ST measurements are not obtained and the graph shows a blank for that time period. If an STJ measurement in any lead deviates from the initial measurement by 1 mm (0.1 mV) or more and the deviation persists for 2.5 minutes, the monitor automatically prints another 12-lead ECG. Manual requests for 12-lead ECGs do not affect ST trending or automatic printing.

Interpreting the ST Trend Graph

Using the first 12-lead ECG, the monitor identifies the presence of any STJ displacement, either negative or positive, and the lead that has the most STJ displacement. When **AUTO** is selected, the lead that has the most STJ displacement is shown on the graph. The STJ is measured every 30 seconds thereafter.

The following figure shows an example of an ST trend graph. The elapsed time goes from right to left across the screen. The most current STJ measurement is on the far right. Each time an STJ measurement is obtained, it is compared to the first STJ or baseline measurement. The bars represent the change in the STJ compared to the first measurement.

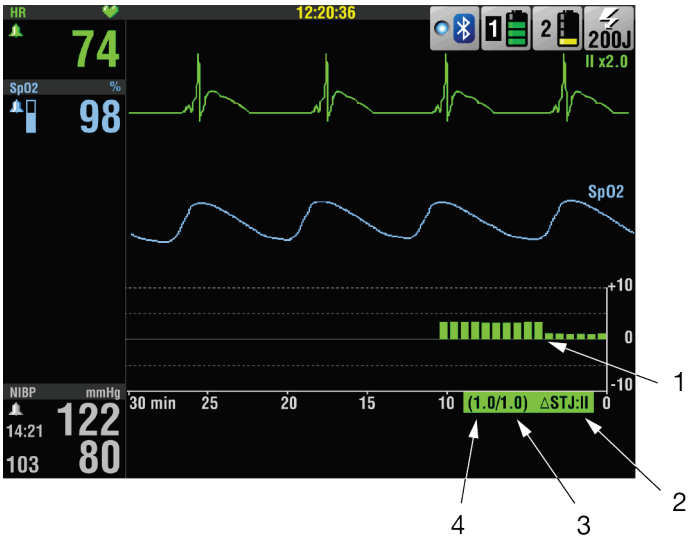

Figure 32 ST Trend Graph

FIGURE LEGEND	
1	Increase and then decrease in STJ
2	Lead
3	Change in STJ
4	Current STJ

This ST trend graph depicts the changes in STJ from a patient's first 12-lead ECG over 10 minutes of monitoring time. The patient's initial ECG showed no ST elevation in any lead. Then the patient developed 3 mm elevation in Lead II. This change in ST elevation is represented by the vertical bars and lasted approximately 5 minutes. (Each vertical bar represents a 30-second interval). After treatment was initiated, the ST decreased to the current STJ measurement of 1.0, but is still positive compared to the initial ECG.

The annotation (1.0/1.0) means that the current STJ measurement is elevated 1.0 mm and represents a change of 1.0 mm from the initial ECG. To confirm the value of the initial 12-lead ECG STJ measurement, subtract the STJ change from the current STJ measurement, for example, 1.0 - 1.0 = 0. You can display the ST graph of other leads.

Displaying and Printing Trend Graphs

The trend graph for any active vital sign or ST measurement can be displayed in Channel 2 or 3. The example in Figure, ST Trend Graph (on page 111), shows the trend graph in Channel 3. Only two trend graphs can be displayed at a time, but the device collects trend data on all active vital sign values.

To display trend graphs:

1. Rotate the **SPEED DIAL** to outline Channel 2 or 3, and then press the **SPEED DIAL** to select the channel. The Channel menu appears.
2. Select **WAVEFORM**, and then select **TREND**.
3. Select **SOURCE**, and then select the desired VS or ST.
4. The default setting for **SCALE** and **RANGE** is **AUTO**. When **AUTO** is used, the monitor automatically updates the scale so that all values are displayed and all data from Power On to the present time is visible. If you change scale or range, some data may not be visible because it is off scale or out of range.
5. Press **HOME SCREEN**. The graph for the selected VS or ST appears in the channel.

Note: To initiate ST trends, you must obtain a 12-lead ECG. The initial ECG provides the baseline ST measurement and initiates the ST trends feature.

To print trend graphs:

1. Press **OPTIONS**. The Options menu appears.
2. Rotate and then press the **SPEED DIAL** to select **PRINT**.
3. Select **REPORT**, and then select **TREND SUMMARY**.
4. Select **PRINT**. The Trend Summary Report prints graphs of all actively monitored VS and ST trends.

VS and ST Monitoring Considerations

For best results, consider the following:

- The ability of the patient to cooperate and be relaxed. Patients who are restless can produce noisy physiological signals. Noisy signals can result in inaccurately high or low data measurements.
- The quality of the physiological signal. If the ECG has significant artifact, the HR may have spurious measurements. Noisy 12-lead ECGs may need to be overridden, and ST measurements will not be obtained.
- The expected length of time the patient is to be monitored. VS graphs of the patient monitored for only a short time (for example, 15 minutes) may not provide enough data to identify gradual changes in patient condition.
- The patient ECG rhythm. Diagnosis of ST associated ischemia is inhibited by certain ECG findings such as left bundle branch block and ventricular pacing.

Chapter 5

Therapy

This chapter describes patient therapy.

General Therapy Warnings and Cautions 115
Therapy Electrode and Standard Paddle Placement 117
Automated External Defibrillation (AED) 119
Manual Defibrillation 133
Synchronized Cardioversion Procedure 139
Noninvasive Pacing 144
Pediatric ECG Monitoring and Manual Mode Therapy Procedures 150

General Therapy Warnings and Cautions

WARNING

Shock Hazard

The defibrillator delivers up to 360 joules of electrical energy. When discharging the defibrillator, do not touch the paddle electrode surfaces or disposable therapy electrodes.

WARNING

Shock Hazard

If a person is touching the patient, bed, or any conductive material in contact with the patient during defibrillation, the delivered energy may be partially discharged through that person. Clear everyone away from contact with the patient, bed, and other conductive material before discharging the defibrillator.

WARNING

Shock Hazard

Do not discharge the defibrillator into the open air. To remove an unwanted charge, change the energy selection, select disarm, or turn off the defibrillator.

WARNING

Possible Fire, Burns, and Ineffective Energy Delivery

Do not discharge standard paddles on top of therapy electrodes or ECG electrodes. Do not allow standard paddles (or therapy electrodes) to touch each other, ECG electrodes, lead wires, dressings, transdermal patches, etc. Such contact can cause electrical arcing and patient skin burns during defibrillation and may divert defibrillating energy away from the heart muscle.

WARNING

Possible Skin Burns and Ineffective Energy Delivery

Therapy electrodes that are dried out or damaged may cause electrical arcing and patient skin burns during defibrillation. Do not use therapy electrodes that have been removed from foil package for more than 24 hours. Do not use electrodes beyond Use By date. Check that electrode adhesive is intact and undamaged. Replace adult therapy electrodes after 50 shocks or pediatric therapy electrodes after 25 shocks.

©2018 Physio-Control, Inc.

WARNING

Possible Skin Burns

During defibrillation or pacing, air pockets between the skin and therapy electrodes may cause patient skin burns. Apply therapy electrodes so that entire electrode adheres to skin. Do not reposition the electrodes once applied. If the position must be changed, remove and replace with new electrodes.

WARNING

Possible Skin Burns

Electrodes and cables that are not specified for use with the LIFEPAK 15 defibrillator may malfunction and cause skin burns. Use only the electrodes and cables that are specified for use with the LIFEPAK 15 defibrillator.

WARNING

Possible Defibrillator Shutdown

The large current draw required for defibrillator charging may cause the defibrillator to reach a shutdown voltage level with no low battery indication. If the defibrillator shuts down without warning or if a replace battery warning occurs, immediately replace the battery with another fully charged battery.

WARNING

Possible Interference with Implanted Electrical Device

Defibrillation may cause implanted devices to malfunction. Place standard paddles or therapy electrodes away from implanted devices if possible. Check implanted device function after defibrillation.

CAUTION

Possible Equipment Damage

Prior to using this defibrillator, disconnect from the patient all equipment that is not defibrillator-protected.

Therapy Electrode and Standard Paddle Placement

The following paragraphs describe therapy electrode and standard paddle skin preparation and placement, including special placement situations.

Patient Skin Preparation

Prepare the patient's skin:

- Remove all clothing from the patient's chest.
- Remove excessive chest hair as much as possible. Avoid nicking or cutting the skin if using a shaver or razor. If possible, avoid placing electrodes over broken skin.
- Clean and dry the skin, if necessary. Remove any ointment on the patient's chest.
- Briskly wipe the skin dry with a towel or gauze. This mildly abrades the skin and removes oils, dirt, and other debris for better electrode adhesion to the skin.
- Do not use alcohol, tincture of benzoin, or antiperspirant to prep the skin.

Anterior-Lateral Placement

Anterior-lateral placement is used for ECG monitoring, defibrillation, synchronized cardioversion, and noninvasive pacing.

To perform anterior-lateral placement:

1. Place either the ♥ therapy electrode or **APEX** paddle lateral to the patient's left nipple in the midaxillary line, with the center of the electrode in the midaxillary line, if possible. See the following figure.

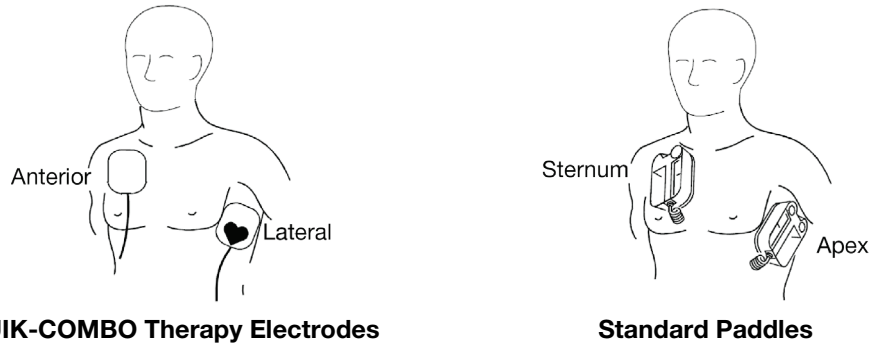

Figure 33 Anterior-Lateral Placement

2. Place the other therapy electrode or **STERNUM** paddle on the patient's upper right torso, lateral to the sternum and below the clavicle as shown in the preceding figure.

Anterior-Posterior Placement

Anterior-posterior is an alternative position for noninvasive pacing, manual defibrillation, and synchronized cardioversion, but not for ECG monitoring or AED mode. The ECG signal obtained through electrodes in this position is not a standard lead.

To perform anterior-posterior placement:

1. Place either the ♥ or + therapy electrode over the left precordium as shown in the following figure. The upper edge of the electrode should be below the nipple. Avoid placement over the nipple, the diaphragm, or the bony prominence of the sternum, if possible.
2. Place the other electrode behind the heart in the infrascapular area as shown in the following figure. For patient comfort, place the cable connection away from the spine. Do not place the electrode over the bony prominences of the spine or scapula.

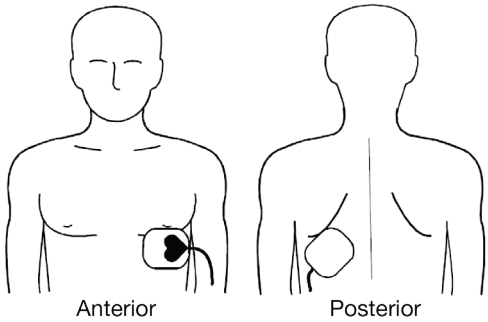

Figure 34 Anterior-Posterior Placement

Special Situations for Electrode or Paddle Placement

When placing therapy electrodes or standard paddles, be aware of the special requirements in the following possible situations.

Synchronized Cardioversion

Alternative placements for cardioversion of atrial fibrillation include a) place the ♥ therapy electrode over the left precordium and the other electrode on the patient's right posterior infrascapular area; or b) place the ♥ therapy electrode to the right of the sternum and the other electrode on the patient's posterior left infrascapular area.

Obese Patients or Patients with Large Breasts

Apply therapy electrodes or standard paddles to a flat area on the chest, if possible. If skin folds or breast tissue prevent good adhesion, it may be necessary to spread skin folds apart to create a flat surface.

Thin Patients

Follow the contour of the ribs and spaces when pressing therapy electrodes onto the torso. This action limits air spaces or gaps under the electrodes and promotes good skin contact.

Patients with Implanted Devices

Implanted devices such as cardiac defibrillators, pacemakers, or other devices may absorb energy from a LIFEPAK 15 defibrillator shock or be damaged by the shock. If possible, place therapy electrodes or standard paddles in the standard placements but away from the implanted device. Treat the patient like any other patient who requires care. If defibrillation is unsuccessful, it may be necessary to try alternate electrode placement (anterior-posterior).

Automated External Defibrillation (AED)

Intended Use

When used in AED mode, the LIFEPAK 15 monitor/defibrillator is a semiautomatic defibrillator that provides a prompted treatment protocol and ECG analysis using a patented Shock Advisory System™ (SAS). This software algorithm analyzes the patient's electrocardiographic (ECG) rhythm and indicates whether or not a shockable rhythm is detected. AED mode requires operator interaction in order to defibrillate the patient.

AED mode is intended for use by personnel who are authorized by a physician or medical director and have, at a minimum, the following skills and training:

- CPR training
- AED training equivalent to that recommended by the American Heart Association (AHA) or the European Resuscitation Council (ERC)
- Training in the use of the LIFEPAK 15 monitor/defibrillator in AED mode

Indications

AED mode is to be used only on patients in cardiopulmonary arrest. The patient must be unconscious, pulseless, and not breathing normally before using the defibrillator to analyze the patient's ECG rhythm. In AED mode, the LIFEPAK 15 monitor/defibrillator is not intended for use on pediatric patients less than eight years old.

Contraindications

None known.

AED Warnings

WARNING

Possible Misinterpretation of Data

Do not analyze in a moving vehicle. Motion artifact may affect the ECG signal resulting in an inappropriate **SHOCK** or **NO SHOCK ADVISED** message. Motion detection may delay analysis. Stop vehicle and stand clear of patient during analysis.

WARNING

Possible ECG Misinterpretation

Do not place therapy electrodes in the anterior-posterior position when operating this defibrillator in AED mode. A **SHOCK** or **NO SHOCK** decision may be inappropriately advised. The shock advisory algorithm requires the electrodes to be placed in the anterior-lateral (Lead II) position.

WARNING

Pediatric Patient Safety Risk

In AED mode, this defibrillator is not intended for use on children under eight years old.

AED Mode

The LIFEPAK 15 monitor/defibrillator is set up to operate in Manual mode when it is turned on (factory default setting). The device can be set up to power on in AED mode by changing the Setup Options. The factory default settings for AED mode are identified in Setup Options Factory Default Settings (on page 247). The energy settings and other AED setup options are consistent with the 2010 and 2015 American Heart Association (AHA) and European Resuscitation Council (ERC) guidelines. The setup options can be changed according to local medical protocols. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

The ECG is continuously displayed in AED mode; however, access to other functions such as **OPTIONS** is not allowed in AED mode. The CPR metronome automatically sounds during CPR times, but it can only be silenced and un-silenced in AED mode. For more information, see CPR Time and Metronome (on page 126).

You can exit AED mode's prompted protocol and enter Advisory Monitoring or Manual Mode. For more information about Advisory Monitoring, see Advisory Monitoring (on page 129). Access to Manual mode may be direct, require confirmation or a passcode, or not allowed, depending on how your defibrillator is set up. It is important to be thoroughly familiar with your monitor/defibrillator settings and operation before use.

AED Procedure

The following descriptions of AED prompts (voice and text) are based on the factory default settings for AED mode. The settings are consistent with the 2010 and 2015 American Heart Association (AHA) and European Resuscitation Council (ERC) guidelines. Changing the setup options may result in different AED behavior.

The CPR metronome automatically sounds during CPR times and can only be silenced and un-silenced.

To perform automated external defibrillation:

1. Verify that the patient is in cardiopulmonary arrest (unconscious, pulseless, not breathing normally).
2. Press **ON**.
3. Prepare the patient for electrode placement (see Patient Skin Preparation (on page 117)).

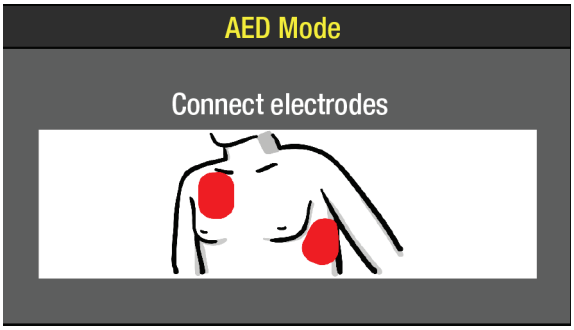

The **CONNECT ELECTRODES** prompts occur until the patient is connected to the AED. If possible, place the patient on a hard surface away from standing water.

4. Connect the therapy electrodes to the therapy cable and confirm cable connection to the defibrillator.
5. Apply the therapy electrodes to the patient's chest in the anterior-lateral position (see Anterior-Lateral Placement (on page 117)).

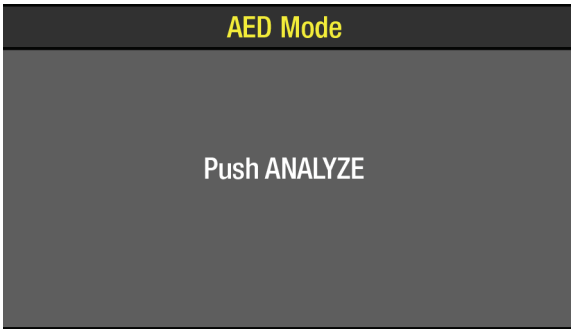

The **PUSH ANALYZE** prompts occur when the patient is properly connected to the AED.

6. Press **ANALYZE** to initiate the analysis. Stop CPR.

WARNING

Possible Misinterpretation of Data

Do not move the AED during analysis. Moving the AED during analysis may affect the ECG signal resulting in an inappropriate **SHOCK** or **NO SHOCK ADVISED** decision. Do not touch the patient or the AED during analysis.

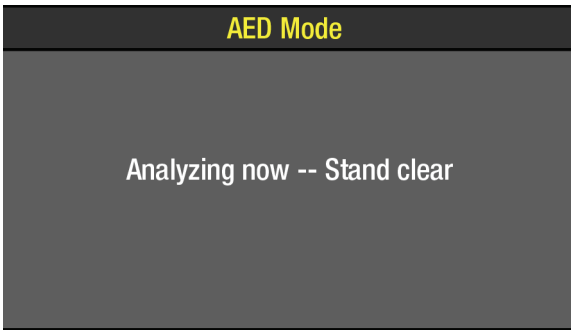

The **ANALYZING NOW—STAND CLEAR** prompts occur. The SAS analyzes the patient's ECG in approximately 6 to 9 seconds and advises either **SHOCK ADVISED** or **NO SHOCK ADVISED**.

7. Continue to follow the screen messages and voice prompts provided by the AED.

Shock Advised

The following prompts occur when shock is advised:

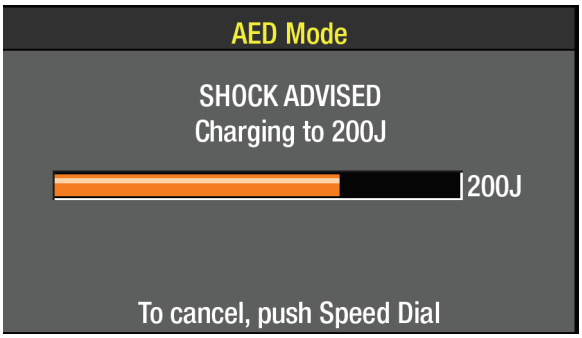

If the AED detects a shockable rhythm, the **SHOCK ADVISED** prompts occur. Charging to the joule setting for Shock #1 begins. A charging bar appears and a ramping tone sounds.

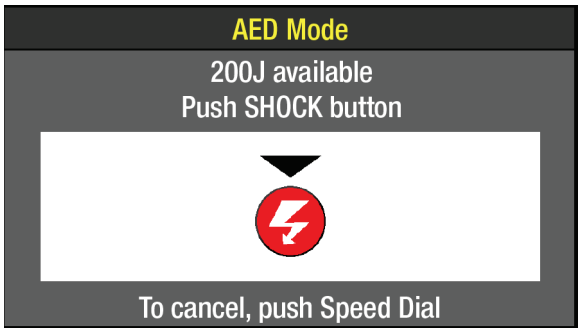

When charging is complete, the available energy is displayed.

The **STAND CLEAR, PUSH SHOCK BUTTON!** (⚡) message occurs, followed by a "Shock ready" tone.

Clear everyone away from touching the patient, bed, or any equipment that is connected to the patient.

Press ⚡ (shock) to deliver energy to the patient.

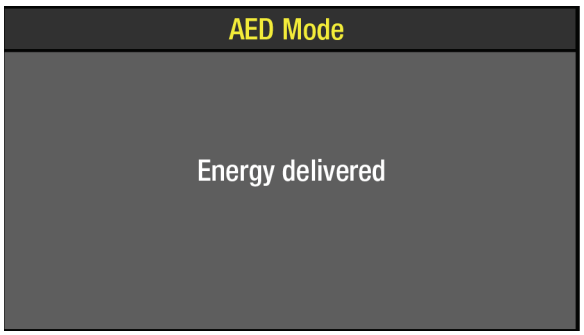

When the ⚡ (shock) button is pressed, the **ENERGY DELIVERED** message occurs indicating that the energy transfer was completed.

Note: If you do not press the ⚡ (shock) button within 60 seconds, or the **SPEED DIAL** is pressed to cancel charging, the defibrillator disarms and the **DISARMING** message appears.

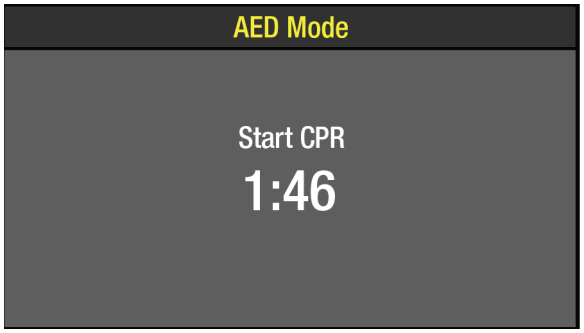

After a shock is delivered, the **START CPR** prompts occur. A countdown timer (min:sec format) continues for the duration specified in the **CPR TIME 1** setup option.

Note: The CPR metronome automatically provides audible compression “tocks” and ventilation prompts or tones only during CPR intervals at a ratio of 30:2. To silence the metronome, press **CPR**. To un-silence the metronome, press **CPR** again.

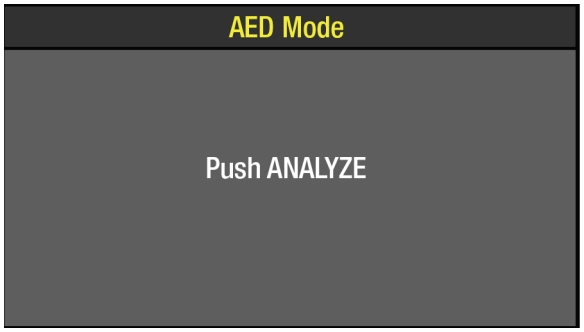

When the CPR countdown time ends, the **PUSH ANALYZE** prompts occur. These prompts repeat every 20 seconds until you press **ANALYZE**.

No Shock Advised

The following prompts occur if no shock is advised:

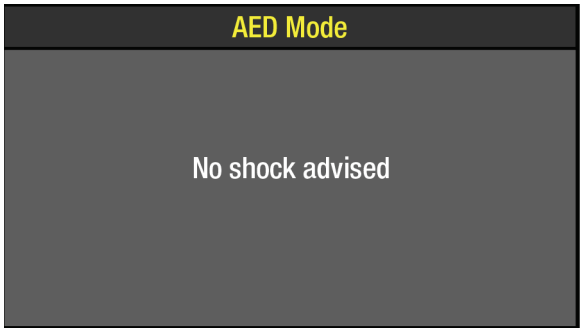

If the AED detects a nonshockable rhythm, the **NO SHOCK ADVISED** prompts occur. The defibrillator does not charge, and no shock can be delivered.

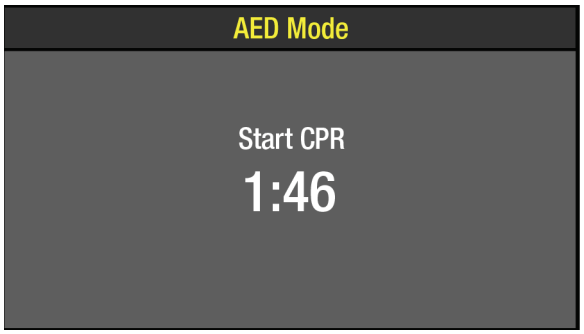

After **NO SHOCK ADVISED**, the **START CPR** prompts occur. A countdown timer (min:sec format) continues for the duration specified in the **CPR TIME 2** setup option.

Note: The CPR metronome automatically provides audible compression “tocks” and ventilation prompts or tones only during CPR intervals. To silence the metronome, press **CPR**. To un-silence the metronome, press **CPR** again.

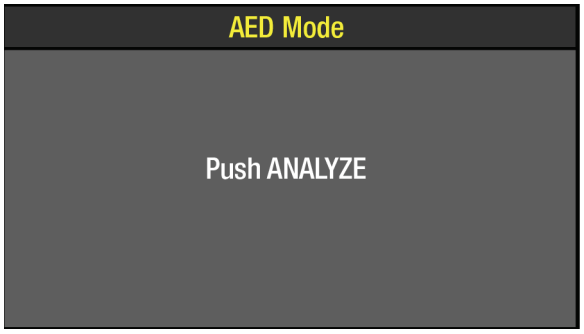

When the CPR countdown time ends, the **PUSH ANALYZE** prompts occur. These prompts repeat every 20 seconds until you press **ANALYZE**.

Subsequent analysis for **SHOCK ADVISED** and **NO SHOCK ADVISED** sequences are the same as described above. The energy level for Shock 2, 3, and greater depends on the **ENERGY PROTOCOL** setup and the analysis decision. When a **NO SHOCK ADVISED** decision follows a shock, the energy level does not increase for the next shock. When a **SHOCK ADVISED** decision follows a shock, the energy level increases for the next shock.

Motion Detected

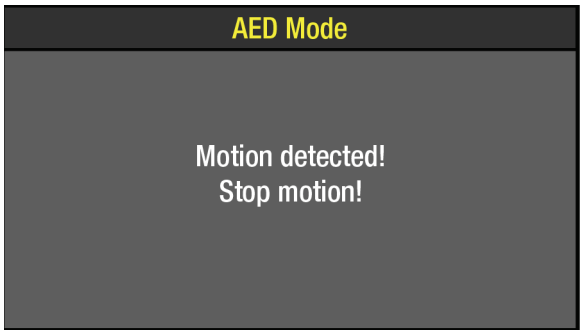

If the AED detects motion during the ECG analysis, the **MOTION DETECTED, STOP MOTION** prompts occur, followed by a warning tone.

Analysis is inhibited until the motion stops or for up to 10 seconds. After the motion ceases or 10 seconds have elapsed, analysis continues to completion even if motion is still present. For possible causes of motion detection and suggested solutions, see Troubleshooting Tips for AED Mode (on page 131).

Electrodes or Therapy Cable Off

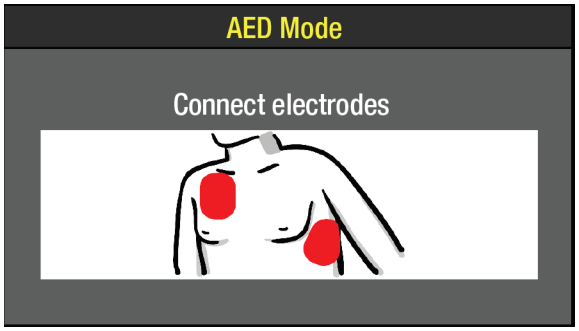

If therapy electrodes are not connected, the **CONNECT ELECTRODES** prompts occur until the patient is connected.

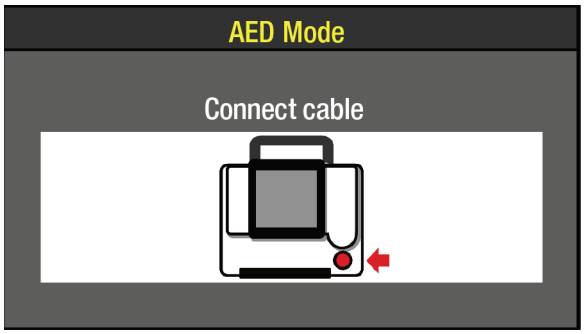

If the therapy cable is not connected to the defibrillator, the **CONNECT CABLE** message appears until the cable is connected.

Shock Counter

The shock counter (x) indicates how many shocks have been delivered to the patient. The shock counter resets to zero whenever the defibrillator is turned off for longer than 30 seconds.

CPR Time and Metronome

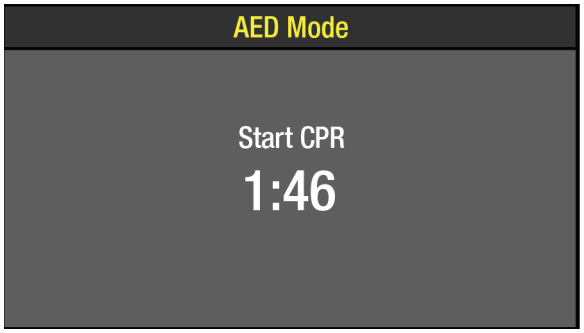

During use, CPR time shown on the countdown timer will vary slightly due to the metronome. When the CPR metronome is active during use, CPR times are adjusted to end CPR compression “tocks” on a compression cycle. As a result, the CPR countdown timer shows CPR times that approximate the seconds selected in Setup mode.

Even if the metronome is off or silent during CPR time, the CPR time displayed will vary slightly from the time set up in Setup mode. This is because the metronome keeps track of compression “tocks” and ventilation prompts in the background so that if the metronome is activated, the CPR time ends with compressions.

Switching from AED Mode to Manual Mode

When in AED mode, Manual mode may be accessed directly, require confirmation or a passcode, or not be accessible at all depending on how your defibrillator has been set up.

To switch from AED mode to Manual mode, press **ENERGY SELECT** one time. You can also press **PACER** or **CHARGE** to switch from AED mode to Manual mode.

Note: If the metronome is active (providing compression "tocks" and ventilation prompts) when you switch from AED mode to Manual mode, the metronome stays active upon entering Manual mode.

Depending on how manual access is set up, continue to Manual mode as follows:

- **AED/Direct**—No restrictions to Manual mode access.
- **AED/Confirmed**—A confirmation screen appears:

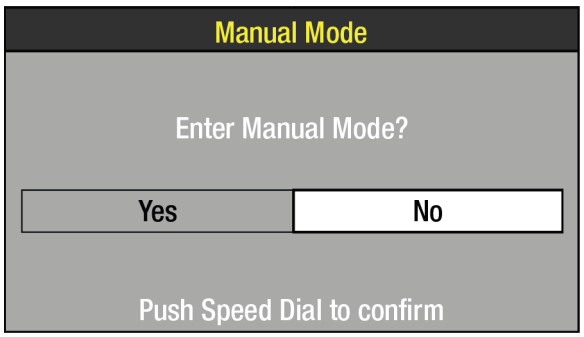

Select **YES** to enter Manual mode.

- **AED/Passcode**—A passcode screen appears:

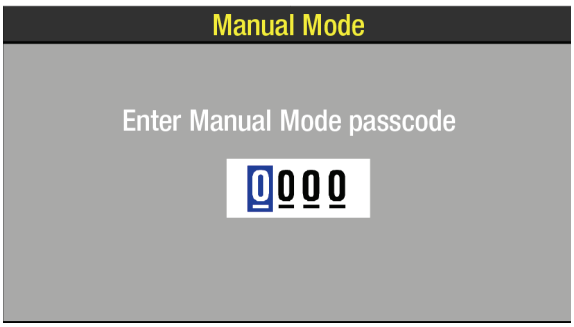

Rotate and press the **SPEED DIAL** to enter the passcode.

The code changes to dots to protect the passcode, and the defibrillator enters Manual mode.

You have three opportunities to enter the correct password. After an incorrect attempt, the message **INCORRECT--TRY AGAIN** appears. After three incorrect attempts, the message **ACCESS DENIED** appears, and the defibrillator returns to AED mode.

- **Restricted**—A **MANUAL MODE DISABLED** message appears, an alert tone sounds, and the LIFEPAK 15 monitor/defibrillator returns to AED mode.

It is important that all users of the LIFEPAK 15 monitor/defibrillator be thoroughly familiar with the monitor/defibrillator settings and operation before use.

Special AED Setup Options

The following descriptions of AED prompts (voice and text) explain special setup options.

Initial CPR - CPR First

When the **INITIAL CPR** option is set to **CPR FIRST**, you are prompted to **START CPR** immediately after the AED is turned on, and before an analysis.

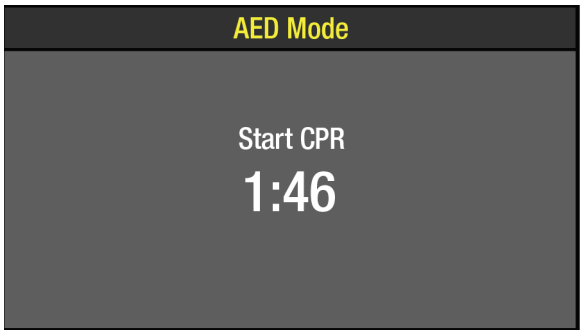

The **START CPR** prompts occur.

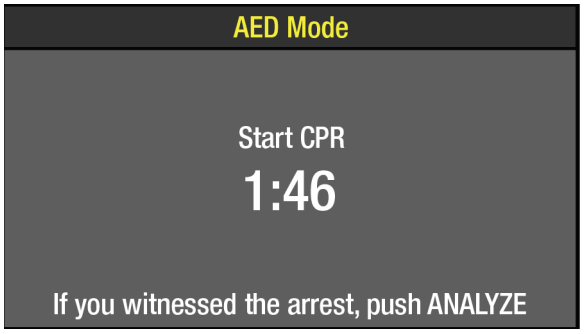

After 3 seconds, a countdown timer appears and the **IF YOU WITNESSED THE ARREST, PUSH ANALYZE** prompts occur. These prompts provide an opportunity to end the initial CPR early and proceed directly to analysis.

Note: The decision to end CPR early is based on your protocol and if you witnessed the arrest.

- If you did witness the arrest, press **ANALYZE**. The CPR period ends, and the **ANALYZING NOW, STAND CLEAR** prompts occur.
- If you did not witness the arrest, perform CPR and do not press **ANALYZE**. The Initial CPR countdown timer continues for the duration specified in the **INITIAL CPR TIME** setup option, for example, 90 seconds. When initial CPR time ends, the **PUSH ANALYZE** prompts occur.

Initial CPR - Analyze First

When the **INITIAL CPR** option is set to **ANALYZE FIRST**, you are prompted to perform analysis after the AED is turned on. CPR is prompted after the AED completes the analysis.

If the electrodes are not attached to the patient, the **CONNECT ELECTRODES** prompts occur before you are prompted to perform analysis.

No Shock Advised If the AED detects a nonshockable rhythm, the **START CPR** prompts occur.

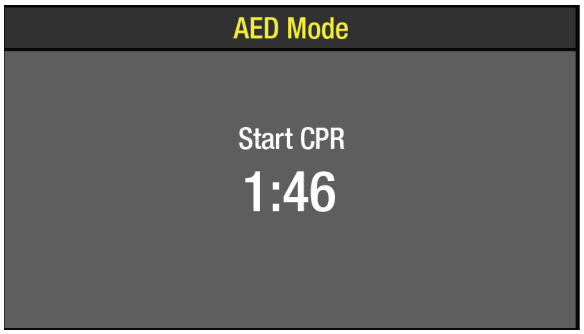

A countdown timer (min:sec format) continues for the duration specified in the **INITIAL CPR TIME** setup option.

When initial CPR time ends, the **NO SHOCK ADVISED** prompts occur, followed by **PUSH ANALYZE**.

Shock Advised If the AED detects a shockable rhythm, the **START CPR** prompts occur, followed by **IF YOU WITNESSED THE ARREST, PUSH ANALYZE**.

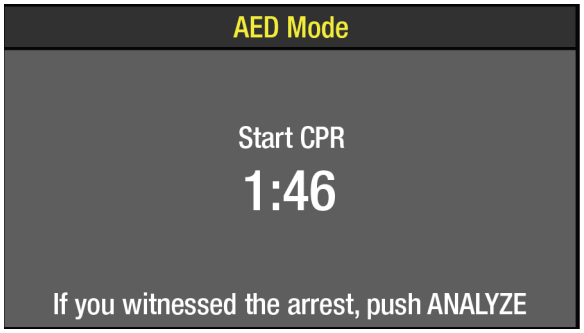

These prompts provide an opportunity to end the initial CPR early and proceed directly to delivering a shock.

Note: The decision to end CPR early is based on your protocol and if you witnessed the arrest.

- If you did witness the arrest, press **ANALYZE**. This ends the initial CPR period and the **SHOCK ADVISED** and **STAND CLEAR, PUSH SHOCK BUTTON!** (⚡) prompts occur. Proceed according to your training with the AED for delivering the shock.

- If you did not witness the arrest, perform CPR and do not press **ANALYZE** to end CPR early. The Initial CPR countdown timer continues for the duration specified in the **INITIAL CPR TIME** setup option, for example, 90 seconds. Near the end of CPR time, the defibrillator silently charges to prepare for the shock. CPR continues up to shock delivery. When initial CPR time ends, the **SHOCK ADVISED** and **STAND CLEAR, PUSH SHOCK BUTTON!** (⚡) prompts occur. Proceed according to your training with the AED for delivering a shock.

Pre-shock CPR Time

When **PRE-SHOCK CPR** time is set to 15 seconds or more, you are prompted to start CPR immediately after a shockable rhythm is detected, before the shock is delivered.

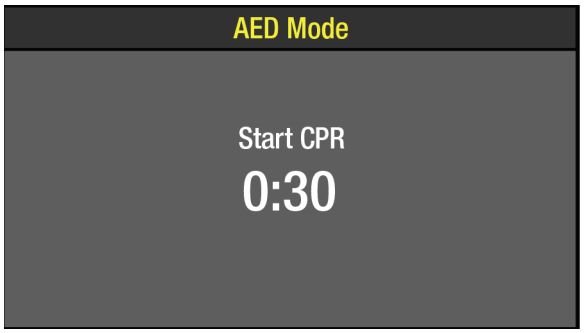

After analysis is complete, the **START CPR** prompts occur. A countdown timer (min:sec format) continues for the duration specified in the **PRE-SHOCK CPR** time setup option.

The defibrillator silently charges in preparation for the shock.

When CPR time ends, the **SHOCK ADVISED** and **STAND CLEAR, PUSH SHOCK BUTTON!** (⚡) prompts occur. Proceed according to your training with the AED for delivering a shock.

Note: The ⚡ (shock) button is disabled during the pre-shock CPR interval to avoid accidental shock delivery while the defibrillator is charged and a responder is performing CPR.

Advisory Monitoring

Advisory Monitoring is a special way to set up AED mode that allows the use of all the monitoring functions without initiating the AED prompted protocol when the device is turned on. When needed, the AED mode prompted protocol can be initiated by pressing **ANALYZE**. In addition, access to Manual mode therapies—that is, manual defibrillation, synchronized cardioversion, or pacing—by unauthorized users can be restricted, if necessary.

Certain setup options must be changed for the device to operate in Advisory Monitoring when it is turned on. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

When set up for Advisory Monitoring and the monitor is turned on, the **ADVISORY MODE-MONITORING** message appears continuously in the message area on the Home Screen. Monitor functions such as NIBP, SpO_2 and 12-lead ECG can be used. Lead II and dashes are shown in the top ECG trace (Channel 1) unless or until the patient is connected to the ECG cable. If therapy electrodes (pads) and the therapy cable are connected to the patient, press **LEAD** to change to **PADDLES** lead and view the ECG.

In Advisory Monitoring, **LEAD II** and **PADDLES** lead are the only ECG monitoring leads allowed in Channel 1. The Continuous Patient Surveillance System (CPSS) is active and automatically evaluates the patient ECG. However, CPSS is evaluating only for a potentially shockable rhythm. If a shockable ECG rhythm such as VF is detected, the following prompt appears: **CHECK PATIENT. IF NO PULSE, PUSH ANALYZE**.

©2018 Physio-Control, Inc.

Prior to pressing **ANALYZE**, confirm that the patient is in cardiac arrest. Motion artifact, a low amplitude ECG, and other causes of poor ECG signal may cause false CPSS alerts. If the patient is not in cardiac arrest, do not press **ANALYZE**. Troubleshoot the cause of the false CPSS alert.

If the patient is in cardiac arrest, press **ANALYZE**. Pressing **ANALYZE** causes the defibrillator to enter AED mode. The defibrillator begins the AED prompted protocol and analyzes the patient's ECG when therapy electrodes are applied to the patient. For more information about defibrillator behavior in AED mode, see Automated External Defibrillation (AED) (on page 119).

Note: CPSS only evaluates for shockable ECG rhythms. If the ECG rhythm is nonshockable, for example asystole, no prompting occurs. Users who are not trained to interpret ECGs or are trained only to use AED mode must always press **ANALYZE** when using this special setup function to initiate ECG analysis and AED prompting.

To switch back to Advisory Monitoring from AED prompted protocol, press **LEAD**.

For information about limiting access to Manual mode by unauthorized users, see Switching from AED Mode to Manual Mode (on page 126), or see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

Troubleshooting Tips

Table 21 Troubleshooting Tips for AED Mode

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
CONNECT ELECTRODES message appears	Therapy electrodes are not connected to the therapy cable	• Check for electrode connection.
	Electrodes do not adhere properly to the patient	• Press electrodes firmly on patient's skin. • Clean, shave, and dry the patient's skin as recommended. • Replace the electrodes.
	Electrodes are dry, damaged, or out of date	• Apply new electrodes.
	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
CONNECT CABLE message appears	Therapy cable is disconnected during charging	• Reconnect cable and press **CHARGE** again.
	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
MOTION DETECTED and **STOP MOTION** messages appear during analysis	Patient movement	• Stop CPR during analysis. • When patient is being manually ventilated, press **ANALYZE** after complete exhalation.
	Patient movement because of agonal respirations	• Allow analysis to proceed to completion—analysis is delayed no more than 10 seconds due to motion detection.
	Electrical/radio frequency interference	• Move hand-held communication devices or other suspected devices away from the defibrillator, when possible.
	Vehicle motion	• Stop vehicle during analysis. • Move patient to stable location, when possible.
DISARMING message appears (energy charge removed)	⚡ (shock) button not pressed within 60 seconds after charge complete	• Recharge the defibrillator, if desired.
	SPEED DIAL pressed	• Recharge the defibrillator.
	Therapy electrodes or cable disconnected	• Reconnect electrode or cable.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Energy did not escalate	After a shock, the next analysis was **NO SHOCK ADVISED**	• No action needed. Defibrillator does not escalate energy when a **NO SHOCK ADVISED** decision follows a shock.
Charge time to 360 joules exceeds 10 seconds	Battery low	• Replace battery with fully charged battery. • Connect to auxiliary power using approved power adapter.
	Operating temperature is too low	• Move patient and device to warmer environment, if necessary.
REPLACE BATTERY prompt occurs	Both batteries are very low	• Replace one or both batteries immediately. • Connect to auxiliary power using approved power adapter.
Voice prompts sound faint or distorted	Low battery power	• Replace one or both batteries immediately. • Connect to auxiliary power using approved power adapter.
CPR time shown (minutes/seconds) is different than expected	Function of metronome	• None. The metronome adjusts the CPR time to ensure CPR cycle ends with compressions. (See CPR Time and Metronome (on page 126).)
	Incorrect setup option selected	• Change CPR time setup option. See *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
Press **CPR** and metronome does not activate	In AED mode, and not in CPR interval	• Wait until CPR interval (audible "tocks") to silence or activate metronome.
Home Screen is blank but **ON** LED is illuminated	Screen not functioning properly	• Press **ANALYZE** and follow voice prompts to treat patient.
Analysis result is **NO SHOCK ADVISED** and ECG shows a perfectly flat, isoelectric line.	The Test Load is connected to therapy cable	• Remove the Test Load and connect therapy electrodes to the cable.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Manual Defibrillation

The LIFEPAK 15 monitor/defibrillator provides manual defibrillation using adult and pediatric QUIK-COMBO pacing/defibrillation/ECG electrodes, adult standard paddles, or pediatric paddles. For more information, see Paddle Accessory Options (on page 151).

The LIFEPAK 15 monitor/defibrillator is capable of providing intra-operative direct defibrillation and synchronized cardioversion with the internal paddles accessory designed for the LIFEPAK 15 defibrillator. For more information, see the Instructions for Use for the internal paddles.

Intended Use

When used in Manual mode, the LIFEPAK 15 monitor/defibrillator is a direct current defibrillator that applies a brief, intense pulse of electricity to the heart muscle. Manual mode requires operator interpretation of the ECG rhythm and interaction with the device in order to defibrillate the patient.

Manual mode defibrillation and synchronized cardioversion are intended for use by personnel who are authorized by a physician or medical director and have, at a minimum, the following skills and training:

- Arrhythmia recognition and treatment
- Advanced resuscitation training equivalent to that recommended by the AHA or ERC
- Training on the use of the LIFEPAK 15 monitor/defibrillator

Defibrillation is only one aspect of the medical care required to resuscitate a patient who has a shockable ECG rhythm. Depending on the situation, other supportive measures may include:

- Cardiopulmonary resuscitation (CPR)
- Administration of supplemental oxygen
- Drug therapy

Indications

Manual defibrillation is indicated for the termination of certain potentially fatal arrhythmias, such as ventricular fibrillation and symptomatic ventricular tachycardia. Delivery of this energy in the synchronized mode is a method for treating atrial fibrillation, atrial flutter, paroxysmal supraventricular tachycardia and, in relatively stable patients, ventricular tachycardia.

Contraindications

Defibrillation is contraindicated in the treatment of Pulseless Electrical Activity (PEA), such as idioventricular or ventricular escape rhythms, and in the treatment of asystole.

©2018 Physio-Control, Inc.

Manual Defibrillation Warnings

WARNING

Shock Hazard

Conductive gel (wet or dry) on the paddle handles can allow the electrical energy to discharge through the operator during defibrillation. Completely clean the paddle electrode surfaces, handles, and storage area after defibrillation.

WARNING

Possible Fire, Burns, and Ineffective Energy Delivery

Precordial lead electrodes and lead wires may interfere with the placement of standard paddles or therapy electrodes. Before defibrillation, remove any interfering precordial lead electrodes and lead wires.

WARNING

Possible Burns and Ineffective Energy Delivery

A gel pathway on the skin between the standard paddles will cause defibrillating energy to arc between paddles and divert energy away from the heart muscle. Do not allow conductive gel (wet or dry) to become continuous between paddle sites.

WARNING

Possible Patient Skin Burns

During defibrillation, air pockets between the skin and standard paddles can cause patient skin burns. Completely cover paddle electrode surfaces with fresh conductive gel and apply 25 lb of pressure per paddle during discharge.

WARNING

Possible Paddle Damage and Patient Skin Burns

Discharging the defibrillator with the standard paddle surfaces shorted together can pit or damage the paddle electrode surface. Pitted or damaged paddle surfaces may cause patient skin burns during defibrillation. Discharge the defibrillator only as described in these operating instructions.

WARNING

Possible Incorrect Energy Delivery

The defibrillator does not automatically adjust energy when using pediatric therapy electrodes or pediatric standard paddles. Manually select the appropriate energy prior to defibrillating the patient.

WARNING

Possible Damage to Defibrillator and Defibrillator Shutdown

When two defibrillators are used to deliver energy to the same patient at the same time, one or both defibrillators may be damaged and shutdown may occur. If the defibrillator shuts down, take the defibrillator out of service and contact qualified service personnel.

Manual Mode

The LIFEPAK 15 monitor/defibrillator is set up to operate in Manual mode when it is turned on (factory default setting). If required by your protocols, the defibrillator can be set up to power on in the automated external defibrillator (AED) mode. For information on switching from AED mode to Manual mode, see Switching from AED Mode to Manual Mode (on page 126).

Manual Defibrillation Procedure

To perform manual defibrillation:

1. Verify that the patient is in cardiopulmonary arrest (unconscious, pulseless, not breathing normally).
2. Press **ON**.
3. Identify the electrode or paddle sites on the patient and prepare the patient's skin. (See Patient Skin Preparation (on page 117).) Use either the anterior-lateral or anterior-posterior position.
4. Connect the therapy electrodes to the therapy cable and confirm cable connection to the defibrillator.
5. Apply therapy electrodes to the patient in anterior-lateral or anterior-posterior position. If using standard paddles, apply conductive gel to the paddles and place paddles on the patient's chest in the anterior-lateral position.
6. Confirm desired energy is selected, or press **ENERGY SELECT** or rotate the **SPEED DIAL** to select the desired energy. On the standard (hard) paddles, rotate the **ENERGY SELECT** dial.
7. Press **CHARGE.** While the defibrillator is charging, a charging bar appears and a ramping tone sounds, indicating the charging energy level. When the defibrillator is fully charged, the screen displays available energy.
8. Make certain all personnel, including the operator, stand clear of the patient, stretcher, bed, and any equipment connected to the patient.
9. Confirm ECG rhythm requires defibrillation. Confirm available energy.
10. Press the ⚡ (shock) button on the defibrillator or the ⚡ (shock) buttons on the standard paddles to discharge energy to the patient. For standard paddles, apply firm pressure with both paddles to the patient's chest, and press both paddle buttons simultaneously to discharge energy to the patient. For safety reasons, the ⚡ (shock) button on the defibrillator front panel is disabled when using standard paddles.

    Note: To disarm (cancel the charge), press the **SPEED DIAL**. The defibrillator disarms automatically if shock buttons are not pressed within 60 seconds, or if you change the energy selection after charging begins.

    Note: To interrupt defibrillation and initiate pacing, press **PACER**. If charged, the defibrillator disarms.
11. Start CPR according to your protocol. To activate the metronome, press **CPR** at any time.
12. At the end of your CPR period, observe the patient and the ECG rhythm. If an additional shock is necessary, repeat the procedure beginning at Step 6.

Successful resuscitation is related to the length of time between the onset of a heart rhythm that does not circulate blood (ventricular fibrillation, pulseless ventricular tachycardia) and defibrillation. The physiological state of the patient may affect the likelihood of successful defibrillation. Thus, failure to resuscitate a patient is not a reliable indicator of defibrillator performance. Patients often exhibit a muscular response (such as jumping or twitching) during an energy transfer. The absence of such a response is not a reliable indicator of actual energy delivery or device performance.

Using the CPR Metronome

When CPR is required during cardiac arrest, the CPR metronome provides audible prompts that guide the user to deliver CPR with proper timing in accordance with the 2015 American Heart Association and European Resuscitation Council CPR guidelines.

CPR Metronome Warnings

WARNING

CPR Delivered When Not Needed

The metronome sounds do not indicate information regarding the patient's condition. Because patient status can change in a short time, the patient should be assessed at all times. Do not perform CPR on a patient who is responsive or is breathing normally.

Note: The CPR metronome is a tool to be used as a timing aid during CPR. Assess the patient at all times and provide CPR only when indicated. Provide CPR according to your training and protocols.

How the CPR Metronome Works

The metronome provides audible "tocks" at a rate of 100/minute to guide the rescuer in performing chest compressions. The metronome also provides audible ventilation prompts (either a tone or verbal "ventilate") to cue the rescuer when to provide ventilations. The metronome prompts the rescuer to perform CPR at the selected compression to ventilation (C:V) ratio.

Age-Airway Considerations

The default C:V ratio for the metronome (in both AED and Manual modes) is Adult - No Airway (30:2) because most patients in cardiac arrest are adults who have an initially unsecured airway. In Manual mode, the user can choose the most appropriate C:V ratio based on the patient's age and current airway status. The Age-Airway selection determines the C:V ratio of the metronome sounds. The default C:V ratios are shown in the following table.

Table 22 Default Age-Airway C:V Ratios in Manual Mode

AGE-AIRWAY	C:V RATIO
Adult - No Airway*	30:2
Adult - Airway**	10:1
Youth - No Airway***	15:2
Youth - Airway	10:1

* No Airway = No artificial airway in place

** Airway = Advanced artificial airway in place

*** Youth = Pre-pubescent child

Note: The compression-to-ventilation ratio selections can be set up according to local medical protocols. For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

Activating and Deactivating the Metronome

To activate the CPR metronome in Manual mode:

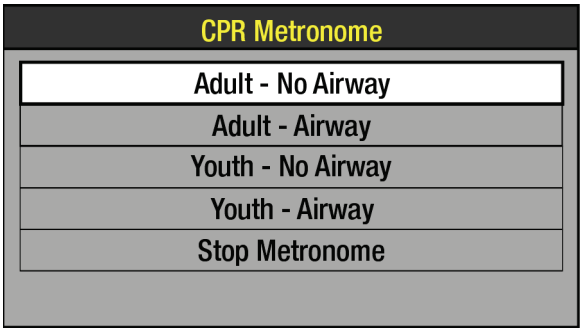

1. Press **CPR**. The CPR Metronome menu appears and the metronome is activated using the Adult-No Airway default setting.
2. Use the **SPEED DIAL** to highlight and select the desired Age-Airway setting.

CPR: Adult - No Airway 30:2

When the metronome is on, a message appears in the message area that indicates the current Age-Airway selection.

Note: If the VF/VT alarm is on, it is suspended when the metronome is on to prevent false VF/VT alarms. If other vital sign alarms activate when the metronome is on, the visual indicators occur, but the alarm tone is suppressed until the metronome is deactivated.

The metronome provides "tocks" and ventilation prompts continuously until it is deactivated. To stop the metronome, select **STOP METRONOME** in the CPR Metronome menu. An event is recorded in the CODE SUMMARY Event Log when CPR metronome is turned ON or OFF and when the Age-Airway setting is changed. To adjust the volume of the metronome, press **OPTIONS**, select **ALARM VOLUME**, and change the **VOLUME**.

Note: If all Age-Airway selections are set to the same C:V ratio (for example, Adult - No Airway, Adult - Airway, Youth - No Airway, and Youth - Airway all set to 10:1), the CPR metronome always provides "tocks" and ventilation prompts at the set ratio for both AED mode and Manual mode. In this situation, the CPR Metronome menu does not appear when **CPR** is pressed during use—pressing the **CPR** button only activates and deactivates the metronome at the fixed C:V ratio.

Synchronized Cardioversion Procedure

The LIFEPAK 15 monitor/defibrillator can be set up to remain in Sync mode or to return to Asynchronous mode after a shock is delivered. The factory default setting is to return to Asynchronous mode after a shock. It is important that you know how your defibrillator is set up. For information about changing the setup option, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

To perform synchronized cardioversion:

1. Press **ON**.
2. Attach patient ECG cable and ECG electrodes as previously described (see Monitoring the ECG (on page 47)). ECG electrodes and cable must be used to monitor the ECG when standard paddles are used for cardioversion.
3. Select Lead **II** or lead with greatest QRS complex amplitude (positive or negative).

   Note: To monitor the ECG using therapy electrodes, place the electrodes in anterior-lateral position and select **PADDLES** lead.

WARNING

Possible Lethal Arrhythmia

Ventricular fibrillation may be induced with improper synchronization. DO NOT use the ECG from another monitor (slaving) to synchronize the monitor/defibrillator's discharge. Always monitor the patient's ECG directly through the defibrillator's ECG cable or therapy cable. Confirm proper placement of the sense markers on the ECG.

4. Press **SYNC**. The **SYNC MODE** message appears in the message area when Sync is active.

   Note: Press **SYNC** again to deactivate Sync mode.
5. Observe the ECG rhythm. Confirm that a triangle sense marker (▼) appears near the middle of each QRS complex. If the sense markers do not appear or are displayed in the wrong locations (for example, on the T-wave), adjust **ECG SIZE** or select another lead. (It is normal for the sense marker location to vary slightly on each QRS complex.)
6. Connect the therapy electrodes to the therapy cable and confirm cable connection to the defibrillator.
7. Prepare the patient's skin and apply therapy electrodes to the patient in the anterior-lateral position. (See Therapy Electrode and Standard Paddle Placement (on page 117).) If using standard paddles, apply conductive gel to the paddles and place paddles on the patient's chest.
8. Press **ENERGY SELECT** or rotate the **SPEED DIAL** to select the desired energy. On the standard (hard) paddles, rotate the **ENERGY SELECT** dial.

©2018 Physio-Control, Inc.

9. Press **CHARGE**. While the defibrillator is charging, a charging bar appears and a ramping tone sounds, indicating the charging energy level. When the defibrillator is fully charged, the screen displays available energy.
10. Make certain all personnel, including the operator, stand clear of the patient, bed, stretcher, and any equipment connected to the patient.
11. Confirm ECG rhythm. Confirm available energy.
12. Press and *hold* the ⚡ (shock) button on the defibrillator until the **ENERGY DELIVERED** message appears on the screen. For standard paddles, press and hold both ⚡ (shock) buttons on the paddles simultaneously until the **ENERGY DELIVERED** message appears on the screen. Release buttons. For safety reasons, the ⚡ (shock) button on the defibrillator front panel is disabled when using standard paddles.

    Note: To disarm (cancel a charge), press the **SPEED DIAL**. The defibrillator disarms automatically if shock buttons are not pressed within 60 seconds, or if you change the energy selection after charging begins.
13. Observe patient and ECG rhythm. Repeat procedure starting from Step 4, if necessary.

Troubleshooting Tips

Table 23 Troubleshooting Tips for Defibrillation and Synchronized Cardioversion

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Charge time to 360 joules exceeds 10 seconds	Battery low	• Replace battery with fully charged battery.
	Operating temperature is too low	• Move patient and device to warmer environment, if necessary.
Energy not delivered to patient when ⚡ (shock) buttons are pressed	Device is in Sync mode and QRS complexes are not detected	• Adjust ECG size for optimum sensing QRS or deactivate **SYNC** if rhythm VF/VT.
	SYNC accidentally pressed and rhythm is VF/VT	• Press **SYNC** to turn off Sync. • Press ⚡ (shock) buttons.
	Device in Sync mode and ⚡ (shock) buttons not pressed and held until next detected QRS	• Hold ⚡ (shock) buttons until discharge occurs or next detected QRS and **ENERGY DELIVERED** message appears.
	⚡ (shock) buttons pressed before full charge reached	• Wait for tone and message indicating full charge.
	Standard paddles connected and ⚡(shock) button on defibrillator front panel pressed	• Simultaneously press ⚡ (shock) buttons on standard paddles to discharge.
	Sixty seconds elapsed before ⚡ (shock) buttons were pressed after full charge. Energy was internally removed.	• Press ⚡ (shock) buttons within 60 seconds of full charge.
	Energy selection changed	• Press **CHARGE** again.
CONNECT CABLE message appears	Therapy cable disconnected during charging	• Reconnect cable and press **CHARGE** again.
	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
ENERGY FAULT message appears (selected and available energy)	Defibrillator out of calibration	• Attempt to transfer energy. • Contact a qualified service technician.
DISARMING message appears	⚡ (shock) button not pressed within 60 seconds after charge complete	• Recharge the defibrillator, if desired.
	Energy selected after charge complete	• Recharge the defibrillator.
	SPEED DIAL pressed	• Recharge the defibrillator.
	PACER pressed	• Recharge, if necessary, or no action, if pacing desired.
	Therapy electrodes or cable disconnected	• Reconnect electrode or cable.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Energy did not escalate automatically per energy protocol	**ENERGY SELECT** pressed and disabled automatic protocol	• Continue to select energy manually to treat patient. For more information about energy protocol, see *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
SYNC mode will not activate	**PACER** is on. Pacing and Sync are separate functions and are not allowed at the same time.	• Discontinue pacing, if appropriate for the patient, and press **SYNC**.
	ECG electrodes not attached to patient and standard paddles connected to defibrillator	• Connect ECG electrodes to patient.
Patient did not "jump" (no muscle response) during defibrillator discharge	Patient muscle response is variable and depends on patient condition. Lack of visible response to defibrillation does not necessarily mean the discharge did not occur.	• No action needed.
	The Test Load is connected to therapy cable	• Remove the Test Load and connect therapy electrodes to cable.
ABNORMAL ENERGY DELIVERY message appears and Shock XJ Abnormal annotated on printout	Open air discharge with standard paddles	• Press paddles firmly on patient's chest when discharging.
	Standard paddles placed face-to-face when ⚡ (shock) button pressed	• Perform test discharges per Operator's Checklist. • See Manual Defibrillation Warnings (on page 134).
	Patient impedance is out of range	• Increase energy or repeat shocks as needed. • Consider replacing disposable therapy electrodes with new ones.
	Internal fault occurred	• Repeat shock. • Perform CPR and obtain another defibrillator, if necessary.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
CONNECT ELECTRODES message appears	Therapy electrodes are not connected to the therapy cable	• Check for electrode connection.
	Electrodes do not adhere properly to the patient	• Press electrodes firmly on patient's skin. • Clean, shave, and dry the patient's skin as recommended. • Apply new electrodes.
	Electrodes are dry, damaged, or out of date	• Apply new electrodes.
	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
REPLACE BATTERY prompt occurs	Both batteries are very low	• Replace one or both batteries immediately. • Connect to auxiliary power using approved power adapter.
CPR time shown (minutes/seconds) is different than expected	Metronome is on	• None. The metronome adjusts the CPR time to ensure CPR cycle ends with compressions.
	Incorrect setup option selected	• Change CPR time setup option. See *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
Home Screen is blank but **ON** LED is illuminated	Screen not functioning properly	• Print ECG strip to assess rhythm and other active vital signs. • Press **ANALYZE** and use AED mode, if necessary.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Noninvasive Pacing

The LIFEPAK 15 monitor/defibrillator provides noninvasive pacing using adult or pediatric QUIK-COMBO pacing/defibrillation/ECG electrodes. For more information, see Paddle Accessory Options (on page 151).

Intended Use

A noninvasive pacemaker is a device that delivers an electrical stimulus to the heart causing cardiac depolarization and myocardial contraction. The energy is delivered through large adhesive electrodes placed on the chest. In addition to noninvasive pacing, other supportive measures may be necessary.

Noninvasive pacing is intended for use by personnel who are authorized by a physician or medical director and have, at a minimum, the following skills and training:

- Arrhythmia recognition and treatment
- Advanced resuscitation training equivalent to that recommended by the AHA or ERC
- Training on the use of the LIFEPAK 15 monitor/defibrillator

Indications

Noninvasive pacing is indicated for symptomatic bradycardia in patients with a pulse.

Contraindications

Noninvasive pacing is contraindicated for the treatment of ventricular fibrillation and asystole.

Noninvasive Pacing Warnings

WARNING

Possible Inability to Pace

Using other manufacturers' combination therapy electrodes with this device could cause a decrease in pacing efficacy or the inability to pace because of unacceptably high impedance levels and invalidate the safety agency certifications. Use only the therapy electrodes that are specified in these operating instructions.

Demand and Nondemand Pacing

The LIFEPAK 15 monitor/defibrillator can be used for either demand or nondemand (asynchronous or "fixed rate") pacing.

Demand mode is used for most patients. In demand mode, the LIFEPAK 15 pacemaker inhibits pacing output when it "senses" the patient's own beats (intrinsic QRSs). In demand mode, if the ECG SIZE is set too low to detect the patient's beats, or if an ECG lead becomes detached so that the ECG rhythm is not present, the pacemaker generates pacing pulses asynchronously. This means that the pacemaker generates pacing pulses at the selected rate regardless of the patient's ECG rhythm.

Nondemand mode can be selected if noise or artifact interferes with proper sensing of QRS complexes. Press **OPTIONS** to access nondemand mode. For more information, see Options (on page 41).

Noninvasive Pacing Procedure

ECG monitoring during pacing is performed with the ECG electrodes and patient ECG cable. Therapy electrodes are not capable of monitoring ECG and delivering pacing current at the same time.

Be sure to place the QUIK-COMBO therapy electrodes in the proper locations. Improper placement of the electrodes may make a difference in the capture threshold. For example, if the electrode placement is reversed, more pacing current may be needed to achieve capture.

WARNING

Possible Interruption of Therapy

Observe the patient continuously while the pacemaker is in use. Patient response to pacing therapy (for example, capture threshold) may change over time.

To perform noninvasive pacing:

1. Press **ON**.
2. Connect the patient ECG cable, apply ECG electrodes to the ECG cable and patient, and select Lead **I**, **II**, or **III**. To receive the best monitoring signal, make sure there is adequate space between the ECG electrodes and the therapy electrodes.
3. Identify the QUIK-COMBO therapy electrode sites on the patient. Use either the anterior-lateral or anterior-posterior position and prepare the patient's skin. (See Therapy Electrode and Standard Paddle Placement (on page 117).)
4. Apply therapy electrodes to the patient.
5. Connect the therapy electrodes to the therapy cable.
6. Press **PACER**.

WARNING

Possible Ineffective Pacing

The ECG size must be properly adjusted so that the patient's own beats are detected. If ECG size is set too high or too low, pacing pulses may not be delivered when required. Adjust ECG size so that sense markers are placed on the patient's QRS complexes.

7. Observe the ECG rhythm. Confirm that a triangle sense marker (▼) appears near the middle of each QRS complex. If the sense markers do not appear or are displayed in the wrong location (for example, on the T-wave), adjust **ECG SIZE,** or select another lead. (The sense marker location may vary slightly on each QRS complex.)
8. Press **RATE** or rotate the **SPEED DIAL** to select the desired pacing rate.
9. Press **CURRENT** or rotate the **SPEED DIAL** to increase current until electrical capture occurs. Electrical capture is indicated by a wide QRS complex and a T-wave following the pace marker. For each delivered pacing stimulus, a positive pace marker displays on the ECG waveform.

   Note: Dashes (---), not heart rate, are displayed on the Home Screen during noninvasive pacing, and heart rate alarms are disabled.
10. Palpate patient's pulse or check blood pressure to assess for mechanical capture. Consider use of sedation or analgesia if patient is uncomfortable.

    Note: To change rate or current during pacing, press **RATE** or **CURRENT**. The **RATE** and **CURRENT** buttons allow changes in increments of 10; the **SPEED DIAL** allows changes in increments of 5.

    Note: To interrupt pacing and view the patient's intrinsic rhythm, press and hold **PAUSE**. This causes the pacer to pace at 25% of the set rate. Release **PAUSE** to resume pacing at the set rate.
11. To stop pacing, reduce current to zero or press **PACER**.

    Note: To defibrillate and stop noninvasive pacing, press **CHARGE**. Pacing automatically stops. Proceed with defibrillation.

The physiologic state of the patient may affect the likelihood of successful pacing or of skeletal muscle activity. The failure to successfully pace a patient is not a reliable indicator of pacemaker performance. Similarly, the patient's muscular response to pacing is not a reliable indicator of current delivered.

WARNING

Possible Patient Skin Burns

Prolonged noninvasive pacing may cause patient skin irritation and burns, especially with higher pacing current levels. Discontinue noninvasive pacing if skin becomes burned and another method of pacing is available. For additional information about therapy electrodes, see QUIK-COMBO Therapy Electrodes (on page 153).

If the monitor detects **ECG LEADS OFF** during pacing, pacing automatically switches to nondemand and continues at a fixed rate until the ECG lead is reattached. During nondemand pacing, the pacemaker delivers pulses at the set pace rate regardless of any intrinsic beats that the patient may have. The monitor continues to display the pacing rate (ppm) and the current (mA). To reestablish demand pacing, reattach the ECG lead.

While pacing, visually monitor the patient at all times—*do not* rely on the **ECG LEADS OFF** warning to detect changes in pacing function. Routinely assess for proper ECG sensing, pace pulse delivery, electrical capture, and mechanical capture.

If pacing electrodes detach during pacing, you see **CONNECT ELECTRODES** and **PACING STOPPED** messages and hear an alarm. The pacing rate is maintained and the current resets to 0 mA. Reattaching the pacing electrodes silences the alarm and removes the **CONNECT ELECTRODES** message. The current remains at 0 mA until you increase the current manually.

To turn off the LIFEPAK 15 monitor/defibrillator, pacing must be stopped. If the **ON** button is pressed when **PACER** is active, an alert tone sounds and the **PACING IN PROGRESS** message appears.

Troubleshooting Tips

Table 24 Troubleshooting Tips for Noninvasive Pacing

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Device does not function when **PACER** is pressed	Power off	• Check if power is **ON**.
	Low battery	• Replace battery with fully charged battery.
PACER LED is on, but **CURRENT (mA)** will not increase	Therapy electrodes off	• Check for message displayed. • Inspect therapy cable and electrode connections.
PACER LED on, **CURRENT (mA) >0,** but pace markers absent (not pacing)	Pacing rate set below patient's intrinsic rate	• Increase **PPM**.
	Pacer oversensing (ECG artifact, ECG size too high)	• Establish clean ECG; decrease ECG size. • Select nondemand pacing.
Monitor screen displays distortion while pacing	ECG electrodes not optimally placed with respect to pacing electrodes	• Reposition electrodes away from pacing electrodes. • Select another lead (I, II, or III).
Pacing stops spontaneously	**PACER** pressed off	• Press **PACER** and increase the current.
	Internal error detected. Service message indicates an internal failure.	• Check for service indicator. • Cycle power and start pacing again. • Obtain service by a qualified service technician.
	Therapy electrode off	• Check for message. Check pacing cable and electrode connections.
	CHARGE pressed	• Press **PACER** and increase current, if pacing desired. Otherwise, proceed with defibrillation.
	Radio frequency interference	• Move radio equipment away from pacemaker.
No muscle response to pacing	Patient’s heart rate may be greater than noninvasive pacer ppm	• No action needed.
	The Test Load is connected to therapy cable	• Remove the Test Load and connect therapy electrodes to cable.
	Patient muscle response is variable and depends on patient condition. Muscular response to pacing is not a reliable indicator of current delivered.	• No action needed.
Capture does not occur with pacing stimulus	Current (mA) set too low	• Increase pacing current. (Administer sedation or analgesia as needed.)

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
CONNECT CABLE or **PACING STOPPED** message appears	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
CONNECT ELECTRODES message appears	Pacing cable or electrode disconnected	• Reconnect and set current.
	Electrodes not adhering to skin	• Prepare skin.
	Therapy cable damaged	• Replace therapy cable and perform daily checks per Operator's Checklist.
	Electrodes outdated	• Replace electrodes and set current.
PACING IN PROGRESS message appears	**CPR** pressed	• Press **PACER** to stop pacing, if appropriate, and then press **CPR**.
Pacing stops spontaneously and **PACER FAULT** message appears	Internal error detected	• Cycle power and start pacing again. • Obtain service by a qualified service technician.
Intrinsic QRS complexes not sensed when pacing	ECG size too low	• Increase ECG size or select another lead.
	Intrinsic QRS complexes are occurring during pacemaker's refractory period	• Adjust PPM.
Pacing starts spontaneously	Patient's heart rate falls below set pacing rate	• Appropriate pacemaker function; assess patient.
	During standby pacing, ECG lead disconnects and pacing begins asynchronously	• Reconnect ECG lead.
Set pacing rate (ppm) and ECG paced rate do not appear to match	Internal error detected	• Print ECG and calculate the pace rate.
Improper sensing (for example, sensing on T-waves)	QRS complex too small	• Select another lead.
	T-wave too large	• Adjust ECG size.
SYNC mode will not activate	**PACER** is on. Pacing and Sync are separate functions and are not allowed at the same time.	• Discontinue pacing, if appropriate for the patient, and press **SYNC**.
Defibrillator will not turn off	Pacemaker is on	• Turn off **PACER** and then press and hold **ON** for at least 2 seconds.

For general troubleshooting tips, see General Troubleshooting Tips (on page 216).

Pediatric ECG Monitoring and Manual Mode Therapy Procedures

WARNING

Possible Patient Skin Burns

Do not use pediatric QUIK-COMBO electrodes on adults or larger children. Delivery of defibrillation energies equal to or greater than 100 joules (typically used on adults) through these smaller electrodes increases the possibility of skin burns.

WARNING

Possible Pediatric Patient Skin Burns

Noninvasive pacing may cause patient skin irritation and burns, especially with higher pacing current levels. Inspect underlying skin of the ♥ electrode frequently after 30 minutes of continuous pacing. Discontinue noninvasive pacing if skin burn develops and another method of pacing is available. On cessation of pacing, immediately remove or replace electrodes with new ones.

For pediatric patients, follow the procedures for ECG monitoring, manual defibrillation, synchronized cardioversion, and pacing except for the following:

- Use the appropriate paddle accessory based on the weight of the child.
- Select the appropriate defibrillation energy for the weight of the child according to the American Heart Association (AHA) recommendations or local protocol. Using energy levels of 100 joules or greater is likely to cause burns.
- When pacing, inspect the patient's skin under the heart electrode frequently for signs of burns.

Note: For more information about pediatric paddles and electrodes, see Paddle Accessory Options (on page 151).

Chapter 6

Paddle Accessory Options

This chapter provides information about the paddle accessory options that may be used with the LIFEPAK 15 monitor/defibrillator.

QUIK-COMBO Therapy Electrodes 153
Standard Paddles 156
Sterilizable Internal Defibrillation Paddles 160

QUIK-COMBO Therapy Electrodes

Physio-Control QUIK-COMBO therapy electrodes are pre-gelled, self-adhesive therapy electrodes used for defibrillation, synchronized cardioversion, ECG monitoring, and pacing.

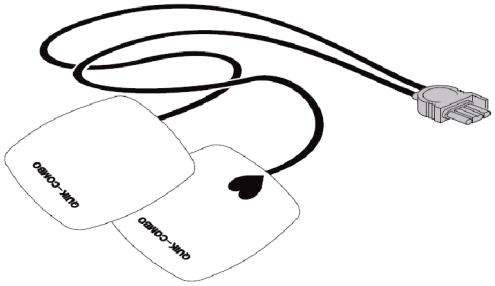

Figure 35 QUIK-COMBO Therapy Electrodes

A QUIK-COMBO therapy electrode set:

- Is a substitute for standard paddles.
- Provides Lead II monitoring signal when placed in the anterior-lateral position.
- Quickly restores the ECG trace on the monitor following defibrillation.

Always have immediate access to a spare set of therapy electrodes.

To help prevent therapy electrode damage:

- Only open electrode package immediately prior to use.
- Slowly peel back the protective liner on the electrodes, beginning with the cable connection end.
- Do not trim therapy electrodes.
- Do not crush, fold, or store the electrodes under heavy objects.
- Store therapy electrodes in a location where temperatures are between 15° and 35°C (59° and 95°F). Continuous exposure to the higher temperatures within this range will shorten the life of the electrodes.

Several types of QUIK-COMBO therapy electrodes are available as described in Table, QUIK-COMBO Electrodes (on page 154).

IMPORTANT! Infant/Child Reduced Energy Defibrillation Electrodes are not compatible with the LIFEPAK 15 monitor/defibrillator.

Table 25 QUIK-COMBO Electrodes

TYPE	DESCRIPTION
QUIK-COMBO	Electrodes, with 61 cm (2 ft) of lead wire, designed for patients weighing 15 kg (33 lb) or more
QUIK-COMBO RTS	Electrodes, providing a radio-transparent electrode and lead wire set, designed for patients weighing 15 kg (33 lb) or more
QUIK-COMBO with REDI-PAK® preconnect system	Electrodes designed for patients weighing 15 kg (33 lb) or more and that allow preconnection of the electrode set to the device while maintaining electrode shelf life and integrity
Pediatric QUIK-COMBO RTS	Electrodes designed for patients weighing 15 kg (33 lb) or less

Connecting Therapy Electrodes

To connect QUIK-COMBO therapy electrodes to the QUIK-COMBO therapy cable:

1. Open the protective cover on the therapy cable connector (see the following figure).
2. To insert the QUIK-COMBO electrode connector into the therapy cable connector, align the arrows and press the connectors firmly together.

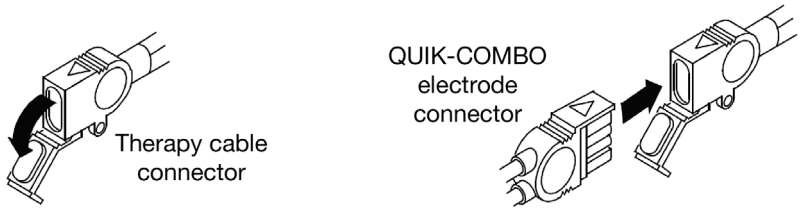

Figure 36 Connect QUIK-COMBO Electrodes to Therapy Cable

Replacing and Removing Therapy Electrodes

Replace adult QUIK-COMBO electrodes with new electrodes after one of the following occurs:

- 50 defibrillation shocks
- 24 hours on the patient's skin
- 8 hours of continuous pacing

Replace pediatric QUIK-COMBO electrodes with new electrodes after one of the following occurs:

- 25 defibrillation shocks
- 24 hours on the patient's skin
- 8 hours of continuous pacing

To remove QUIK-COMBO therapy electrodes from the patient:

1. Slowly peel back the therapy electrode from the edge, supporting the skin as shown.

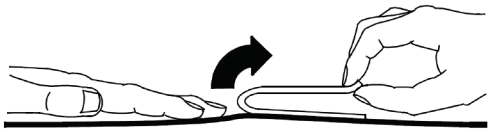

Figure 37 Removing Therapy Electrodes from Skin

2. Clean and dry the patient's skin.
3. When applying new electrodes, adjust the positions slightly to help prevent skin burns.
4. Close the protective cover on the therapy cable connector when the cable is not in use.

Cleaning and Inspection

QUIK-COMBO electrodes are not sterile or sterilizable. They are disposable and are for a single patient application. Do not autoclave, gas sterilize, immerse in fluids, or clean electrodes with alcohol or solvents.

Include daily inspection of the QUIK-COMBO therapy electrode package as part of your defibrillator test routine. Daily inspection helps ensure that the therapy electrode has not exceeded the electrode package Use By date and is ready for use when needed. For more information about daily inspection and testing, see the Operator's Checklist in the back of this manual.

Standard Paddles

Adult Standard Paddles

Standard paddles are hard, hand-held paddles that are applied to the patient's chest to briefly monitor the ECG or to deliver defibrillation shocks. The following figure describes the features of the standard paddles.

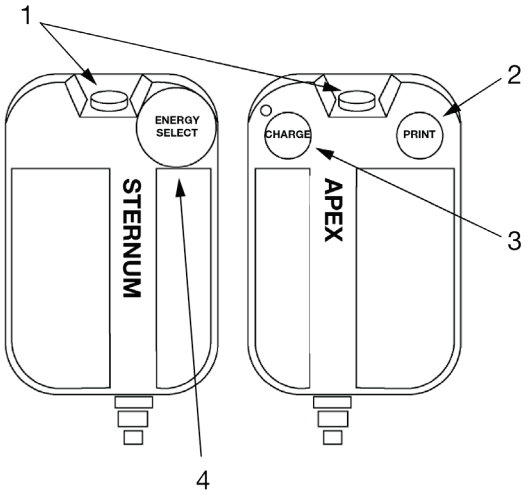

Figure 38 Standard Paddles

FIGURE LEGEND	
1	⚡ (Shock) buttons. Discharge the defibrillator. Both buttons must be pressed simultaneously to deliver energy.
2	**PRINT** button. Activates printer. Function is identical to **PRINT** button on front panel.
3	**CHARGE** button. Charges the defibrillator. Adjacent **CHARGE** indicator flashes when device is charging and glows steadily when fully charged.
4	**ENERGY SELECT** dial. Rotary dial changes energy levels displayed on the screen.

A standard paddle set:

- Can be used instead of QUIK-COMBO therapy electrodes.
- Provides Lead II monitoring signal when held in the anterior-lateral position.
- Is used for defibrillation, synchronized cardioversion, and QUIK-LOOK® ECG checks.

To help prevent standard paddles damage:

- Handle with care to prevent damage to paddle surfaces.
- Store in paddle wells on the device to protect the electrode surface.
- Clean dried or wet gel from the electrode surface after each use.

Cleaning and Inspecting Standard Paddles

After each use:

1. Wipe standard paddle electrodes, handles, paddle wells, cables, and connector with mild disinfectant or soap and water solution. Do not immerse or soak.
2. Dry thoroughly.
3. Examine paddle surfaces, handles, cables, and connectors for damage or signs of wear.
   - Cables that show signs of wear such as loose cable connections, exposed wires, or cable connector corrosion must be removed from use immediately.
   - Paddles that have rough or pitted electrodes should be removed from use immediately.

Note: Standard paddles are not sterile or sterilizable. Do not autoclave, gas sterilize, immerse in fluids, or clean with alcohol or solvents.

Testing Standard Paddles

Include inspecting and testing of the standard paddles as part of your defibrillator test routine. Daily inspection and testing helps ensure that the standard paddles are in good operating condition and are ready for use when needed. For more information about inspection and testing, see the Operator's Checklist in the back of this manual.

Pediatric Paddles

Pediatric paddles slide onto adult paddles. Pediatric paddles should be used for patients weighing less than 10 kg (22 lb) or for patients whose chest size cannot accommodate the adult hard paddles.

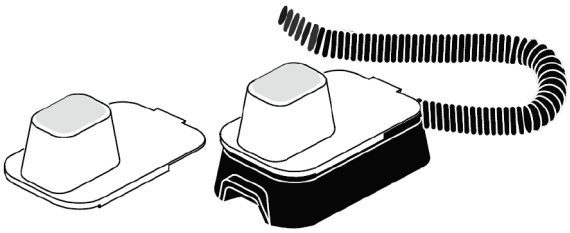

Figure 39 Pediatric Paddles

Use the adult paddle controls for selecting energy and charging. Each pediatric paddle attachment has a metal spring plate with a contact on it that transfers defibrillation energy from the adult paddle electrode to the pediatric paddle. This solid cadmium-silver contact will not scratch the adult paddle electrode.

Note: Inspect the spring plates and the contacts routinely to make sure that they are clean and intact.

Attaching Pediatric Paddles

To attach the pediatric paddles:

1. Slide the paddles onto clean adult paddles, starting at the front of the adult paddle (see following figure).
2. Slide the pediatric paddle until you feel the paddles lock in place.

Note: Do not use conductive gel *between* adult and pediatric paddles.

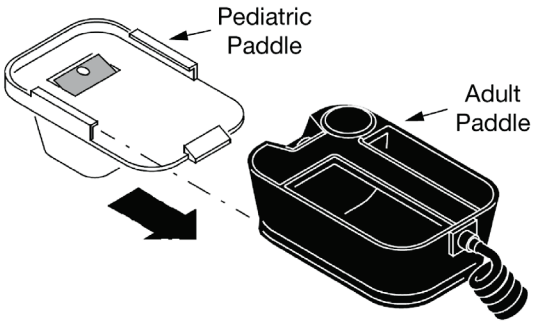

Figure 40 Attaching a Pediatric Paddle

Removing Pediatric Paddles

To remove pediatric paddles:

1. Press down on the rear tab.
2. Slide the pediatric paddle off.

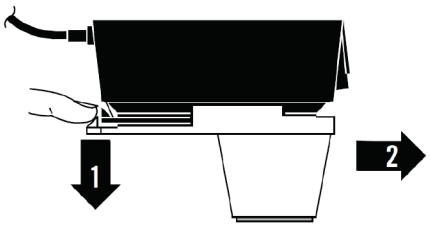

Figure 41 Removing a Pediatric Paddle

Placing Pediatric Paddles

Adult paddles are recommended if the paddles fit completely on the child's chest. Allow at least 2.5 cm (1 in.) of space between the paddles.

For infants with very small chests, pediatric paddles may be too large to place in the anterior-lateral position. In this situation, place paddles in the anterior-posterior position. Holding the paddles against the chest and back supports the patient on his or her side.

Do not use the pediatric paddles on adults or older children. Delivery of recommended adult energies through this relatively small electrode surface increases the possibility of skin burns.

Anterior-Lateral Placement. Standard pediatric paddle placement includes (see following figure):

- **STERNUM** paddle to the patient's right upper torso, lateral to the sternum and below the clavicle.
- **APEX** paddle lateral to the patient's left nipple in the midaxillary line, with the center of the paddle in the midaxillary line, if possible.

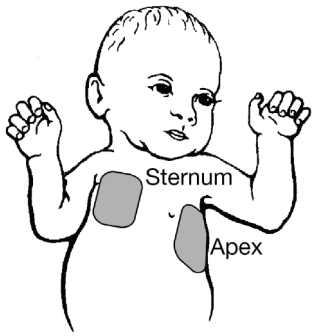

Figure 42 Anterior-Lateral Paddle Position

Anterior-Posterior Placement. Place the **APEX** paddle anteriorly over the left precordium and the **STERNUM** paddle posteriorly behind the heart in the infrascapular area (see following figure).

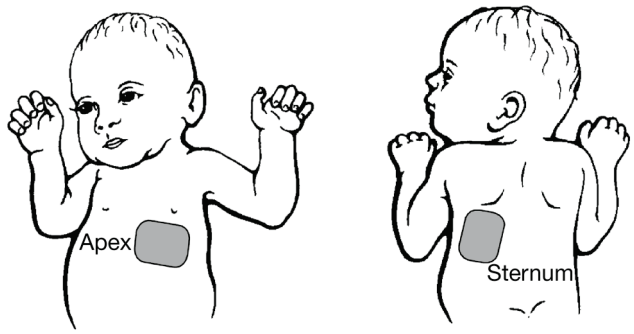

Figure 43 Anterior-Posterior Paddle Position

Cleaning and Inspecting Pediatric Paddles

Individually protect paddles before and after cleaning to prevent damage to paddle surfaces. After each use:

1. Wipe or rinse paddle electrodes, cable connector, paddle handles, and cables with mild soap and water or disinfectant using a damp sponge, towel, or brush. Do not immerse or soak.
2. Dry thoroughly.
3. Examine paddle surfaces, connector, handles, and cables for damage or signs of wear.
   - Cables that show signs of wear such as loose cable connections, exposed wires, or cable connector corrosion should be removed from use immediately.
   - Paddles that have rough or pitted electrodes should be removed from use immediately.

Sterilizable Internal Defibrillation Paddles

Physio-Control internal paddles are specifically designed for open chest cardiac defibrillation.

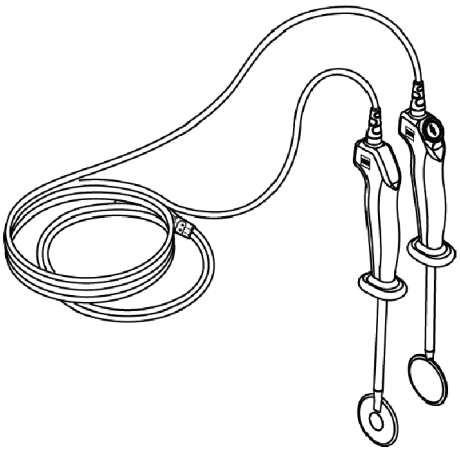

Figure 44 Sterilizable Internal Defibrillation Paddles

Internal paddles are available in several sizes. To order internal paddles, contact your Physio-Control representative. In the USA, call Customer Support at 1.800.442.1142, option 2.

For complete information about using internal paddles to provide open chest cardiac defibrillation, see the *Instructions for Use* provided with the internal paddles.

Chapter 7

Data Management

This chapter describes how to manage current and archived Patient Records when using the LIFEPAK 15 monitor/defibrillator.

Patient Records and Reports 163
Memory Capacity 169
Managing Current Patient Records 169
Managing Archived Patient Records 171

Patient Records and Reports

When you turn on the LIFEPAK 15 monitor/defibrillator, a new Patient Record is created and stamped with the current date and time. All events and associated waveforms are digitally stored in the Patient Record as reports, which you can print, transmit, or download to the LIFENET® System, or to post-event review products such as CODE-STAT™ or DT EXPRESS™ software. For information on how to print a report, see How to Print a Current Report (on page 169). For information on how to transmit or download a report, see Data Transmission (on page 175). When you turn off the device, the current Patient Record is saved in the archives.

You can also print, transmit, download, or delete any Patient Records that are stored in the archives. To access the archives, press **OPTIONS** and then select **ARCHIVES**. When you enter Archive mode, patient monitoring ends and the current Patient Record is saved and closed. Turn off the device to exit Archive mode. For more information, see Managing Archived Patient Records (on page 171).

Report Types

The reports that are available in a Patient Record depend on the features in your device and how your device is set up. For information on setting up your device, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device. The following table describes the various report types that may exist in a Patient Record and how they can be accessed.

Table 26 Report Types

REPORT TYPE	DESCRIPTION	PRINT FROM MONITOR	TRANSMIT
12-Lead ECG Report	The diagnostic 12-lead ECG report. For more information, see Printed 12-Lead ECG Report Formats (on page 64).	X	X[1]
CODE SUMMARY™ Critical Event Record	Includes patient information, event and vital sign log, and waveforms associated with events (for example, defibrillation). For more information, see CODE SUMMARY Report (on page 164).	X	X
Vital Signs Summary	Includes patient information and event and vital sign log.	X	X
Trend Summary	Includes patient information, vital sign log, and vital sign graphs.	X	X
Snapshot Report	Includes patient information and 8 seconds of waveform data captured at the time of transmission.		X
Continuous Report[2]	Provides real-time waveform data, acquired when the device is powered on and electrodes are connected or other waveform data is displayed in channels 2 or 3. Only for post-event review with CODE-STAT or DT EXPRESS software.		X

[1] Transmission of a 12-lead ECG report automatically includes transmission of the Vital Signs Summary.
[2] To obtain CPR analytics using CODE-STAT software, therapy electrodes must be connected to the patient.

Note: All reports that are transmitted to the LIFENET System include the following information:

- Battery status
- Power adapter status
- Device usage information
- Manufacturing configuration settings
- 3:00 A.M. self-test results

CODE SUMMARY Report

The LIFEPAK 15 monitor/defibrillator automatically stores a CODE SUMMARY report as part of the Patient Record for each patient. The CODE SUMMARY report can be set up to always print in a particular format. The available formats are shown in the following table. For CODE SUMMARY setup information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

To generate a CODE SUMMARY report, press **CODE SUMMARY**. If you interrupt printing of a CODE SUMMARY report, the entire CODE SUMMARY report is reprinted when printing is resumed. "Code Summary Complete" prints immediately following the last waveform event.

Table 27 CODE SUMMARY Formats

FORMAT	ATTRIBUTES
Long format	• Preamble • Event/vital sign log • Event waveforms • 12-lead ECG reports • Trend Summary
Medium format	• Preamble • Event/vital sign log • Event waveforms • Trend Summary
Short format	• Preamble • Event/vital sign log • Trend Summary

Note: When CODE SUMMARY reports are transmitted, they are always sent in the long format. Transmitted CODE SUMMARY reports do not include the Trend Summary.

The CODE SUMMARY report always contains the Preamble and the Event/Vital Sign Log. See the following figure for an example.

1 2

Name:	**Lee, William**
Record ID:	041495094322
Patient ID:	5287600004
Incident:	BF382
Age: 50	**Sex: M**
CODE SUMMARY™ critical event record	
Power On:	24 Apr 13 06:03:12
Device:	010
Site:	123
Total Shocks:	3
Total Time Paced:	00:15:00
Total 12-leads:	6
Elapsed Time:	00:52:43
COMMENTS:	
35.1 0005HDKFIEJSJG LP1586937694	

Time	Event	HR	SpO2•PR	SpCO	SpMet	EtCO2(mmHg)•RR	NIBP•PR	P1	P2
07:15:34	Power On								
07:18:24	Initial Rhythm	95	99•95		38•12				
07:20:34	Vital Signs	96	98•96	2	.4	37•12			
07:20:55								**ART**	
07:22:20	NIBP	99	99•99	2	.4	37•11	138/72(93)•99		
07:23:31	Pacing 1 Started	95	98•95	2	.4	38•12		138/70(92)	24/15(19)
07:24:36	Pacing 2 Set	93	99•93	2	.4	37•10		138/70(92)	24/15(19)
07:25:10	Intubation	100	96•100	2	.4	34•8		128/66(80)	22/15(18)
07:25:34	Vital Signs	96	98•96	2	.4	37•12		138/70(92)	24/15(19)
07:27:04	Pacing 3 Stopped	91	98•91	2	.4	37•12		138/70(92)	24/15(19)
07:29:20	Alarm HR	161	98•161	2	.4	38•11		138/70(93)	24/15(19)
07:30:34	Vital Signs	96	98•95	2	.4	37•12		138/70(92)	24/15(19)
07:31:00									**CVP**
07:31:18	CPR: No Airway 30:2	88	97•88	2	.4	37•15		130/81(105)	7
07:32:22	Metronome Off	--	96•--	2	.4	34•--		98/66(80)	8
07:33:11	Shock 1 200J	--	96•--	2	.4	34•--		98/66(80)	8
07:33:59	Shock 2 200J	--	96•--	2	.4	34•--		98/66(80)	8
07:35:11	Shock 3 360J	--	96•--	2	.4	34•--		98/66(80)	9
07:35:34		35	98•35	2	.4	37•4		108/70(92)	9

Figure 45 CODE SUMMARY Report

FIGURE LEGEND	
1	Preamble
2	Event/Vital Sign Log

Preamble

The preamble consists of patient information (name, patient ID, age, and sex) and device information (date, time, and therapy information) as shown in the preceding figure. The defibrillator automatically enters a unique identifier in the ID field for each Patient Record. This identifier is composed of the date and time that the defibrillator is turned on. The Incident field allows you to enter up to 14 alpha-numeric characters to link the device to other documents such as an EMS Run Report.

Event/Vital Sign Log

The LIFEPAK 15 monitor/defibrillator documents events and vital signs in chronological order. Events are operator or device actions, such as actions that are related to monitoring, pacing, AED therapy, or data transmission. Values for each active vital sign are entered into the log automatically every 5 minutes and for each event. The following table lists events that may be found in the Event Log.

Table 28 Possible Event Log Entries

Monitoring
- Check patient
- Initial rhythm
- Replace battery
- 12-lead
- NIBP
- Alarm events
- IP label change
- Vital signs
- 5-wire on/off
- SpCO/SpMet Advisory

AED
- Connect electrodes
- Motion
- Analysis
- Analysis stopped
- Shock advised
- No shock advised

CPR Metronome
- On/Off
- Age-Airway changed

Defibrillation
- Manual mode
- Charge removed
- Shock X, XXXJ
- Shock X, Abnormal

Operator Initiated
- Event
- Alarms on/off
- Print
- VF/VT alarm on/off
- Sync on/off
- Snapshot
- Internal pacer detection on/off

Pacing
- Started
- Set
- Changed
- Stopped
- Paused

Transmission
- Transmission complete
- Transmission failed
- Transmission cancelled

Memory Status
- Out of waveform memory (memory low)
- Out of event memory (memory full)

Waveform Events

In addition to being documented in the Event Log, therapy and other selected events also capture waveform data that are printed with the long and medium CODE SUMMARY report. The waveform events and the characteristics of waveform data are described in the following table.

Table 29 Waveform Events

EVENT NAME	WAVEFORM DATA (WHEN CAPTURED)
INITIAL RHYTHM	8 seconds after leads on
CHECK PATIENT	8 seconds prior to alert
SHOCK or NO SHOCK ADVISED	2-3 segments of analyzed ECG. Each segment is 2.7 seconds
ANALYSIS X STOPPED	8 seconds of data prior to cessation of analysis
SHOCK X	3 seconds prior to shock and 5 seconds after shock
PACING X STARTED	8 seconds prior to increase of current from 0
PACING X SET	8 seconds after ppm and mA are stable for 10 seconds
PACING X CHANGED	8 seconds after pacing rate, current, or mode is changed

EVENT NAME	WAVEFORM DATA (WHEN CAPTURED)
PACING X STOPPED	3 seconds prior to pacing current is zero and 5 seconds after
PACING X PAUSED	Initial 8 seconds while **PAUSE** is pressed
ALARM*	3 seconds prior to violated parameter and 5 seconds after
EVENT*	3 seconds prior to event selection and 5 seconds after
PRINT	3 seconds prior to pressing **PRINT** and 5 seconds after
12-LEAD	10 seconds after **12-LEAD** is pressed
SNAPSHOT	3 seconds prior to and 5 seconds after SNAPSHOT requested
VITAL SIGNS	3 seconds prior to and 5 seconds after vital signs are acquired

*To reduce the length of the CODE SUMMARY report, storing waveform data with these events can be set to OFF (see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device).

Waveform events are preceded by a header that includes the following information:

- Patient data
- Event name
- Therapy data*
- Vital signs
- Device configuration information

*Patient impedance (in ohms) appears on shock reports when using disposable defibrillation electrodes. This impedance is measured just prior to the shock and is used to determine voltage compensation.

The following figures show four examples of waveform events as they would appear in the CODE SUMMARY report.

Analysis Event

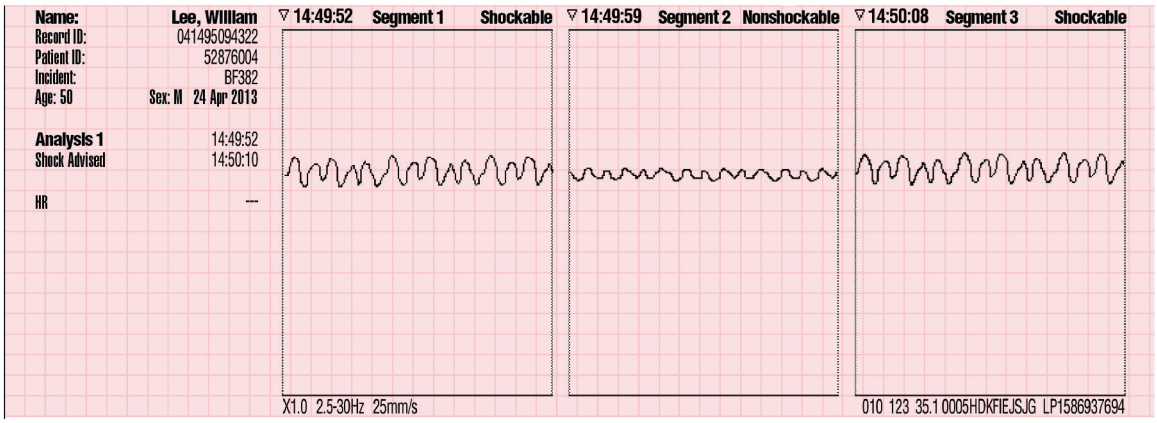

Shock Event

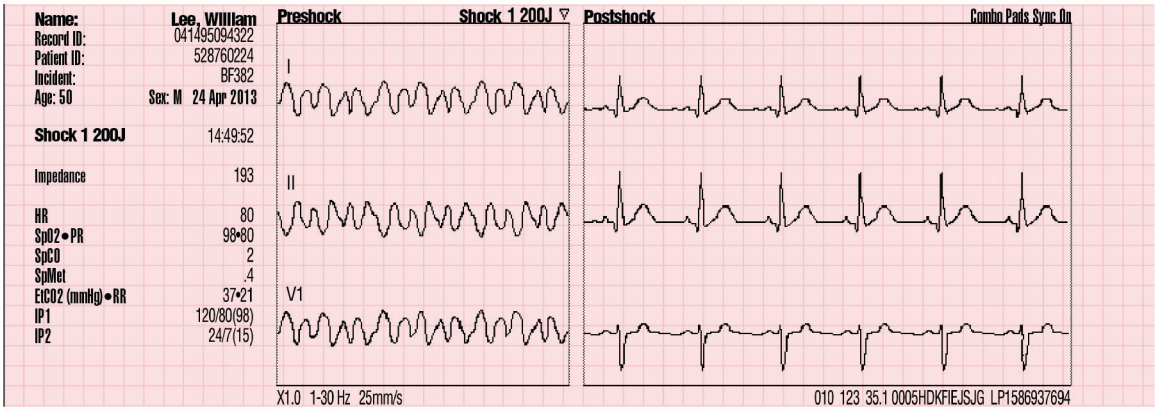

Check Patient Event

Pacing Event

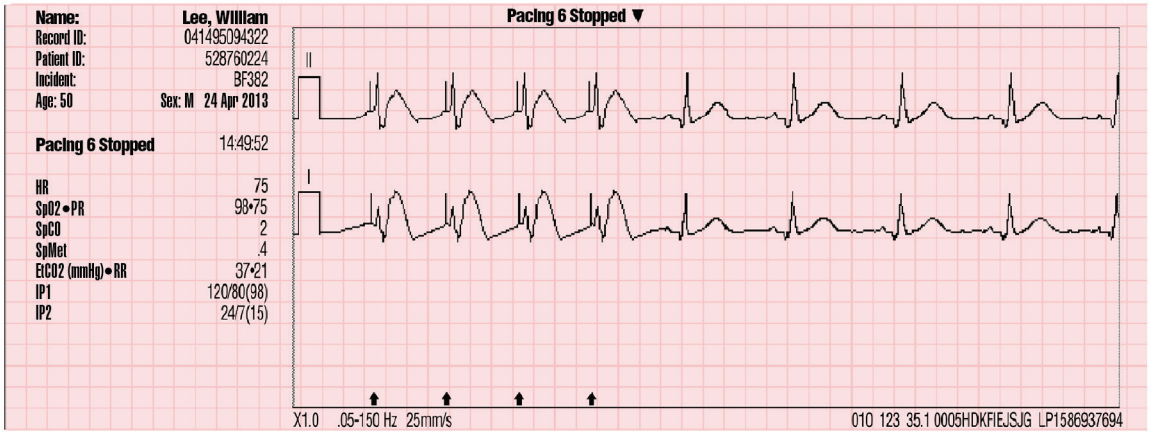

Figure 46 Waveform Event Printout Examples

Memory Capacity

The LIFEPAK 15 monitor/defibrillator retains data for two or more patients when you switch power off or remove the batteries. The number of patient reports that the LIFEPAK 15 monitor/defibrillator can store depends on various factors, including the number of displayed waveforms, the duration of each use, and the type of therapy. The total capacity is 360 minutes of continuous ECG, 90 minutes of continuous data from all channels, or 400 single waveform events. The maximum memory capacity for a single patient includes up to 200 single waveform reports and 90 minutes of continuous ECG. When the defibrillator reaches the limits of its memory capacity, the defibrillator deletes an entire Patient Record using a "first in, first out" priority to accommodate a new Patient Record. Deleted Patient Records cannot be retrieved.

Managing Current Patient Records

You can add specific patient information to a current Patient Record. For more information, see Entering Patient Data (on page 42).

How to Print a Current Report

To print a current report:

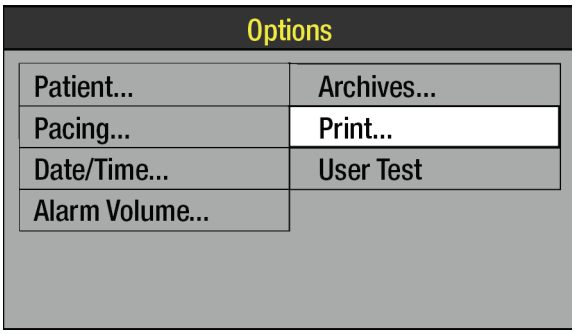

1. Press **OPTIONS**. The Options menu appears.
2. Select **PRINT**. The Options/Print menu appears.

Options / Print	
Print	
Report	Code Summary
Format	3-Channel
Mode	Monitor
Speed	25mm/sec

3 If the **REPORT**, **FORMAT**, and **MODE** settings are correct, select **PRINT**. Otherwise, make changes as desired.

Select a REPORT:

- **CODE SUMMARY**
- **TREND SUMMARY**
- **VITAL SIGNS**
- **12-LEAD**

Note: A check next to a 12-lead report indicates that the report was previously printed.

Select a **FORMAT** (for 12-Lead ECG only):

- **3-CHANNEL**
- **4-CHANNEL**

Select a **MODE** to change the frequency response of ECG reports:

- **MONITOR**
- **DIAGNOSTIC** (12-Lead reports always print in Diagnostic mode)

Select the **SPEED** option on this menu to change the speed of the continuous printout when the **PRINT** button is pressed. Note that this **SPEED** option does not affect reports that are printed from this menu. Available printing speeds for the **PRINT** button are:

- **12.5 mm/sec**
- **25 mm/sec**

Managing Archived Patient Records

When you turn off the LIFEPAK 15 monitor/defibrillator, the current Patient Record is saved in the archives. You can print, edit, delete, or download archived records. For information about downloading to CODE-STAT software, see Data Transmission (on page 175). You can also transmit individual reports from an archived Patient Record. For information about transmitting an archived report, see Data Transmission (on page 175).

Note: When you enter Archive mode, patient monitoring ends (for example, no ECG, no alarms) and the current Patient Record is saved and closed.

Accessing Archive Mode

To enter Archive mode:

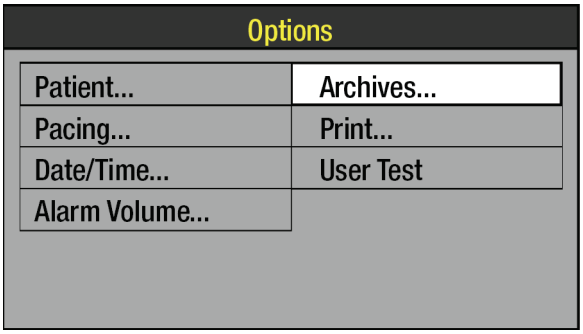

1 Press **OPTIONS**. The Options menu appears.

2 Select **ARCHIVES**. The Options/Archives menu appears.

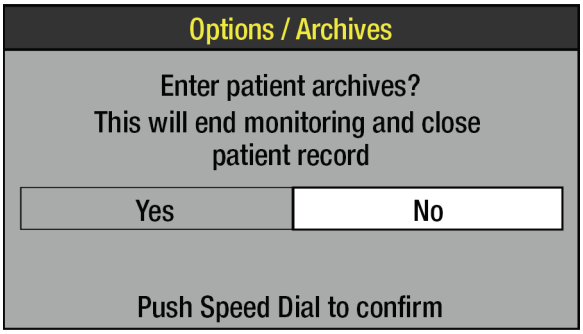

3 Select **YES**. The device enters Archive mode and the Options/Archives menu appears.

Note: Your device may be set up so that you must enter a password to enter Archive mode.

Note: To exit Archive mode, power off the device.

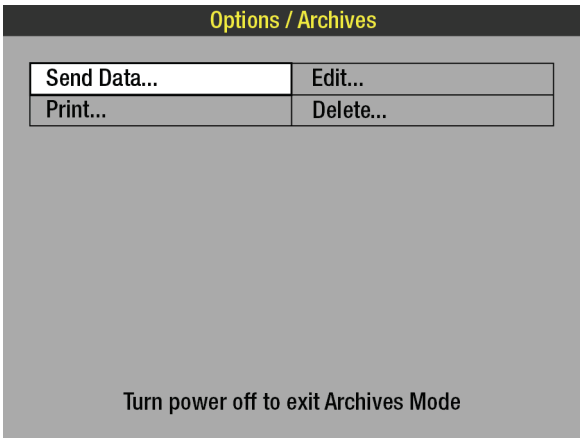

You can send, print, edit, or delete an archived record. For information about sending an archived record, see Data Transmission (on page 175).

Printing Archived Patient Reports

To print archived patient reports:

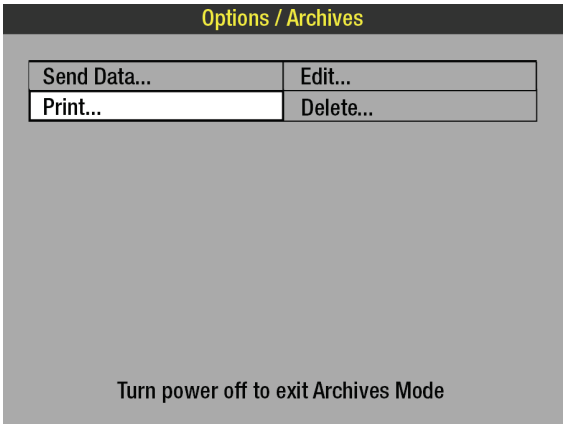

1 In Archive mode, select **PRINT**. The Options/ Archives/Print menu appears showing the current patient.

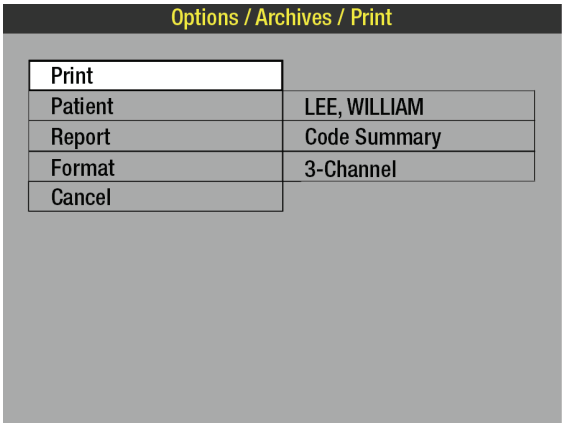

2 If the **PATIENT**, **REPORT**, and **FORMAT** settings are correct, go to Step 6.

3 To select a different patient, select **PATIENT** and then select the desired patient from the list.

4 To select a different report, select **REPORT** and then select one of the following:

- **CODE SUMMARY**
- **TREND SUMMARY**
- **VITAL SIGNS**
- **12-LEAD**

5 To select a different format, select **FORMAT** and then select one of the following (for 12-Lead ECG only):

- **3-CHANNEL**
- **4-CHANNEL**

6 Select **PRINT**. The archived report is printed.

Editing Archived Patient Records

To edit archived patient records:

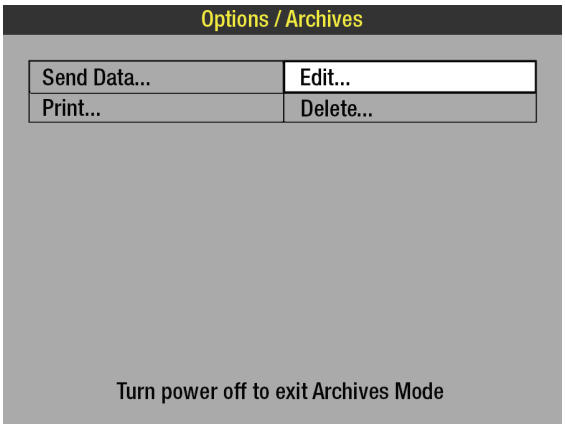

1 In Archive mode, select **EDIT**. The Options/Archives/Edit menu appears.

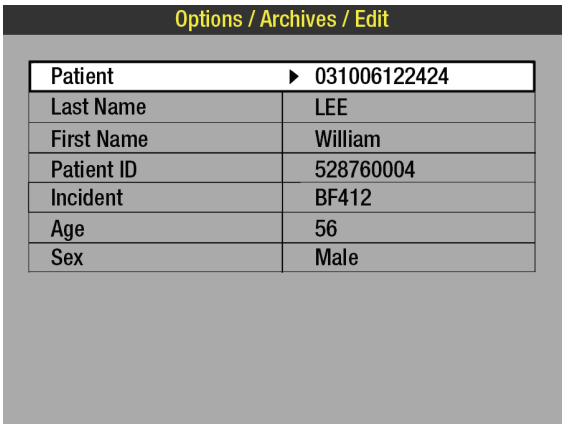

2 Select **PATIENT**.

3 Add the necessary patient information. Only blank fields may be edited.

4 Press **HOME SCREEN** and then turn off the device.

Deleting Archived Patient Records

To delete archived patient records:

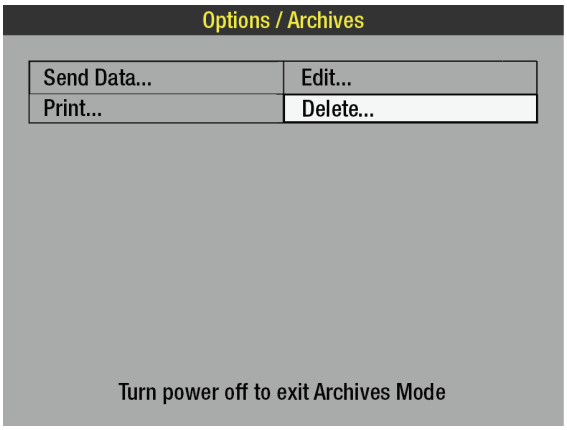

1 In Archive mode, select **DELETE**. The Options/Archives/Delete menu appears.

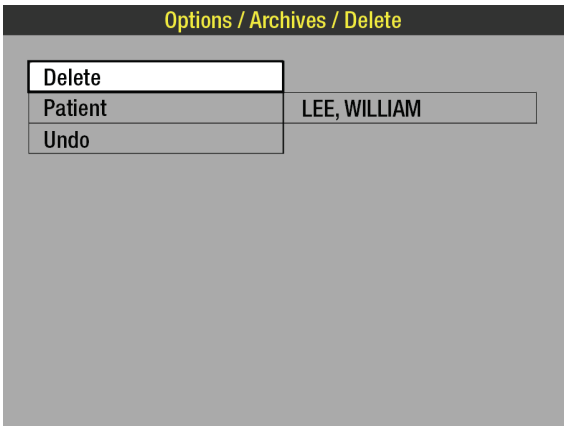

2 To permanently remove the Patient Record that is displayed, select **DELETE**.

3 To see the list of all patient records, select **PATIENT**. The patient list appears. Select the Patient Record you want to delete.

4 To undo the delete operation, immediately select **UNDO**. If you continue with other device operations, you cannot undo the deletion.

5 Press **HOME SCREEN** and then turn off the device.

Chapter 8

Data Transmission

This chapter describes how to transmit Patient Records and reports from the LIFEPAK 15 monitor/defibrillator.

About Transmitting Patient Records and Reports 177

Preparing the Monitor for Transmission 178

Using Bluetooth Wireless Communication 178

Using a Direct Connection 183

Transmitting Reports 185

Considerations When Transmitting Data 187

Troubleshooting Tips 188

About Transmitting Patient Records and Reports

You can transmit current and archived data from the LIFEPAK 15 monitor/defibrillator to the LIFENET® System or to post-event review products such as CODE-STAT™ or DT EXPRESS™ software.

The LIFEPAK 15 monitor can transmit patient reports using the following methods:

- *Bluetooth*® wireless connection—If your LIFEPAK 15 monitor has the *Bluetooth* feature installed and enabled, you can transmit data using a wireless connection.
- Direct cable connection—You can use a special cable to establish a direct connection from the LIFEPAK 15 monitor to a PC or gateway, and transmit data using this wired connection.

The following figure represents an overview of the data transmission process.

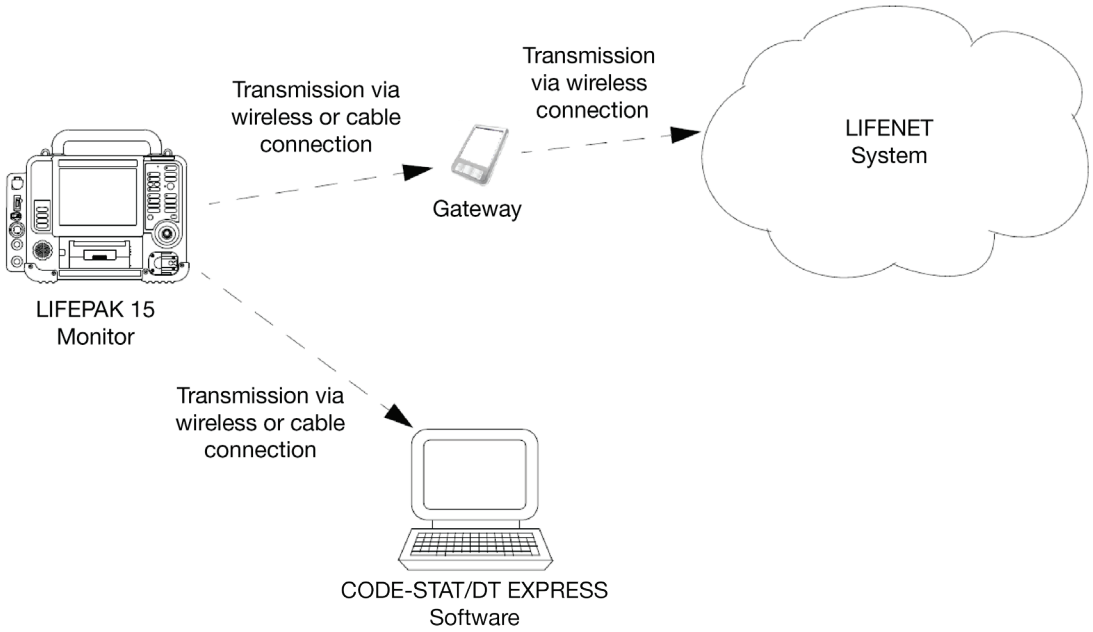

Figure 47 Transmitting Data from the LIFEPAK 15 Monitor/Defibrillator

For information about configuring your LIFEPAK 15 monitor to work in the LIFENET System, see the LIFENET System help documentation or contact your Physio-Control representative.

Preparing the Monitor for Transmission

Before you can transmit using a wireless or direct connection, you must define transmission sites and output ports in the LIFEPAK 15 monitor Setup mode.

For each transmission site, select an output port:

- For wireless transmission, set **OUTPUT PORT** to **BLUETOOTH WIRELESS**.
- For a direct connection, set **OUTPUT PORT** to **DIRECT CONNECT**.
- Set **OUTPUT PORT** to **BOTH** if you normally transmit using a *Bluetooth* connection but you need a direct cable backup. (If you set **OUTPUT PORT** to **BOTH**, make sure the *Bluetooth* LED is not illuminated before you attempt to transmit using a direct connection. The device will not transmit using the direct connection when a wireless connection is available.)

For more information, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.

Using Bluetooth Wireless Communication

Bluetooth technology is a short-range wireless communication technology that is available as an option on the LIFEPAK 15 monitor/defibrillator. When *Bluetooth* technology is installed, the *Bluetooth* icon appears on the Home Screen. See Figure, Bluetooth Icon on the Home Screen (on page 179).

See the *Bluetooth* label in battery well 2 for FCC and Industry Canada radio identification numbers.

A *Bluetooth* connection between the LIFEPAK 15 monitor and a target device is always initiated from the LIFEPAK 15 monitor.

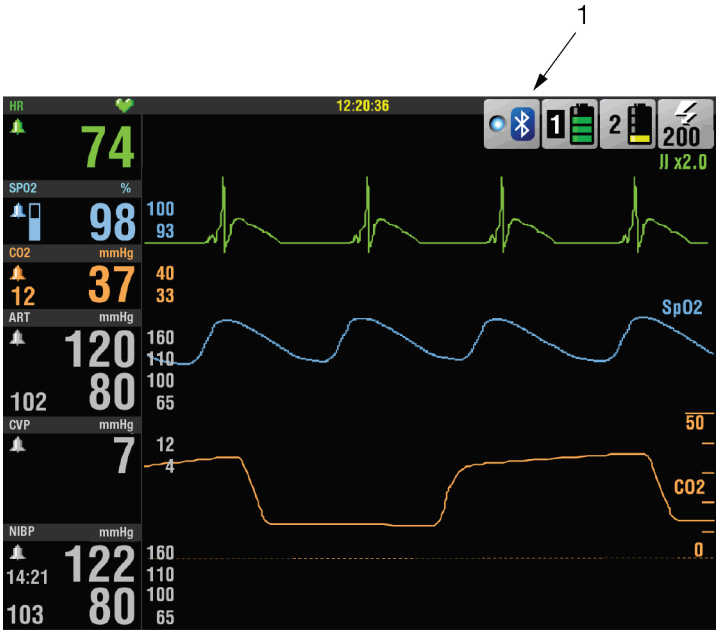

Figure 48 *Bluetooth* Icon on the Home Screen

FIGURE LEGEND	
1	Bluetooth icon

The *Bluetooth* icon shows the status of the wireless connectivity in the device.

Bluetooth Passcodes

The LIFEPAK 15 monitor has a *Bluetooth* passcode that you define.

To transmit from the LIFEPAK 15 monitor to a headless gateway (a device that has no user interface), the *Bluetooth* passcode that you enter in the LIFEPAK 15 monitor must match the *Bluetooth* passcode that is preconfigured in the gateway. For information about the *Bluetooth* passcode in the headless gateway, see the documentation that ships with the gateway, or consult your system administrator or equipment technician.

To transmit from the LIFEPAK 15 monitor to a PC, you need to set a *Bluetooth* passcode in the LIFEPAK 15 monitor, and then enter that passcode on the PC, if prompted.

Bluetooth Search Filter

A *Bluetooth*-enabled LIFEPAK 15 monitor may discover numerous *Bluetooth* devices that are within range. To help filter out extraneous devices and find the specific target device that you want to transmit to, Physio-Control developed the Physio Service Class (PSC).

The PSC is a prefix that you can add to the friendly name of your target devices. Then when you set the **SEARCH FILTER** to **ON** in the LIFEPAK 15 monitor, only target devices that have the PSC

prefix in their names appear in the list of discovered devices (if they are powered on and discoverable).

The various PSC prefixes correspond to LIFEPAK 15 monitor modes of operation. The following table lists the LIFEPAK 15 monitor modes and the service class and friendly name prefix that is discoverable in each mode. For example, when the LIFEPAK 15 monitor is in Archive mode and the filter is on, it can discover devices whose friendly names begin with A_ or B_.

Table 30 Physio Service Class Prefixes

LIFEPAK 15 MONITOR/DEFIBRILLATOR MODE	SERVICE CLASS	FRIENDLY NAME PREFIX
LIFEPAK 15 monitor must be in Archive mode	Archive	A_
LIFEPAK 15 monitor can be in AED, Manual, or Archive mode	Both Cardiac Care and Archive	B_
LIFEPAK 15 monitor can be in AED or Manual mode	Cardiac Care	C_

For information about configuring the friendly name in your target devices, see the documentation provided with those devices.

Bluetooth Setup

Use the *Bluetooth* Setup menu to set up the *Bluetooth* transmission on the LIFEPAK 15 monitor.

To access the *Bluetooth* Setup menu:

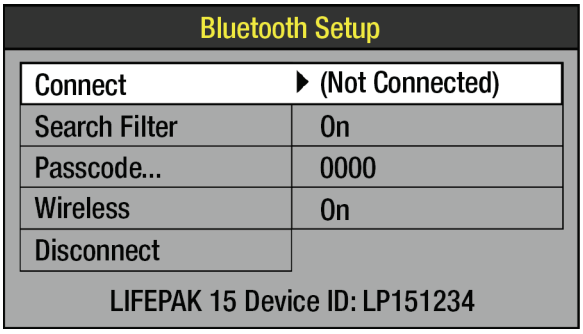

1. On the **HOME SCREEN**, rotate the **SPEED DIAL** to outline the Bluetooth icon.
2. Press the **SPEED DIAL**. The *Bluetooth* Setup menu appears.
3. Set **SEARCH FILTER** to **ON** if you want to find only devices that include the PSC in their friendly name; otherwise, set **SEARCH FILTER** to **OFF**.
4. Set a *Bluetooth* passcode.
   - To transmit to a headless gateway, enter the passcode that is preconfigured in the gateway.
   - To transmit to a PC, you may need to enter a passcode or acknowledge the connection.
5. Ensure that **WIRELESS** is set to **ON**.

Note: The default setting for **WIRELESS** is **ON**, and the default setting for **SEARCH FILTER** is **OFF**. Use the **WIRELESS** setting to turn off the wireless signal when operating the LIFEPAK 15 monitor in an environment where transmission is not desirable.

Establishing a Bluetooth Connection

You must know the friendly name of the target device that you want to connect to.

To establish a *Bluetooth* connection:

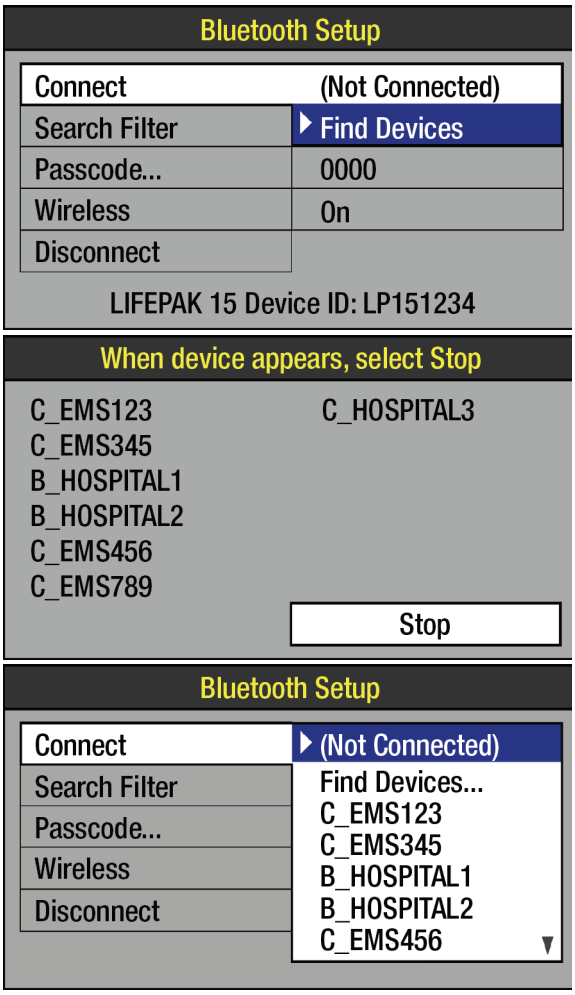

1. On the LIFEPAK 15 monitor, use the **SPEED DIAL** to select the *Bluetooth* icon and access the *Bluetooth* Setup menu.
2. Select **CONNECT** and then select **FIND DEVICES**. This will disconnect any existing connections.

   Note: If the LIFEPAK 15 monitor is set to **WIRELESS OFF**, wireless status changes to **WIRELESS ON**.

   - The Find Devices menu appears. The monitor begins searching for *Bluetooth* devices that are in the area and that meet the search filter criteria.
   - Devices are displayed in the order found—the most recently found device appears at the top of the list.
3. When the desired device appears, press the **SPEED DIAL** to select **STOP** and end the search. You return to the Bluetooth Setup menu.
4. Use the **SPEED DIAL** to scroll through the list and select the desired device.
5. If you are connecting to a PC, you may be prompted to acknowledge the connection. Enter the passcode, if requested, and then accept the connection.
6. When the connection is made, an alert tone sounds, the Bluetooth LED on the Home Screen is illuminated, and **CONNECTED TO (DEVICE NAME)** briefly appears in the message area.

After you establish a *Bluetooth* connection, you are ready to transmit patient data. Proceed to Transmitting Reports (on page 185).

Re-establishing a Bluetooth Connection

The LIFEPAK 15 monitor retains in its memory two last-connected devices, limited to one in each mode—one for cardiac care (AED or Manual mode) and one for Archive mode. When the LIFEPAK 15 monitor is powered on and the wireless feature is set to **WIRELESS ON**, the monitor automatically searches for the last connected device. If the last connected device in that mode is turned on and within range, a connection is established automatically. When a connection is established, the *Bluetooth* LED is illuminated and **CONNECTED TO (DEVICE NAME)** appears in the message area.

Note: If **RESET DEFAULTS** is selected in Setup mode, the *Bluetooth* passcode is not reset. However, connections to the last-connected devices are reset (terminated). To re-establish a connection, use **FIND DEVICES**.

Table 31 Bluetooth Status

BLUETOOTH ICON	DESCRIPTION
	The *Bluetooth* LED is illuminated when the *Bluetooth* feature is enabled in this device and this device is connected to another *Bluetooth*-enabled device.
	The *Bluetooth* icon appears but the LED is not illuminated when the *Bluetooth* feature is enabled in this device, but this device is currently not connected to another *Bluetooth*-enabled device.
	A red X appears when the *Bluetooth* feature is installed in this device, but wireless communication is currently set to **OFF** or there is a *Bluetooth* malfunction. See Troubleshooting Tips for Data Transmission (on page 188).

Preparing for a Wireless Transmission

Before you can send wireless transmissions from the LIFEPAK 15 monitor, you must prepare the monitor and target devices for communication.

The target device must:

- Be *Bluetooth*-enabled, turned on, and discoverable.
- Have the LIFENET PC Gateway application or the patient care reporting software CODE-STAT or DT EXPRESS installed and running.
- Have a *Bluetooth* COM port configured for incoming data.
- Have an established friendly name.

The LIFEPAK 15 monitor must:

- Have at least one transmission site defined that has **OUTPUT PORT** set to **BLUETOOTH WIRELESS**.
- Have a *Bluetooth* passcode that matches the passcode in the target device, if the target device requires a passcode.
- Have **SEARCH FILTER** set to **ON** if you are using the Physio Service Class. For information about the Physio Service Class, see Bluetooth Search Filter (on page 179) later in this chapter.

Terminating a Bluetooth Connection

When the *Bluetooth* LED is illuminated, the LIFEPAK 15 monitor has a wireless connection established with another *Bluetooth* device.

To terminate a *Bluetooth* connection:

1. Use the **SPEED DIAL** to select the *Bluetooth* icon and access the *Bluetooth* Setup menu.
2. Select **DISCONNECT**. The *Bluetooth* connection is terminated and is not retained as the last connected device.

Using a Direct Connection

A special cable can be used to create a direct connection between the LIFEPAK 15 monitor and a gateway or PC. The following figure shows the equipment connections to send reports directly to a computer using a direct cable connection.

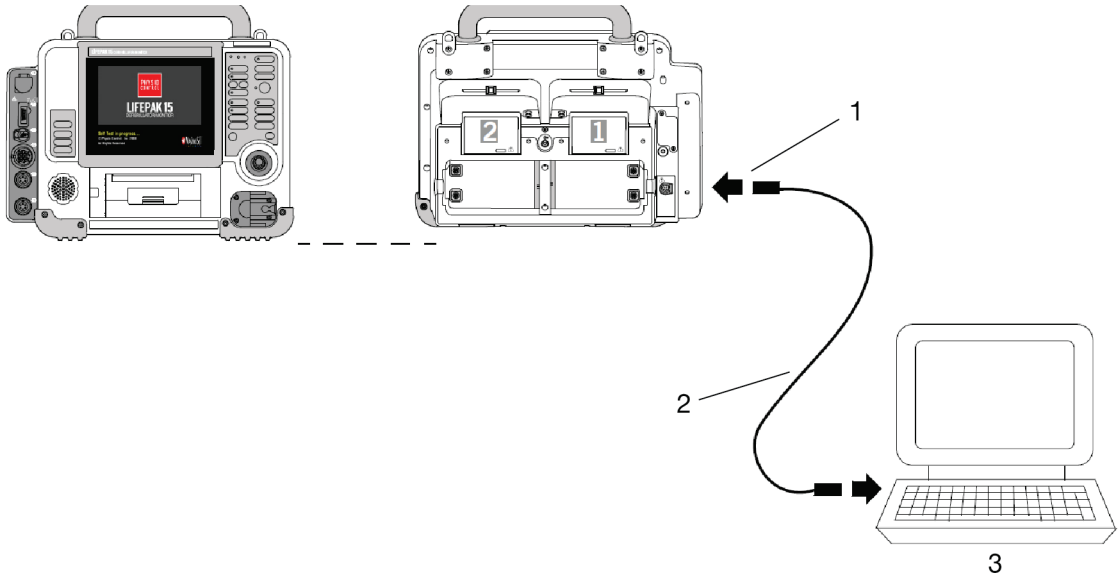

Figure 49 Data Transmission using a Direct Connection

FIGURE LEGEND	
1	System connector
2	LIFEPAK monitor to PC cable
3	Computer

WARNING

Shock Hazard

All equipment connected to the system connector must be battery powered or electrically isolated from AC power according to IEC 60601-1. If in doubt, disconnect the patient from the defibrillator before using the system connector. Only use Physio-Control recommended data transmission cables. For more information, contact Physio-Control Technical Support.

WARNING

Improper Device Performance Hazard

RF communication equipment such as cell phones, modems and radios may interfere with the performance of the monitor/defibrillator. If the monitor/defibrillator is used near RF communication equipment, observe the recommended separation distances in Recommended Separation Distances Between Portable and Mobile RF Communications Equipment and the LIFEPAK 15 Monitor/Defibrillator. Certain RF communication equipment can be used at distances that are less than those recommended in these operating instructions. If the separation distance is less than the recommended distance, use only equipment recommended by Physio-Control and observe the monitor/defibrillator to verify normal operation.

To establish a direct connection:

1. Position the PC or LIFENET Gateway within reach of the LIFEPAK 15 monitor.

   Note: If you are storing a LIFENET Gateway (modem) in the carrying case, only store the modem in the side pouch. Do not store LIFENET Gateways in the back pouch.

2. Configure a COM port on the PC for incoming data.
3. Connect the cable to the system connector on the monitor and to the PC.
4. If using CODE-STAT or DT EXPRESS software, open the download wizard on the PC and select the LIFEPAK 15 monitor.

After you establish a direct connection, you are ready to transmit patient data. Proceed to Transmitting Reports (on page 185).

Transmitting Reports

After you have established a wireless or direct connection, you can transmit Patient Records and reports. All patient reports can be transmitted real time during patient monitoring (Manual or AED mode), or reports can be transmitted post event (Archive mode).

How to Transmit a Current Patient Report

To transmit a current patient report:

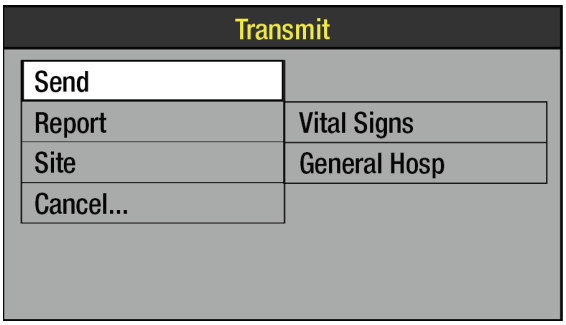

1. Press **TRANSMIT**. The Transmit menu appears.
2. Use the **SPEED DIAL** to select the desired **REPORT** and **SITE**, if necessary.
3. Select **SEND**. The patient report is transmitted. The status of the transmission appears in the message area.

How to Transmit an Archived Patient Report

When you turn off the LIFEPAK 15 monitor/defibrillator, the current Patient Record is saved in the archives. For information about accessing Archive mode, see Data Management (on page 161).

To transmit an archived patient report:

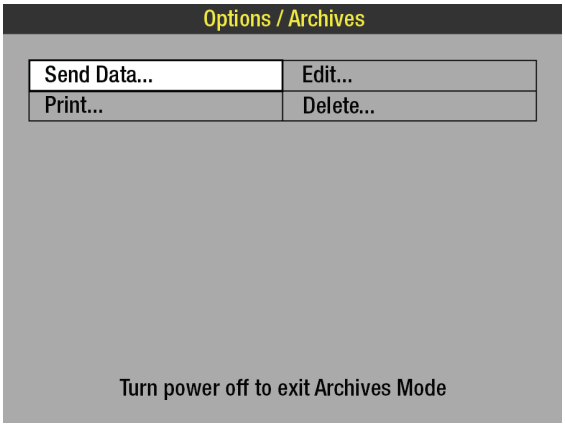

1. In the Options/Archives menu, select **SEND DATA**. The Options/Archives/Send Data menu appears.

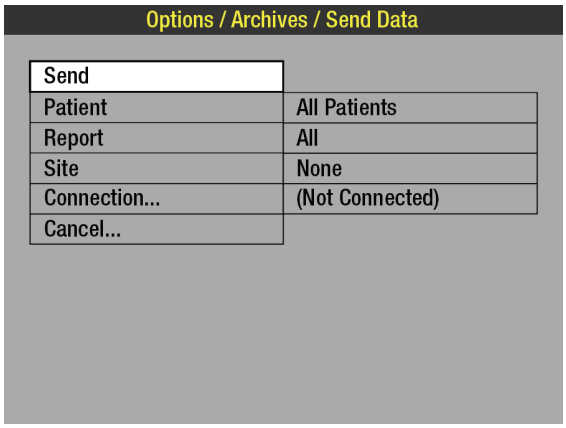

2. If the **PATIENT**, **REPORT**, and **SITE** are correct, proceed to Step 7.

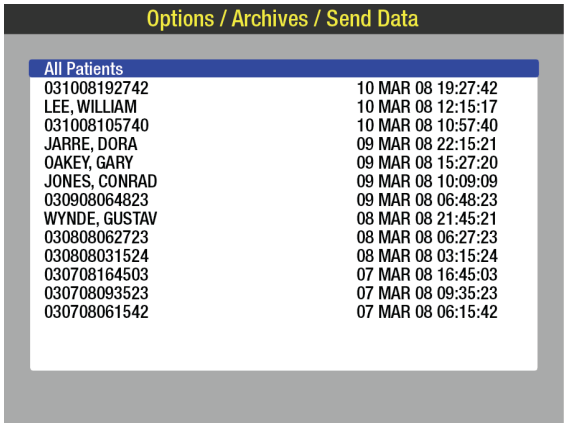

3. To transmit records for a particular patient, select **PATIENT**. A list of patients appears.
4. Select the patient.

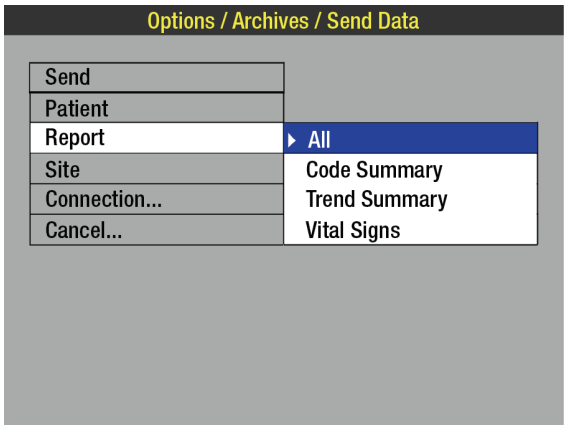

5. To transmit a specific report, select **REPORT** and then select the report.
6. To select a transmission site, select **SITE** and then select the site. Make sure you specify a site whose **OUTPUT PORT** is configured for the transmission method you are using.
7. To transmit using a wireless transaction, select **CONNECTION** and proceed with establishing a Bluetooth connection. For more information, see Establishing a Bluetooth Connection (on page 181).
8. Select **SEND**. The patient report is transmitted. The status of the transmission appears in the message area.

Transmission Status Report

Whenever you attempt to transmit a record, a transmission report is automatically printed at the completion of the transmission attempt. The transmission report indicates the date and time of the transmission attempt and the final status of the transmission.

Cancelling a Transmission

You can cancel a transmission that is in process. To cancel a transmission, select **CANCEL** on the Transmit menu if you are transmitting a current record, or select **CANCEL** on the Options/Archives/ Send Data menu if you are transmitting an archived record.

Considerations When Transmitting Data

When considering any treatment protocol that involves transmitting patient data, be aware of possible limitations. Successful transmission depends on access to public or private network services that may or may not always be available. This fact is especially true for wireless communication, which is influenced by many factors, such as:

- Geography
- Location
- Weather
- Number of wireless devices in the area

Treatment protocol must always take into account the fact that data transfer *cannot be assured* using wireless communication. Your treatment protocol must include contingency planning for interrupted data transmission.

Periodically test your device transmission function to ensure that the device and transmission accessories are ready for use.

Troubleshooting Tips

Table 32 Troubleshooting Tips for Data Transmission

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Bluetooth icon on LIFEPAK 15 monitor has red X across it	**WIRELESS** is set to **OFF** in the *Bluetooth* Setup menu	• Set **WIRELESS** to **ON**. • If red X remains, *Bluetooth* module in LIFEPAK 15 monitor may be faulty. Contact qualified service representative.
	WIRELESS is set to **OFF** in the setup options, so the **WIRELESS** default is **OFF** each time the LIFEPAK 15 monitor is turned on	• Change **WIRELESS** setup option. See *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device. • If red X remains, *Bluetooth* module in LIFEPAK 15 monitor may be faulty. Contact qualified service representative.
	Bluetooth module in LIFEPAK 15 monitor may be faulty	• Contact qualified service representative.
Bluetooth LED is not illuminated	Target device is off or cannot communicate with the LIFEPAK 15 monitor	• Confirm that target device is on and discoverable. • See the operating instructions for your target device.
	Bluetooth module in LIFEPAK 15 monitor may be faulty	• If other troubleshooting is unsuccessful, contact qualified service representative.
LIFEPAK 15 monitor does not automatically connect to last connected device	Target device is off or cannot communicate with the LIFEPAK 15 monitor	• Confirm that target device is on and discoverable.
	Last connection to target device may have occurred when the LIFEPAK 15 monitor was in a different mode	• Confirm that **OUTPUT PORT** is set to **BLUETOOTH WIRELESS**. • Select **FIND DEVICES** and establish a new connection.
Device does not connect to last connected device after **WIRELESS** is set to **ON**	*Bluetooth* menu is displayed, which prevents discovery of devices	• Press **HOME SCREEN** to exit menu and allow LIFEPAK 15 monitor to find last connected device.
UNABLE TO CONNECT message appears	LIFEPAK 15 monitor cannot establish wireless connection. Target device may not have the necessary software application or cannot accept data.	• Verify target device is ready to receive transmissions. • Attempt to retransmit.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Unable to find a particular *Bluetooth* device, or **BLUETOOTH DEVICE NOT FOUND** message appears	Search filter may be on and target device does not have a PSC prefix	• Confirm that target device is on and discoverable. • Confirm friendly name of target device. • Set **SEARCH FILTER** to **OFF** and then select **FIND DEVICES** again.
	Target device is not functioning	• Confirm that target device is on and discoverable. • Confirm friendly name of target device. • If message still appears, contact the service provider for your target device.
	Bluetooth module in LIFEPAK 15 monitor may be faulty	• Contact qualified service representative.
Unable to transmit data for post-event review using either direct connection or *Bluetooth* connection	Post-event review software is not installed on target device	• Install CODE-STAT or DT EXPRESS post-event review software on target device.
	Post-event review software is not open and running on target device	• Make sure the target device is running Device Communications or the download wizard.
	COM port is not configured for incoming data on target device	• Configure COM port on target device.
	LIFEPAK 15 monitor not selected in download wizard on target device	• Open download wizard on target device and select the LIFEPAK 15 monitor.
BLUETOOTH UNAVAILABLE message appears	*Bluetooth* module in LIFEPAK 15 monitor not responding	• Turn LIFEPAK 15 monitor off and back on. • If message still appears, *Bluetooth* module may be faulty. Contact qualified service representative.
BLUETOOTH DEVICE NOT FOUND message appears	Unable to locate *Bluetooth* device	• Verify target device is ready to receive transmissions. • Set **SEARCH FILTER** to **OFF** and then select **FIND DEVICES** again.
UNKNOWN DEVICE message appears	*Bluetooth* name discovery failed or timed out before the device name was obtained	• Verify name of target device. • Verify target device is ready to receive transmissions. • Attempt to retransmit.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Unable to transmit using a gateway device that has a functioning direct connection or *Bluetooth* connection	Transmission sites are not set up in LIFEPAK 15 monitor	• Define transmission sites. Each site name must exactly match the name of the target device. See *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device.
	Transmission site names in LIFENET System do not match site names in LIFEPAK 15 monitor	• Check site names in LIFENET System.
	Cellular communication is not working between the gateway and transmission sites	• Use alternate method to communicate patient data.
UNABLE TO TRANSMIT message appears	The LIFEPAK 15 monitor cannot connect to the device name selected	• Verify target device is ready to receive transmissions. • Verify target device setup. • Attempt to retransmit.
	The output port on the LIFEPAK 15 monitor is not configured for the transmission method you are using	• Make sure the transmission site **OUTPUT PORT** is configured for the type of transmission you are attempting. • Attempt to retransmit.
	Target device unable to connect or unable to connect within timeout interval	• Verify target device is ready to receive transmissions. • Verify target device setup. • Attempt to retransmit.
	The target device requires you to "accept" incoming communications	• Check your target device for a required acknowledgment to connect. • Enter passcode, when prompted. • Set to "Always allow" if possible. • Attempt to retransmit.
	Direct connection was disrupted	• Verify cable connections. • Attempt to retransmit.
TRANSMISSION FAILED message appears	Computer application program is not ready or is not available to receive transmission	• Verify target device is running necessary software. • Attempt to retransmit.
LOST DIRECT CONNECTION message appears	Direct connection was interrupted	• Verify cable connections between LIFEPAK 15 monitor and gateway or PC. • Attempt to retransmit.
LOST BLUETOOTH CONNECTION message appears	Connection with *Bluetooth* target device was interrupted	• Verify target device is ready to receive transmissions. • Attempt to retransmit.
TRANSMISSION CANCELLED message appears	Operator of the LIFEPAK 15 monitor cancelled transmission	• Attempt to retransmit if cancelled in error.

Chapter 9

Power Adapter

This section describes the AC Power Adapter and the DC Power Adapter.

Basic Orientation 193
Using the Power Adapter 195
General Maintenance 198
Warranty 199

Basic Orientation

The AC Power Adapter and DC Power Adapter are optional accessories for use only with the LIFEPAK 15 monitor/defibrillator. These power adapters:

- Provide operating power to the monitor/defibrillator with or without batteries installed.
- Provide power to charge batteries installed in the monitor/defibrillator.

The AC Power Adapter operates with either 120 or 240 Vac line power. The DC Power Adapter operates with 12 Vdc power. Installed batteries are charged whenever the power adapter is connected to the LIFEPAK 15 monitor/defibrillator. To help manage and maintain battery charge, the power adapter should be kept plugged into the defibrillator whenever possible. For more information about maintaining the batteries, see Battery Maintenance (on page 211).

Note: AC and DC Power Adapters are not certified for use in EMS environments per IEC 60601-1-12.

Note: Although the monitor/defibrillator can operate using auxiliary power with no batteries installed, at least one battery must be installed at all times.

Note: If the monitor/defibrillator loses power for more than 30 seconds, it will revert to the user-configured default settings and begin a new patient record.

An optional output extension cable is available. The output extension cable is equipped with a breakaway connector to allow quick movement if needed. For more information about the breakaway feature, see Output Extension Cable with Breakaway Connector (on page 197).

IMPORTANT! Daily inspection and testing will help ensure that the power adapter is in good operating condition and is ready for use when needed. Refer to the LIFEPAK 15 monitor/defibrillator Operator's Checklist in the back of this manual.

Carefully read the *Power Adapter Instructions for Use* that are provided with the power adapter for complete instructions, warnings, cautions, and specifications.

WARNING

Possible Loss of Power During Patient Care

Physio-Control has no information regarding the performance or effectiveness of its LIFEPAK monitor/defibrillators if other manufacturers' power adapters are used. Using other manufacturers' power adapters may cause the device to perform improperly and invalidate the safety agency certifications. Use only power adapters that are labeled with the LIFEPAK 15 device symbol shown here. 15.

WARNING

Possible Loss of Power During Patient Care

Do not use the LIFEPAK 12 power adapter with the LIFEPAK 15 monitor/defibrillator. Use only power adapters that are labeled with the LIFEPAK 15 device symbol. 15.

WARNING

Possible Loss of Power During Patient Care

If the monitor/defibrillator will be used in emergency environments that require battery power, the installed batteries must be kept fully charged. Keep the power adapter plugged into an auxiliary power source whenever possible to maintain the charge level.

WARNING

Possible Loss of Power During Patient Care

Do not connect more than one output extension cable between the power adapter and the defibrillator. The resultant voltage drop may prevent the power adapter from charging the batteries or operating the defibrillator. Always connect the power adapter directly to the defibrillator or use only one extension cable.

WARNING

Shock Hazard

Using a power line cord other than the one supplied with the power adapter could cause excess leakage currents. Use only the power line cord that is specified for use with the power adapter.

WARNING

Potential Performance Degradation

Physio-Control has no information regarding the performance or effectiveness of the LIFEPAK 15 monitor/defibrillator when the power adapter is used with a power inverter. It is the user's responsibility to verify that the monitor/defibrillator performs correctly when used with a power inverter.

WARNING

Possible Skin Injury

The power adapter may become warm when used for an extended period of time. Prolonged contact between exposed skin and a warm power adapter may cause skin irritation or burns. If a warm power adapter is placed against a patient, the operator should ensure that the patient's skin is adequately protected.



Figure 50 AC Power Adapter

Using the Power Adapter

This section provides information about operating the AC and DC power adapters that can be used with the LIFEPAK 15 monitor/defibrillator.

AC Power Adapter Operation

To use the AC Power Adapter:

1. Connect the AC power cord to the power adapter and a grounded AC outlet.
2. Verify that the green LED strip illuminates.
3. Connect the power adapter output cable to the power adapter.
4. Connect the green end of the power adapter output cable to the auxiliary power connector on the back of the monitor/defibrillator.
5. Verify that the **AUXILIARY POWER** LED on the defibrillator is illuminated.
6. If at least one battery is installed in the device, verify that the **BATTERY CHARGING** indicator is illuminated or flashing. Indicator behaviors are shown in Table, Battery Charging Indicator Behaviors, below.

Table 33 Battery Charging Indicator Behaviors

INDICATOR	DESCRIPTION
Steady green	Installed batteries are fully charged.
Flashing green	One or both installed batteries are being charged.
Off	No batteries are installed, or a battery is unable to be charged.

7. Press the monitor/defibrillator **ON** button.

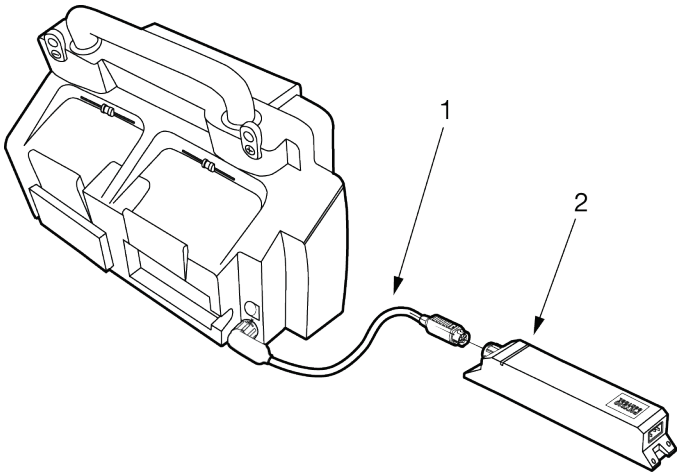

Figure 51 AC Power Adapter with LIFEPAK 15 Monitor/Defibrillator

FIGURE LEGEND	
1	Power adapter output cable
2	LED strip

DC Power Adapter Operation

To use the DC Power Adapter:

1. Connect the DC power cable to the power adapter and a 12 Vdc power source.
2. Verify that the green LED strip illuminates.
3. Connect the power adapter output cable to the power adapter.
4. Connect the green end of the power adapter output cable to the auxiliary power connector on the back of the monitor/defibrillator.
5. Verify that the **AUXILIARY POWER** LED on the defibrillator is illuminated.
6. If at least one battery is installed in the device, verify that the **BATTERY CHARGING** indicator is illuminated or flashing. Indicator behaviors are shown in Table, Battery Charging Indicator Behaviors, below.

Table 34 Battery Charging Indicator Behaviors

INDICATOR	DESCRIPTION
Steady green	Installed batteries are fully charged.
Flashing green	One or both installed batteries are being charged.
Off	No batteries are installed, or a battery is unable to be charged.

7. Press the defibrillator **ON** button.

Output Extension Cable with Breakaway Connector

One optional output extension cable may be connected between the power adapter and the power adapter output cable, if desired. The output extension cable is equipped with a breakaway connector that can be pulled apart without manually rotating the lock ring. With the breakaway connector, you can quickly separate the monitor/defibrillator from the power adapter without damaging the cables or connectors.

To use the breakaway feature, the power adapter and output extension cable must be secured as described in the *Power Adapter Instructions for Use.* The breakaway connector is designed to withstand routine breakaway use. However, to prolong the life of the connector, manually disconnect it whenever possible.

To order the output extension cable, contact your Physio-Control representative. In the USA, call Customer Support at 1.800.442.1142, option 2.

IMPORTANT! Do not use more than one output extension cable.

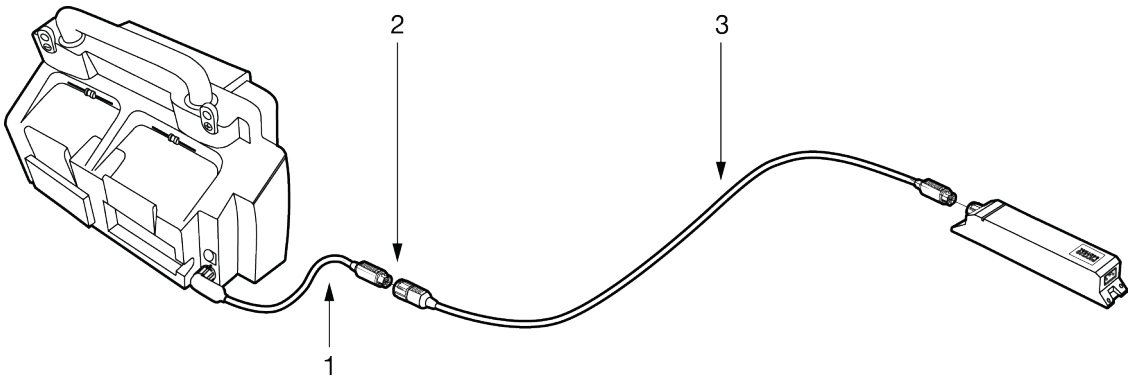

Figure 52 Output Extension Cable with Breakaway Connector

FIGURE LEGEND	
1	Power adapter output cable
2	Breakaway connector
3	Output extension cable

General Maintenance

Maintenance and Service

The power adapter contains no serviceable parts. If the power adapter does not function correctly, contact your local Physio-Control representative for assistance.

Cleaning

WARNING	**Possible Electrical Shock** Unplug the power adapter from the power source before cleaning.
CAUTION	**Possible Equipment Damage** Do not clean any part of the power adapter or its accessories with phenolic compounds. Do not use abrasive or flammable cleaning agents. Do not attempt to sterilize this device or any accessories unless otherwise specified in accessory operating instructions.

To clean the power adapter:

1. Unplug the power adapter, if it is connected to an auxiliary power source.
2. Clean the power adapter, power cord, and cables with a damp sponge or cloth. Use only the cleaning agents listed below:
   - Quaternary ammonium compounds
   - Isopropyl alcohol
   - Peracetic (peroxide) acid solutions
   - Sodium dichloroisocyanurate (NaDCC)
   - Chlorine bleach (1:10 dilution)

   Note: Carefully clean the connector ports. Do not allow cleaning fluids to penetrate the exterior surfaces of the device.

Troubleshooting Tips

Table 35 Troubleshooting Tips for Power Adapter

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
POWER LED on power adapter does not light	Power cord not plugged into power adapter or power source	• Connect power cord.
	Defective power adapter or power cord	• Replace with working power adapter and power cord.
	Blown fuse or tripped circuit breaker in building	• Contact qualified service personnel.
AUXILIARY POWER LED on monitor/defibrillator not illuminated	Power adapter not properly connected to auxiliary power source or monitor/defibrillator	• Check that power adapter is connected properly.
	Defective power adapter or cables	• Replace with working power adapter and cables.
BATTERY CHARGING LED on monitor/defibrillator not illuminated	Power adapter not properly connected to auxiliary power source or monitor/defibrillator	• Check that power adapter is connected properly.
	Battery not properly inserted in battery well	• Check that battery is properly inserted in battery well.
	Unable to charge battery with power adapter because battery charge level is too low	• Charge battery in Station-Mobile or REDI-CHARGE battery charger if available. • Replace battery.
	No batteries installed	• Install at least one battery.
	Defective battery	• Remove battery from service and replace with working battery.
	Unrecognized battery	• Only use battery that is approved for use with the LIFEPAK 15 monitor/defibrillator.
	Incompatible power adapter connected to the monitor/defibrillator	• Only use power adapter that is approved for use with the LIFEPAK 15 monitor/defibrillator.
	Defective power adapter or cables	• Replace with working power adapter and cables.
	Monitor/defibrillator unable to recognize installed battery	• Contact qualified service personnel.

Warranty

To obtain a detailed warranty statement, contact your local Physio-Control representative or go to www.physio-control.com.

Chapter 10

Maintaining the Equipment

This chapter describes how to perform operator-level maintenance, testing, and troubleshooting for the LIFEPAK 15 monitor/defibrillator and selected accessories. For additional information about accessories, refer to specific accessory operating instructions.

General Maintenance and Testing 203
Battery Maintenance 211
Cleaning the Device 214
Storing the Device 214
Loading Paper 215
General Troubleshooting Tips 216
Service and Repair 220
Service Life 220
Product Recycling Information 221
Warranty 221
Accessories 222

General Maintenance and Testing

Periodic maintenance and testing of the LIFEPAK 15 monitor/defibrillator and accessories are important to help prevent and detect possible electrical and mechanical discrepancies. If testing reveals a possible discrepancy with the defibrillator or accessories, see General Troubleshooting Tips (on page 216). If the discrepancy cannot be corrected, immediately remove the LIFEPAK 15 monitor/defibrillator from service and contact a qualified service technician. For testing information regarding accessories, see the accessory operating instructions.

A **MAINTENANCE DUE** message can be set up to appear at selected intervals (3, 6, or 12 months) to remind you that the LIFEPAK 15 monitor/defibrillator is due for maintenance. The factory default is **OFF**, but it can be activated by service personnel.

An Operator's Checklist is included in the back of this manual. You may reproduce the checklist and use it to inspect and test the LIFEPAK 15 monitor/defibrillator. Daily inspection and test is recommended.

Maintenance and Testing Schedule

Table, Recommended Maintenance Schedule for Clinical Personnel (on page 204), lists the recommended maintenance and testing schedule. This schedule may be used in conjunction with the internal quality assurance program of the hospital, clinic, or emergency medical service where the defibrillator is used.

To ensure proper performance of the monitor/defibrillator, inspect and test the power adapter daily as described in the Operator's Checklist.

Cables and paddles are a critical part of therapy delivery and suffer wear and tear. Therapy cable testing as described in the Operator's Checklist is recommended on a daily basis. The Test Load ships with the device and is necessary for testing the QUIK-COMBO cable. Physio-Control recommends replacement of therapy cables every three years to reduce the possibility of failure during patient use.

The 12-lead ECG cable is a critical part of diagnosis and suffers wear and tear. Inspect the 12-lead cable as described in the Operator's Checklist, and test it as described in Patient ECG Cable Check (on page 206).

Additional periodic preventive maintenance and testing—such as electrical safety tests, performance inspection, and required calibration—should be performed regularly by qualified service technicians. For detailed maintenance recommendations for each feature, see the *LIFEPAK 15 Monitor/Defibrillator Service Manual*.

Table 36 Recommended Maintenance Schedule for Clinical Personnel

OPERATION	DAILY	AFTER USE	AS REQUIRED	6 MONTHS	12 MONTHS
Complete Operator's Checklist. Includes QUIK-COMBO therapy cable check and Standard (hard) paddles check	X				
Inspect defibrillator	X	X			
Check that all necessary supplies and accessories are present (for example, fully charged batteries, gel, electrodes, ECG paper, etc.)	X	X	X		
Function Checks:					
Patient ECG Cable Check (on page 206)				X	
Standard Paddles Synchronized Cardioversion Check (on page 206)				X	
Therapy Cable Monitoring and Synchronized Cardioversion Check (on page 208)				X	
Therapy Cable Pacing Check (on page 209)				X	
Clean defibrillator		X	X		
Preventive Maintenance and Testing					X

Self-Tests

Each time you turn on the LIFEPAK 15 monitor/defibrillator, it performs internal self-tests to check that internal electrical components and circuitry work properly. The defibrillator stores the results of all user-initiated self-tests in a test log.

When the defibrillator is on and a problem is detected that requires immediate service, such as a malfunctioning charging circuit, the Service LED is illuminated.

For more information, see General Troubleshooting Tips (on page 216).

Auto Tests

The defibrillator performs an automatic self-test daily at 03:00 (3:00 A.M.), if not in use. During the automatic self-test, the defibrillator turns itself on (**ON** LED illuminates) briefly and completes the following tasks:

- Performs a self-test
- Stores the self-test results in the test log
- Prints the self-test results
- Transmits the self-test results if the **TRANSMIT RESULTS** option is enabled. (Transmission may take up to 4 minutes.)
- Turns itself off

If the defibrillator detects a problem during an auto test, it annotates the fault condition on the printed test report.

For more information about enabling the **TRANSMIT RESULTS** option, see the *LIFEPAK 15 Monitor/Defibrillator Setup Options* guide provided with your device.

The automatic self-test is not performed if the defibrillator is already turned on at 03:00 or if power is not available. If the defibrillator is manually turned on while a self-test is in progress, the self-test is halted and the defibrillator turns on normally.

For more information, see General Troubleshooting Tips (on page 216).

User Tests

The User Test is a functional test of the LIFEPAK 15 monitor/defibrillator. The User Test should be performed only as a test and not while using the defibrillator during patient care. Perform the User Test as a part of completing the daily Operator's Checklist.

Note: The defibrillator must be in Manual mode to perform the User Test.

To perform a User Test separate from completing the Operator's Checklist:

1. Press **ON** to turn on the LIFEPAK 15 monitor/defibrillator.
2. Press **OPTIONS**. The Options menu appears.
3. Select **USER TEST**. The defibrillator performs the following tasks:
    - Self-tests to check the device.
    - Charges to 10 joules and discharges internally (this energy is not accessible at the therapy connector).
    - Prints a Pass/Fail report.

If the LIFEPAK 15 monitor/defibrillator detects a failure during the User Test, the Service LED is illuminated and the printed report indicates that the test failed. Remove the defibrillator from use and contact a qualified service technician.

If you must interrupt the User Test, turn the power off and then on again. The test stops and the defibrillator operates normally. A Pass/Fail report does not print.

Note: During the User Test, all front panel controls (except **ON**) and standard paddle controls are disabled. Routinely testing the defibrillator consumes battery power; maintain all batteries as described in Battery Warnings (on page 211).

Note: The last 40 User and Auto Test results are transmitted with all reports to the CODE-STAT Suite data management system.

Note: It is important to understand defibrillator operation. For suggested procedures to help keep personnel acquainted with normal defibrillator operation, see the function checks that are provided in this chapter. The function checks used may vary according to your local protocols. To test the defibrillator by performing the function checks, you need a simulator. To troubleshoot device performance, see General Troubleshooting Tips (on page 216).

Standard (Hard) Paddles Check

Perform the standard paddles check as a part of completing the daily Operator's Checklist that is provided in the back of this manual.

Function Checks

The following function checks are provided to help personnel keep acquainted with normal operating procedures and to troubleshoot LIFEPAK 15 monitor/defibrillator performance.

Note: If your organization downloads device electronic patient records for post-event review, consider entering "TEST" as the patient's name to distinguish simulator function tests from actual patient uses.

Patient ECG Cable Check

Equipment Needed:

- LIFEPAK 15 monitor/defibrillator
- Fully charged batteries or power adapter connected to a reliable power source
- Patient ECG cable (3-lead, 12-lead, or 5-wire)
- 3-lead or 12-lead simulator

To check the patient ECG cable:

1. Press **ON**.
2. Connect the ECG cable to the defibrillator.
3. Connect all cable leads to the simulator.
4. Turn on the simulator and select a rhythm.
5. Confirm that Lead **II** is selected.
6. After a few seconds, confirm that the screen displays a rhythm and that no **LEADS OFF** or **SERVICE** message appears.
7. For 12-lead cable, press **12-LEAD** and wait for printout. Confirm that a rhythm prints for each lead.

Standard Paddles Synchronized Cardioversion Check

WARNING

Shock Hazard

The defibrillator delivers up to 360 joules of electrical energy. Unless discharged properly as described in this test, this electrical energy may cause serious personal injury or death. Do not attempt to perform this test unless you are qualified by training and experience and are thoroughly familiar with these operating instructions.

Equipment Needed:

- LIFEPAK 15 monitor/defibrillator
- Standard paddles
- Defibrillator checker
- Patient ECG cable
- 3-lead or 12-lead patient simulator
- Fully charged batteries or power adapter connected to a reliable power source

To check standard paddles synchronized cardioversion:

1. Press **ON**.
2. Connect the ECG cable to the monitor and to the patient simulator.
3. Turn on the simulator and select any rhythm except asystole or ventricular fibrillation.
4. Select Lead **II**.
5. Press **SYNC**. Confirm that the **SYNC** LED lights. Adjust ECG size until the sense markers appear on the QRS complexes. Confirm that the **SYNC** LED blinks off with each detected QRS complex and that the heart rate is displayed.
6. Select **100 JOULES**.
7. Press **CHARGE** and confirm that the tone indicating full charge sounds within 10 seconds or less.
8. Remove the standard paddles from the paddle wells and place the standard paddles on the defibrillator checker plates.

   Note: This test is not intended to be performed with the paddles in the wells. Discharging 100 joules in the paddle wells may damage the defibrillator.
9. Press the **APEX** ⚡ (shock) button, confirm that the defibrillator does not discharge, and then release the button.
10. Press the **STERNUM** ⚡ (shock) button, confirm that the defibrillator does not discharge, and then release the button.
11. Press **PRINT**.

WARNING

Possible Paddle Damage and Patient Burns

Press paddles firmly onto the defibrillator checker plates when discharging to prevent arcing and formation of pits on paddle surfaces. Pitted or damaged paddles may cause patient skin burns during defibrillation.

12. Apply firm pressure with both paddles on the defibrillator checker paddle plates, and simultaneously press and hold both ⚡ (shock) buttons while observing the screen.
13. Confirm that the defibrillator discharges on the next sensed QRS complex.
14. Press **PRINT** again to stop the printer.

15. Confirm that the defibrillator returns to Asynchronous mode (sense markers are no longer displayed and **SYNC** LED is off).

    Note: Defibrillator may be set up to remain in Sync mode after discharge.

16. Confirm that the printer annotates the time, date, Sync On, sense markers prior to energy delivered, energy selected, no sense markers after Shock 1, and Sync Off on the ECG strip.

17. Turn off the defibrillator.

Note: If a **CONNECT CABLE**, **PADDLES LEADS OFF**, or any other warning message appears, replace the paddle assembly with a new paddle assembly and repeat the test. If the problem cannot be corrected, remove the device from active use and contact a qualified representative.

Therapy Cable Monitoring and Synchronized Cardioversion Check

CAUTION

Possible Simulator Damage

Do not discharge more than 30 shocks within an hour, or 10 shocks within a five-minute period, or pace continually into Physio-Control patient simulators. Simulators may overheat.

Equipment Needed:

- LIFEPAK 15 monitor/defibrillator
- QUIK-COMBO therapy cable
- Patient ECG cable
- 3-lead or 12-lead patient simulator with QUIK-COMBO connector
- Fully charged batteries or power adapter connected to a reliable power source

To check therapy cable monitoring and synchronized cardioversion:

1. Press **ON**.
2. Connect the ECG cable to the defibrillator and to the simulator.
3. Connect the therapy cable to the simulator.
4. Turn on the simulator and select any rhythm except asystole or ventricular fibrillation.
5. Select **PADDLES** lead.
6. Confirm that the screen displays an ECG and that the **PADDLES LEADS OFF** message does not appear.

   Note: If the screen displays dashed lines, artifact (irregular noise signals), or any warning message, replace the therapy cable and repeat the test. If the problem cannot be corrected, remove the defibrillator from active use and contact a qualified service representative.

7. Select Lead **II**.

8. Press **SYNC**. Confirm that the **SYNC** LED lights and the Sync mode message appears. Adjust ECG size until sense markers appear on the QRS complexes. Confirm that the **SYNC** LED blinks off with each detected QRS complex and that the heart rate is displayed.
9. Select **50 JOULES**.
10. Press **CHARGE**.
11. Press **PRINT**.

WARNING

Shock Hazard

During defibrillation checks, the discharged energy passes through the cable connectors. Securely attach cable connectors to the simulator.

12. After the tone sounds indicating full charge, press and hold ⚡ (shock) while observing the Home Screen.
13. Confirm that the defibrillator discharges on the next sensed QRS complex.
14. Press **PRINT** again to stop the printer.
15. Confirm that the defibrillator returns to Asynchronous mode (sense markers are no longer displayed and **SYNC** LED is off).

    Note: Defibrillator may be set up to remain in Sync mode after discharge.
16. Select **PADDLES** lead.
17. Disconnect the therapy cable from the simulator. Confirm that the **PADDLES LEADS OFF** message appears and that an audible tone occurs.
18. Confirm that the printer annotates the time, date, Sync On, sense markers prior to energy delivered, energy selected, no sense markers after Shock 1, and Sync Off on the ECG strip.
19. Turn off the defibrillator.

Therapy Cable Pacing Check

Equipment Needed:

- LIFEPAK 15 monitor/defibrillator
- QUIK-COMBO therapy cable
- Patient ECG cable
- 3-lead or 12-lead patient simulator with QUIK-COMBO connector
- Fully charged batteries or power adapter connected to a reliable power source

To check therapy cable pacing:

1. Press **ON**.
2. Connect the QUIK-COMBO therapy cable to the simulator.

3. Turn on the simulator and select **BRADY**.
4. Connect the ECG cable to the defibrillator and to the simulator.
5. Select Lead **II**.
6. Press **PACER**.
7. Confirm that sense markers appear on each QRS complex. If sense markers do not appear, or appear elsewhere on the ECG, press the **SPEED DIAL** on waveform Channel 1 and adjust ECG size from the menu.
8. Confirm that the **RATE** menu appears.
9. Press **CURRENT** and increase the current to 80 mA.
10. Observe the screen for captured complexes. Confirm the **PACER** LED flashes with each delivered pacing pulse.
11. Disconnect the QUIK-COMBO therapy cable from the simulator. Confirm that the pacemaker stops pacing, the **CONNECT ELECTRODES** message appears, and an audible alarm sounds.
12. Reconnect the QUIK-COMBO therapy cable to the simulator. Confirm that the audible alarm stops, the **PACING STOPPED** message is displayed, and current is 0 mA.
13. Wait approximately 30 seconds and confirm that an audible alarm occurs.
14. Increase current to 80 mA. Confirm that audible alarm stops.
15. Press **CHARGE**. Confirm that the **PACER** LED goes off and that heart rate and available energy are displayed.

Battery Maintenance

This section provides information about the Physio-Control Lithium-ion batteries that are specifically designed for use in the LIFEPAK 15 monitor/defibrillator. Lithium-ion batteries are low maintenance and require no scheduled cycling to prolong battery life.

IMPORTANT! The LIFEPAK 15 monitor/defibrillator Lithium-ion batteries, battery chargers, power adapters, and power cords are not interchangeable with batteries, battery chargers, power adapters, and power cords that are used in other LIFEPAK defibrillators.

Battery Warnings

WARNING

Possible Fire, Explosion, and Burns

Do not disassemble, puncture, crush, heat above 100°C (212°F), or incinerate the battery.

WARNING

Possible Loss of Power and Delay of Therapy During Patient Care

Using an improperly maintained battery to power the defibrillator may cause power failure without warning. Use the appropriate Physio-Control battery charger to charge batteries.

WARNING

Possible Loss of Power During Patient Care

Physio-Control has no information regarding the performance or effectiveness of its LIFEPAK monitor/defibrillators if other manufacturers' batteries, battery chargers, or power adapters are used. Using other manufacturers' batteries, battery chargers, or power adapters may cause the device to perform improperly and invalidate the safety agency certifications. Use only Physio-Control LIFEPAK 15 monitor/defibrillator batteries (PN 3206735) and the appropriate Physio-Control LIFEPAK 15 monitor/defibrillator battery charger or power adapter.

WARNING

Possible Loss of Power During Patient Care

Battery pins in the defibrillator may be damaged if batteries are dropped or forced into battery wells. Inspect pins routinely for signs of damage. Keep batteries installed at all times except when device is removed from service for storage.

©2018 Physio-Control, Inc.

CAUTION

Possible Equipment Damage

When storing the LIFEPAK 15 monitor/defibrillator for an extended period of time, the battery should be removed from the device.

Receiving New Batteries

New batteries do not arrive fully charged. Charge each new battery before use. Batteries may be charged using any of the following devices:

- Station Lithium-ion battery charger for use with the LIFEPAK 15 monitor/defibrillator
- Mobile Lithium-ion battery charger for use with the LIFEPAK 15 monitor/defibrillator
- REDI-CHARGE battery charger
- AC power adapter for use with the LIFEPAK 15 monitor/defibrillator
- DC power adapter for use with the LIFEPAK 15 monitor/defibrillator

Storing Batteries

Li-ion batteries self-discharge during storage.

If you store the battery:

- Do not remove the Charge Before Use label to indicate that the battery has not yet been charged.
- Store batteries at temperatures between 20° to 25°C (68° to 77°F).
- Charge the battery fully within one year of when you receive it. Fully recharge the battery once per year thereafter.

WARNING

Possible Loss of Power During Patient Care

Stored batteries lose charge. Failure to charge a stored battery before use may cause device power failure without warning. Always charge a stored battery before placing it in active use.

Charging Batteries

- Charge batteries before use. Batteries may be charged in a battery charger, or in the LIFEPAK 15 monitor/defibrillator if it is connected to an auxiliary power source using a LIFEPAK 15 monitor/defibrillator power adapter.
- Inspect batteries for damage or leakage. If battery is damaged or leaking, recycle the battery and obtain a new battery.
- Remove the Charge Before Use label from new batteries before placing batteries in the charger or in the LIFEPAK 15 monitor/defibrillator.
- The battery fuel gauge does not function until the battery is charged. For more information about the fuel gauge, see Batteries (on page 33).
- For more information about charging batteries, refer to either the *Instructions for Use* provided with your battery charger, or the Power Adapter (on page 191) chapter if using the power adapter.

Replacing Batteries

Physio-Control recommends that batteries be replaced approximately every two years. Properly maintained batteries may last longer. A battery has reached the end of useful life if *one or more* of the following circumstances occur:

- Physical damage occurs to the battery case, for example, cracks or a broken clip.
- The battery is leaking.
- The battery charger indicates **FAULT**.
- The battery fuel gauge indicates two or fewer LEDs (bars) after the battery completes a charge cycle.

Dispose of used batteries promptly. Keep batteries away from children.

Recycling Batteries

To promote awareness of battery recycling, Physio-Control batteries are marked with one of these symbols:

When a battery has reached the end of its useful life, recycle the battery according to national and local regulations. Contact your local Physio-Control representative for assistance.

Cleaning the Device

CAUTION	**Possible Equipment Damage** Do not clean any part of this device or its accessories with bleach, bleach dilution, or phenolic compounds. Do not use abrasive or flammable cleaning agents. Do not attempt to sterilize this device or any accessories unless otherwise specified in accessory operating instructions.

Clean the LIFEPAK 15 monitor/defibrillator, therapy and ECG cables, and batteries with a damp sponge or cloth. Use only the cleaning agents listed below:

- Quaternary ammonium compounds
- Isopropyl alcohol
- Peracetic (peroxide) acid solutions

Note: Carefully clean the connector ports. Do not allow cleaning fluids to penetrate the exterior surfaces of the device.

Clean the carrying case accessory as follows and as described on its instruction tag:

- Hand wash using mild soap or detergent and water. A scrub brush may be useful for heavily soiled spots. Cleaners such as Formula 409® are helpful for grease, oil, and other tough stains.

For information about cleaning the reusable monitoring sensors and cables, see the individual monitoring section.

Storing the Device

To take the LIFEPAK 15 monitor/defibrillator out of service and store it for an extended period of time, follow these guidelines:

- Remove the batteries.
- Store the defibrillator and batteries at room temperature.

For more information about storage and operating specifications, see Environmental Specifications.

To return the LIFEPAK 15 monitor/defibrillator to service, perform the following tasks:

- Complete the tasks listed in the Operator's Checklist located at the end of this manual. If the Operator's Checklist can not be located, a copy is available at www.physio-control.com.
- Consider having the device serviced by a qualified service technician.

Loading Paper

Check the amount of paper in the printer as part of the daily check according to the Operator's Checklist provided in the back of this manual.

CAUTION

Possible Printer Malfunction

Using other manufacturers' printer paper may cause the printer to function improperly or damage the print head. Use only Physio-Control printer paper.

The printer is equipped with an out-of-paper sensor to protect the printer printhead. The sensor automatically turns off the printer if paper runs out or the printer door is open.

To load paper:

1. Lift the printer door latch to release the door (see Figure, Loading Paper).
2. Pull out the printer door.
3. Remove the empty paper spool, if present.
4. Insert a new paper roll with the graph side facing up. Make sure the end of the paper extends outward so it is exposed when the printer door is closed.
5. Close the printer door and press down on the latch until the door clicks shut.

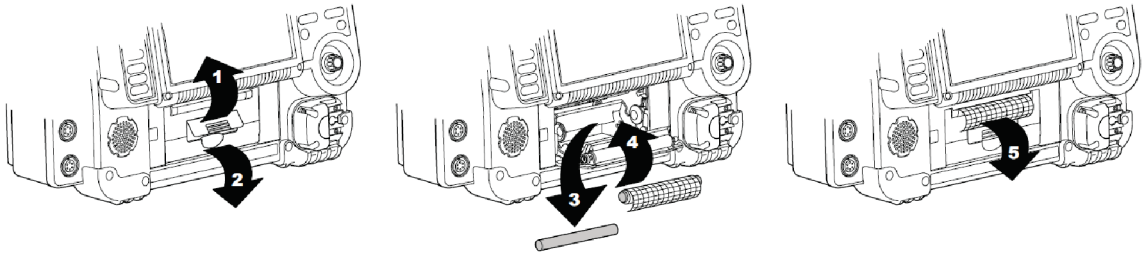

Figure 53 Loading Paper

General Troubleshooting Tips

If a problem is detected with the LIFEPAK 15 monitor/defibrillator during operation or testing, refer to the following troubleshooting tips. If the problem cannot be corrected, remove the LIFEPAK 15 monitor/defibrillator from active use and contact a qualified service technician for service and repair.

Table 37 General Troubleshooting Tips

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
No power when monitor/defibrillator is turned **ON**	Low battery voltage	• Replace with fully charged, properly maintained battery.
	Battery connector pin loose, covered with foreign substance, or damaged	• Remove battery and inspect pins. Clean if foreign substance present. Contact a qualified service technician to replace if bent, cracked, or loose.
	Power adapter not properly connected to auxiliary power source	• Check that power adapter is properly connected to auxiliary power.
	Power adapter not properly connected to monitor/defibrillator	• Check that power adapter is properly connected to monitor/defibrillator.
	Defective power adapter or cables	• Replace with working power adapter and cables.
	Defective battery	• Remove battery from service and replace with working battery.
ON LED illuminated, but screen is blank and device does not operate	Device boot up has failed	• Press and hold **ON** until LED turns off (~5 seconds). Then press **ON** to turn device back on. • If device does not turn off, remove both batteries and disconnect device from power adapter, if applicable. Then reinsert batteries, reconnect power adapter, and press **ON** to turn device back on.
AUXILIARY POWER LED not illuminated	Power adapter not properly connected to auxiliary power source	• Check that power adapter is properly connected to auxiliary power.
	Power adapter not properly connected to monitor/defibrillator	• Check that power adapter is properly connected to monitor/defibrillator.
	Defective power adapter or cables	• Replace with working power adapter and cables.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
BATTERY CHARGING LED on monitor/defibrillator not illuminated	Power adapter not properly connected to auxiliary power source or monitor/defibrillator	• Check that power adapter is connected properly.
	Battery not properly inserted in battery well	• Check that battery is properly inserted in battery well.
	Unable to charge battery with power adapter because battery charge level is too low.	• Charge battery in Station-Mobile or REDI-CHARGE battery charger if available. • Replace battery.
	No batteries installed	• Install at least one battery.
	Defective battery	• Remove battery from service and replace with working battery.
	Unrecognized battery	• Only use battery that is approved for use with the LIFEPAK 15 monitor/defibrillator.
	Incompatible power adapter connected to the monitor/defibrillator	• Only use power adapter that is approved for use with the LIFEPAK 15 monitor/defibrillator.
	Defective power adapter or cables	• Replace with working power adapter and cables.
	Monitor/defibrillator unable to recognize installed battery	• Contact qualified service personnel.
CANNOT CHARGE BATTERY message appears	Defective battery	• Remove battery from service and replace with working battery.
	Defective power adapter	• Replace with working power adapter and cables.
	Device unable to charge battery or batteries	• Contact qualified service personnel.
Fuel gauge on battery does not illuminate	Extremely depleted battery	• Charge battery in Station-Mobile or REDI-CHARGE battery charger.
	Faulty battery	• Replace battery.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Device turns off unexpectedly	High power draw	• Press **ON** immediately to turn device back on.
	Low battery power	• Replace battery immediately. • Press **ON** to turn device back on.
	RF equipment too close to defibrillator	• Separate RF equipment from defibrillator. See Separation Distances (on page 296). • Press **ON** to turn device back on.
	Cellular equipment too close to installed battery	• Move cellular equipment away from installed battery. • Press **ON** to turn device back on. • If device does not turn on, replace battery.
	LIFENET Gateway (modem) too close to installed battery	• Store modem in side pouch of defibrillator. Do not store modem in back pouch. • Press **ON** to turn device back on. • If device does not turn on, replace battery.
Device won't turn off	**ON** not pressed long enough to turn off device	• Press and hold **ON** for at least two seconds.
Monitor/defibrillator operates, but screen is blank	Operating temperature is too low or too high	• Operate defibrillator within specified ambient temperature range.
	Screen not operating properly	• Print ECG strip to assess rhythm and other active vital signs. • Press **ANALYZE** and use AED mode, if necessary. • Contact qualified service technician.
Monitor/defibrillator operates, but screen not readable	Screen in direct sunlight	• Change screen from color to black and white. • Reposition or shield device. • Print ECG strip to assess rhythm and other active vital signs. • Press **ANALYZE** and use AED mode, if necessary.
CHECK PRINTER message appears	Printer paper jams, slips, or misfeeds	• Reinstall paper. • If problem persists, contact qualified service technician.
	Printer is out of paper	• Add new paper.

OBSERVATION	POSSIBLE CAUSE	CORRECTIVE ACTION
Service LED illuminates	Device self-test circuitry detects service condition	• Continue to use defibrillator or pacemaker, if needed. • Turn device off and then on again. Note that this creates a new "patient." If Service LED does not clear, remove device from active use. • Report occurrence of Service LED to qualified service personnel. • Obtain another defibrillator, if necessary.
ECG monitoring problems		• See Troubleshooting Tips (on page 56).
Problems with AED operation		• See Troubleshooting Tips (on page 131).
Problems with defibrillation/synchronized cardioversion		• See Troubleshooting Tips (on page 141).
Problems with pacing		• See Troubleshooting Tips (on page 148).
Displayed time is incorrect	Time is incorrectly set	• Change the time setting. See Options (on page 41).
Date printed on report is incorrect	Date is incorrectly set	• Change the date setting. See Options (on page 41).
Displayed messages are faint or flicker	Low battery power Out of temperature range	• Replace the battery immediately. • Connect to auxiliary power using approved power adapter.
Low speaker volume	Moisture in speaker grill holes	• Wipe moisture from speaker grill and allow device to dry.
MAINTENANCE DUE message appears	Maintenance prompt is set to display at a selected interval in Service mode	• Continue to use device, if needed. • Contact service personnel to perform routine maintenance. • Contact Physio-Control Technical Support for instructions on how to reset or turn off this prompt.

Service and Repair

WARNING	**Shock Hazard** Do not disassemble the defibrillator. It contains no operator serviceable components and dangerous high voltages may be present. Contact a qualified service technician for repair.
WARNING	**Ineffective Energy Delivery Hazard** Service mode is for authorized personnel only. Improper use of Service mode may inappropriately alter the device's configuration and may change energy output levels. Contact qualified service technician for assistance or information about device configuration.

If the LIFEPAK 15 monitor/defibrillator requires service as indicated by testing, troubleshooting, or a service message, contact a qualified service technician. In the USA, call Physio-Control Technical Support at 1.800.442.1142.

When calling Physio-Control to request service, identify the model and serial number and describe the observation. If the device must be shipped to a service center or the factory, pack the device in the original shipping container, if possible, or in protective packing to prevent shipping damage.

The *LIFEPAK 15 Monitor/Defibrillator Service Manual* provides detailed technical information to support service and repair by a qualified service technician.

Service Life

The LIFEPAK 15 Monitor/Defibrillator has an 8-year expected service life under normal use conditions and with appropriate periodic maintenance.

Product Recycling Information

Recycle the device at the end of its useful life. Do not dispose of this product or its batteries in the unsorted municipal waste stream. Any batteries must be removed from the device and disposed of separately before disposing of the device. At all times dispose of this product and its batteries according to local regulations.

Recycling Assistance

The device should be recycled according to national and local regulations. Contact your local Physio-Control representative for assistance or refer to www.physio-control.com/recycling.

Preparation

The device should be clean and contaminant-free prior to being recycled.

Recycling of Disposable Electrodes

After using disposable electrodes, follow your local clinical procedures for recycling.

Packaging

Packaging should be recycled according to national and local regulations.

Warranty

To obtain a detailed warranty statement, contact your local Physio-Control representative or go to www.physio-control.com.

Using defibrillation electrodes, adapter devices, or other parts and supplies from sources other than Physio-Control is not recommended. Physio-Control has no information regarding the performance or effectiveness of its LIFEPAK defibrillators if they are used in conjunction with defibrillation electrodes or other parts and supplies from other sources. If device failure is attributable to defibrillation electrodes or other parts or supplies not manufactured by Physio-Control, this may void the warranty.

©2018 Physio-Control, Inc.

Accessories

The following table lists accessories that are available for the LIFEPAK 15 monitor/defibrillator. To order, contact your Physio-Control representative. In the USA, call Customer Support at 1.800.442.1142, option 2.

Note: The LIFEPAK 15 monitor/defibrillator and its accessories that are intended for direct or casual contact with the patient are not made with natural rubber latex.

Table 38 Accessories for the LIFEPAK 15 Monitor/Defibrillator

CATEGORY	RELATED ACCESSORY
Power	Lithium-ion battery Station Lithium-ion Battery Charger Mobile Lithium-ion Battery Charger REDI-CHARGE Battery Charger AC Power Adapter for use with the LIFEPAK 15 monitor/defibrillator DC Power Adapter for use with the LIFEPAK 15 monitor/defibrillator Power adapter output extension cable Power adapter attachment kit
Therapy	QUIK-COMBO pacing/defibrillation/ECG electrodes QUIK-COMBO RTS pacing/defibrillation/ECG electrodes QUIK-COMBO RTS Pediatric pacing/defibrillation/ECG electrodes QUIK-COMBO pacing/defibrillation/ECG electrodes with REDI-PAK preconnect system QUIK-COMBO Therapy cable Standard paddles Pediatric paddles Internal paddles Internal paddles adapter cable
Monitoring:	
ECG	Cleartrace™ ECG electrodes (Conmed) 3-lead ECG cable 5-wire ECG cable 12-lead ECG cable (includes main 4-wire cable and precordial lead attachment)
SpO_2 – Masimo	RC-4 patient cable (4 ft) RC-12 patient cable (12 ft) RC-4 EMS patient cable (4 ft) Red LNC patient cable (4, 10, 14 ft) Patient extension cables Red™ LNOP® and LNCS™ Reusable LNCS and M-LNCS sensors Disposable LNCS and M-LNCS sensors
SpO_2 – Nellcor	Masimo Red™ MNC patient cable (for use with Nellcor sensors) Reusable Oximax DS-100A sensor Dura-Y™ multisite sensor Oxiband reusable sensor, Adult/Neonatal Sensor Extension Cable (4, 8 ft)

CATEGORY	RELATED ACCESSORY
SpCO and SpMet – Masimo	Rainbow patient extension cables Rainbow reusable sensors Rainbow disposable sensors Rainbow light shields
NIBP	NIBP reusable blood pressure cuffs (Statcorp Medical) NIBP disposable blood pressure cuffs (Statcorp Medical) NIBP hoses
$EtCO_2$ – Oridion	$EtCO_2$ FilterLine sets $EtCO_2$ Smart CapnoLine® lines
Temperature	Measurement Specialties disposable temperature probes: 4491 Esophageal/Rectal, 4499HD Skin High Dielectric, 4464 Foley 14Fr, 4466 Foley 16Fr, 4468 Foley 18Fr Temperature probe adapter cable
Other accessories	Wireless modem/gateway Bed connector LIFEPAK monitor to PC cable (serial communication cable) PC-based configuration tool Test Load 3-Lead ECG patient simulator 12-Lead ECG patient simulator SIGNAGEL® electrode gel ECG recording paper, 100 mm wide

Appendix A

Specifications and Performance Characteristics

This appendix contains the specifications and performance characteristics for the LIFEPAK 15 monitor/defibrillator and the LIFEPAK 15 monitor/defibrillator batteries. It also lists high and low alarm limits, alarm performance characteristics, and factory default settings.

Specifications and Performance Characteristics

Table, LIFEPAK 15 Monitor/Defibrillator Specifications, lists the LIFEPAK 15 monitor/defibrillator specifications for the device.

Table, Battery Specifications (on page 240), lists the specifications for the LIFEPAK 15 monitor/defibrillator batteries.

Table, Alarm Limits, lists the high and low limits for alarms when either the wide or narrow alarm setting is selected on the LIFEPAK 15 monitor/defibrillator.

Table, Alarm Performance Characteristics (on page 245), lists the alarm performance characteristics.

Table, Setup Options Factory Default Settings (on page 247), lists the factory default settings for the LIFEPAK 15 monitor/defibrillator setup options.

Table 39 LIFEPAK 15 Monitor/Defibrillator Specifications

CHARACTERISTIC	DESCRIPTION
All specifications are at 20°C unless otherwise stated.	
GENERAL	
Classification	Monitor/defibrillator—Battery powered and Class II (per IEC 60601-1)
	Applied parts—ECG, Internal Defibrillation, Invasive Pressure and Temperature have Type CF patient connections. External Defibrillation, CO2, SpO2, and NIBP have Type BF patient connections (per IEC 60601-1).
Modes	AED mode—for automated ECG analysis and a prompted treatment protocol for patients in cardiac arrest. Manual mode—for performing manual defibrillation, synchronized cardioversion, noninvasive pacing, and ECG and vital sign monitoring. Archive mode—for accessing stored patient information. Setup mode—for changing default settings of the operating functions. Service mode—for authorized personnel to perform diagnostic tests and calibrations. Demo mode—for simulated waveforms and trend graphs for demonstration purposes.
Self-test	When powered on, the device performs a self-test to check internal electrical components and circuitry. A service indicator is illuminated if an error is detected. The device also performs an auto test daily. Results are printed and stored in the device log. Auto test results can be transmitted. See the *LIFEPAK 15 Monitor/Defibrillator Setup Options* provided with your device for more information.
Continuous Patient Surveillance System (CPSS)	In Advisory Monitoring, CPSS monitors the patient ECG, via QUIK-COMBO® electrodes or Lead II, for a potentially shockable rhythm.
Voice Prompts	Manual mode: Used for selected prompts (selectable ON/OFF) AED mode: Used for entire AED protocol

Analog ECG Output	Output: 1 volt/mV Frequency Response: 0.67 to 32 Hz (except 2.5 to 25 Hz for Paddles ECG and 1.3 to 23 Hz for 1–30 Hz Monitor Frequency Response) No internal pacemaker pulse enhancements or detection markers included. Pace markers during external pacing using this device are included.
Notch Filter	50 or 60 Hz
POWER	
Batteries	Rechargeable Lithium-ion battery
	Dual battery capability with automatic switching
	Low battery indication and message: Low battery fuel gauge indication and low battery message in status area for each battery
	Replace battery indication and message: Replace battery fuel gauge indication, audio tones, and replace battery message in the status area for each battery. When replace battery is indicated, device auto-switches to second battery. When both batteries reach replace battery condition, a voice prompt instructs user to replace battery.
	Input voltage range is between +8.8 and +12.6 Vdc
Battery Capacity	For two, new fully-charged batteries, 20°C (68°F):

Operating Mode		Monitoring (minutes)	Pacing (minutes)	Defibrillation (360J discharges)
		Capacity to shutdown is:		
	Typical	360	340	420
	Minimum	340	320	400
		Capacity after low battery is:		
	Typical	21	20	30
	Minimum	12	10	6

AC Power Adapter	AC-DC power adapter
	Input power range is 100-240 Vac, 50/60 Hz, 1.4-0.6 A
	Output voltage is 12 Vdc
	Meets UL 60601-1 300 microampere Earth leakage limit when installed on a center-tapped, 240 Vac, single phase circuit.
DC Power Adapter	DC-DC power adapter
	Input power range is: Minimum: 11 Vdc, 15 A Nominal: 13.8 Vdc, 12.5 A Maximum: 17.6 Vdc, 10 A
	Output voltage is 12 Vdc
Device Behavior when using Power Adapter	Auxiliary power indicator on defibrillator illuminated when connected to auxiliary power. Battery charging indicator illuminated when batteries are fully charged and flashing if either battery is being charged.
	Battery status indicators on display show battery charge level, but well number is not highlighted because battery is not in use. Low battery and replace battery prompts and messages do not occur.

PHYSICAL	
Weight	Basic monitor/defibrillator with new roll paper and two batteries installed: 7.9 kg (17.5 lb)
	Fully featured monitor/defibrillator with new roll paper and two batteries installed: 8.4 kg (18.5 lb)
	Lithium-ion battery: < 0.60 kg (1.3 lb)
	Accessory bags and shoulder strap: 1.77 kg (3.9 lb)
	Standard (hard) paddles: 0.95 kg (2.1 lb)
Height	31.7 cm (12.5 in)
Width	40.1 cm (15.8 in)
Depth	23.1 cm (9.1 in)
DISPLAY	
Size (active viewing area)	212 mm (8.4 in) diagonal; 171 mm (6.7 in) wide x 128 mm (5.0 in) high
Display Type	640 dot x 480 dot color backlit LCD
	User selectable display mode (full color or SunVue™ high contrast)
	Displays a minimum of 5 seconds of ECG and alphanumerics for values, device instructions, or prompts
	Displays up to three waveforms
	Waveform display sweep speed: 25 mm/sec for ECG, SpO_2, IP, and 12.5 mm/sec for CO_2
DATA MANAGEMENT	
The device captures and stores patient data, events (including waveforms and annotations), and continuous waveform and patient impedance records in internal memory.	
The user can select and print reports, and transfer the stored information via supported communication methods.	
Report Types	Three format types of CODE SUMMARY™ critical event record: short, medium, and long
	12-lead ECG with STEMI statements
	Continuous Waveform (transfer only)
	Trend Summary
	Vital Sign Summary
	Snapshot
Memory Capacity	Total capacity is 360 minutes of continuous ECG, 90 minutes of continuous data from all channels, or 400 single waveform events. Maximum memory capacity for a single patient includes up to 200 single waveform reports and 90 minutes of continuous ECG.

COMMUNICATIONS	
The device is capable of transferring data records by wired or wireless connection. This device complies with Part 15 of the FCC rules, and its operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.	
Serial Port	RS232 communication +12V available
Bluetooth® technology	*Bluetooth* technology provides short-range wireless communication with other *Bluetooth*-enabled devices. The *Bluetooth* transceiver complies with *Bluetooth* Class 1 frequency, power, and bandwidth requirements.

MONITOR	
ECG	ECG is monitored via several cable arrangements. A 3-wire cable is used for 3-lead ECG monitoring. A 5-wire cable is used for 7-lead ECG monitoring. A 10-wire cable is used for 12-lead ECG acquisition. When the chest electrodes are removed, the 10-wire cable functions as a 4-wire cable. Standard paddles or QUIK-COMBO pacing/defibrillation/ECG electrodes are used for paddles lead monitoring.
Frequency Response	Monitor—0.5 to 40 Hz or 1 to 30 Hz Paddles—2.5 to 30 Hz 12-lead ECG diagnostic—0.05 to 150 Hz
Lead Selection	Leads I, II, III (3-wire ECG cable)
	Leads I, II, III, AVR, AVL, and AVF acquired simultaneously (4-wire ECG cable)
	Leads I, II, III, AVR, AVL, AVF, and C lead acquired simultaneously (5-wire ECG cable)
	Leads I, II, III, AVR, AVL, AVF, V1, V2, V3, V4, V5, and V6 acquired simultaneously (10-wire ECG cable)
ECG Size	4, 3, 2.5, 2, 1.5, 1, 0.5, 0.25 cm/mV (fixed at 1 cm/mV for 12-lead)
Leads Off Sensing	The ECG leads off function uses AC current at 20 kHz for sensing leads off, the disposable defibrillation electrodes use AC current at 20 kHz for leads off, and the ECG leads use a noise cancelation signal which ranges from DC to approximately 5 kHz. The amplitude of these signals conforms to IEC 60601-1 Clause 8.7.3.
Heart Rate Display	20–300 bpm digital display
	Accuracy: ±4% or ±3 bpm, whichever is greater
Recovery Time after Defibrillation	10 seconds
Heart Rate Averaging Method	The heart rate average is formed by a weighted average of approximately 8 seconds duration. When the input rate is trending rapidly, the rate meter will track more quickly. Refer to heart rate response time disclosure. The display update interval is every heartbeat or every 2 seconds, whichever is shorter.
Heart Rate Step Response Time	80 bpm to 120 bpm input step change: ≤ 10 seconds to indicate a minimum of 100 bpm. 80 bpm to 40 bpm input step change: ≤ 10 seconds to indicate a maximum of 60 bpm.

Heart Rate with Irregular Rhythm	The rate meter output can range from the heart rate associated with the shortest R-R interval to the heart rate associated with the longest R-R interval. When present, intermediate length R-R intervals are favored as the basis for the rate. When evaluated per IEC 60601-2-27, rates are as follows: • A1. Ventricular bigeminy: HR = 80 to 86 • A2. Slow alternating ventricular bigeminy: HR = 60 to 63 • A3. Rapid alternating ventricular bigeminy: HR = 123 to 124 • A4. Bidirectional systoles: HR = 97 to 99
QRS Detection Range	Duration: 40 to 120 msec Amplitude: 0.5 to 5.0 mV Tall T-wave Rejection: T-waves that are 1 mV high are not detected by the monitor when the R-wave size is 1 mV and input rate is 80 ppm.
Common Mode Rejection (CMRR)	ECG Leads: 90 dB at 50/60 Hz
Pacemaker Pulse Rejection	Rejects pacemaker pulses having amplitudes from ±2 mV to ±700 mV and pulse widths from 0.1 ms to 2.0 ms with and without overshoot. Pacemaker pulse overshoot is defined as 2.5% to 25% of the pacemaker pulse amplitude not to exceed 2 mV. Refer to IEC 60601-2-27. **Note:** Does not apply when internal paddles are connected.

SpO_2/SpCO/SpMet	
Sensors	Masimo® sensors including Rainbow® sensors Nellcor® sensors when used with the Masimo Red™ MNC adapter
SpO_2	
Displayed Saturation Range	"<50" for levels below 50%; 50 to 100%
Saturation Accuracy is specified for range 70-100% (0-69% is not specified).	
Adults/Pediatrics Accuracy (RMS)*	±2% (during no motion conditions - Masimo) ±3% (during no motion conditions - Nellcor) ±3% (during motion conditions - Masimo)
Neonatal Accuracy (RMS)*	±3% (during no motion conditions - Masimo) ±4% (during no motion conditions - Nellcor ±3% (during motion conditions - Masimo)
Dynamic signal strength bar graph	
Pulse tone as SpO_2 pulsations are detected	
SpO_2 Averaging Time	User selectable: 4, 8, 12 or 16 seconds
SpO_2 Data Update Period	1 second
SpO_2 Alarm Condition Delay	21 seconds (maximum time from physiological change to detection by device, with default 8 second averaging selected)
SpO_2 Alarm Signal Generation Delay	1 second (time for device to generate alarm after alarm condition is detected)
SpO_2 Sensitivity	User selectable: Normal, High
SpO_2 Measurement	Functional SpO_2 values are displayed and stored

Pulse Rate Accuracy (specified for range 25 to 240 bpm)	
Adults/Pediatrics (RMS)	±3% (during no motion conditions) ±5% (during motion conditions)
Optional SpO_2 waveform display with autogain control	
SpCO™	
SpCO Concentration Display Range	0 to 40%
SpCO Accuracy (RMS)*	±3% (during no motion conditions)
SpMet™	
SpMet Saturation Range	0 to 15.0%
SpMet Display Resolution	0.1% up to 10%
SpMet Accuracy (RMS)*	±1% (during no motion conditions)
*Because the above SpO_2, SpCO, and SpMet measurements are statistically distributed, only about two-thirds of the measurements can be expected to fall within the accuracies specified above. Note: A functional tester cannot be used to assess SpO_2 accuracy. See IEC 80601-2-61 Annex FF.	
SpO_2 Measurement Wavelengths **Note:** Information about wavelength range can be useful to clinicians, for example, when performing photodynamic therapy.	
Masimo (SpO_2 only)	Red: 660 nanometers Infrared: 905 nanometers
Nellcor (SpO_2 only)	Red: 660 nanometers Infrared: 900 nanometers
SpO_2 Optical Power	
Masimo	Maximum optical output power = 15 mW (SpO_2 only) Maximum optical output power for Rainbow sensor (SpO_2, SpCO, SpMet) = 25 mW
Nellcor	Maximum optical output power = 15 mW (SpO_2 only)

NIBP	
Blood Pressure	Systolic Pressure Range: 30 to 255 mmHg
	Diastolic Pressure Range: 15 to 220 mmHg
	Mean Arterial Pressure Range: 20 to 235 mmHg
	Units: mmHg in increments of 1 mmHg
	Blood Pressure Accuracy: ±5 mmHg
	Blood Pressure Measurement Time: 20 seconds, typical (excluding cuff inflation time)
Pulse Rate	Pulse Rate Range: 30 to 240 pulses per minute Pulse Rate Accuracy: ±2 pulses per minute or ±2%, whichever is greater
Operation Features	Initial Cuff Pressure: User selectable, 80 to 180 mmHg Automatic Measurement Time Interval: User selectable
Automatic Cuff Deflation	Excessive Pressure: If cuff pressure exceeds 290 mmHg Excessive Time: If measurement time exceeds 120 seconds

Validation	The NIBP monitor performance was clinically validated according to the requirements of ISO 81060-2.	
CO_2		
CO_2 Range	0 to 99 mmHg (0 to 13.2 kPa) Units: mmHg, %, or kPa	
CO_2 Accuracy*	CO_2 partial pressure at sea level:	Accuracy:
(0–80 bpm)**	0 to 38 mmHg (0 to 5.1 kPa)	±2 mmHg (0.27 kPa)
	39 to 99 mmHg (5.2 to 13.2 kPa)	±5% of reading + 0.08% for every 1 mmHg (0.13 kPa) above 38 mmHg (5.1 kPa)
(>80 bpm)	0 to 18 mmHg (0 to 2.4 kPa)	±2 mmHg (0.27 kPa)
	19 to 99 mmHg (2.55 to 13.3 kPa)	±4 mmHg (0.54 kPa) or ±12% of reading, whichever is higher
	*Determined by the methods in ISO 21647 clauses 51.101.1 and 51.101.2. **For RR > 60 bpm, to achieve specified CO_2 accuracy, the Microstream® FilterLine® H Set for infant must be used. The accuracy specifications listed above are maintained within an additional 4% in the presence of interfering gases defined in ISO 80601-2-55.	
Respiration Rate Accuracy	0 to 70 bpm: ±1 bpm 71 to 99 bpm: ±2 bpm	
Respiration Rate Range	0 to 99 breaths/minute	
Flow Rate	50 ml/min -7.5, +15 ml/min (flow measured by volume)	
Rise Time	190 msec	
Response Time	4.3 seconds maximum with 200 cm FilterLine tubing 5.9 seconds maximum with 400 cm FilterLine tubing (includes delay time and rise time)	
Initialization Time	30 seconds (typical), 10-180 seconds	
Ambient Pressure	Automatically compensated internally	
Optional Display Waveform	CO_2 pressure	
Scale Factors	Autoscale, 0–20 mmHg (0–4 Vol%),0–50 mmHg (0–7 Vol%), 0–100 mmHg (0–14 Vol%)	
Waveform Sample Rate	20/sec or one sample every 50 msec	
CO_2 Calculation	Per 80601-2-55, Method for End-tidal CO_2 calculation: $EtCO_2$ is a maximum rather than average value. The accuracy of the CO_2 readings and respiration rates was tested with a CO_2 square wave simulator.	
Measurement Drift	The periodic autozero function compensates for drifts between components, and changes in ambient temperature and barometric conditions. This automatic process eliminates variances that might otherwise cause measurement drift. Therefore, the CO_2 function does not exhibit drift.	

INVASIVE PRESSURE	
Transducer Type	Strain-gauge resistive bridge
Transducer Sensitivity	5μV/V/mmHg required
Defibrillation Protection	Minimum 360 J defibrillation protection required in the transducer
Excitation Voltage	5 Vdc
Connector	Electro Shield CXS 3102A 14S-6S
Bandwidth	Digital filtered, DC to 30 Hz (< -3db)
Zero Drift	1 mmHg/hr without transducer drift
Zero Adjustment	±150 mmHg including transducer offset
Numeric Accuracy	±1 mmHg or 2% of reading, whichever is greater, plus transducer error
Pressure Range	-30 to 300 mmHg, in six user selectable ranges
Invasive Pressure Display	Display: IP waveform and numerics Units: mmHg Labels: P1 or P2, ART, PA, CVP, ICP, LAP (user selectable)
TEMPERATURE	
Sensors	Measurement Specialties 4400 series esophageal/rectal and Foley catheter temperature probes, and 4499HD skin temperature probe
Displayed Range	24.8° to 45.2°C (76.6° to 113.4°F)
Resolution	0.1°C
Accuracy	±0.2°C
Labels	Temp, T-esoph, T-naso, T-bladder, T-rectal, T-skin
Update Rate	Every 10 seconds, minimum
Mode of Operation	Direct mode
Adapter Cable	Only use Physio-Control part number 3303935
Cable Length	1.5 or 3 m (5 or 10 ft)
TREND	
Time Scale	Auto, 30 minutes, 1, 2, 4, or 8 hours
Duration	Up to 8 hours
ST	After initial 12-lead ECG analysis, automatically selects and trends ECG lead with the greatest ST displacement
Display	Choice of HR, PR (SpO_2), PR (NIBP), SpO_2(%), SpCO(%), SpMet(%), CO_2 ($EtCO_2$/$FiCO_2$), RR (CO_2), NIBP, IP1, IP2, TEMP, ST
INTERPRETIVE ALGORITHM	12-Lead Interpretive Algorithm: University of Glasgow 12-Lead ECG Analysis Program, includes AMI and STEMI statements
ALARMS	
Quick Set	Activates alarms for all active vital signs
VF/VT Alarm	Activates continuous CPSS monitoring in Manual mode
No Breath Alarm	Occurs when 30 seconds has elapsed since last detected respiration
Heart Rate Alarm Limit Range	Upper, 100–250 bpm; lower, 30–150 bpm

PRINTER	
Prints continuous strip of the displayed patient information and reports	
Paper Size	100 mm (3.9 in)
Print Speed	25 mm/sec or 12.5 mm/sec Optional 50 mm/sec time base for 12-lead ECG reports
Delay	8 seconds
Autoprint	Waveform events print automatically
Frequency Response	Diagnostic—0.05 to 150 Hz or 0.05 to 40 Hz Monitor—0.67 to 40 Hz or 1 to 30 Hz

DEFIBRILLATOR	
Charge Time (per IEC 60601-2-4)	
AC Operation Only:	
Maximum Time from Charge to Shock Ready (Manual Mode):	
Voltage	Charge Time
90-240 Vac	360 J within 10 seconds
Maximum Time from Initiation of Analysis to Shock Ready (AED Mode):	
Voltage	Charge Time
90-240 Vac	360 J within 30 seconds
Maximum Time from Power-on to Shock Ready (Manual Mode):	
Voltage	Charge Time
90-240 Vac	360 J within 25 seconds
Maximum Time from Power-on to Shock Ready (AED Mode):	
Voltage	Charge Time
90-240 Vac	360 J within 40 seconds
DC Operation Only:	
Maximum Time from Charge to Shock Ready (Manual Mode):	
Voltage	Charge Time
11-17.6 Vdc	360 J within 10 seconds
Maximum Time from Initiation of Analysis to Shock Ready (AED Mode):	
Voltage	Charge Time
11-17.6 Vdc	360 J within 30 seconds
Maximum Time from Power-on to Shock Ready (Manual Mode):	
Voltage	Charge Time
11-17.6 Vdc	360 J within 25 seconds
Maximum Time from Power-on to Shock Ready (AED Mode):	
Voltage	Charge Time
11-17.6 Vdc	360 J within 40 seconds

Battery Operation Only:

Maximum Time from Charge to Shock Ready (Manual Mode):

Battery Status	Charge Time
Fully charged	200 J within 7 seconds, nominal
Fully charged, followed by 15 full-energy shocks	360 J within 10 seconds
Fully charged	360 J within 10 seconds

Maximum Time from Initiation of Analysis to Shock Ready (AED Mode):

Battery Status	Charge Time
Fully charged	200 J within 15 seconds, nominal
Fully charged, followed by 15 full-energy shocks	360 J within 30 seconds
Fully charged	360 J within 30 seconds

Maximum Time from Power-on to Shock Ready (Manual Mode):

Battery Status	Charge Time
Fully charged, followed by 15 full-energy shocks	360 J within 25 seconds

Maximum Time from Power-on to Shock Ready (AED Mode):

Battery Status	Charge Time
Fully charged, followed by 15 full-energy shocks	360 J within 40 seconds

Manual Mode

Energy Select	2, 3, 4, 5, 6, 7, 8, 9, 10, 15, 20, 30, 50, 70, 100, 125, 150, 175, 200, 225, 250, 275, 300, 325, and 360 joules
Synchronous cardioversion	The maximum time delay between synchronization pulse and the delivery of energy, once the output has been activated, is not more than 60 msec. This time delay is measured from the peak of the QRS to the peak of the defibrillator waveform.
Paddles Lead Off Sensing	When using QUIK-COMBO electrodes, the device indicates Paddles Leads Off if the resistive part of the patient impedance is greater than 300 ±15%Ω, or if the magnitude of the patient impedance is greater than 440 ±15%Ω.
Biphasic Waveform	Biphasic Truncated Exponential
	The following specifications apply from 25 to 200Ω, unless otherwise specified: Energy Accuracy: ±1 joule or 10% of setting, whichever is greater, into 50Ω; ±2 joules or 15% of setting, whichever is greater, into 25-175Ω. Voltage Compensation: Active when disposable therapy electrodes are attached. Energy output within ±5% or ±1 joule, whichever is greater, of 50Ω value, limited to the available energy which results in the delivery of 360 joules into 50Ω.

Waveform Shape and Measured Parameters

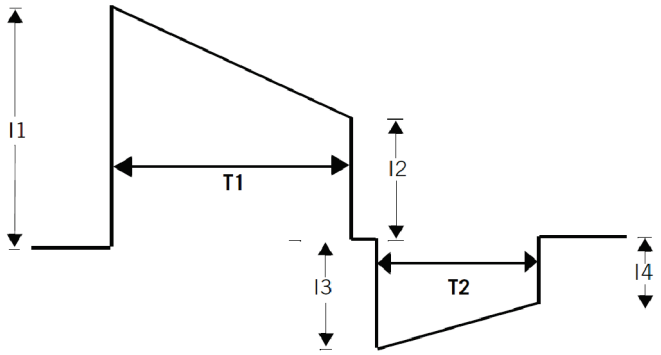

Biphasic Waveform

Patient Impedance (Ω)	Phase 1 Duration (ms)		Phase 2 Duration (ms)		Tilt (%)		Delivered Energy
	Min	**Max**	**Min**	**Max**	**Min**	**Max**	
25	5.1	6.0	3.2	4.2	69.9	85.2	352
50	6.8	7.9	4.4	5.5	57.0	74.7	360
75	7.6	9.4	4.9	6.5	49.3	67.6	349
100	8.7	10.6	5.6	7.3	43.0	62.2	332
125	9.5	11.2	6.2	7.7	39.0	56.6	316
150	10.1	11.9	6.6	8.2	36.8	52.6	301
175	10.6	12.5	6.9	8.6	33.8	49.3	287
200	10.9	13.4	7.1	9.2	29.6	47.4	274

Rated Energy Output

Rated energy output is the nominal delivered energy based on the energy setting and patient impedance, as defined in the following chart.

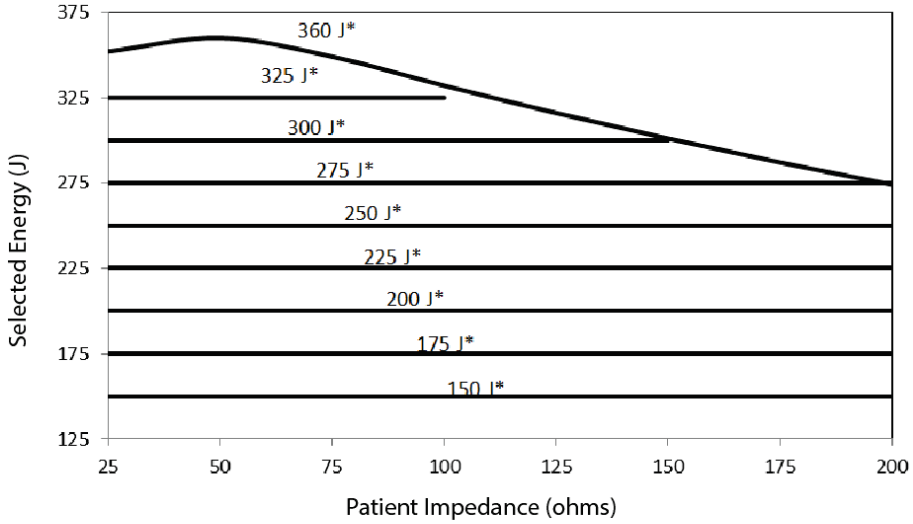

*Energy setting selected

Paddle Options	QUIK-COMBO pacing/defibrillation/ECG electrodes (standard) Standard paddles (optional)
Cable Length	8 foot long (2.4 m) QUIK-COMBO cable (not including electrode assembly)
AED Mode	Shock Advisory System (SAS) is an ECG analysis system that advises the operator if the algorithm detects a shockable or nonshockable ECG rhythm. SAS acquires ECG via therapy electrodes only.
Biphasic Output Energy	Shock levels ranging from 150–360 joules with same or greater energy level for each successive shock
cprMAX™ Technology	In AED mode, cprMAX technology provides a method of maximizing the CPR time that a patient receives, with the overall goal of improving the rate of survival of patients treated with AEDs
Setup Options:	
Auto Analyze	Allows for auto analysis. Options are **OFF**, **AFTER 1ST SHOCK**
Initial CPR	Allows the user to be prompted for CPR for a period of time prior to other activity. Options are **OFF**, **ANALYZE FIRST**, **CPR FIRST**
Initial CPR Time	Time interval for Initial CPR. Options are **15**, **30**, **45**, **60**, **90**, **120**, and **180** seconds
Pre-Shock CPR	Allows the user to be prompted for CPR while the device is charging. Options are **OFF**, **15**, **30** seconds
Pulse Check	Allows the user to be prompted for a pulse check at various times. Options are **ALWAYS**, **AFTER SECOND NSA**, **AFTER EVERY NSA**, **NEVER**
Stacked Shocks	Allows for CPR after 3 consecutive shocks or after a single shock. Options are **OFF**, **ON**
CPR Time 1 or 2	User selectable times for CPR. Options are **15**, **30**, **45**, **60**, **90**, **120, 180** seconds and **30** minutes
PACER	
Pacing Mode	Demand or nondemand Rate and current defaults
Pacing Rate	40 to 170 PPM
Rate Accuracy	±1.5% over entire range
Output Waveform	Monophasic, truncated exponential current pulse (20 ±1 msec)
Output Current	0 to 200 mA
	Pause: Pacing pulse frequency reduced by a factor of 4 when activated
Output Current Accuracy	± 10% or 5 mA (whichever is greater) over the specified load impedance range
Refractory Period	180 to 270 msec (function of rate)
Physio-Control Therapy Electrode Post-Pacing Performance per IEC 60601-2-4	After pacing: AC large signal impedance ≤ 4.2 Ω DC offset voltage ≤ 1053 mV After pacing followed by 360 J shock: DC offset voltage ≤ 1228 mV, 4 seconds after shock DC offset voltage ≤ 966 mV, 60 seconds after shock

ENVIRONMENTAL—Unit meets functional requirements during exposure to the following environments unless otherwise stated.	
Operating Temperature	0° to 45°C (32° to 113°F) -20°C (-4°F) for 1 hour after storage at room temperature 60°C (140°F) for 1 hour after storage at room temperature
Storage Temperature	-20° to 65°C (-4° to 149°F) except therapy electrodes and batteries When a device stored at -20°C (-4°F) is placed at room temperature, it is ready for use after 2 hours. When a device stored at 65°C (149°F) is placed at room temperature, it is ready for use after 2 hours.
Relative Humidity, Operating	5 to 95%, non-condensing NIBP: 15 to 95%, non-condensing
Relative Humidity, Storage	10 to 95%, non-condensing
Atmospheric Pressure, Operating	-382 to 4,572 m (-1,253 to 15,000 ft) NIBP: -152 to 3,048 m (-500 to 10,000 ft)
Water Resistance, Operating	IP44 (dust and splash resistance) per IEC 60529 and EN 1789 (without accessories except for 12-lead ECG cable, hard paddles, and battery pack)
Vibration	MIL-STD-810E Method 514.4 Propeller Aircraft - category 4 (figure 514.4-7 spectrum a) Helicopter - category 6 (3.75 Grms) Ground Mobile - category 8 (3.14 Grms)
	EN 1789: Sinusoidal Sweep, 1 octave/min, 10-150 Hz, ±0.15 mm/2 g
Shock (drop)	5 drops on each side from 18 inches onto a steel surface EN 1789: 30-inch drop onto each of 6 surfaces
Shock (functional)	Meets IEC 60068-2-27 and MIL-STD-810E shock requirements 3 shocks per face at 40 g, 6 ms half-sine pulses
Bump	1000 bumps at 15 g with pulse duration of 6 msec
Impact, Non-operating	IEC 60601-1 0.5 + 0.05 joule impact UL 60601-1 6.78 Nm impact with 2-inch diameter steel ball Meets IEC 62262 protection level IK04
EMC	IEC 60601-1-2 Medical Equipment - General Requirements for Safety - Collateral Standard: Electromagnetic Compatibility - Requirements and Tests
Cleaning	Cleaning 20 times with the following: Quaternary ammonium, isopropyl alcohol, hydrogen peroxide
Chemical Resistance	60 hour exposure to specified chemicals: Betadine (10% Povidone-Iodine solution) Coffee, Cola Dextrose (5% Glucose solution) Electrode Gel/Paste (98% water, 2% Carbopol 940) HCL (0.5% solution, pH=1) Isopropyl Alcohol NaCl solution (0.9% solution) Cosmetic discoloration of the paddle well shorting bar shall be allowed following exposure to HCL (0.5% solution).

ESSENTIAL PERFORMANCE

The LIFEPAK 15 monitor/defibrillator includes the following essential performance features:

- Defibrillation, Synchronized Cardioversion, and AED Shock Advisory System
- ECG Monitoring, Heart Rate, and Alarms
- SpO_2 Monitoring, Pulse Rate, and Alarms
- $EtCO_2$ Monitoring and Alarms
- NIBP Monitoring and Alarms
- Invasive Pressure Monitoring and Alarms
- Temperature Monitoring and Alarms

Table 40 Battery Specifications

CHARACTERISTIC	DESCRIPTION
Battery Type	Lithium-ion
Weight	< 0.60 kg (1.3 lb)
Charge Time (with fully depleted battery)	< 190 minutes (typical)
Battery indicators	Each battery has a fuel gauge that indicates its approximate charge. A fuel gauge that shows two or fewer LEDs after a charge cycle indicates that the battery should be replaced.
Charging Temperature Range	5° to 45°C (41° to 113°F)
Operating Temperature Range	0° to 45°C (32° to 113°F)
Short Term (<1 week) Storage Temperature Range	-20° to 60°C (-4° to 140°F)
Long Term (>1 week) Storage Temperature Range	20° to 25°C (68° to 77°F)
Operating and Storage Humidity Range	5 to 95% relative humidity, non-condensing

Table 41 Heart Rate Alarm Limits

PARAMETER	LOW	HIGH
Default Heart Rate (HR) or Pulse Rate (PR) Alarm Limits*	50	150
HR or PR Alarm Limits Range	30-150	100-250
Patient HR or PR<60 bpm		
Quick Set Wide Limits**	-20	+35
Quick Set Narrow Limits**	-10	+25
Patient HR or PR 60-79 bpm		
Quick Set Wide Limits**	-25	+40
Quick Set Narrow Limits**	-20	+30
Patient HR or PR 80-104 bpm		
Quick Set Wide Limits**	-30	+40
Quick Set Narrow Limits**	-30	+30
Patient HR or PR ≥105 bpm		
Quick Set Wide Limits**	-35	+45
Quick Set Narrow Limits**	-25	+25

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 42 SpO2 Alarm Limits

PARAMETER	LOW	HIGH
Default SpO_2 Alarm Limits*	85	100
SpO_2 Alarm Limits Range	50	90-100
Patient SpO_2 (%) ≥90		
Quick Set Wide Limits**	-5	+3
Quick Set Narrow Limits**	-5	+3
Patient SpO_2 (%) <90		
Quick Set Wide Limits**	-5	+3
Quick Set Narrow Limits**	-5	+3

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 43 Blood Pressure Alarm Limits

PARAMETER	LOW	HIGH
Default Systolic BP Alarm Limits*	50	200
Systolic Alarm Limits Range	30	245
Patient Systolic BP <90 mmHg		
Quick Set Wide Limits**	-20	+35
Quick Set Narrow Limits**	-10	+25
Patient Systolic BP 90-114 mmHg		
Quick Set Wide Limits**	-20	+35

PARAMETER	LOW	HIGH
Quick Set Narrow Limits**	-10	+25
Patient Systolic BP 115-140 mmHg		
Quick Set Wide Limits**	-25	+35
Quick Set Narrow Limits**	-10	+20
Patient Systolic BP >140 mmHg		
Quick Set Wide Limits**	-25	+35
Quick Set Narrow Limits**	-10	+20
Default Diastolic BP Alarm Limits**	20	150
Diastolic Alarm Limits Range	12	210
Patient Diastolic BP <65 mmHg		
Quick Set Wide Limits**	-15	+25
Quick Set Narrow Limits**	-10	+25
Patient Diastolic BP 65-90 mmHg		
Quick Set Wide Limits**	-15	+15
Quick Set Narrow Limits**	-15	+10
Patient Diastolic BP >90 mmHg		
Quick Set Wide Limits**	-15	+15
Quick Set Narrow Limits**	-15	+10

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 44 Capnography Alarm Limits

PARAMETER	LOW	HIGH
Default $EtCO_2$ Alarm Limits (mmHg/%)*	15/2.0	50/6.6
$EtCO_2$ Alarm Limits Range (mmHg/%)	5/0.7	70/9.2
Patient $EtCO_2$ >40 mmHg/5.3%		
Quick Set Wide Limits**	-10/-1.3	+15/+2.0
Quick Set Narrow Limits**	-10/-1.3	+15/+2.0
Patient $EtCO_2$ ≤40 mmHg/5.3%		
Quick Set Wide Limits**	-10/-1.3	+15/+2.0
Quick Set Narrow Limits**	-10/-1.3	+15/+2.0
Default Inspired CO_2 Alarm Limits (mmHg/%)*	N/A	8/1.1
Inspired CO_2 Alarm Limits Range (mmHg/%)	N/A	0/0–10/1.3
Patient Inspired CO_2 (mmHg/%)		
Quick Set Wide Limits**	N/A	+5/+0.7
Quick Set Narrow Limits**	N/A	+3/+0.4
Default Respiration Rate (RR) Alarm Limits*	5	30
RR Alarm Limits Range	5-15	10-60

PARAMETER	LOW	HIGH
Patient RR <15		
Quick Set Wide Limits**	-8	+8
Quick Set Narrow Limits**	-4	+4
Patient RR ≥15		
Quick Set Wide Limits**	-15	+15
Quick Set Narrow Limits**	-8	+8

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 45 Invasive Pressure Alarm Limits

PARAMETER	LOW	HIGH
Default Systolic PA Alarm Limits*	10	40
Systolic PA Alarm Limits Range	10	100
Patient Systolic PA <15 mmHg		
Quick Set Wide Limits**	-6	+12
Quick Set Narrow Limits**	-4	+6
Patient Systolic PA 15-35 mmHg		
Quick Set Wide Limits**	-8	+16
Quick Set Narrow Limits**	-6	+8
Patient Systolic PA >35 mmHg		
Quick Set Wide Limits**	-12	+16
Quick Set Narrow Limits**	-8	+10
Default Diastolic PA Alarm Limits	0	18
Diastolic PA Alarm Limits Range	0	50
Patient Diastolic PA <5 mmHg		
Quick Set Wide Limits**	-4	+12
Quick Set Narrow Limits**	-4	+8
Patient Diastolic PA 5-13 mmHg		
Quick Set Wide Limits**	-4	+16
Quick Set Narrow Limits**	-6	+6
Patient Diastolic PA >13 mmHg		
Quick Set Wide Limits**	-6	+16
Quick Set Narrow Limits**	-6	+6
Default CVP Alarm Limits*	0	15
CVP Alarm Limits Range	0	25
Patient CVP ≥9 mmHg		
Quick Set Wide Limits**	-10	+10
Quick Set Narrow Limits**	-5	+5
Default ICP, LAP Alarm Limits*	0	18

PARAMETER	LOW	HIGH
ICP, LAP Alarm Limits Range	0	40
Patient ICP, LAP <15 mmHg		
Quick Set Wide Limits**	-6	+6
Quick Set Narrow Limits**	-4	+4
Patient ICP, LAP ≥15 mmHg		
Quick Set Wide Limits**	-6	+8
Quick Set Narrow Limits**	-4	+6

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 46 Temperature Alarm Limits

PARAMETER	LOW	HIGH
Default Temperature Alarm Limits (°C)*	35	39
Termperature Alarm Limits Range	31	41
Patient Temperature ≥31°C		
Quick Set Wide Limits**	-3	+3
Quick Set Narrow Limits**	-1	+1

*Default limits are established when alarms are set up to be ON.

**Numbers are ± from patient's VS value when the alarms are set.

Table 47 Alarm Performance Characteristics

CHARACTERISTIC	DESCRIPTION
Heart Rate Alarm Time	For a 1 mV, 206 bpm tachycardia, the average detection time was 4.6 seconds. For a test signal half as large, the average was 4.1 seconds. In this case the device sensitivity was increased to 5mV/cm. For a test signal twice as large, the average was 3.1 seconds. For a 2 mV, 195 bpm tachycardia, the average detection time was 2.5 seconds. For a test signal half as large, the average was 2.2 seconds. In this case the device sensitivity was increased to 5mV/cm. For a test signal twice as large, the average was 1.5 seconds.
Audible Alarms	This is a standalone device. All alarm tones are internal to the LIFEPAK 15 monitor/defibrillator. The alarm tone volumes range from 45 to 85 dB.
	Alarm violations are manifested by tones, voice prompts, and visual indications.
	Alarm manifestation occurs within 1 second after a displayed parameter violates its alarm limit. User selectable alarm volume adjustment is provided. This adjustment does not allow alarm volume to attain/reach a zero level.
	SAS tones reinforce SAS messages provided on the product display.
	The following identifies the tone assignments for each type of alarm: • The priority 1 tone is used to alert the user to the possibility of death. This tone is a 440 Hz and 880 Hz alternating tone with a 50% duty cycle and a 4 Hz alternation frequency. This tone has a volume of 70 ±5 dB (A) as measured at a distance of 1 meter from the display. The volume of the priority 1 alarm is not adjustable. • The priority 2 tone (the Quick Set alarm tone) is used to alert the user that a possible life-threatening condition exists. This tone is a continuous 698 Hz tone. This tone has a volume that is lower than the priority 1 tone. • The priority 3 tone is used to alert the user that an abnormal condition exists. Three beeps at 1046 Hz for 100 ms duration each with a 150 ms silence between the first and second and the second and third, followed by a 200 ms silence. This tone has a volume that is lower than the priority 2 tone. • Priority 3 tones come in single and repeating types: for a single tone, the 3-beep sequence sounds only once. For a repeating tone, the 3-beep sequence sounds every 20 seconds. • The priority 4 tone is a momentary tone between 500 and 1500 Hz. This tone has a volume that is lower than the priority 3 tone. Specific characteristics are: – QRS and Volume Setting Tone—100 msec duration at 1397 Hz—4 msec duration at 1319 Hz.
	The alert tone shall consist of one set of two tones to precede voice prompts and to draw attention to the display. Specific characteristics consist of: • 1000 Hz square wave, 100 ms duration • Silence, 100 msec duration • 1000 Hz square wave, 100 ms duration • Silence, 140 msec duration (when preceding a voice prompt) • Voice prompt, when used

CHARACTERISTIC	DESCRIPTION
Visual Alarms	Alarms are indicated visually by: • The violated parameter flashes in inverse video with a message in the message area of the display. • These visual indications remain on the display until the alarm is corrected. Visual indication of alarms continue even when the tones have been silenced.
Priorities for Alarm Conditions	Alarm conditions have the following priorities. Priority 1: • VF or VT detected based on ECG signal Priority 2: • Heart rate high or low limit exceeded • SpO_2 high or low limit exceeded • NIBP high or low limit exceeded • Invasive pressure high or low limit exceeded • $EtCO_2$ high or low limit exceeded • $FiCO_2$ high limit is exceeded • Respiration rate high or low limit exceeded • No breath detected • Temperature high or low limit exceeded Priority 3: • ECG leads off detected • Low battery (5-15% capacity) detected • Very low battery (<5% capacity) detected Note: For this condition, the priority 3 tone is followed by the **REPLACE BATTERY** prompts. • Service condition that could prevent normal operation detected.

Table 48 Setup Options Factory Default Settings

MENU	MENU/ITEM	FACTORY DEFAULT SETTINGS	
General	Language	(Country Specific)	
	Code Summary	Long	
	Trend Summary	Off	
	Site Number	000	
	Device ID	"LP15" + last 4 digits of serial number, for example, LP151234	
	Auto Log	On	
	Line Filter	60 Hz	
	Timeout Speed	30 seconds	
Manual mode	Sync After Shock	Off	
	Pads Default	200 (joules)	
	Energy Protocol	Inactive	
	Internal Default	10 (joules)	
	Voice Prompts	On	
	Shock Tone	On	
	Manual Access	Manual / Direct	
	Set Passcode	0000	
AED mode	Energy Protocol	200–300–360	
	Auto Analyze	Off	
	Motion Detection	On	
	Pulse Check	Never	
	CPR	CPR Time 1	120 seconds
		CPR Time 2	120 seconds
		Initial CPR	Off
		Initial CPR Time	120 seconds
		Preshock CPR	Off
CPR Metronome	Metronome	On	
	Adult - No Airway	30:2	
	Adult - Airway	10:1	
	Youth - No Airway	15:2	
	Youth - Airway	10:1	
Pacing	Rate	60 PPM	
	Current	0 mA	
	Mode	Demand	
	Internal Pacer	Detection Off	
Monitoring	Channels	Default Set	Set 1
	Set 1	Channel 1	ECG Lead II
		Channel 2	None
		Channel 3	None
	Continuous Data	ECG Channel 1	

MENU	MENU/ITEM	FACTORY DEFAULT SETTINGS	
	SpO_2 Tone	Off	
	CO_2	Units	mmHg
		BTPS	Off
	NIBP	Initial Pressure	160 mmHg
		Interval	Off
	Temperature	Units	Celsius
	Trends	On	
12-Lead	Auto Transmit	Off	
	Auto Print	On	
	Print Speed	25 mm/sec	
	Interpretation	On	
	Format	3-Channel Standard	
Events	Events Page 1	Event 2	Oxygen
		Event 3	IV Access
		Event 4	Nitroglycerin
		Event 5	Morphine
		Event 6	Cancel Last
		Event 7	Intubation
		Event 8	CPR
		Event 9	Epinephrine
		Event 10	Atropine
		Event 11	Lidocaine
	Events Page 2	Event 12	ASA
		Event 13	Heparin
		Event 14	Thrombolytic
		Event 15	Glucose
		Event 16	Naloxone
		Event 17	Transport
		Event 18	Adenosine
		Event 19	Vasopressin
		Event 20	Amiodarone
		Event 21	Dopamine
		Event 22	Bicarb
Alarms	Volume	5	
	Alarms	Off	
	VF/VT Alarm	Off	

MENU	MENU/ITEM	FACTORY DEFAULT SETTINGS	
Printer	Auto Print	Defibrillation	On
		Pacing	Off
		Check Patient	Off
		SAS	Off
		Patient Alarms	Off
		Events	Off
		Initial Rhythm	Off
	ECG Mode	Monitor	
	Monitor Mode	1–30 Hz	
	Diagnostic Mode	.05–40 Hz	
	Alarm Waveforms	On	
	Event Waveforms	On	
	Vitals Waveforms	Off	
Transmission	Sites	Site 1 / Output Port / Direct Connect	
	Default Site	None	
	Default Report	12-Lead	
	Wireless	On	
	Search Filter	Off	
Clock	Date/Time	Current date/time PST	
	Clock Mode	Real Time	
	DST	Off	
	Time Zone	None	
Self Test	Transmit Results	Off	
Service	Maintenance Prompt Interval	Off	

Appendix B

Screen Messages

This appendix describes the screen messages that the LIFEPAK 15 monitor/defibrillator may display during normal operation.

Summary of Screen Messages

Table 49 Summary of Screen Messages

MESSAGE	DESCRIPTION
12-LEAD STOPPED	A 12-lead was requested but was stopped by the device.
12-LEAD ECG UNAVAILABLE	A 12-lead was requested but the necessary ECG data is not available.
ABNORMAL ENERGY DELIVERY	A discharge occurred when the paddles were shorted together, when hard paddles did not have adequate contact with the patient or were discharged in the air, or patient impedance was out of range. Message may also appear in certain types of internal faults.
ACCESS DENIED	Three consecutive incorrect passcode attempts were made to enter Manual mode.
ACQUIRING 12-LEAD	Monitor is acquiring data for 12-lead ECG report.
ACQUIRING SNAPSHOT	A snapshot report of current vital signs has been requested.
ADVISORY MODE-MONITORING	The device is monitoring the patient ECG for a shockable rhythm.
ADVISORY: SPCO > 10%	SpCO advisory alert activated. SpCO value is greater than 10%.
ADVISORY: SPMET > 3%	SpMet advisory alert activated. SpMet value is greater than 3%.
ALARM NO BREATH	No valid breath has been detected for 30 seconds.
ALARMS SILENCED	Alarms are silenced. An alert tone with status message **ALARMS SILENCED** occurs periodically as a reminder.
ANALYZING 12-LEAD	The data for 12-lead ECG report is being analyzed.
ANALYZING NOW-STAND CLEAR	The AED is analyzing the patient ECG rhythm.
ATTEMPTING TO TRANSMIT	The device is processing a transmission request.
AUTO NIBP CANCELLED	The automatic initiation of NIBP measurements has been cancelled.
BATTERY X LOW	The specified battery has a low energy condition.
BLUETOOTH DEVICE NOT FOUND	*Bluetooth* device has not been detected.
BLUETOOTH UNAVAILABLE	Unable to locate or connect to target device.
CANNOT CHARGE	**CHARGE** is pressed and the synchronize source is missing for synchronized cardioversion, the therapy cable is not connected, or QUIK-COMBO electrodes are not attached to the therapy cable.
CANNOT CHARGE BATTERIES	Both batteries are installed, and the device is unable to charge either battery.
CANNOT CHARGE BATTERY 1	The device is unable to charge the battery in battery well 1.
CANNOT CHARGE BATTERY 2	The device is unable to charge the battery in battery well 2.
CHARGING TO XXX J	Appears when **CHARGE** is pressed on the front panel or standard paddles.
CHECK FOR PULSE	AED prompt after each standard 3-shock sequence or **NO SHOCK ADVISED** message.

MESSAGE	DESCRIPTION
CHECK PATIENT!	A potentially shockable rhythm has been detected when the VF/VT alarm is on.
CHECK PATIENT. IF NO PULSE, PUSH ANALYZE	A potentially shockable rhythm has been detected when using Advisory Monitoring.
CHECK PRINTER	The printer door is open, there is no paper in the printer, or another printer malfunction exists.
CO2 AUTOZERO	$EtCO_2$ monitor is automatically performing a zero-point calibration.
CO2 FILTERLINE BLOCKAGE	$EtCO_2$ FilterLine tubing is kinked or clogged; the message appears after 30 seconds of unsuccessful purging.
CO2 FILTERLINE OFF	$EtCO_2$ FilterLine tubing is disconnected or is not securely connected to the device.
CO2 FILTERLINE PURGING	$EtCO_2$ FilterLine tubing is kinked or clogged with liquid.
CO2 INITIALIZING	$EtCO_2$ monitor is performing a self-check.
CONNECT CABLE	Therapy cable is not connected when you press **CHARGE**, **PACER**, or **ANALYZE**.
CONNECT CHEST LEADS	A 12-lead ECG analysis was requested and precordial leads are not connected to the patient.
CONNECT ECG LEADS	ECG electrodes or leads are disconnected.
CONNECT ELECTRODES	Therapy electrodes are disconnected.
CONNECTED TO	The device is connected via *Bluetooth* technology to another *Bluetooth*-enabled device. The name of the connected device follows this message.
CONNECTING TO	The device is establishing communication with another *Bluetooth*-enabled device. The name of the target device follows this message.
CPR: ADULT-AIRWAY X:Y	An option for CPR metronome. The patient is an adult for whom an advanced airway has been established. The specified C:V ratio will be used.
CPR: ADULT-NO AIRWAY X:Y	An option for CPR metronome. The patient is an adult for whom an advanced airway has not been established. The specified C:V ratio will be used.
CPR: YOUTH-AIRWAY X:Y	An option for CPR metronome. The patient is a youth (younger than the age of puberty) for whom an advanced airway has been established. The specified C:V ratio will be used.
CPR: YOUTH-NO AIRWAY X:Y	An option for CPR metronome. The patient is a youth (younger than the age of puberty) for whom an advanced airway has not been established. The specified C:V ratio will be used.
CURRENT FAULT	The comparison between delivered and selected pacing current is out of tolerance.
DEMAND	Pacemaker is in Demand mode.
DEMO MODE	The device is in Demo mode and simulated patient data is displayed.
DISARMING...	The energy charge is being removed internally.
ECG CABLE OFF	The device is printing and the ECG cable is removed.
ECG LEADS OFF	Multiple ECG electrodes are disconnected.

MESSAGE	DESCRIPTION
ENDING DEVICE SEARCH	The request for finding a *Bluetooth* device was stopped.
ENERGY DELIVERED	Energy transfer is complete.
ENERGY FAULT	The comparison between stored and selected energy is out of tolerance.
ENTER MANUAL MODE?	One of the Manual mode access buttons was pressed and the confirmation screen is set up to appear.
EXCESSIVE NOISE - 12-LEAD CANCELLED	Noise is detected for longer than 30 seconds that is too great to record a 12-lead ECG report.
IF NO PULSE, PUSH ANALYZE	Follows a CPR interval, if a **PULSE CHECK** setup option other than **NEVER** is selected.
IF NO PULSE, START CPR	Follows delivery of a shock or **NO SHOCK ADVISED** prompt, if a **PULSE CHECK** setup option other than **NEVER** is selected.
IF YOU WITNESSED THE ARREST, PUSH ANALYZE	Initial CPR message that follows **START CPR** prompt, to remind user to deliver a shock immediately if the user witnessed the arrest.
LA LEADS OFF	ECG electrode "LA" is disconnected.
LAST CONNECTED TO	When *Bluetooth* connectivity is installed and this device previously connected to a target device, the name of the target device appears after this message.
LL LEADS OFF	ECG electrode "LL" is disconnected.
LOST BLUETOOTH CONNECTION	Communication with *Bluetooth* device has been interrupted.
LOST DIRECT CONNECTION	Communication via direct connection has been interrupted.
MAINTENANCE DUE	Reminder message that appears at the interval that is set in Service mode. Message continues to appear until reset or turned off.
MANUAL MODE DISABLED	Access to Manual mode from AED mode has been restricted.
MOTION DETECTED!/STOP MOTION!	Motion was detected during ECG analysis.
NIBP AIR LEAK	NIBP cuff applied too loosely or there is a leak in cuff/monitor pneumatic system.
NIBP CHECK CUFF	NIBP cuff is not connected to patient or device.
NIBP FAILED	NIBP monitor cannot establish zero-pressure reference.
NIBP FLOW ERROR	NIBP pneumatic system is not maintaining stable cuff pressure.
NIBP INITIALIZING	NIBP requested while NIBP module is still initializing.
NIBP MOTION	Patient extremity moved too much for the NIBP monitor to accurately complete the measurement.
NIBP OVERPRESSURE	NIBP cuff pressure exceeded 290 mmHg.
NIBP TIME OUT	NIBP monitor did not complete a measurement in 120 seconds.
NIBP WEAK PULSE	The monitor did not detect any pulses.
NO SHOCK ADVISED	The defibrillator did not detect a shockable rhythm.
NO SITES DEFINED	Device is attempting to transmit using *Bluetooth* connection, but no associated destinations have been defined.

MESSAGE	DESCRIPTION
NOISY DATA! PRESS 12-LEAD TO ACCEPT	Monitor detects excessive signal interference while acquiring data. Press **12-LEAD** to override the message and acquire 12-lead ECG with noise.
NON-DEMAND	Pacemaker is in Nondemand (asynchronous) mode.
OBTAINING DEVICE NAMES	Device is obtaining names of available *Bluetooth*-enabled devices.
PACER FAULT	Internal error detected during pacing.
PACING IN PROGRESS	The requested action is not available because the device is currently performing pacing.
PACING STOPPED	Pacing has stopped—for example, due to disconnection of therapy electrodes.
PASSCODE INCORRECT - TRY AGAIN	Incorrect passcode entered.
PAUSED	The pacing **PAUSE** button is pressed and held. Current pulses are applied at reduced frequency while the MA and PPM settings are maintained.
PUSH ANALYZE	Press **ANALYZE** to begin ECG analysis.
PUSH AND HOLD SHOCK BUTTON!	The defibrillator is in Sync mode, fully charged, and ready to provide therapy.
PUSH AND HOLD PADDLE BUTTONS TO SHOCK!	The defibrillator is in Sync mode, fully charged, and ready to provide therapy with hard paddles connected.
PUSH SHOCK BUTTON!	The defibrillator is fully charged and ready to provide therapy.
PX NOT ZEROED	Transducer is connected or reconnected and is not zeroed.
PX TRANSDUCER NOT DETECTED	IP transducer is disconnected from the monitor/defibrillator.
PX ZERO FAILED	The device was unable to zero the pressure transducer.
PX ZEROED	Transducer successfully zeroed.
PX ZEROING	Monitor is establishing a zero reference.
RA LEADS OFF	ECG electrode "RA" is disconnected.
REPLACE BATTERY X	Power loss for the battery in well X is imminent.
SEARCHING FOR DEVICES	Device is attempting to identify available *Bluetooth* devices.
SELECT BIPHASIC ENERGY / XXX J	**ENERGY SELECT** was pressed on front panel or on standard paddles.
SELF TEST FAILED	Device detected internal error; remove device from service.
SELF TEST FAILED. TRANSMITTING...	Device detected internal error and is transmitting test results. Remove device from service after transmission is complete.
SELF TEST IN PROGRESS	Device is performing a self test after turning on.
SELF TEST PASSED	Device passed internal test and is available for use.
SELF TEST PASSED. TRANSMITTING...	Device passed internal test and is transmitting test results.
SHOCK ADVISED!	The defibrillator has analyzed the patient ECG rhythm and detected a shockable ECG rhythm.
SPCO: POOR QUALITY SIGNAL	Device is not receiving sufficient input from sensor.
SPMET: POOR QUALITY SIGNAL	Device is not receiving sufficient input from sensor.

MESSAGE	DESCRIPTION
SPO2: CHECK SENSOR	The SpO_2 sensor connection to device or application to patient needs checked.
SPO2: LOW PERFUSION	Patient has a weak pulse.
SPO2: NO SENSOR DETECTED	A sensor is disconnected from the monitor.
SPO2: POOR QUALITY SIGNAL	Device is not receiving sufficient input from sensor.
SPO2: SEARCHING FOR PULSE	A sensor is connected to the patient and is searching for a pulse.
SPO2: SENSOR DOES NOT SUPPORT SPCO OR SPMET	The sensor in use only measures SpO_2.
SPO2: UNKNOWN SENSOR	A sensor that is not Physio-Control approved is connected to the device.
STAND CLEAR/PUSH SHOCK BUTTON	Prompts you to stand clear and push ⚡ (shock).
START CPR	Prompts you to begin providing CPR to the patient.
SWITCHING PRIMARY TO LEAD II	Pacing is turned on while **PADDLES** is the primary lead.
SWITCHING PRIMARY TO PADDLES	Device was in Lead II when **ANALYZE** was pressed. **PADDLES** becomes the primary lead.
SYNC MODE	Device is currently in Sync mode.
TEMP: ACCURACY OUTSIDE LIMITS	Temperature accuracy check has failed.
TEMP: CHECK SENSOR	Device is not receiving sufficient input from sensor.
TO CANCEL, PUSH SPEED DIAL	The defibrillator is charging or charged and the device may be disarmed by pressing the Speed Dial.
TRANSMISSION CANCELLED	Data transmission has been cancelled.
TRANSMISSION COMPLETED	Data transmission completed successfully.
TRANSMISSION FAILED	Data transmission was not successful.
TRANSMITTING TO <SITE>	Connection is established to <site> and transmission of requested report is occurring.
UNABLE TO CONNECT	Unable to establish connection with *Bluetooth* device.
UNABLE TO TRANSMIT	Unable to send data.
UNKNOWN DEVICE	*Bluetooth* connection failed or timed out before obtaining target device name.
USE ECG LEADS	Sync mode attempted, but ECG electrodes are not attached to patient, **PADDLES** lead is displayed, and standard paddles are connected to defibrillator.
USER TEST FAILED	Unsuccessful User Test.
USER TEST IN PROGRESS	**USER TEST** selected on the **OPTIONS** menu and test is in process.
USER TEST PASSED	Successful User Test completed.
VX LEADS OFF	ECG electrode such as "V1" is disconnected.
X DEVICES FOUND	Shows number of *Bluetooth*-enabled devices found.
XX LEADS OFF	ECG electrode such as "RA" is disconnected.
XX% TRANSMITTED	Specified percent of the transmission is completed.

Appendix C

Defibrillation Clinical Summaries

Defibrillation of Ventricular Fibrillation and Ventricular Tachycardia

Background

Physio-Control conducted a multi-centered, prospective, randomized and blinded clinical trial of biphasic truncated exponential (BTE) shocks and conventional monophasic damped sine wave (MDS) shocks. Specifically, the equivalence of 200 J and 130 J BTE shocks to 200 J MDS shocks[1] was tested.

[1] S.L. Higgins et al., "A comparison of biphasic and monophasic shocks for external defibrillation," *Prehospital Emergency Care*, 2000, 4(4):305-13.

Methods

Ventricular fibrillation (VF) was induced in 115 patients during evaluation of implantable cardioverter defibrillator function and 39 patients during electrophysiologic evaluation of ventricular arrhythmias. After 19±10 seconds of VF, a customized defibrillator delivered an automatically randomized shock. Efficacy was based on success of this shock. To demonstrate equivalence of test shocks to control shocks, the 95% upper confidence limit of the difference in efficacy (95UCLD), control minus test, was required to be less than 10%.

Results

Ventricular Fibrillation

The efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks (95UCLD=2%). The difference in success rates of 200 J MDS minus 200 J BTE shocks was -10% (exact 95% confidence interval from -27% to 4%). The 130 J BTE shocks were not demonstrated equivalent to 200 J MDS shocks (95UCLD=22%). However, neither was their efficacy significantly lower than that of the 200 J MDS shocks (statistical power limited by small sample sizes). For all shock types, hemodynamic parameters (oxygen saturation and systolic and diastolic blood pressure) were at or near their pre-induction levels by 30 seconds after successful shocks.

Ventricular Fibrillation 1st Shock Success

SHOCK	VENTRICULAR FIBRILLATION 1ST SHOCK SUCCESS	EXACT 95% CONFIDENCE INTERVAL
200 J MDS	61/68 (90%)	80-96%
200 J BTE	39/39 (100%)	91-100%
130 J BTE	39/47 (83%)	69-92%

Ventricular Tachycardia

Seventy-two episodes of ventricular tachycardia (VT), induced in 62 patients, were treated with randomized shocks. High rates of conversion were observed with biphasic and monophasic shocks. Sample sizes were too small to statistically determine the relationship between success rates of the waveforms tested.

Ventricular Tachycardia 1st Shock Success

SHOCK	VENTRICULAR TACHYCARDIA 1ST SHOCK SUCCESS	EXACT 95% CONFIDENCE INTERVAL
200 J MDS	26/28 (93%)	77-99%
200 J BTE	22/23 (96%)	78-100%
130 J BTE	20/21 (95%)	76-100%

Conclusions

In this double-blinded study, the efficacy of the 200 J BTE shocks was demonstrated to be at least equivalent to the efficacy of 200 J MDS shocks for defibrillation of short duration, electrically-induced VF. However, the comparison of efficacy of 130 J biphasic and 200 J monophasic shocks for VF was inconclusive. All waveforms tested provided a high rate of termination of VT. The VT sample sizes were too small to statistically determine the relationship between VT success rates of the waveforms tested.

Compared to conventional shocks for VF, we found no positive or negative effect of biphasic shocks for VF on hemodynamic parameters following the defibrillating shock. It is possible that, compared to 200 J monophasic shocks, 200 J biphasic shocks will in some cases enable earlier termination of VF. Therefore, we conclude that biphasic shocks for VF delivered at conventional energy levels have the potential to improve outcome in resuscitation of patients with cardiac arrest.

External Cardioversion of Atrial Fibrillation

Overview

The performance of the Physio-Control biphasic truncated exponential (BTE) waveform was compared to the conventional monophasic damped sine (MDS) waveform in an international, multi-center, prospective, randomized clinical study of adult patients undergoing elective cardioversion of atrial fibrillation (AF). A total of 80 patients were enrolled in the study and were treated with one or more study shocks. The primary dataset consisted of 72 enrolled patients confirmed to have been in AF. Data from seven patients with atrial flutter were analyzed separately. One patient who did not satisfy all protocol criteria was excluded from analysis.

Subjects were randomized to receive biphasic or monophasic shocks from LIFEPAK 12 defibrillator/monitors. Progressive shocks of 70, 100, 200 and 360 J of the assigned waveform, and a 360 J crossover shock of the other waveform, were delivered if AF persisted. Shocks were delivered using EDGE System QUIK-COMBO® Pacing/Defibrillation/ECG electrodes applied in the standard anterior-lateral position. Successful cardioversion was defined as the confirmed removal of AF after delivery of a shock, as determined by ECG over-read by two cardiologists with no knowledge of the shock waveform. Patients rated skin pain on a scale from 0 to 8 after the procedure.

This study showed that these biphasic shocks provide higher efficacy for cardioversion of atrial fibrillation, requiring fewer shocks, 65% less current and 65% less energy to cardiovert atrial fibrillation. Patients undergoing elective cardioversion with the biphasic protocol, as compared to those receiving the monophasic protocol, reported significantly less post-procedure pain.

Objectives

The primary objective of the study was to compare the cumulative efficacy of biphasic and monophasic shocks of 200 J or less for cardioversion of atrial fibrillation. A triangular sequential design was used to test for a statistically significant difference between groups of patients treated with these two waveforms.

Secondary objectives included 1) providing an estimation of the dose response relationship for the two waveforms which would allow clinicians to make well-informed selections of energy doses for cardioversion with biphasic shocks and 2) comparing the pain experienced by patients following treatment with monophasic and biphasic shocks.

©2018 Physio-Control, Inc.

Results

Seventy-two of the patients enrolled were in atrial fibrillation and 7 were in atrial flutter. On average, patients had been in atrial fibrillation for 88 days, were 66 years old, weighed 81 kg and had 72 ohms of transthoracic impedance. Sixty-three percent were male and 46% had been previously cardioverted. There were no significant differences between the groups of patients treated with monophasic and biphasic shocks, either in these baseline characteristics or in left atrial dimension, cardiac medications or diagnosis.

The cumulative success rates for cardioversion of atrial fibrillation are presented in the following table and the figure on the next page. These data provide a reasonable estimate of the expected probability of cardio-version success for a single shock at any given energy level within the range studied. Energy and peak current delivered for all shocks at each energy setting are presented in the following table.

Cumulative Success Rates and Crossover Results for Cardioversion of AF

ENERGY SETTING	70 J	100 J	200 J	360 J	360 J CROSSOVER SUCCESSES
MDS: *n* = 37	5.4%	19%	38%	86%	4 of 5 pts succeeded with 360 J BTE shock
BTE: *n* = 35	60%	80%	97%	97%	0 of 1 pts succeeded with 360 J MDS shock

Cumulative percentages of successes for cardioversion of AF with shocks of 200 J or less, the primary endpoint of the study, was significantly higher in the biphasic group than the monophasic group ($p<0.0001$). The observed cumulative percentage of successes at 360 J was also higher for biphasic shocks than for monophasic shocks, but did not attain statistical significance.

Energy Settings, Delivered Energy and Peak Current for Shocks Delivered to Patients in AF

ENERGY SETTING	NUMBER OF PATIENTS	DELIVERED ENERGY	PEAK CURRENT, AMPS
Monophasic shocks			
70 J	37	73±3	21.0±3.5
100 J	35	105±4	24.6±4.3
200 J	30	209±7	34.6±5.9
360 J	23	376±13	46.8±8
360 J crossover shocks	1	380	44.7

ENERGY SETTING	NUMBER OF PATIENTS	DELIVERED ENERGY	PEAK CURRENT, AMPS
Biphasic shocks[1]			
70 J	35	71±0	11.9±2.5
100 J	14	102±0	14.9 ±3.5
200 J	7	203±1	20.6±3.5
360 J	1	362	28.5
360 J crossover shocks	5	361±6	32.4±8.5

[1] Peak current and delivered energy are not available for two of the patients treated with biphasic shocks.

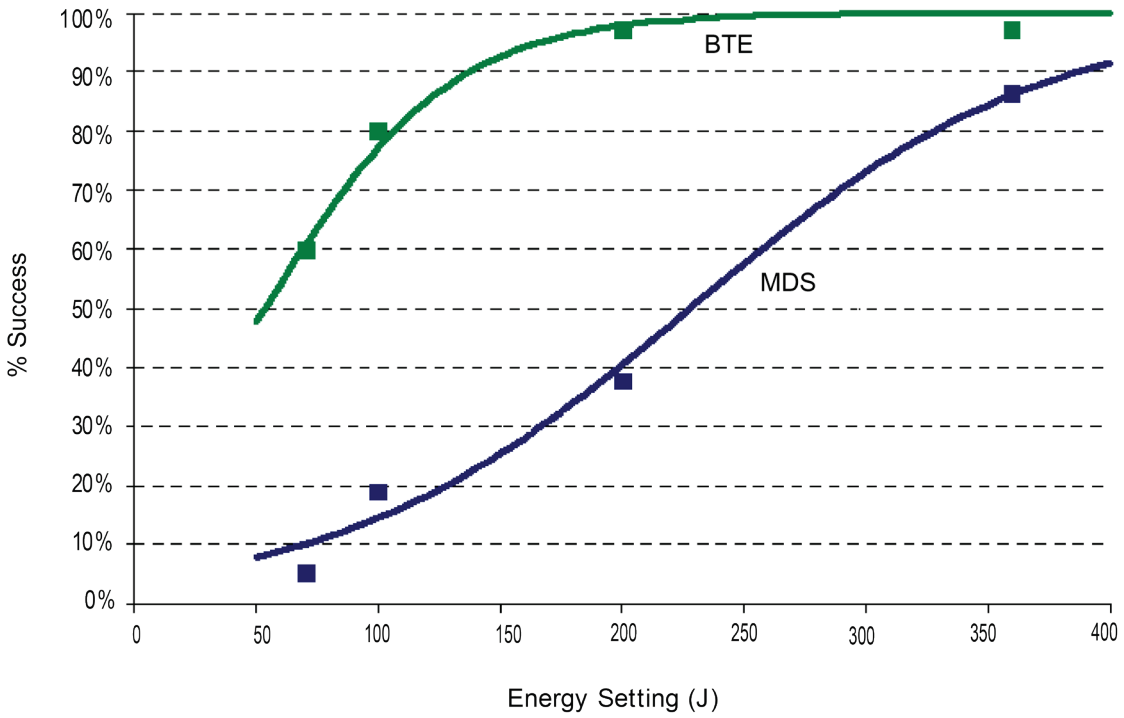

Figure 54 Cumulative Shock Success for Cardioversion of Atrial Fibrillation with Monophasic (MDS) and Biphasic (BTE) Shocks: Observed Rates (n) Plotted with Estimated Dose Response Curves

Compared to monophasic shocks, biphasic shocks cardioverted atrial fibrillation with less peak current (14.0 ± 4.3 vs. 39.5 ± 11.2 A, p<0.0001), less energy (97 ± 47 vs. 278 ± 120 J, p<0.0001), fewer shocks (1.7 vs. 3.5 shocks, p < 0.0001) and less cumulative energy (146 ± 116 vs. 546 ± 265 J, p<0.0001). Patients treated with the biphasic protocol, as compared to those treated with the monophasic protocol, reported significantly less post-procedure pain just after (0.4 ± 0.9 vs. 2.5 ± 2.2, p<0.0001) and 24 hours after the procedure (0.2 ± 0.4 vs. 1.6 ± 2.0, p<0.0001).

All patients with atrial flutter were cardioverted with the first shock (70 J), whether that shock was monophasic (n=4) or biphasic (n=3).

Anterior-lateral electrode placement was used for treatment of most (96%) of the patients studied. Reports in the literature differ on whether anterior-posterior electrode placement provides better shock efficacy than anterior-lateral placement. If there is a benefit to anterior-posterior electrode placement, it may be possible to obtain modestly higher cardioversion success rates with both waveforms than those observed in this study. However, placement is not likely to affect the observed relationship between the efficacies of monophasic and biphasic waveforms.

Conclusions

The data demonstrate the Physio-Control biphasic waveform is clinically superior to the conventional monophasic damped sine waveform for cardioversion of atrial fibrillation. Specifically, compared to monophasic shocks, biphasic shocks cardioverted atrial fibrillation with less peak current, less energy, fewer shocks and less cumulative energy. Patients undergoing elective cardioversion with the biphasic protocol, as compared to those receiving the monophasic protocol, reported significantly less post-procedure pain just after and 24 hours after the procedure. This may be due to fewer required shocks, less cumulative energy, less delivered peak current or other characteristics of this biphasic waveform.

Guidance for Selection of Shock Energy

Biphasic waveform technology is a standard in cardiac defibrillators. The study summarized[1] here provides the best information available on which to base energy selections for cardioversion with this waveform.

For cardioversion of atrial fibrillation, the results of this study provide specific guidance for three possible strategies in selection of shock energy levels.

- To optimize for more rapid cardioversion and fewer shocks, select the same biphasic energy levels used previously with monophasic defibrillators (e.g., use 200 J biphasic instead of 200 J monophasic). This can be expected to increase the success rate yet decrease the peak current of the first and subsequent shocks.
- To maintain shock efficacy equivalent to that previously observed with monophasic shocks, select a biphasic energy level of about one-third the energy previously used for monophasic shocks (e.g., use 100 J biphasic instead of 300 J monophasic).
- To optimize for low initial and cumulative energy using a step-up protocol, select 70 J for the first shock and use small increases in energy if further shocks are needed.

Each of these strategies should provide effective cardioversion therapy while substantially reducing the amount of peak current to which the heart is exposed.

For cardioversion of atrial arrhythmias other than atrial fibrillation, the data available to guide the selection of energy settings is very limited. It is likely that biphasic doses below 50 J will provide high success rates when treating atrial flutter and paroxysmal supraventricular tachycardia. However, until more clinical data becomes available, it may be advisable to use the same energy settings for biphasic shocks as are customarily used for monophasic shocks.

Arrhythmias may persist for a variety of reasons unrelated to the type of waveform used for cardioversion. In persistent cases, clinicians continue to have the option to either increase shock intensity or switch to an alternate electrode placement.

[1] Koster R, Dorian P., et al. A randomized trial comparing monophasic and biphasic waveform shocks for external cardioversion of atrial fibrillation. American Heart Journal, 2004;147(5):K1-K7.

Intra-Operative Ventricular Defibrillation

Overview

The defibrillation efficacy of the Physio-Control biphasic truncated exponential (BTE) waveform was compared to the standard monophasic damped sine waveform (MDS) in a prospective, randomized multi-center study of patients undergoing intra-operative, direct defibrillation for ventricular fibrillation (VF). A total of 251 adult patients were enrolled in the study; 98 of these developed VF that was treated with one or more study shocks. Seven patients who did not satisfy all protocol criteria were excluded from analysis.

Subjects were randomized to receive BTE or MDS shocks from LIFEPAK 12 defibrillator/monitor. Those who developed VF after removal of the aortic clamp received progressively stronger shocks of 2, 5, 7, 10 and 20 joules (J) using 2-inch paddles until defibrillation occurred. A 20 J crossover shock of the alternate waveform was given if VF persisted.

This study showed that these biphasic shocks have higher defibrillation efficacy, requiring fewer shocks, less threshold energy and less cumulative energy than monophasic damped sine shocks.

Objectives

The primary objective of the study was to compare the cumulative efficacy of BTE shocks to MDS shocks at 5 J or less. A triangular sequential design was used to test for a difference between waveform groups.

The secondary objective was to provide an estimation of the dose response relationship for the two waveforms that would allow physicians to make well-informed selections of energy doses for intra-operative defibrillation with biphasic shocks.

Results

Thirty-five male and 15 female subjects were randomized to the BTE group; 34 and 7 to the MDS group. Mean age was 66 and 68 years, respectively. There were no significant differences between BTE and MDS treatment groups for cardiac etiology, arrhythmia history, current cardiac medications, American Society of Anesthesiology (ASA) risk class, left ventricular wall thickness, cardiopulmonary bypass time, core temperature or blood chemistry values at the time of aortic clamp removal.

Cumulative defibrillation success at 5 J or less, the primary endpoint of the study, was significantly higher in the BTE group than in the MDS group ($p=0.011$). Two of the 91 patients included in this primary endpoint analysis could not be included in more comprehensive analyses due to protocol variances that occurred in the shock sequence after the 5 J shock. Thus, the cumulative success rates for intra-operative defibrillation in the remaining 89 patients are presented in the following table and figure. These data provide a reasonable estimate of the expected probability of defibrillation success for a single shock at any given energy level within the range studied.

Compared to the MDS group, the BTE group required, on average, fewer shocks (2.5 vs. 3.5: p=0.002), less threshold energy (6.8 J vs. 11.0 J: p=0.003) and less cumulative energy (12.6 J vs. 23.4 J: p=0.002). There was no significant difference between success rates for BTE versus MDS crossover shocks.

Cumulative Shock Success Rates and Crossover Shock Results for Intra-operative Defibrillation

ENERGY SETTING	2 J	5 J	7 J	10 J	20 J	20 J CROSSOVER SUCCESSES
MDS: *n* = 41	7%	22%	34%	51%	76%	3 of 8 pts succeeded with 20 J BTE shock
BTE: *n* = 48[1]	17%	52%	67%	75%	83%	3 of 8 pts succeeded with 20 J MDS shock

[1] Two subjects randomized to the BTE group were unable to be included in the cumulative success rates shown in the table and figure due to protocol deviations occurring after the 5 J shock.

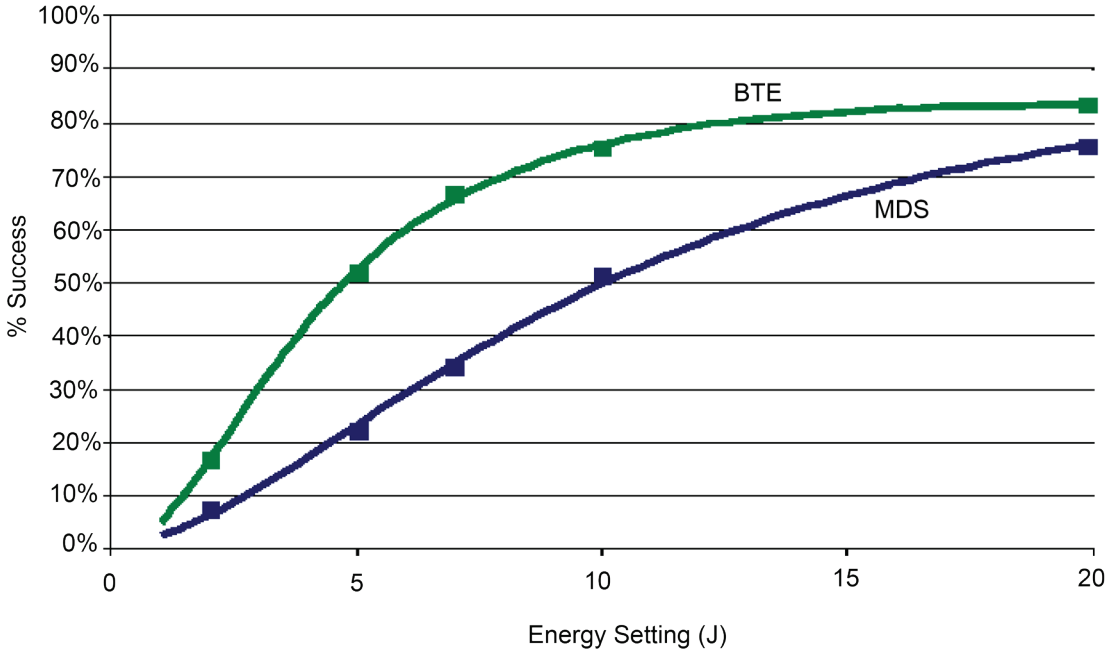

Figure 55 Cumulative Shock Success for Intra-operative Defibrillation with Monophasic (MDS) and Biphasic (BTE) Shocks: Observed Rates (*n*) Plotted with Estimated Dose Response Curves

Conclusions

The data demonstrate the Physio-Control biphasic waveform is clinically superior to the conventional monophasic damped sine waveform for intra-operative internal defibrillation of VF. Specifically, these biphasic shocks have higher defibrillation efficacy, while requiring fewer shocks, less threshold energy and less cumulative energy than monophasic damped sine shocks. There were no unsafe outcomes or adverse effects from the use of the biphasic waveform.

Guidance for Selection of Shock Energy

Biphasic waveform technology is a standard in cardiac defibrillators. The results of this study[1] provide specific guidance for three possible strategies in developing a dosing regimen.

- To optimize for lower initial and cumulative energy using a step-up protocol, select 5 J for the first shock and use small incremental increases in energy if further shocks are needed. In this study, biphasic shocks of 5 J were successful in approximately half of the patients.
- To optimize for more rapid defibrillation and fewer shocks, select the same BTE energy level used previously with MDS (e.g., 20 J BTE instead of 20 J MDS), which can be expected to increase the success rate yet decrease by approximately 30% the peak current of the first and subsequent shocks.
- To maintain an equivalent degree of efficacy as previously observed with MDS shocks, a BTE energy level one-half of that previously used for MDS shocks (e.g., 10 J BTE instead of 20 J MDS) would be an appropriate choice.

Each of these strategies should provide effective defibrillation therapy while substantially reducing the amount of peak current to which the heart is exposed.

Fibrillation may persist for a variety of reasons unrelated to the type of waveform used for defibrillation. In cases where fibrillation is persistent, physicians continue to have the option to either increase shock intensity or switch to a larger paddle size. Larger paddle size is known to decrease energy requirements for successful defibrillation.[2]

[1] B. Schwarz et al., Biphasic shocks compared with monophasic damped sine wave shocks for direct ventricular defibrillation during open heart surgery. Anesthesiology. 2003;98(5):1063-1069.

[2] Y. Zhang et al., “Open chest defibrillation: biphasic versus monophasic waveform shocks,” J Am Coll Cardiol, 2001, 37(2 supplement A):320A.

Clinical Summary: Monophasic vs. Biphasic Waveforms: Out-of-Hospital Trial

Background

In a publication by Van Alem et al., the authors noted "Evidence suggests that biphasic waveforms are more effective than monophasic waveforms for defibrillation in out-of-hospital cardiac arrest (OHCA), yet their performance has only been compared in un-blinded studies."[1] The authors subsequently conducted and reported on a randomized clinical trial comparing the effectiveness of the LIFEPAK 500 defibrillation waveform (monophasic versus biphasic). Specifically, the success of biphasic truncated exponential (BTE) and monophasic damped sine wave (MDS) shocks for defibrillation were compared in a prospective, randomized, double-blinded clinical trial of out-of-hospital (OOH) cardiac arrest patients.

Note: The identical ECG analysis Shock Advisory System and BTE (ADAPTIV biphasic waveform) used in the LIFEPAK 500 AED is also used in the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

1 Van Alem AP, Chapman FW, Lank P, Hart AAM, Koster RW. A prospective, randomised and blinded comparison of first shock success of monophasic and biphasic waveforms in out-of-hospital cardiac arrest. Resuscitation 2003;58(1):17-24.

Methods

First responders were equipped with either a Physio-Control LIFEPAK 500 MDS or BTE (ADAPTIV biphasic waveform) AED in a random fashion. Patients in VF received BTE or MDS first shocks of 200 J. The ECG was recorded for subsequent analysis continuously. The success of the first shock as a primary endpoint was removal of VF and required a return of an organized rhythm for at least two (2) QRS complexes, with an interval of <5 seconds, within 1 minute after the first shock. The secondary endpoint was termination of VF at 5 seconds.

Results

VF was the initial recorded rhythm in 120 patients in OHCA, 51 patients received BTE and 69 received MDS shocks. The median time from collapse to first shock was 9 minutes for the monophasic shock and 11 minutes for the BTE. The success rate of 200 J first shocks was significantly higher for BTE than for MDS shocks, 35/51 (69%) and 31/69 (45%), p=0.01. Termination of VF at 5 seconds after the first shock was 91% for the monophasic shock and 98% for BTE waveform. Return of spontaneous circulation was 61% for the Physio-Control defibrillation shock.

In a logistic regression model, the odds ratio of success for a BTE shock was 4.01 (95% CI 1.01-10.0), adjusted for baseline cardiopulmonary resuscitation, VF-amplitude and time between collapse and first shock. No difference was found with respect to the secondary endpoint, termination of VF at 5 seconds (RR 1.07 95% CI: 0.99-1.11) and with respect to survival to hospital discharge (RR 0.73 95% CI:0.31-1.70).

Conclusion

The authors concluded that BTE-waveform AEDs provide significantly higher rates of successful defibrillation with return of an organized rhythm in OHCA than MDS waveform AEDs. This supports the safety and effectiveness of the LIFEPAK CR Plus and LIFEPAK EXPRESS AEDs.

Appendix D

Shock Advisory System

This appendix describes the basic function of the Shock Advisory System™ (SAS) algorithm.

Overview

The Shock Advisory System (SAS™) is an ECG analysis system built into the LIFEPAK 15 monitor/defibrillator that advises the operator whether it detects a shockable or nonshockable rhythm. This system makes it possible for individuals not trained to interpret ECG rhythms to provide potentially-lifesaving therapy to victims of ventricular fibrillation or pulseless ventricular tachycardia.

The Shock Advisory System contains the following features:

- Electrode Contact Determination
- Automated Interpretation of the ECG
- Operator Control of Shock Therapy
- Continuous Patient Surveillance System (CPSS)
- Motion Detection

The Shock Advisory System is active when the LIFEPAK 15 monitor/defibrillator is used as an automated external defibrillator (AED). CPSS may be activated during monitoring.

Upon the user pressing the ⚡ (shock) button, the LIFEPAK 15 monitor/defibrillator delivers the shock therapy to the patient.

Electrode Contact Determination

The Shock Advisory System measures the patient's transthoracic impedance through the therapy electrodes. If the baseline impedance is higher than a maximum limit, it determines that the electrodes do not have sufficient contact with the patient or are not properly connected to the AED. When this occurs, ECG analysis and shock delivery are inhibited. The AED advises the operator to connect electrodes when there is insufficient electrode contact.

Automated Interpretation of the ECG

The defibrillator recommends a shock if either of the following rhythms is detected:

- Ventricular fibrillation
- Rapid ventricular tachycardia

The defibrillator recommends no shock for nonshockable ECG rhythms as indicated in the Shock Advisory System Performance Report in this section.

The defibrillator is designed to detect and remove pacemaker pulses from the ECG so that an accurate decision can be reached while a pacemaker is functioning. Some pacemaker pulses may prevent advisement of an appropriate shock, regardless of the patient's underlying rhythm. If this occurs, the rescuer is advised to continue chest compressions.

Performance Verification

The Shock Advisory System (SAS) in the LIFEPAK 15 defibrillator was verified by inputting specific ECG waveform segments from Physio-Control databases through the electrode connector and recording the SAS decision of 'shock' or 'no shock.' The 'shock' or 'no shock' decision made by the SAS for each ECG waveform segment was compared to the treatment recommendation by clinical experts when they classified these individual ECG segments into rhythm groups and made a treatment recommendation of 'shock' or 'no shock.'

The main ECG database used to verify the performance of the LIFEPAK 15 defibrillator for SAS is named the *Physio-Control Test Set.* In addition, the ECG database named *SAS Test Set* was used to provide samples of shockable rapid ventricular tachycardia from pulseless patients for verification purposes. The following information about the test sets and the Summary Performance Report is provided in accordance with AHA recommendations[1] and IEC requirements[2] for reporting performance data for a rhythm recognition detector.

A. Acquisition and Annotation Methodology

This section includes recording methods, rhythm source, rhythm selection criteria, annotation methods, and annotation criteria for the Shock Advisory System test sets.

Physio-Control Test Set

The Physio-Control Test Set includes ECG segments gathered from a variety of sources. The test set includes both adult and pediatric ECG segments, ECGs from the standard anterior-lateral (AL, AA) defibrillation electrode placement, ECGs from anterior-posterior (AP) defibrillation electrode placement, and ECGs from patients who have a pacemaker. Each ECG segment is 10 seconds in duration. Sources for the ECGs include:

- AHA Ventricular Arrhythmia Database (Holter recordings)
- MIT-BIH Arrhythmia Database (Holter)
- MIT-BIH Malignant Ventricular Arrhythmia Database (Holter)
- Creighton University Ventricular Tachyarrhythmia Database (hospital monitor)
- A series of consecutive LIFEPAK 500 automated external defibrillator recordings collected by Physio-Control
- DiMarco AA-AP ECG Database (simultaneous AA and AP defibrillation leads, recorded in the electrophysiology laboratory)
- Vanderbilt Pediatric ECG Database (AA and/or AP defibrillation leads, recorded in the pediatric intensive care unit, the pediatric electrophysiology laboratory, and the pediatric operating room during open heart surgery)
- A series of 12-lead recordings from consecutive chest pain patients, recorded in the pre-hospital setting with the LIFEPAK 11 monitor/defibrillator.

SAS Test Set

The SAS Test Set includes 65 ECG samples of shockable rapid ventricular tachycardia from pulseless patients recorded during pre-hospital use of LIFEPAK 5 defibrillators by paramedics. Selected ECG segments were sampled and the ECG rhythm was classified by clinical experts. Each ECG segment is 5 seconds in duration.

B. ECG Rhythm Types

The ECG rhythms were placed into the following categories by the clinical experts.

Shockable

- Coarse ventricular fibrillation (VF) (≥0.20 mV peak-to-peak amplitude)
- Rapid ventricular tachycardia, pulseless (VT) (HR ≥120 bpm, QRS duration ≥160 ms, no apparent P waves, patient reported to be pulseless by paramedics)

Nonshockable

- Normal sinus rhythm (NSR) (sinus rhythm, heart rate 60-100 bpm)
- Asystole (<0.08 mV peak-to-peak amplitude)
- Other organized rhythms including atrial fibrillation/flutter, atrioventricular block, idioventricular rhythms, sinus bradycardia, supraventricular tachycardia, and premature ventricular contractions

Intermediate

- Fine ventricular fibrillation (VF) (<0.20 and ≥0.08 mV peak-to-peak amplitude)
- Other VT (ventricular tachycardia that does not meet criteria for VT in the shockable rhythms category)

Also included are coarse VF with pacemaker pulses and nonshockable rhythms with pacemaker pulses.

C. Summary Shock Advisory System Performance Report

The results of tests with the SAS and Physio-Control test sets in the LIFEPAK 15 defibrillator are shown below in the context of requirements from IEC 60601-2-4 and the recommendations from the American Heart Association.

IEC 60601-2-4 Requirements and SAS Performance for Adult and Pediatric Patients

RHYTHM CATEGORY	REQUIREMENT	TEST RESULT
Shockable (Sensitivity)		
Coarse VF	>90%	Met
Rapid VT, pulseless	>75%	Met
Nonshockable (Specificity)	>95%	Met
Positive Predictive Value	Report Only	>90%
False Positive Rate	Report Only	<5%

AHA Recommendations and SAS Performance for Adult Patients

RHYTHM CATEGORY	PERFORMANCE GOAL	MINIMUM SAMPLE SIZE	SAMPLE SIZE TESTED	TEST RESULT (GOAL AND SAMPLE SIZE)
Shockable (Sensitivity)				
Coarse VF	>90%	200	206	Met
Rapid VT, pulseless	>75%	50	65	Met
Nonshockable (Specificity)	>95%	300		Met
Normal Sinus Rhythm	>99%	100	509	Met
Other QRS	>95%	30	749	Met
Asystole	>95%	100	124	Met
Intermediate				
Fine VF	Report Only	25	32	>40% shocked
Other VT	Report Only	25	27	>20% shocked

SAS Performance for Pediatric Patients

RHYTHM CATEGORY	PERFORMANCE GOAL	SAMPLE SIZE TESTED	TEST RESULT (GOAL)
Shockable (Sensitivity)			
Coarse VF	>90%	63	Met
Nonshockable (Specificity)	>95%		Met
Normal Sinus Rhythm	>99%	69	Met
Other QRS	>95%	507	Met
Asystole	>95%	60	Met
Intermediate			
Fine VF	Report Only	1	>20% shocked

The Shock Advisory System was also tested using paced rhythms recorded at high-fidelity from patients with implanted pacemakers. The high-fidelity pacemaker spikes were also added to samples of ventricular fibrillation to test the defibrillator's ability to reach a shock decision in the case of ventricular fibrillation with an implanted, active pacemaker. The results are summarized in the following table.

Shock Advisory System Performance with Active Pacemakers

RHYTHM CATEGORY	PERFORMANCE GOAL	SAMPLE SIZE TESTED	TEST RESULT
Shockable (Sensitivity)			
Coarse VF	>90%	35	Met
Nonshockable (Specificity)	>95%	35	Met

Operator Control of Shock Therapy

The Shock Advisory System causes the AED to charge automatically when it detects the presence of a shockable rhythm. When a shock is advised, the operator presses the **SHOCK** button to deliver the energy to the patient.

Continuous Patient Surveillance System

The Continuous Patient Surveillance System (CPSS) automatically monitors the patient's ECG rhythm for a potentially shockable rhythm while the electrodes are attached and the AED is turned on. CPSS is not active during ECG analysis or when the AED is in a CPR cycle.

Motion Detection

The Shock Advisory System detects patient motion independent of ECG analysis. **MOTION DETECTION** can be set up to be **ON** or **OFF** in the Setup Options for the device.

A number of activities can create motion, including CPR, rescuer movement, patient movement, and vehicle movement. If variations in the transthoracic impedance signal exceed a maximum limit, the Shock Advisory System determines that patient motion of some kind is present. If motion is detected, the ECG analysis is inhibited. The operator is advised by a voice prompt. After 10 seconds, if motion is still present, the motion alert stops and the analysis always proceeds to completion. This limits the delay in therapy in situations where it may not be possible to stop the motion. However, the rescuer should remove the source of motion whenever possible to minimize the chance of artifact in the ECG.

There are two reasons why ECG analysis is inhibited when the motion alert occurs, and why the rescuer should remove the source of the motion whenever possible:

- Such motion may cause artifact in the ECG signal. This artifact may occasionally cause the Shock Advisory System to reach an incorrect decision.
- The motion may be caused by a rescuer’s interventions. To reduce the risk of inadvertently shocking a rescuer, the motion alert prompts the rescuer to move away from the patient. This will stop the motion and ECG analysis will proceed.

Definitions and References

A true positive (A) is a correct classification of a shockable rhythm. A true negative (D) is a correct classifications of all rhythms for which a shock is not indicated. A false positive (B) is an organized or perfusing rhythm or asystole that has been incorrectly classified as a shockable rhythm. A false negative (C) is a VF or VT associated with cardiac arrest that has been incorrectly classified as non-shockable.

The sensitivity of the device for shockable rhythms is A/(A+C). The true predictive value is expressed as A/(A+B). The specificity of the device for non-shockable rhythms is D/(B+D). The false positive rate is expressed as B/(B+D).[3]

[1] Kerber RE, et al, "Automatic External Defibrillators for Public Access Defibrillation: Recommendations for Specifying and Reporting Arrhythmia Analysis Algorithm Performance, Incorporating New Waveforms, and Enhancing Safety: A Statement for Health Professionals from the American Heart Association Task Force on Automatic External Defibrillation", Subcommittee on AED Safety and Efficacy. *Circulation*, 1997: Vol. 95: 1677-1682.

[2] Clause 201.7.9.3.103, "Essential Performance data of the Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment – Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators: 2010*

[3] Quoted from clause 201.107, "Requirements for Rhythm Recognition Detector," International Electrotechnical Association, *IEC 60601-2-4, Medical Electrical Equipment – Part 2-4: Particular Requirements for the Basic Safety and Essential Performance of Cardiac Defibrillators: 2010.*

Appendix E

SpO2 Specifications and Validation

This appendix describes clinical validation data for SpO_2, SpCO, and SpMet monitoring.

SpO2 Specifications and Validation

The following accuracy information is provided by sensor family type and reflects the sensor family accuracy distribution. The data is comprised of healthy male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70-100% SpO2 against a laboratory CO-Oximeter.

Reusable Sensors

The following chart applies to these sensors:

- Masimo® LNCS Reusable SpO_2 Sensor, Adult
- Masimo LNCS Reusable SpO_2 Sensor, Pediatric
- Masimo Red Reusable Direct Connect SpO_2 Sensor, Adult 3 ft
- Masimo Red Reusable Direct Connect SpO_2 Sensor, Adult 12 ft
- Masimo Rainbow Direct Connect Reusable Sensor, Pediatric 3 ft (SpO_2, SpCO, SpMet)
- Masimo Rainbow Direct Connect Reusable Sensor, Pediatric 12 ft (SpO_2, SpCO, SpMet)
- Masimo Rainbow Direct Connect Reusable Sensor, Adult 3 ft (SpO_2, SpCO, SpMet)
- Masimo Rainbow Direct Connect Reusable Sensor, Adult 12 ft (SpO_2, SpCO, SpMet)
- Masimo Red Reusable Direct Connect SpO_2 Sensor, Pediatric 3 ft
- Masimo Red Reusable Direct Connect SpO_2 Sensor, Pediatric 12 ft
- Masimo Rainbow Direct Connect Reusable Sensor, Adult 8 ft (SpO_2, SpCO, SpMet)
- Masimo M-LNCS Reusable Adult SpO_2 Sensor
- Masimo M-LNCS Reusable Pediatric SpO_2 Sensor
- Masimo Rainbow Direct Connect Reusable Sensor, Pediatric 8 ft (SpO_2, SpCO, SpMet)
- Masimo Rainbow DCI Reusable Sensor, Adult (SpO_2, SpCO, SpMet)
- Masimo Rainbow DCIP Reusable Sensor, Pediatric
- Rainbow DCI-6 Adt Reuse Sensor,6 ft,3657,RoHS
- Rainbow DCIP-6 Ped Reuse Sensor,6 ft,3658,RoHS

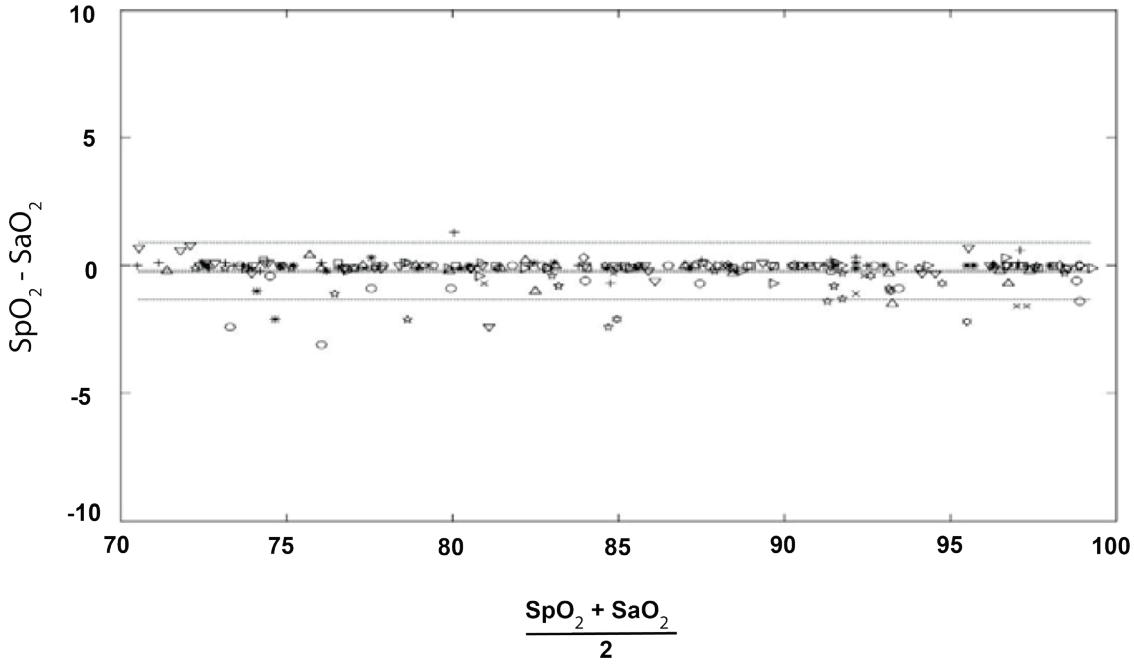

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	0.60%
80-90%	0.54%
70-80%	0.67%

The following chart applies to these sensors:

- Masimo M-LNCS DBI, Soft Sensor, REF 2507, RoHS
- Masimo DigitBoot Red DBI-Adult Soft Reusable Direct Connect SpO_2 Sensor, 8 ft (Ref 2644)
- Masimo DigitBoot LNCS, Adult Resuseable SpO_2 Sensor, 3 ft (Ref 2653)

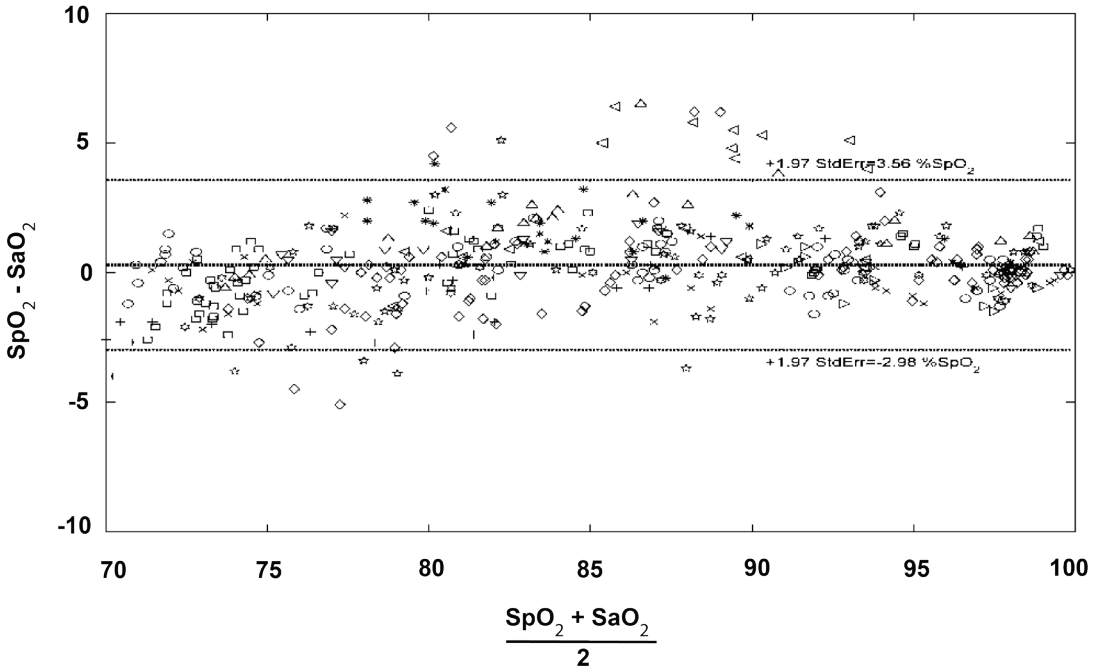

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	1.03%
80-90%	2.03%
70-80%	1.03%

The following chart applies to this sensor:

- Nellcor™ DURASENSOR Reusable Clip, Adult Fingertip Sensor, DS100A

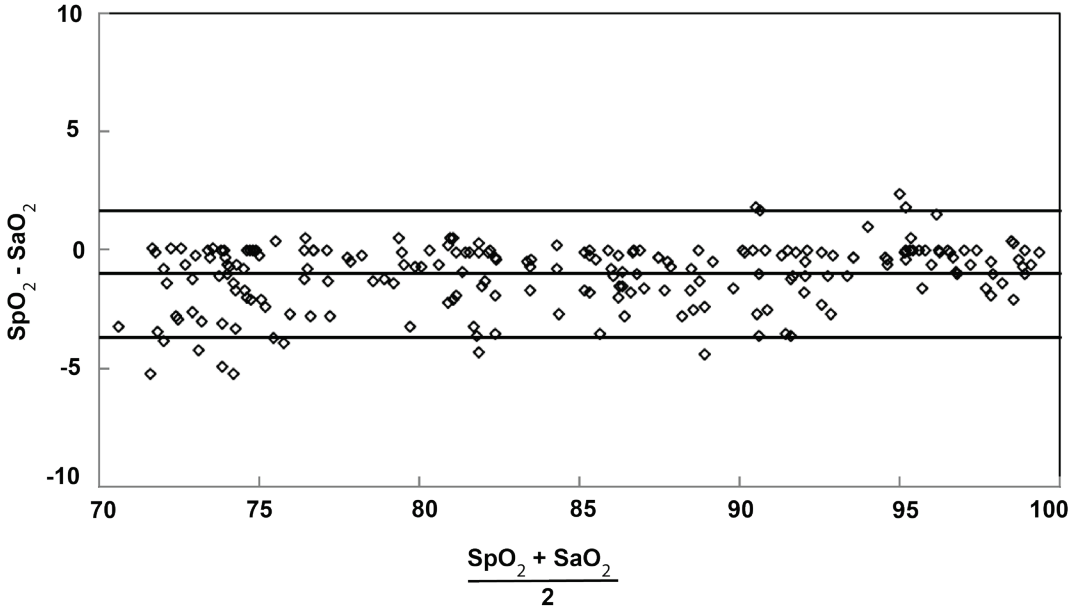

MEASURED ARMS VALUES	
SpO_2	Arms
90-100%	1.38%
80-90%	1.56%
70-80%	2.01%

Disposable Sensors

The following chart applies to these sensors:

- Masimo LNCS Disposable Adhesive Sensor, Adult (20/box)
- Masimo LNCS Disposable Pediatric SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Adult Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Pediatric Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Adhesive SpO_2 Sensor, Sample Pack

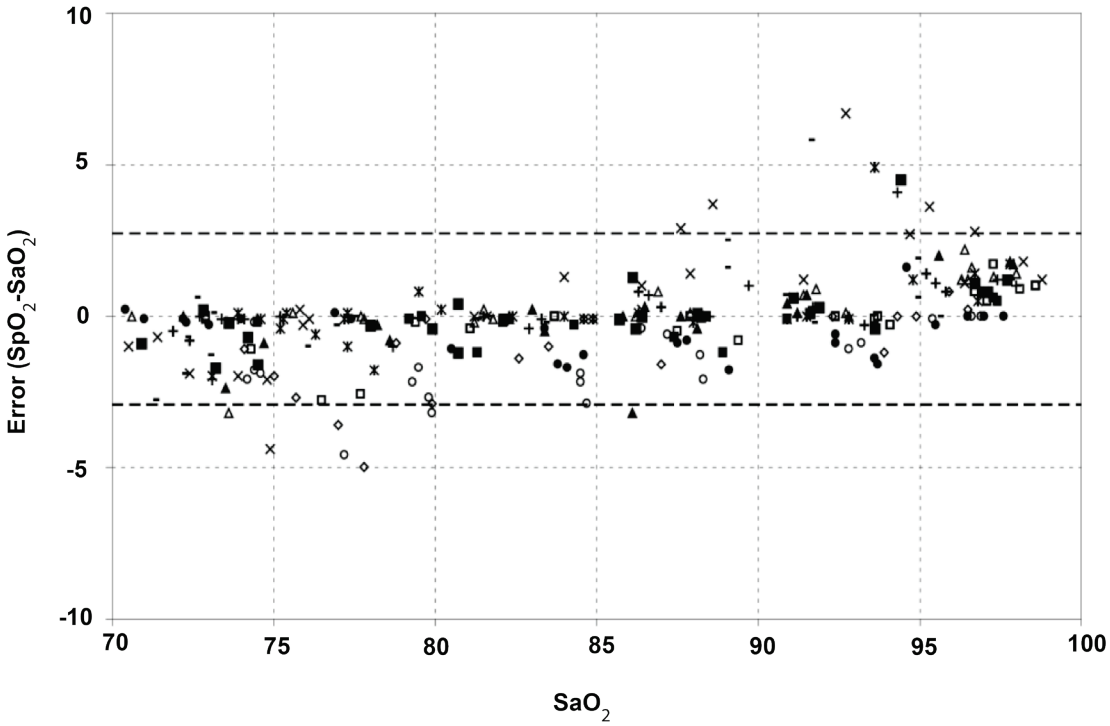

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	1.64%
80-90%	1.07%
70-80%	1.55%

The following chart applies to these sensors:

- Masimo LNCS Disposable Infant SpO_2 Sensor (20/Box)
- Masimo LNCS Disposable Neonatal SpO_2 Sensor (20/Box)
- Masimo LNCS Disposable Neonatal PT-L SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Infant Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Neonatal/Adult Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Neonate/Pre-Term Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Neonate Pre-Term 500 Non-Adhesive SpO_2 Sensor (20/Box)
- Masimo M-LNCS Disposable Adhesive SpO_2 Sensor, Sample Pack

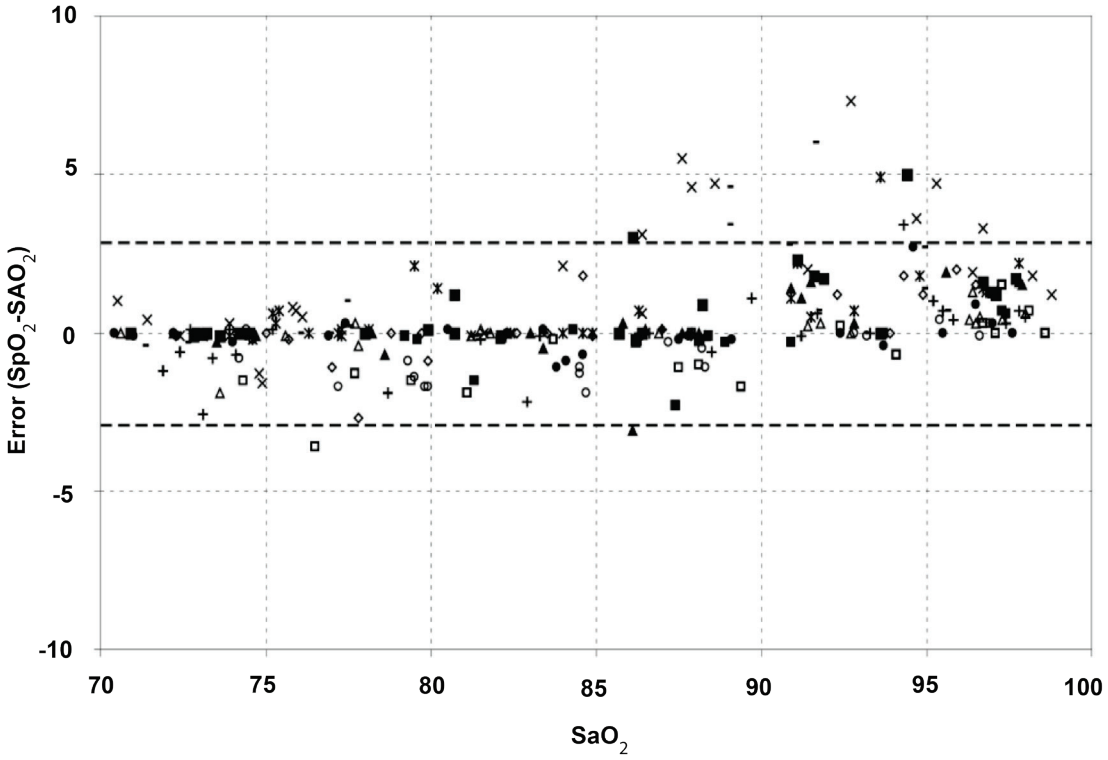

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	1.85%
80-90%	1.44%
70-80%	0.89%

The following chart applies to these sensors:

- LNCS E1, Adult, ear Sensor, REF 2918, RoHS
- M-LNCS E1, Adult, ear Sensor, REF 2919, RoHS

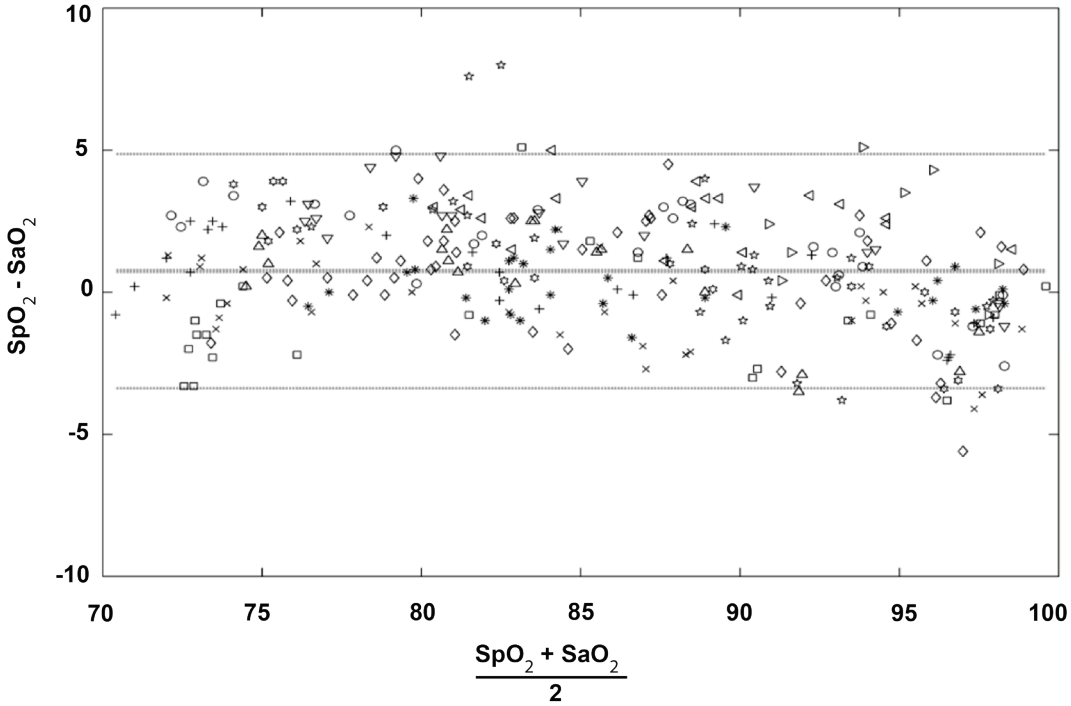

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	2.04%
80-90%	2.06%
70-80%	2.52%

The following chart applies to these sensors:

- Masimo Rainbow Disposable Adhesive Sensor, Neo/Adult (10/Box) (SpO_2, SpCO, SpMet)
- Masimo Rainbow Disposable Adhesive Sensor, Infant (10/Box) (SpO_2, SpCO, SpMet)
- Masimo Rainbow Disposable Adhesive Sensor, Adult (10/Box) (SpO_2, SpCO, SpMet)
- Masimo Rainbow Disposable Adhesive Sensor, Pediatric (10/Box) (SpO_2, SpCO, SpMet)

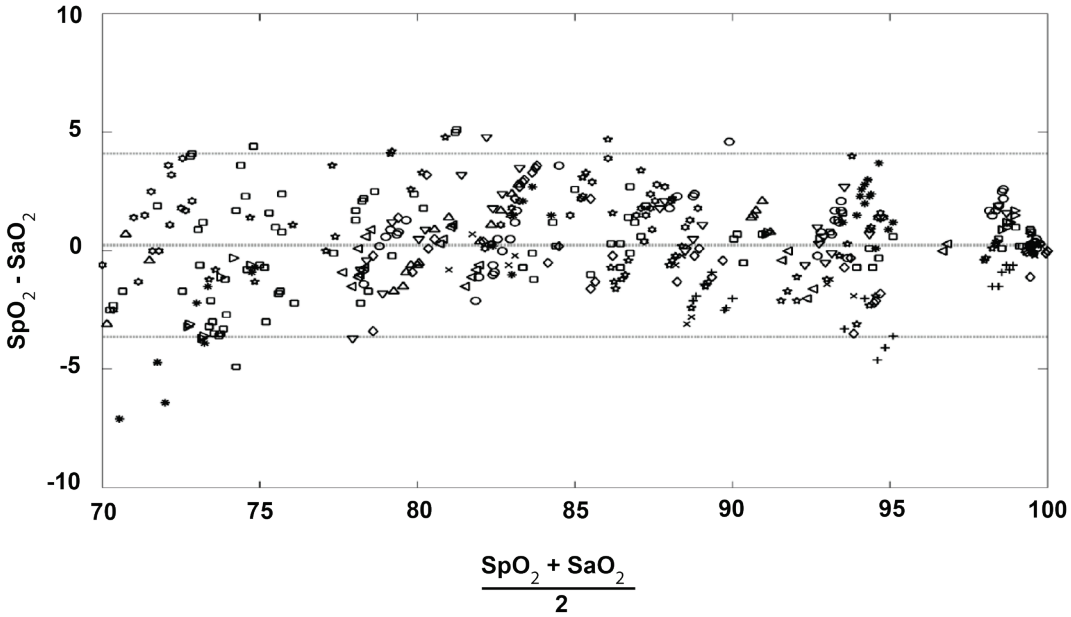

MEASURED ARMS VALUES	
SpO_2 Range	Arms
90-100%	1.57%
80-90%	1.80%
70-80%	2.47%

Masimo Clinical Validation Data

Masimo Corporation conducted clinical studies and tests to assess the accuracy of the SpO_2, SpCO, and SpMet measurement functions. The following paragraphs provide a summary of that data.

Test Methods for Accuracy

SpO_2, SpCO and SpMet accuracy was determined by testing on healthy adult volunteers in the range of 60-100% SpO_2, 0-40% SpCO, and 0-15% SpMet against a laboratory CO-oximeter. SpO_2 and SpMet accuracy was determined on 16 neonatal intensive care patients ranging in age from 7-135 days old and weighing between 0.5-4.25 kg. Seventy-nine (79) data samples were collected over a range of 70-100% SaO_2 and 0.5-2.5% MetHb with a resultant accuracy of 2.9% SpO_2 and 0.9% SpMet.

The Masimo sensors have been validated for no motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies in the range of 70-100% SpO_2 against a laboratory CO-oximeter and ECG monitor. This variation equals plus or minus one standard deviation. Plus or minus one standard deviation encompasses 68% of the population weight.

The Masimo sensors have been validated for motion accuracy in human blood studies on healthy adult male and female volunteers with light to dark skin pigmentation in induced hypoxia studies while performing rubbing and tapping motions at 2 to 4 Hz at an amplitude of 1 to 2 cm, and a non-repetitive motion between 1 to 5 Hz at an amplitude of 2 to 3 cm in induced hypoxia studies in the range of 70-100% SpO_2 against a laboratory CO-oximeter and ECG monitor. This variation equals plus or minus one standard deviation which encompasses 68% of the population.

The Masimo sensors have been validated for pulse rate accuracy for the range of 25-240 bpm in bench top testing against a Biotek Index 2 simulator. This variation equals plus or minus one standard deviation which encompasses 68% of the population.

Nellcor Clinical Validation Data

Nellcor conducted clinical studies and tests to assess the accuracy of the SpO_2 measurement function of the Nellcor SpO_2 sensors. The following paragraphs provide a summary of that data.

Test Methods for Accuracy

SpO_2 accuracy specifications for Nellcor sensors are based on controlled hypoxia studies with healthy nonsmoking adult volunteers over the specified saturation SpO_2 range. Pulse oximeter SpO_2 readings were compared to SaO_2 values of drawn blood samples measured by hemoximetry.

Subjects used to validate SpO_2 measurement accuracies were healthy and recruited from the local population. The study group comprised both men and women; subjects spanned a range of skin pigmentations and ranged in age from 18-50 years old. When sensors are used on neonatal subjects as recommended, the specified accuracy is decreased by ±1%, as compared to adult usage, to account for the theoretical effect on oximeter measurements of fetal hemoglobin in neonatal blood.

Appendix F

Electromagnetic Compatibility Guidance

This appendix provides guidance and manufacturer's declaration of electromagnetic compatibility.

Electromagnetic Compatibility Guidance

Electromagnetic Emissions

Table 50 Guidance and Manufacturer's Declaration - Electromagnetic Emissions

The LIFEPAK 15 monitor/defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 15 monitor/defibrillator should assure that it is used in such an environment.		
Emissions Test	**Compliance**	**Electromagnetic Environment - Guidance**
RF emissions CISPR 11	Group 1	The LIFEPAK 15 monitor/defibrillator uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The LIFEPAK 15 monitor/defibrillator is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not applicable	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Not applicable	

Electromagnetic Immunity

Table 51 Guidance and Manufacturer's Declaration - Electromagnetic Immunity

The LIFEPAK 15 monitor/defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 15 monitor/defibrillator should assure that it is used in such an environment.

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete, or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV line(s) to line(s) ±2 kV line(s) to earth	±1 kV line(s) to line(s) ±2 kV line(s) to earth	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% U_T (>95% dip in U_T) for 0.5 cycle 40% U_T (60% dip in U_T) for 5 cycles 70% U_T (30% dip in U_T) for 25 cycles <5% U_T (>95% dip in U_T) for 5 sec	<5% U_T (>95% dip in U_T) for 0.5 cycle 40% U_T (60% dip in U_T) for 5 cycles 70% U_T (30% dip in U_T) for 25 cycles <5% U_T (>95% dip in U_T) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the LIFEPAK 15 monitor/defibrillator requires continued operation during power mains interruptions, it is recommended that the LIFEPAK 15 monitor/defibrillator be powered from an uninterruptible power supply or a battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.

Note: U_T is the AC Mains voltage prior to application of the test level.

Table 52 Guidance and Manufacturer's Declaration - Electromagnetic Immunity

The LIFEPAK 15 monitor/defibrillator is intended for use in the electromagnetic environment specified below. The customer or the user of the LIFEPAK 15 monitor/defibrillator should assure that it is used in such an environment.

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment - Guidance
			Portable and mobile RF communications equipment should be used no closer to any part of the LIFEPAK 15 monitor/defibrillator, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.
			Recommended separation distance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz outside ISM bands[1]	3 Vrms	$d = 1.2\sqrt{P}$
	10 Vrms 150 kHz to 80 MHz in ISM bands[1]	10 Vrms	$d = 1.2\sqrt{P}$
Radiated RF IEC 61000-4-3	10 V/m 80 MHz to 2.5 GHz	10 V/m	$d = 1.2\sqrt{P}$ 80 MHz to 800 MHz
			$d = 2.3\sqrt{P}$ 800 MHz to 2.5 GHz
			Where *P* is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and *d* is the recommended separation distance in meters (m).[2] Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,[3] should be less than the compliance level in each frequency range.[4] Interference may occur in the vicinity of equipment marked with the following symbol:

Note: At 80 MHz and 800 MHz, the higher frequency range applies.
Note: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

[1] The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6.765 MHz to 6.795 MHz; 13.553 MHz to 13.567 MHz; 26.957 MHz to 27.283 MHz; and 40.66 MHz to 40.70 MHz.

[2] The compliance levels in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz are intended to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas. For this reason, an additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in these frequency ranges.

[3] Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the LIFEPAK 15 monitor/defibrillator is used exceeds the applicable RF compliance level above, the LIFEPAK 15 monitor/defibrillator should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the LIFEPAK 15 monitor/defibrillator.

[4] Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

Separation Distances

Table 53 Recommended Separation Distances Between Portable and Mobile RF Communications Equipment and the LIFEPAK 15 Monitor/Defibrillator

The LIFEPAK 15 monitor/defibrillator is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the LIFEPAK 15 monitor/defibrillator can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the LIFEPAK 15 monitor/defibrillator as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m			
	150 kHz to 80 MHz outside ISM bands $d = 1.2\sqrt{P}$	150 kHz to 80 MHz in ISM bands $d = 1.2\sqrt{P}$	80 MHz to 800 MHz $d = 1.2\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.3\sqrt{P}$
0.01	0.12	0.12	0.12	0.23
0.1	0.38	0.38	0.38	0.73
1	1.2	1.2	1.2	2.3
10	3.8	3.8	3.8	7.3
100	12	12	12	23

For transmitters rated at a maximum output power not listed above, the recommended separation distance *d* in meters (m) can be determined using the equation applicable to the frequency of the transmitter, where *P* is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

Note: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.
Note: The ISM (industrial, scientific and medical) bands between 150 kHz and 80 MHz are 6.765 MHz to 6.795 MHz; 13.553 MHz to 13.567 MHz; 26.957 MHz to 27.283 MHz; and 40.66 MHz to 40.70 MHz.
Note: An additional factor of 10/3 is used in calculating the recommended separation distance for transmitters in the ISM frequency bands between 150 kHz and 80 MHz and in the frequency range 80 MHz to 2.5 GHz to decrease the likelihood that mobile/portable communications equipment could cause interference if it is inadvertently brought into patient areas.
Note: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

Radio Equipment Directive

Hereby, Physio-Control declares that the radio equipment type LIFEPAK 15 Monitor/Defibrillator is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.physio-control.com/EUDoC.

Appendix G

Symbols

This appendix provides information about the symbols that are used in these operating instructions, or on the LIFEPAK 15 monitor/defibrillator, its accessories, packaging, or training tools.

Symbols

The symbols in the following table may be found in these operating instructions or on the LIFEPAK 15 monitor/defibrillator, its accessories, packaging, or training tools.

Table 54 Symbols

SYMBOL	DESCRIPTION
Device or User Interface	
	Operating instructions
	Follow instructions for use
	General warning
	Caution
	Alarm on
	Alarm off
	VF/VT alarm on
	VF/VT alarm is on, but is silenced or suspended
	Battery in well, fully charged. For a description of all battery indicators, see Battery Status Indicators (on page 38).
	Heart rate/pulse rate indicator
	Bluetooth wireless technology
(x)	Shock count (x) on screen
	Shock button on front panel or hard paddles
	Auxiliary power indicator
	Battery charging indicator
	Service indicator
>	Greater than
<	Less than

SYMBOL	DESCRIPTION
J	Joules
	Display mode button
	Home Screen button
	CO_2 input
CO2	CO_2 exhaust
	Input/output
	Defibrillation-proof type CF applied part
	Defibrillation-proof type BF applied part
	Do not dispose of this product in the unsorted municipal waste stream. Dispose of this product according to local regulations. See www.physio-control.com/recycling for instructions on disposing of this product.
50	Symbol for China RoHS indicating the Environmentally Friendly Use Period (EFUP) denoting the number of years before any substance is likely to leak out into the environment.
CE	Mark of conformity to applicable European Directives
C US	Canadian Standards Association certification for Canada and the United States
Intertek	Intertek certification for Canada and the United States
IP44	Protected against particles >1.0 mm and splashing water
	Date of manufacture shown: YYYY-MM-DD
EC REP	Authorized EC representative
PN	Part number
SN	Serial number
REF	Catalog number
Rx Only or Rx Only	By prescription only
!USA	For USA audiences only
PAT	See website for patent information
PATENTS	See website for patent information

SYMBOL	DESCRIPTION
	Manufacturer
	Indicates that a product complies with applicable Australian ACMA standards
	Positive terminal
	Negative terminal
	Fuse
	Battery
	Power input
	Static-sensitive device. Static discharge may cause damage.
	Device has V4 components
65°C (149°F) -20°C (-4°F)	Recommended storage temperature range -20° to 65°C (-4° to 149°F)
95 % 10	Recommended storage humidity range 10 to 95%
3048 m (10,000 ft) -152 m (-500 ft)	Recommended storage atmospheric pressure range -152 to 3048 m (-500 to 10,000 ft.)
Assembled in the USA	Assembled in the USA
Reports	
	Biphasic defibrillation shock
	Pace arrow, noninvasive pacing
	Pace arrow, internal pacing detection
	QRS sense marker
	Event marker

Accessories

CE	Mark of conformity to applicable European Directives
	Underwriters Laboratories recognized component mark for the United States
c US	Underwriters Laboratories recognized component mark for Canada and the United States
FC	Complies with (USA) Federal Communications Commission regulations
	Device includes RF transmitter
	Type BF applied part
LOT	Lot number (batch code)
IP44	Protected against particles >1.0 mm and splashing water
or	Warning, high voltage
	Caution
	CAUTION - FIRE HAZARD Do not disassemble, heat above 100°C (212°F), or incinerate battery
	CAUTION - FIRE HAZARD Do not crush, puncture, or disassemble battery
	Use By date shown: YYYY-MM-DD
	Indoor use only
LATEX	Not made with natural rubber latex
Pb	Lead free
	Do not reuse
2 = 2	2 electrodes in 1 package
10 x 2 = 10 (2)	10 packages in 1 shelf-pak
5 x 10 (2) = 50 (2)	5 shelf-paks in 1 case
	Shave patient skin

	Clean patient skin
	Treatment
	Tear here
	Press electrode firmly onto patient
	Connect QUIK-COMBO cable
	Slowly peel back protective liner on electrode
	Do not use this pediatric QUIK-COMBO electrode on LIFEPAK 500, LIFEPAK 1000, LIFEPAK CR® Plus, or LIFEPAK EXPRESS® defibrillators
	For use on adults
	Not for use on adults
	For use on children up to 15 kg (33 lb)
	Not for use on children under 15 kg (33 lb)
	Remove label from battery
	Charge battery
	Insert battery in LIFEPAK 15 monitor/defibrillator
	Rechargeable battery
	AC-DC power adapter
	DC-DC power adapter

	For use with the LIFEPAK 15 monitor/defibrillator
	Battery for use with the LIFEPAK 15 monitor/defibrillator
	Power input
	Power output
	Direct current voltage
	Alternating current voltage
	Do not dispose of this product in the unsorted municipal waste stream. Dispose of this product according to local regulations. See www.physio-control.com/recycling for instructions on disposing of this product.
Shipping carton	
	This end up
	Fragile. Handle with care.
	Keep dry
65°C (149°F) -20°C (-4°F)	Recommended storage temperature range -20° to 65°C (-4° to 149°F)
95 % 10	Recommended storage humidity range 10 to 95%
3048 m (10,000 ft) -152 m (-500 ft)	Recommended storage atmospheric pressure range -152 to 3048 m (-500 to 10,000 ft.)
or	Recycle this item
QTY	Quantity
REFURBISHED DEVICE	Refurbished device
USED DEVICE	Used device

Index

1

12-Lead ECG Procedure • 61
12-Lead ECG Warning • 59

3

3-Channel Format • 64

4

4-Channel Format • 65

A

A. Acquisition and Annotation Methodology • 274
About Transmitting Patient Records and Reports • 177
AC Power Adapter operation • 195
Accessing Archive Mode • 171
Accessories • 222
Accessories for the LIFEPAK 15 Monitor/Defibrillator • 222
Acquiring a 12-Lead ECG • 59
Activating and Deactivating the Metronome • 138
Adjusting the Systole Volume • 50
Adult Standard Paddles • 156
Advisory monitoring • 129
AED mode • 120
AED Procedure • 121
AED Warnings • 120
Age-Airway Considerations • 137
Alarm Performance Characteristics • 245
Alarms • 39
Analysis Event • 167
Anterior-Lateral Placement • 50, 117
Anterior-Posterior Placement • 118
Applicable Products • 4
Area 1 • 22
Area 1 Controls • 23
Area 2 • 24
Area 2 Controls • 24
Area 3 • 25
Area 3 Controls • 25
Area 4 • 26
Area 4 Controls • 26
Area 5 • 27
Area 5 Connectors, Speaker, and Printer • 27
Attaching Pediatric Paddles • 158
Auto Tests • 204
Automated External Defibrillation (AED) • 119
Automated Interpretation of the ECG • 273
Averaging time • 76

B

B. ECG Rhythm Types • 275
Back View • 31, 32
Background • 261, 270
Basic Orientation • 19, 193
Batteries • 33
Battery Maintenance • 211
Battery Specifications • 240
Battery Status Indicators • 38
Battery Warnings • 211
Blood Pressure Alarm Limits • 241
Bluetooth Passcodes • 179
Bluetooth search filter • 179
Bluetooth Setup • 180
Bluetooth Status • 182

C

C. Summary Shock Advisory System Performance Report • 276
Cancelling a Transmission • 187
Capnography Alarm Limits • 242
Changing ECG Size • 49
Changing the Initial Inflation Pressure • 83
Charging Batteries • 213
Check Patient Event • 168
Cleaning • 77, 86, 93, 198
Cleaning and Disposal • 107
Cleaning and Inspecting Pediatric Paddles • 160
Cleaning and Inspecting Standard Paddles • 157
Cleaning and Inspection • 100, 155
Cleaning the Device • 214
Clinical Summary
  Monophasic vs. Biphasic Waveforms Out-of-Hospital Trial • 270
CO2 alarms • 92
CO2 detection • 93

CO2 Display • 92
CODE SUMMARY Formats • 164
CODE SUMMARY Report • 164
Color Coding for ECG Leads • 54
Computerized ECG analysis • 63
Conclusion • 270
Conclusions • 262, 266, 269
Connecting and Disconnecting the Therapy Cable • 29
Connecting Therapy Electrodes • 154
Connectors • 28
Considerations When Transmitting Data • 187
Continuous Patient Surveillance System • 277
Contraindications • 59, 69, 80, 88, 96, 104, 119, 133, 144
CPR Metronome Warnings • 137
CPR Time and Metronome • 126
Cuff selection • 83

D

Data Management • 161
Data transmission • 175
DC Power Adapter Operation • 196
Default Age-Airway C V Ratios in Manual Mode • 137
Defibrillation Clinical Summaries • 259
Defibrillation of Ventricular Fibrillation and Ventricular Tachycardia • 261
Definitions and References • 278
Deleting Archived Patient Records • 174
Demand and Nondemand Pacing • 145
Displaying and Printing Trend Graphs • 112
Disposable Sensors • 285

E

ECG Leads Color Codes • 54
ECG monitoring procedure • 53
ECG Monitoring Warning • 47
ECG Override • 62
Editing Archived Patient Records • 173
Electrode Contact Determination • 273
Electrodes or Therapy Cable Off • 125
Electromagnetic Compatibility Guidance • 291, 293
Electromagnetic Emissions • 293
Electromagnetic Immunity • 294
Entering patient data • 42
Establishing a Bluetooth Connection • 181
EtCO2 Monitoring Procedure • 91
EtCO2 Monitoring Warnings • 88
EtCO2 Monitoring Waveform Analysis • 90
Event/Vital Sign Log • 165
Events • 43
External Cardioversion of Atrial Fibrillation • 263

F

Front View • 21
Function checks • 206

G

General Dangers and Warnings • 15
General Maintenance • 198
General Maintenance and Testing • 203
General Therapy Warnings and Cautions • 115
General troubleshooting tips • 216
Guidance and Manufacturer's Declaration - Electromagnetic Emissions • 293
Guidance and Manufacturer's Declaration - Electromagnetic Immunity • 294, 295
Guidance for Selection of Shock Energy • 266, 269

H

Heart Rate Alarm Limits • 241
Home Screen • 35, 36
How a Pulse Oximeter Works • 72
How Capnography Works • 89
How IP Monitoring Works • 98
How NIBP Monitoring Works • 82
How ST Trends Work • 110
How Temperature Monitoring Works • 105
How the CPR Metronome Works • 137
How to Print a Current Report • 169
How to Transmit a Current Patient Report • 185
How to Transmit an Archived Patient Report • 185
How VS Trends Work • 109

I

Identifying Electrode Sites • 60
Important Information • 4

Indications • 59, 69, 80, 88, 96, 104, 119, 133, 144
Initial CPR - Analyze First • 128
Initial CPR - CPR First • 127
Intended use • 11, 47, 59, 69, 80, 88, 96, 104, 108, 119, 133, 144
Interpreting the ST Trend Graph • 111
Intra-Operative Ventricular Defibrillation • 267
Introduction • 11
Invasive Pressure Alarm Limits • 243
IP Labels and Descriptions • 97
IP Monitoring • 97
IP Monitoring Procedure • 99
IP Monitoring Warnings • 96
IP Scale Options • 100

L

Leads Off • 54
LIFEPAK 15 Monitor/Defibrillator Operator's Checklist • 311
LIFEPAK 15 Monitor/Defibrillator Specifications • 227
Limb Lead Electrode Sites • 60
Loading paper • 215

M

Maintaining the Equipment • 201
Maintenance and service • 198
Maintenance and Testing Schedule • 203
Managing alarms • 40
Managing Archived Patient Records • 171
Managing Current Patient Records • 169
Manual Defibrillation • 133
Manual Defibrillation Procedure • 136
Manual Defibrillation Warnings • 134
Manual mode • 135
Manual Single-Measurement Procedure • 84
Masimo Clinical Validation Data • 289
Memory capacity • 169
Methods • 261, 270
Modes of operation • 12
Monitoring • 45
Monitoring Continuous Temperature • 104
Monitoring ETCO2 • 88
Monitoring Invasive Pressure • 96
Monitoring Noninvasive Blood Pressure • 80
Monitoring Patients Who Have Internal Pacemakers • 55
Monitoring SpO2, SpCO, and SpMet • 69
Monitoring the ECG • 47
Monitoring Using ECG Cable Accessories • 52
Monitoring Using Paddle Accessories • 50
Motion Detected • 125
Motion detection • 277

N

Navigating the Home Screen • 37
Nellcor Clinical Validation Data • 290
NIBP Monitoring Considerations • 82
NIBP Monitoring Procedure • 83
NIBP Monitoring Warnings and Caution • 80
No Implied License • 71
No Shock Advised • 124
Noninvasive pacing • 144
Noninvasive Pacing Procedure • 145
Noninvasive Pacing Warnings • 144

O

Obese Patients or Patients with Large Breasts • 118
Objectives • 263, 267
Operator Control of Shock Therapy • 277
Options • 41
Options Menu Selections • 41
Output Extension Cable with Breakaway Connector • 197
Overview • 263, 267, 273
Oximeter Monitoring Procedure • 74

P

Pacing Event • 168
Packaging • 221
Paddle Accessory Options • 151
Paddles ECG Monitoring Procedure • 51
Patient ECG Cable Check • 206
Patient Records and Reports • 163
Patient Skin Preparation • 117
Patients with Implanted Devices • 119
Pediatric ECG Monitoring and Manual Mode Therapy Procedures • 150
Pediatric paddles • 157
Performance Verification • 274
Phases of the Waveform • 90
Physio Service Class Prefixes • 180
Physio-Control Test Set • 274
Placing Pediatric Paddles • 158

Pleth Waveform • 75
Possible Event Log Entries • 166
Power adapter • 191
Preamble • 165
Precordial Lead ECG Monitoring • 54
Precordial lead electrode sites • 60
Preface • 9
Preparation • 221
Preparing for a Wireless Transmission • 182
Preparing the Monitor for Transmission • 178
Pre-shock CPR Time • 129
Printed 12-Lead ECG Frequency Response • 66
Printed 12-Lead ECG Report Formats • 64
Printing Archived Patient Reports • 172
Product Recycling Information • 221
Pulse Rate Monitoring • 77

Q

QUIK-COMBO electrodes • 154
QUIK-COMBO Therapy Electrodes • 153

R

Radio Equipment Directive • 296
Receiving New Batteries • 212
Recommended Maintenance Schedule for Clinical Personnel • 204
Recommended Separation Distances Between Portable and Mobile RF Communications Equipment and the LIFEPAK 15 Monitor/Defibrillator • 296
Recycling Assistance • 221
Recycling Batteries • 213
Recycling of Disposable Electrodes • 221
Re-establishing a Bluetooth Connection • 182
Removing pediatric paddles • 158
Replacing and Removing Therapy Electrodes • 154
Replacing batteries • 213
Report types • 163
Results • 261, 264, 267, 270
Reusable Sensors • 281

S

Safety Information • 13
SAS Test Set • 275
Screen messages • 251
Selecting ECG Lead • 48
Self-Tests • 204
Sensitivity • 76
Sensor Application • 73
Separation Distances • 296
Service and repair • 220
Service Life • 220
Setting Alarms • 39
Setup Options Factory Default Settings • 247
Shock Advised • 122
Shock Advisory System • 271
Shock Counter • 125
Shock Event • 168
SpCO/SpMet Advisory • 75
Special AED setup options • 127
Special Situations for Electrode or Paddle Placement • 51, 118
Specifications and Performance Characteristics • 225, 227
SpO2 Alarm Limits • 241
SpO2 Specifications and Validation • 279, 281
SpO2, SpCO, and SpMet Monitoring Considerations • 72
SpO2, SpCO, and SpMet Warnings and Cautions • 70
Standard (Hard) Paddles Check • 206
Standard Paddles • 156
Standard Paddles Synchronized Cardioversion Check • 206
Sterilizable internal defibrillation paddles • 160
Storing batteries • 212
Storing the Device • 214
Summary of Screen Messages • 253
Switching from AED Mode to Manual Mode • 126
Symbols • 297, 299
Synchronized cardioversion • 118
Synchronized Cardioversion Procedure • 139

T

TEMP Labels and Descriptions • 106
Temperature Alarm Limits • 244
Temperature Monitoring Equipment • 105
Temperature Monitoring Procedure • 106
Temperature Monitoring Warnings • 104
Temperature Values and Messages • 105
Terminating a Bluetooth Connection • 183
Terms • 15
Test Methods for Accuracy • 289, 290
Testing Standard Paddles • 157
Text Conventions • 4
Therapy • 113

Therapy Cable Monitoring and Synchronized Cardioversion Check • 208
Therapy Cable Pacing Check • 209
Therapy Electrode and Standard Paddle Placement • 117
Thin Patients • 118
Timer-Controlled Measurement Procedure • 85
Transmission Status Report • 186
Transmitting Reports • 185
Troubleshooting tips • 56, 67, 77, 86, 94, 101, 107, 131, 141, 148, 188, 199
Troubleshooting Tips for AED Mode • 131
Troubleshooting Tips for Data Transmission • 188
Troubleshooting Tips for Defibrillation and Synchronized Cardioversion • 141
Troubleshooting Tips for ECG Monitoring • 56
Troubleshooting Tips for EtCO2 Monitoring • 94
Troubleshooting Tips for IP Monitoring • 101
Troubleshooting Tips for NIBP Monitoring • 86
Troubleshooting Tips for Noninvasive Pacing • 148
Troubleshooting Tips for Power Adapter • 199
Troubleshooting Tips for SpO2, SpCO, and SpMet • 77
Troubleshooting Tips for Temperature Monitoring • 107
Troubleshooting Tips for the 12-Lead ECG • 67

U

User Tests • 205
Using a Direct Connection • 183
Using Bluetooth Wireless Communication • 178
Using the CPR Metronome • 137
Using the Power Adapter • 195

V

Ventricular fibrillation • 261
Ventricular tachycardia • 262
Vital Sign and ST Segment Trends • 108
Volume • 76
VS and ST Monitoring Considerations • 112
VS and ST Trends Warning • 108

W

Warranty • 199, 221
Waveform events • 166

LIFEPAK 15 Monitor/Defibrillator Operator's Checklist

This is a recommended checklist to use to inspect and test this monitor/defibrillator. Daily inspection and test is recommended. This form may be reproduced.

Unit Serial No:_____ Location:_____

Instruction	Recommended Corrective Action	Date							
		Initials							

√ each box after completing

1. Inspect physical condition for:								
Foreign substances	Clean the device.							
Damage or cracks	Contact a qualified service technician.							
2. Inspect power source for:								
Broken, loose, or worn battery pins	Contact a qualified service technician.							
Damaged or leaking battery	Recycle or discard battery.							
Spare battery available	Obtain fully charged spare battery.							
Damage to power adapter and cables	Contact a qualified service technician.							
3. Inspect ECG cable and cable port for:								
Cracking, damage, broken, or bent parts or pins	Replace ECG cable. If port is damaged, contact qualified service technician.							
4. Check ECG electrodes and therapy electrodes for:								
Use By date	Replace if date passed.							
Spare electrodes available	Obtain spare electrodes.							
Damaged, opened package	Discard and replace electrodes.							
5. With batteries installed, disconnect from power adapter (if using), press ON and observe for:								
Momentary illumination of self-test messages and LEDs, and speaker beep	If absent, contact a qualified service technician.							
Two fully charged batteries	Replace low battery or charge installed battery using power adapter.							
Service indicator (🔧)	If illuminated, contact a qualified service technician.							

Instructions	Recommended Corrective Action	Date							
		Initials							

6. With batteries installed, reconnect power adapter to device and check for:
(If not using a power adapter, go to Step 7.)

Power adapter LED strip is illuminated	If absent, check connections. If problem persists, contact a qualified service technician.							
Auxiliary power LED on device is illuminated								
Battery charging LED on device is illuminated or flashing	If absent, check batteries. If problem persists, contact a qualified service technician.							

7. Perform QUIK-COMBO® therapy cable check in Manual mode:*
(If this cable is not used with the defibrillator, go to Step 8)

• Disconnect and examine cable for cracking, damage, broken, or bent parts or pins.	Replace QUIK-COMBO therapy cable.							
• Connect therapy cable to defibrillator and the Test Load.	If **CONNECT ELECTRODES**, **PADDLES LEADS OFF**, **CONNECT CABLE**, or **ABNORMAL ENERGY DELIVERY** message appears, replace therapy cable and repeat check. If problem continues, remove the defibrillator from use and contact a qualified service technician.							
• Select **LEAD**, then **PADDLES**.								
• Select **200 JOULES** and press **CHARGE**.								
• Press ⚡ (shock) button.								
• Confirm **ENERGY DELIVERED** message appears.	If message does not appear, replace therapy cable and repeat check.							
• Remove Test Load from cable and verify **PADDLES LEADS OFF** appears.**	If absent, contact a qualified service technician.							

8. Perform standard (hard) paddles check in Manual mode.*
(If hard paddles are not used with the defibrillator, go to Step 9.)

• Disconnect and examine cable for cracking, damage, broken, or bent parts or pins.	Replace paddles.							
• Connect paddles to defibrillator.								
• Examine for paddle surface pitting and presence of dried or wet gel.	Replace paddles, or clean paddles.							
• Press **LEAD**. Select **PADDLES**.								
• On paddles, turn **ENERGY SELECT** dial to **10 JOULES**.***	If selected energy does not change or charging does not occur, obtain spare paddles and repeat check. If problem continues, remove the defibrillator from use and contact a qualified service technician.							
• With paddles in paddle wells, press **CHARGE** button on paddle.								

©2018 Physio-Control, Inc.

Instructions	Recommended Corrective Action	Date							
		Initials							
• Press only *one* ⚡ (shock) button and release. Confirm that energy was not discharged.	If energy discharges with one button press, obtain spare paddles and repeat check.								
• Press the other ⚡ (shock) button and release. Confirm that energy was not discharged.									
• Press both ⚡ (shock) buttons and confirm **ABNORMAL ENERGY DELIVERY** message appears.	If message does not appear, obtain spare paddles and repeat check. If problem continues, remove the defibrillator from use and contact a qualified service technician.								
• Remove paddles from wells, and confirm artifact on screen.	If task fails, obtain spare paddles and repeat check. If problem continues, remove the defibrillator from use and contact a qualified service technician.								
• Place paddle surfaces together, and confirm flat line on screen.									
• Return paddles securely to paddle wells.									

9. Perform User Test if 3:00 am auto test results not available:

• Press **OPTIONS**. • Select **USER TEST** in menu. • Confirm test results printed.	If User Test fails, remove the defibrillator from use and contact a qualified service technician.							

10. Check ECG printer for:

Adequate paper supply	Add new paper, if necessary.							
Ability to print	If not working, contact a qualified service technician.							

11. If using wireless data transmission, test transmission method:

• Establish a Bluetooth connection.	If not working, contact a qualified service technician.							
• Send a test transmission.								

12. Turn off defibrillator.
(Press and hold **ON** for up to 2 seconds.)

13. Confirm that the device is stowed, mounted, or positioned securely.

* The defibrillator delivers up to 360 joules of electrical energy. Unless discharged properly, this electrical energy may cause serious personal injury or death. Do not attempt to perform this test unless you are qualified by training and experience.

** Failure to remove the Test Load may result in delay of therapy during patient use.

*** Discharging > 10 joules in the paddle wells may damage the defibrillator.

©2018 Physio-Control, Inc.

LIFEPAK® 15 MONITOR/DEFIBRILLATOR

Operating Instructions

Physio-Control is now part of Stryker.
For further information, please call Physio-Control at 1.800.442.1142 or visit www.physio-control.com

Physio-Control, Inc.
11811 Willows Road NE
P.O. Box 97006
Redmond, WA 98073-9706 USA
Tel 425.867.4000
Fax 425.867.4121
www.physio-control.com

Physio-Control, Inc.
11811 Willows Road NE, Redmond, WA 98052 USA

EC REP Stryker European Operations B.V.
Herikerbergweg 110, 1101 CM Amsterdam, The Netherlands

CE 0123

©2018 Physio-Control, Inc. Specifications are subject to change without notice.
Publication Date: 12/2018

REF 26500-003617
PN 3314911-010